

RTEMS POSIX API Guide

Release 5.0.0-m2005-1 (02 2nd May 2020)

© 1988, 2020 RTEMS Project and contributors

CONTENTS

1	Prefa			3
	1.1	Acknov	vledgements	4
_	_	_		
2			O Company of the comp	5
	2.1			6
	2.2	U		7
	2.3	-		8
	2.4	Directiv		9
		2.4.1		9
		2.4.2		9
		2.4.3		9
		2.4.4	execle - Execute a File	0
		2.4.5	execve - Execute a File	0
		2.4.6	execlp - Execute a File	1
		2.4.7	execvp - Execute a File	1
		2.4.8		2
		2.4.9	wait - Wait for Process Termination	2
		2.4.10		2
		2.4.11		3
3	_	al Mana	0	5
	3.1		oction	
	3.2	_	ound	
		3.2.1	Signals	
		3.2.2	Signal Delivery	
	3.3	-		8
		3.3.1	e e	8
		3.3.2	Blocking Until Signal Generation	8
		3.3.3	Sending a Signal	8
	3.4	Directiv	ves	9
		3.4.1	sigaddset - Add a Signal to a Signal Set	9
		3.4.2	sigdelset - Delete a Signal from a Signal Set	9
		3.4.3	sigfillset - Fill a Signal Set	20
		3.4.4	sigismember - Is Signal a Member of a Signal Set	20
		3.4.5	sigemptyset - Empty a Signal Set	
		3.4.6	sigaction - Examine and Change Signal Action	
		3.4.7	pthread_kill - Send a Signal to a Thread	
		3.4.8	sigprocmask - Examine and Change Process Blocked Signals	
			01	_

			pthread_sigmask - Examine and Change Thread Blocked Signals	
			kill - Send a Signal to a Process	
		3.4.11	sigpending - Examine Pending Signals	25
			sigsuspend - Wait for a Signal	
		3.4.13	pause - Suspend Process Execution	25
		3.4.14	sigwait - Synchronously Accept a Signal	26
			sigwaitinfo - Synchronously Accept a Signal	
			sigtimedwait - Synchronously Accept a Signal with Timeout	
		3.4.17	sigqueue - Queue a Signal to a Process	27
			alarm - Schedule Alarm	
		3.4.19	ualarm - Schedule Alarm in Microseconds	29
4	Proc		ironment Manager	31
	4.1		action	
	4.2	_	ound	
		4.2.1	Users and Groups	33
		4.2.2	User and Group Names	
		4.2.3	Environment Variables	33
	4.3	Operat	ions	34
		4.3.1	Accessing User and Group Ids	34
		4.3.2	Accessing Environment Variables	34
	4.4	Directiv	ves	35
		4.4.1	getpid - Get Process ID	35
		4.4.2	getppid - Get Parent Process ID	35
		4.4.3	getuid - Get User ID	35
		4.4.4	geteuid - Get Effective User ID	36
		4.4.5	getgid - Get Real Group ID	36
		4.4.6	getegid - Get Effective Group ID	36
		4.4.7	setuid - Set User ID	37
		4.4.8	setgid - Set Group ID	37
		4.4.9	getgroups - Get Supplementary Group IDs	37
		4.4.10	getlogin - Get User Name	38
		4.4.11	getlogin_r - Reentrant Get User Name	38
		4.4.12	getpgrp - Get Process Group ID	38
		4.4.13	setsid - Create Session and Set Process Group ID	39
		4.4.14	setpgid - Set Process Group ID for Job Control	39
		4.4.15	uname - Get System Name	39
		4.4.16	times - Get process times	40
		4.4.17	getenv - Get Environment Variables	40
		4.4.18	setenv - Set Environment Variables	41
		4.4.19	ctermid - Generate Terminal Pathname	41
		4.4.20	ttyname - Determine Terminal Device Name	41
		4.4.21	ttyname_r - Reentrant Determine Terminal Device Name	42
		4.4.22	isatty - Determine if File Descriptor is Terminal	42
		4.4.23	sysconf - Get Configurable System Variables	43
5	Files		rectories Manager	45
	5.1		action	
	5.2	Backgr	ound	
		5.2.1	Path Name Evaluation	48
	5.3	Operat	ions	49
	5.4	Directiv	ves	50

		5.4.1	opendir - Open a Directory	50
		5.4.2	readdir - Reads a directory	50
		5.4.3	rewinddir - Resets the readdir() pointer	51
		5.4.4	scandir - Scan a directory for matching entries	51
		5.4.5	telldir - Return current location in directory stream	52
		5.4.6	closedir - Ends directory read operation	52
		5.4.7	chdir - Changes the current working directory	53
		5.4.8	fchdir - Changes the current working directory	53
		5.4.9	getcwd - Gets current working directory	54
		5.4.10	open - Opens a file	54
			creat - Create a new file or rewrite an existing one	
		5.4.12	umask - Sets a file creation mask	56
		5.4.13	link - Creates a link to a file	57
		5.4.14	symlink - Creates a symbolic link to a file	58
			readlink - Obtain the name of a symbolic link destination	
		5.4.16	mkdir - Makes a directory	59
			mkfifo - Makes a FIFO special file	
			unlink - Removes a directory entry	
			rmdir - Delete a directory	
			rename - Renames a file	
		5.4.21	stat - Gets information about a file	62
		5.4.22	fstat - Gets file status	63
		5.4.23	lstat - Gets file status	63
		5.4.24	access - Check permissions for a file	64
		5.4.25	chmod - Changes file mode	64
			fchmod - Changes permissions of a file	
			getdents - Get directory entries	
		5.4.28	chown - Changes the owner and/or group of a file	67
			utime - Change access and/or modification times of an inode	
		5.4.30	ftruncate - truncate a file to a specified length	68
		5.4.31	truncate - truncate a file to a specified length	68
		5.4.32	pathconf - Gets configuration values for files	69
		5.4.33	fpathconf - Gets configuration values for files	70
		5.4.34	mknod - create a directory	71
_				
6	-		utput Primitives Manager	73
	6.1		ıction	74
	6.2	U	ound	75
	6.3	-		76
	6.4		ves	77
		6.4.1	pipe - Create an Inter-Process Channel	77
		6.4.2	dup - Duplicates an open file descriptor	77
		6.4.3	dup2 - Duplicates an open file descriptor	78
		6.4.4	close - Closes a file	78
		6.4.5	read - Reads from a file	79
		6.4.6	write - Writes to a file	80
		6.4.7	fcntl - Manipulates an open file descriptor	80
		6.4.8	lseek - Reposition read/write file offset	82
		6.4.9		82
				83
		6.4.11	sync - Schedule file system updates	84

		6.4.12	mount - Mount a file system	. 84
		6.4.13	unmount - Unmount file systems	. 85
		6.4.14	readv - Vectored read from a file	. 85
		6.4.15	writev - Vectored write to a file	. 86
		6.4.16	aio_read - Asynchronous Read	. 86
			aio_write - Asynchronous Write	
			lio_listio - List Directed I/O	
		6.4.19	aio_error - Retrieve Error Status of Asynchronous I/O Operation	. 88
		6.4.20	aio_return - Retrieve Return Status Asynchronous I/O Operation	. 88
			aio_cancel - Cancel Asynchronous I/O Request	
		6.4.22	aio_suspend - Wait for Asynchronous I/O Request	. 89
		6.4.23	aio_fsync - Asynchronous File Synchronization	. 89
7			Class- Specific Functions Manager	91
	7.1		action	
	7.2		ound	
	7.3	-	ions	
	7.4		ves	
		7.4.1	cfgetispeed - Reads terminal input baud rate	
		7.4.2	cfgetospeed - Reads terminal output baud rate	
		7.4.3	cfsetispeed - Sets terminal input baud rate	
		7.4.4	cfsetospeed - Sets terminal output baud rate	
		7.4.5	tcgetattr - Gets terminal attributes	
		7.4.6	tcsetattr - Set terminal attributes	
		7.4.7	tcsendbreak - Sends a break to a terminal	
		7.4.8	tcdrain - Waits for all output to be transmitted to the terminal	
		7.4.9	tcflush - Discards terminal data	
			tcflow - Suspends/restarts terminal output	
		7.4.11		
		7.4.12	tcsetpgrp - Sets foreground process group ID	. 99
8	_	-	pecific Services for the C Programming Language Manager	101
	8.1		ıction	
	8.2	_	ound	
	8.3		ions	
	8.4			
		8.4.1	setlocale - Set the Current Locale	
		8.4.2	fileno - Obtain File Descriptor Number for this File	
		8.4.3	fdopen - Associate Stream with File Descriptor	
		8.4.4	flockfile - Acquire Ownership of File Stream	
		8.4.5 8.4.6	· · · · · · · · · · · · · · · · · · ·	
		8.4.7	funlockfile - Release Ownership of File Stream	
			getc_unlocked - Get Character without Locking	
		8.4.8	getchar_unlocked - Get Character from stdin without Locking	
		8.4.9	putc_unlocked - Put Character without Locking	
		8.4.10		
			setjmp - Save Context for Non-Local Goto	
			longjmp - Non-Local Jump to a Saved Context	
		0.4.13	sigsetjmp - Save Context with Signal Status for Non-Local Goto	. 108
		Q / 1 /	siglongimn Non Local Jump with Cignal Status to a Cavad Contact	100
			siglongjmp - Non-Local Jump with Signal Status to a Saved Context	
		8.4.15	siglongjmp - Non-Local Jump with Signal Status to a Saved Context tzset - Initialize Time Conversion Information strtok r - Reentrant Extract Token from String	. 109

			asctime_r - Reentrant struct tm to ASCII Time Conversion	
			gmtime r - Reentrant UTC Time Conversion	
			localtime r - Reentrant Local Time Conversion	
			rand r - Reentrant Random Number Generation	
			_	
9	•		bases Manager 11	
	9.1		ction	
	9.2	_	ound	
	9.3		ons	
	9.4		/es	
		9.4.1	getgrgid - Get Group File Entry for ID	
		9.4.2	getgrgid_r - Reentrant Get Group File Entry	
		9.4.3	getgrnam - Get Group File Entry for Name	
		9.4.4	getgrnam_r - Reentrant Get Group File Entry for Name	
		9.4.5	getpwuid - Get Password File Entry for UID	
		9.4.6	getpwuid_r - Reentrant Get Password File Entry for UID	
		9.4.7	getpwnam - Password File Entry for Name	
		9.4.8	getpwnam_r - Reentrant Get Password File Entry for Name	19
10		-	Manager 12	
	10.1	Introdu	ction	22
	10.2	Backgro	ound	23
		10.2.1	Theory	23
		10.2.2	"sem_t" Structure	23
		10.2.3	Building a Semaphore Attribute Set	23
	10.3	Operati	ions	24
		10.3.1	Using as a Binary Semaphore	24
	10.4	Directiv	res	25
		10.4.1	sem_init - Initialize an unnamed semaphore	25
		10.4.2	sem_destroy - Destroy an unnamed semaphore	25
		10.4.3	sem_open - Open a named semaphore	26
		10.4.4	sem_close - Close a named semaphore	27
		10.4.5	sem_unlink - Unlink a semaphore	27
		10.4.6	sem wait - Wait on a Semaphore	28
		10.4.7	sem_trywait - Non-blocking Wait on a Semaphore	28
			sem timedwait - Wait on a Semaphore for a Specified Time	
		10.4.9	sem post - Unlock a Semaphore	29
			sem_getvalue - Get the value of a semaphore	
11	Mute	x Mana	ger 13	31
			ction	32
			ound	
		•	Mutex Attributes	
			PTHREAD MUTEX INITIALIZER	
	11.3		ions	
			s	
			pthread mutexattr init - Initialize a Mutex Attribute Set	
			pthread mutexattr destroy - Destroy a Mutex Attribute Set	
			pthread mutexattr setprotocol - Set the Blocking Protocol	
			pthread mutexattr getprotocol - Get the Blocking Protocol	
			pthread mutexattr setprioceiling - Set the Priority Ceiling	

	11.4.6 pthread mutexattr getprioceiling - Get the Priority Ceiling	. 137
	11.4.7 pthread mutexattr setpshared - Set the Visibility	
	11.4.8 pthread_mutexattr_getpshared - Get the Visibility	
	11.4.9 pthread mutex init - Initialize a Mutex	
	11.4.10 pthread_mutex_destroy - Destroy a Mutex	
	11.4.11 pthread_mutex_lock - Lock a Mutex	. 139
	11.4.12 pthread_mutex_trylock - Poll to Lock a Mutex	
	11.4.13 pthread_mutex_timedlock - Lock a Mutex with Timeout	
	11.4.14 pthread mutex unlock - Unlock a Mutex	
	11.4.15 pthread mutex setprioceiling - Dynamically Set the Priority Ceiling	
	11.4.16 pthread_mutex_getprioceiling - Get the Current Priority Ceiling	
10 C	dialog Yanialda Managan	140
	dition Variable Manager Introduction	143
	Background	
	Operations	
12.4	Directives	
	•	
	12.4.2 pthread_condattr_destroy - Destroy a Condition Variable Attribute Set .	
	12.4.3 pthread_condattr_setpshared - Set Process Shared Attribute	
	12.4.4 pthread_condattr_getpshared - Get Process Shared Attribute	
	12.4.5 pthread_cond_init - Initialize a Condition Variable	
	12.4.6 pthread_cond_destroy - Destroy a Condition Variable	
	12.4.8 pthread_cond_broadcast - Broadcast a Condition Variable	
	12.4.10 pthread cond timedwait - Wait with Timeout a Condition Variable	
	12.4.10 ptilicad_cond_tiliicawait wait with Tiliicout a condition variable	. 150
	nory Management Manager	151
	Introduction	
	Background	
	Operations	
13.4	Directives	. 155
	13.4.1 mlockall - Lock the Address Space of a Process	
	13.4.2 munlockall - Unlock the Address Space of a Process	
	13.4.3 mlock - Lock a Range of the Process Address Space	
	13.4.4 munlock - Unlock a Range of the Process Address Space	
	13.4.5 mmap - Map Process Addresses to a Memory Object	
	13.4.6 munmap - Unmap Previously Mapped Addresses	
	13.4.7 mprotect - Change Memory Protection	
	13.4.8 msync - Memory Object Synchronization	
	13.4.9 shm_open - Open a Shared Memory Object	
	13.4.10 shm_unlink - Remove a Shared Memory Object	. 159
14 Sche	eduler Manager	161
	Introduction	
	Background	
-	14.2.1 Priority	
14.3	14.2.2 Scheduling Policies	. 163
	14.2.2 Scheduling Policies	. 163 . 164
	14.2.2 Scheduling Policies	. 163. 164. 165

	14.4.2	sched_get_priority_max - Get Maximum Priority Value 165
	14.4.3	sched rr get interval - Get Timeslicing Quantum
	14.4.4	sched_yield - Yield the Processor
4 = -01	1 3 5	
	ock Manag	
		iction
		ound
	_	ions
15		7es
		clock_gettime - Obtain Time of Day
		clock_settime - Set Time of Day
		clock_getres - Get Clock Resolution
		sleep - Delay Process Execution
		usleep - Delay Process Execution in Microseconds
		nanosleep - Delay with High Resolution
		gettimeofday - Get the Time of Day
	15.4.8	time - Get time in seconds
1.C mt.		100
	ner Mana	
		iction
		ound
		ions
16	-	Calls
		timer_create - Create a Per-Process Timer
		timer_delete - Delete a Per-Process Timer
		timer_settime - Set Next Timer Expiration
		timer_gettime - Get Time Remaining on Timer
	16.4.5	timer_getoverrun - Get Timer Overrun Count
17 Me	essage Pas	sing Manager 181
		iction
		ound
1,	_	Theory
		Messages
		Message Queues
		Building a Message Queue Attribute Set
		Notification of a Message on the Queue
		POSIX Interpretation Issues
17		ions
1/		Opening or Creating a Message Queue
		Closing a Message Queue
		Removing a Message Queue
		Sending a Message to a Message Queue
		Receiving a Message from a Message Queue
		Notification of Receipt of a Message on an Empty Queue
		Setting the Attributes of a Message Queue
4 -		Getting the Attributes of a Message Queue
17		ves
		mq_open - Open a Message Queue
		mq_close - Close a Message Queue
		mq_unlink - Remove a Message Queue
	17.4.4	mq_send - Send a Message to a Message Queue

		17.4.5 mg receive - Receive a Message	from a Message Queue 19	0
			Message is Available 19	
			Attributes	
			Attributes	
		<u> </u>		
		d Manager	19	
	18.1	Introduction		6
	18.2	Background		8
		18.2.1 Thread Attributes		8
	18.3	Operations		9
		-		
		18.4.1 pthread attr init - Initialize a Th	read Attribute Set 20	0
			Thread Attribute Set 20	
			Detach State	
			t Detach State 20	
			hread Stack Size 20	
			hread Stack Size 20	
			Thread Stack Address 20	
			Thread Stack Address 20	
			ad Scheduling Scope 20	
			ead Scheduling Scope 20	
			et Inherit Scheduler Flag 20	
			et Inherit Scheduler Flag 20	
			t Scheduling Policy 20	
			et Scheduling Policy 20	
			et Scheduling Parameters 20	
			et Scheduling Parameters 20	
			Thread Affinity Attribute 20	
			Thread Affinity Attribute 20	
			rent Thread	
			d	
		18 4 22 pthread_detach	Thread Concurrency	1
			read Concurrency	
		· =	Attributes	
			ermination	
			l IDs	
			E Initialization	
			read Scheduling Parameters	
			read Scheduling Parameters 21	
			ead Affinity	
			ad Affinity	
		10.4.32 ptilieau_setaininty_np - Set Tilie	ad Allillity	U
19	Key N	lanager	21'	7
				8
			ead Specific Data Key	
			ead Specific Data Key 22	
			Specific Key Value	

	19.4.4 pthread_getspecific - Get Thread Specific Key Value	222
2	Thread Cancellation Manager 20.1 Introduction 20.2 Background 20.3 Operations 20.4 Directives 20.4.1 pthread_cancel - Cancel Execution of a Thread 20.4.2 pthread_setcancelstate - Set Cancelability State 20.4.3 pthread_setcanceltype - Set Cancelability Type 20.4.4 pthread_testcancel - Create Cancellation Point 20.4.5 pthread_cleanup_push - Establish Cancellation Handler 20.4.6 pthread_cleanup_pop - Remove Cancellation Handler	227 228 229 229 229 229 230 230
2	21.1 Introduction	
2	21.2 Standard Utility Functions (stdlib.h)	236
2	21.5 Strings and Memory (string.h)	239 240
2	21.7 Time Functions (time.h)	242
2	21.10 Miscellaneous Macros and Functions	246 247
2	Services Provided by the Math Library (libm) 22.1 Introduction	
2	Device Control 23.1 Introduction	255 256 257
	•	259
25 (Inde		261 263

Copyrights and License

- © 2018 Marçal Comajoan Cara
- © 2017 Gedare Bloom
- © 1988, 2018 On-Line Applications Research Corporation (OAR)

This document is available under the Creative Commons Attribution-ShareAlike 4.0 International Public License.

The authors have used their best efforts in preparing this material. These efforts include the development, research, and testing of the theories and programs to determine their effectiveness. No warranty of any kind, expressed or implied, with regard to the software or the material contained in this document is provided. No liability arising out of the application or use of any product described in this document is assumed. The authors reserve the right to revise this material and to make changes from time to time in the content hereof without obligation to notify anyone of such revision or changes.

The RTEMS Project is hosted at https://www.rtems.org. Any inquiries concerning RTEMS, its related support components, or its documentation should be directed to the RTEMS Project community.

RTEMS Online Resources

Home	https://www.rtems.org
Documentation	https://docs.rtems.org
Mailing Lists	https://lists.rtems.org
Bug Reporting	https://devel.rtems.org/wiki/Developer/Bug_Reporting
Git Repositories	https://git.rtems.org
Developers	https://devel.rtems.org

2 CONTENTS

CHAPTER

ONE

PREFACE

This is the User's Guide for the POSIX API support provided in RTEMS.

The functionality described in this document is based on the following standards:

- POSIX 1003.1b-1993.
- POSIX 1003.1h/D3.
- Open Group Single UNIX Specification.

Much of the POSIX API standard is actually implemented in the Cygnus Newlib ANSI C Library. Please refer to documentation on Newlib for more information on the functionality it supplies.

This manual is still under construction and improvements are welcomed from users.

1.1 Acknowledgements

The RTEMS Project has been granted permission from The Open Group IEEE to excerpt and use portions of the POSIX standards documents in the RTEMS POSIX API User's Guide and RTEMS Shell User's Guide. We have to include a specific acknowledgement paragraph in these documents (e.g. preface or copyright page) and another slightly different paragraph for each manual page that excerpts and uses text from the standards.

This file should help ensure that the paragraphs are consistent and not duplicated

The Institute of Electrical and Electronics Engineers, Inc and The Open Group, have given us permission to reprint portions of their documentation. Portions of this text are reprinted and reproduced in electronic form from IEEE Std 1003.1, 2004 Edition, Standard for Information Technology Operating System Interface (POSIX), The Open Group Base Specifications Issue 6, Copyright (c) 2001-2004 by the Institute of Electrical and Electronics Engineers, Inc and The Open Group. In the event of any discrepancy between this version and the original IEEE and The Open Group Standard, the original IEEE and The Open Group Standard is the referee document. The original Standard can be obtained online at http://www.opengroup.org/unix/online.html. This notice shall appear on any product containing this material.

CHAPTER

TWO

PROCESS CREATION AND EXECUTION MANAGER

2.1 Introduction

The process creation and execution manager provides the functionality associated with the creation and termination of processes.

The directives provided by the process creation and execution manager are:

- fork (page 9) Create a Process
- execl (page 9) Execute a File
- execv (page 9) Execute a File
- execle (page 10) Execute a File
- execve (page 10) Execute a File
- execlp (page 11) Execute a File
- execvp (page 11) Execute a File
- pthread_atfork (page 12) Register Fork Handlers
- wait (page 12) Wait for Process Termination
- waitpid (page 12) Wait for Process Termination
- _exit (page 13) Terminate a Process

2.2 Background

POSIX process functionality can not be completely supported by RTEMS. This is because RTEMS provides no memory protection and implements a *single process, multi-threaded execution model*. In this light, RTEMS provides none of the routines that are associated with the creation of new processes. However, since the entire RTEMS application (e.g. executable) is logically a single POSIX process, RTEMS is able to provide implementations of many operations on processes. The rule of thumb is that those routines provide a meaningful result. For example, getpid() returns the node number.

2.2. Background 7

2.3 Operations

The only functionality method defined by this manager which is supported by RTEMS is the _exit service. The implementation of _exit shuts the application down and is equivalent to invoking either exit or rtems_shutdown_executive.

2.4 Directives

This section details the process creation and execution manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

2.4.1 fork - Create a Process

CALLING SEQUENCE:

```
#include <sys/types.h>
int fork( void );
```

STATUS CODES:

```
ENOSYS | This routine is not supported by RTEMS.
```

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.2 execl - Execute a File

CALLING SEQUENCE:

```
int execl(
   const char *path,
   const char *arg,
   ...
);
```

STATUS CODES:

ENOSYS | This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.3 execv - Execute a File

CALLING SEQUENCE:

```
int execv(
   const char *path,
   char const *argv[],
   ...
);
```

STATUS CODES:

ENOSYS | This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.4 execle - Execute a File

CALLING SEQUENCE:

```
int execle(
    const char *path,
    const char *arg,
    ...
);
```

STATUS CODES:

ENOSYS | This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.5 execve - Execute a File

CALLING SEQUENCE:

```
int execve(
const char *path,
char *const argv[],
char *const envp[]
);
```

STATUS CODES:

ENOSYS | This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.6 execlp - Execute a File

CALLING SEQUENCE:

```
int execlp(
const char *file,
const char *arg,
...
);
```

STATUS CODES:

ENOSYS This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.7 execvp - Execute a File

CALLING SEQUENCE:

```
int execvp(
    const char *file,
    char *const argv[],
    ...
);
```

STATUS CODES:

ENOSYS This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.8 pthread_atfork - Register Fork Handlers

CALLING SEQUENCE:

```
#include <sys/types.h>
int pthread_atfork(
    void (*prepare)(void),
    void (*parent)(void),
    void (*child)(void)

);
```

STATUS CODES:

ENOSYS This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.9 wait - Wait for Process Termination

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/wait.h>
int wait(
   int *stat_loc
);
```

STATUS CODES:

ENOSYS | This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.10 waitpid - Wait for Process Termination

CALLING SEQUENCE:

```
int wait(
    pid_t pid,
    int *stat_loc,
    int options
);
```

STATUS CODES:

ENOSYS	This routine is not supported by RTEMS.

DESCRIPTION:

This routine is not supported by RTEMS.

NOTES:

NONE

2.4.11 _exit - Terminate a Process

CALLING SEQUENCE:

```
void _exit(
   int status
);
```

STATUS CODES:

NONE

DESCRIPTION:

The _exit() function terminates the calling process.

NOTES:

In RTEMS, a process is equivalent to the entire application on a single processor. Invoking this service terminates the application.

CHAPTER

THREE

SIGNAL MANAGER

3.1 Introduction

The signal manager provides the functionality associated with the generation, delivery, and management of process-oriented signals.

The directives provided by the signal manager are:

- sigaddset (page 19) Add a Signal to a Signal Set
- sigdelset (page 19) Delete a Signal from a Signal Set
- sigfillset (page 20) Fill a Signal Set
- sigismember (page 20) Is Signal a Member of a Signal Set
- sigemptyset (page 20) Empty a Signal Set
- sigaction (page 21) Examine and Change Signal Action
- pthread kill (page 22) Send a Signal to a Thread
- sigprocmask (page 23) Examine and Change Process Blocked Signals
- pthread sigmask (page 23) Examine and Change Thread Blocked Signals
- kill (page 24) Send a Signal to a Process
- sigpending (page 25) Examine Pending Signals
- sigsuspend (page 25) Wait for a Signal
- pause (page 25) Suspend Process Execution
- sigwait (page 26) Synchronously Accept a Signal
- sigwaitinfo (page 26) Synchronously Accept a Signal
- sigtimedwait (page 27) Synchronously Accept a Signal with Timeout
- sigqueue (page 27) Queue a Signal to a Process
- alarm (page 28) Schedule Alarm
- ualarm (page 29) Schedule Alarm in Microseconds

3.2 Background

3.2.1 Signals

POSIX signals are an asynchronous event mechanism. Each process and thread has a set of signals associated with it. Individual signals may be enabled (e.g. unmasked) or blocked (e.g. ignored) on both a per-thread and process level. Signals which are enabled have a signal handler associated with them. When the signal is generated and conditions are met, then the signal handler is invoked in the proper process or thread context asynchronous relative to the logical thread of execution.

If a signal has been blocked when it is generated, then it is queued and kept pending until the thread or process unblocks the signal or explicitly checks for it. Traditional, non-real-time POSIX signals do not queue. Thus if a process or thread has blocked a particular signal, then multiple occurrences of that signal are recorded as a single occurrence of that signal.

One can check for the set of outstanding signals that have been blocked. Services are provided to check for outstanding process or thread directed signals.

3.2.2 Signal Delivery

Signals which are directed at a thread are delivered to the specified thread.

Signals which are directed at a process are delivered to a thread which is selected based on the following algorithm:

- 1. If the action for this signal is currently SIG_IGN, then the signal is simply ignored.
- 2. If the currently executing thread has the signal unblocked, then the signal is delivered to it.
- 3. If any threads are currently blocked waiting for this signal (sigwait()), then the signal is delivered to the highest priority thread waiting for this signal.
- 4. If any other threads are willing to accept delivery of the signal, then the signal is delivered to the highest priority thread of this set. In the event, multiple threads of the same priority are willing to accept this signal, then priority is given first to ready threads, then to threads blocked on calls which may be interrupted, and finally to threads blocked on non-interruptible calls.
- 5. In the event the signal still can not be delivered, then it is left pending. The first thread to unblock the signal (sigprocmask() or pthread_sigprocmask()) or to wait for this signal (sigwait()) will be the recipient of the signal.

3.2. Background 17

3.3 Operations

3.3.1 Signal Set Management

Each process and each thread within that process has a set of individual signals and handlers associated with it. Services are provided to construct signal sets for the purposes of building signal sets - type sigset_t - that are used to provide arguments to the services that mask, unmask, and check on pending signals.

3.3.2 Blocking Until Signal Generation

A thread may block until receipt of a signal. The "sigwait" and "pause" families of functions block until the requested signal is received or if using sigtimedwait() until the specified timeout period has elapsed.

3.3.3 Sending a Signal

This is accomplished via one of a number of services that sends a signal to either a process or thread. Signals may be directed at a process by the service kill() or at a thread by the service pthread_kill()

3.4 Directives

This section details the signal manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

3.4.1 sigaddset - Add a Signal to a Signal Set

CALLING SEQUENCE:

```
#include <signal.h>
int sigaddset(
    sigset_t *set,
    int signo

);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

```
EINVAL Invalid argument passed.
```

DESCRIPTION:

This function adds the signal signo to the specified signal set.

NOTES:

The set must be initialized using either sigemptyset or sigfillset before using this function.

3.4.2 sigdelset - Delete a Signal from a Signal Set

CALLING SEQUENCE:

```
#include <signal.h>
int sigdelset(
    sigset_t *set,
    int signo
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL Invalid argument passed.

DESCRIPTION:

This function deletes the signal specified by signo from the specified signal set.

NOTES:

The set must be initialized using either sigemptyset or sigfillset before using this function.

3.4.3 sigfillset - Fill a Signal Set

CALLING SEQUENCE:

```
#include <signal.h>
int sigfillset(
    sigset_t *set
4 );
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL	Invalid argument passed.
--------	--------------------------

DESCRIPTION:

This function fills the specified signal set such that all signals are set.

3.4.4 sigismember - Is Signal a Member of a Signal Set

CALLING SEQUENCE:

```
#include <signal.h>
int sigismember(
    const sigset_t *set,
    int signo
);
```

STATUS CODES:

The function returns either 1 or 0 if completed successfully, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

```
EINVAL Invalid argument passed.
```

DESCRIPTION:

This function returns 1 if signo is a member of set and 0 otherwise.

NOTES:

The set must be initialized using either sigemptyset or sigfillset before using this function.

3.4.5 sigemptyset - Empty a Signal Set

CALLING SEQUENCE:

```
#include <signal.h>
int sigemptyset(
    sigset_t *set
4 );
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

AL Invalid argument passed.

DESCRIPTION:

This function initializes an empty signal set pointed to by set.

3.4.6 sigaction - Examine and Change Signal Action

CALLING SEQUENCE:

```
#include <signal.h>
int sigaction(
   int sigaction *sig,
   const struct sigaction *act,
   struct sigaction *oact
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL	Invalid argument passed.
ENOTSUP	Realtime Signals Extension option not supported.

DESCRIPTION:

If the argument act is not a null pointer, it points to a structure specifying the action to be associated with the specified signal. If the argument oact is not a null pointer, the action previously associated with the signal is stored in the location pointed to by the argument oact. If the argument act is a null pointer, signal handling is unchanged; thus, the call can be used to enquire about the current handling of a given signal.

The structure sigaction has the following members:

<pre>void(*)(int) sa_handler</pre>	Pointer to a signal-catching function or one of the
	macros SIG_IGN or SIG_DFL.
sigset_t sa_mask	Additional set of signals to be blocked during execution
	of signal-catching function.
int sa_flags	Special flags to affect behavior of signal.
<pre>void(*)(int, siginfo_t*,</pre>	Alternative pointer to a signal-catching function.
void*) sa_sigaction	

sa_handler and sa_sigaction should never be used at the same time as their storage may overlap.

If the SA_SIGINFO flag (see below) is set in sa_flags, the sa_sigaction field specifies a signal-catching function, otherwise "sa_handler" specifies the action to be associated with the signal, which may be a signal-catching function or one of the macros SIG_IGN or SIG_DFN.

The following flags can be set in the sa_flags field:

```
SA_ If not set, the signal-catching function should be declared as void func(int signo) SIGINAM the address of the function should be set in sa_handler. If set, the signal-catching function should be declared as void func(int signo, siginfo_t* info, void* context) and the address of the function should be set in sa_sigaction.
```

The prototype of the siginfo_t structure is the following:

NOTES:

The signal number cannot be SIGKILL.

3.4.7 pthread_kill - Send a Signal to a Thread

CALLING SEQUENCE:

```
#include <signal.h>
int pthread_kill(
   pthread_t thread,
   int sig
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

	The thread indicated by the parameter thread is invalid.
EINVAL	Invalid argument passed.

DESCRIPTION:

This functions sends the specified signal sig to a thread referenced to by thread.

If the signal code is 0, arguments are validated and no signal is sent.

3.4.8 sigprocmask - Examine and Change Process Blocked Signals

CALLING SEQUENCE:

```
#include <signal.h>
int sigprocmask(
   int how,
   const sigset_t *set,
   sigset_t *oset
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL	Invalid argument passed.
--------	--------------------------

DESCRIPTION:

This function is used to alter the set of currently blocked signals on a process wide basis. A blocked signal will not be received by the process. The behavior of this function is dependent on the value of how which may be one of the following:

SIG_BLOCK	The set of blocked signals is set to the union of set and those signals currently
	blocked.
SIG_	The signals specific in set are removed from the currently blocked set.
UNBLOCK	
SIG_	The set of currently blocked signals is set to set.
SETMASK	

If oset is not NULL, then the set of blocked signals prior to this call is returned in oset. If set is NULL, no change is done, allowing to examine the set of currently blocked signals.

NOTES:

It is not an error to unblock a signal which is not blocked.

In the current implementation of RTEMS POSIX API sigprocmask() is technically mapped to pthread_sigmask().

3.4.9 pthread sigmask - Examine and Change Thread Blocked Signals

CALLING SEQUENCE:

```
#include <signal.h>
int pthread_sigmask(
int how,
const sigset_t *set,
sigset_t *oset
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL

Invalid argument passed.

DESCRIPTION:

This function is used to alter the set of currently blocked signals for the calling thread. A blocked signal will not be received by the process. The behavior of this function is dependent on the value of how which may be one of the following:

SIG_BLOCK	The set of blocked signals is set to the union of set and those signals currently
	blocked.
SIG_	The signals specific in set are removed from the currently blocked set.
UNBLOCK	
SIG_	The set of currently blocked signals is set to set.
SETMASK	

If oset is not NULL, then the set of blocked signals prior to this call is returned in oset. If set is NULL, no change is done, allowing to examine the set of currently blocked signals.

NOTES:

It is not an error to unblock a signal which is not blocked.

3.4.10 kill - Send a Signal to a Process

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <signal.h>
int kill(
pid_t pid,
int sig
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL	Invalid argument passed.
EPERM	Process does not have permission to send the signal to any receiving process.
ESRCH	The process indicated by the parameter pid is invalid.

DESCRIPTION:

This function sends the signal sig to the process pid.

NOTES:

Since RTEMS is a single-process system, a signal can only be sent to the calling process (i.e. the current node).

3.4.11 sigpending - Examine Pending Signals

CALLING SEQUENCE:

```
#include <signal.h>
int sigpending(
const sigset_t *set
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EFAULT	Invalid address for set.

DESCRIPTION:

This function allows the caller to examine the set of currently pending signals. A pending signal is one which has been raised but is currently blocked. The set of pending signals is returned in set.

3.4.12 sigsuspend - Wait for a Signal

CALLING SEQUENCE:

```
#include <signal.h>
int sigsuspend(
const sigset_t *sigmask
);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

```
EINTR | Signal interrupted this function.
```

DESCRIPTION:

This function temporarily replaces the signal mask for the process with that specified by sigmask and blocks the calling thread until a signal is raised.

3.4.13 pause - Suspend Process Execution

CALLING SEQUENCE:

```
#include <signal.h>
int pause( void );
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

ETNITD	Signal interrupted this function.
⊏TI// LK	Signal interrupted this function.

DESCRIPTION:

This function causes the calling thread to be blocked until an unblocked signal is received.

3.4.14 sigwait - Synchronously Accept a Signal

CALLING SEQUENCE:

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINVAL	Invalid argument passed.
EINTR	Signal interrupted this function.

DESCRIPTION:

This function selects a pending signal based on the set specified in set, atomically clears it from the set of pending signals, and returns the signal number for that signal in sig.

3.4.15 sigwaitinfo - Synchronously Accept a Signal

CALLING SEQUENCE:

```
#include <signal.h>
int sigwaitinfo(
    const sigset_t *set,
    siginfo_t *info

);
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EINTR

Signal interrupted this function.

DESCRIPTION:

This function selects a pending signal based on the set specified in set, atomically clears it from the set of pending signals, and returns information about that signal in info.

The prototype of the siginfo_t structure is the following:

```
typedef struct
 {
2
3
     int si_signo;
                           /* Signal number */
     int si_code;
                           /* Cause of the signal */
     union sigval
5
6
7
         int sival_int; /* Integer signal value */
         void* sival_ptr; /* Pointer signal value */
                          /* Signal value */
     } si_value;
 } siginfo_t;
```

3.4.16 sigtimedwait - Synchronously Accept a Signal with Timeout

CALLING SEQUENCE:

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EAGAIN	Timed out while waiting for the specified signal set.
EINVAL	Nanoseconds field of the timeout argument is invalid.
EINTR	Signal interrupted this function.

DESCRIPTION:

This function selects a pending signal based on the set specified in set, atomically clears it from the set of pending signals, and returns information about that signal in info. The calling thread will block up to timeout waiting for the signal to arrive.

The timespec structure is defined as follows:

```
struct timespec
{
    time_t tv_sec; /* Seconds */
    long tv_nsec; /* Nanoseconds */
};
```

NOTES:

If timeout is NULL, then the calling thread will wait forever for the specified signal set.

3.4.17 sigqueue - Queue a Signal to a Process

CALLING SEQUENCE:

```
#include <signal.h>
 int sigqueue(
3
      pid_t
                          pid,
      int
                          signo,
      const union sigval value
5
 );
```

STATUS CODES:

The function returns 0 on success, otherwise it returns -1 and sets errno to indicate the error. errno may be set to:

EAGALINO resources available to queue the signal. The process has already queued SIGQUEUE_ MAX signals that are still pending at the receiver or the systemwide resource limit has been exceeded.

EINVAIThe value of the signo argument is an invalid or unsupported signal number.

EPERMThe process does not have the appropriate privilege to send the signal to the receiving

ESRCHThe process pid does not exist.

DESCRIPTION:

This function sends the signal specified by signo to the process pid

The sigval union is specified as:

```
union sigval
2
 {
     int sival_int; /* Integer signal value */
3
     void* sival_ptr; /* Pointer signal value */
 };
```

NOTES:

Since RTEMS is a single-process system, a signal can only be sent to the calling process (i.e. the current node).

3.4.18 alarm - Schedule Alarm

CALLING SEQUENCE:

```
#include <unistd.h>
 unsigned int alarm(
     unsigned int seconds
3
```

STATUS CODES:

This call always succeeds.

If there was a previous alarm() request with time remaining, then this routine returns the number of seconds until that outstanding alarm would have fired. If no previous alarm() request was outstanding, then zero is returned.

DESCRIPTION:

The alarm() service causes the SIGALRM signal to be generated after the number of seconds specified by seconds has elapsed.

NOTES:

Alarm requests do not queue. If alarm is called while a previous request is outstanding, the call will result in rescheduling the time at which the SIGALRM signal will be generated.

If the notification signal, SIGALRM, is not caught or ignored, the calling process is terminated.

3.4.19 ualarm - Schedule Alarm in Microseconds

CALLING SEQUENCE:

```
#include <unistd.h>
useconds_t ualarm(
    useconds_t useconds,
    useconds_t interval

);
```

STATUS CODES:

This call always succeeds.

If there was a previous ualarm() request with time remaining, then this routine returns the number of seconds until that outstanding alarm would have fired. If no previous alarm() request was outstanding, then zero is returned.

DESCRIPTION:

The ualarm() service causes the SIGALRM signal to be generated after the number of microseconds specified by useconds has elapsed.

When interval is non-zero, repeated timeout notification occurs with a period in microseconds specified by interval.

NOTES:

Alarm requests do not queue. If alarm is called while a previous request is outstanding, the call will result in rescheduling the time at which the SIGALRM signal will be generated.

If the notification signal, SIGALRM, is not caught or ignored, the calling process is terminated.

CHAPTER

FOUR

PROCESS ENVIRONMENT MANAGER

4.1 Introduction

The process environment manager is responsible for providing the functions related to user and group Id management.

The directives provided by the process environment manager are:

- getpid (page 35) Get Process ID
- getppid (page 35) Get Parent Process ID
- getuid (page 35) Get User ID
- geteuid (page 36) Get Effective User ID
- getgid (page 36) Get Real Group ID
- getegid (page 36) Get Effective Group ID
- setuid (page 37) Set User ID
- setgid (page 37) Set Group ID
- getgroups (page 37) Get Supplementary Group IDs
- getlogin (page 38) Get User Name
- getlogin r (page 38) Reentrant Get User Name
- getpgrp (page 38) Get Process Group ID
- setsid (page 39) Create Session and Set Process Group ID
- setpgid (page 39) Set Process Group ID for Job Control
- uname (page 39) Get System Name
- times (page 40) Get Process Times
- getenv (page 40) Get Environment Variables
- setenv (page 41) Set Environment Variables
- ctermid (page 41) Generate Terminal Pathname
- ttyname (page 41) Determine Terminal Device Name
- ttyname r (page 42) Reentrant Determine Terminal Device Name
- isatty (page 42) Determine if File Descriptor is Terminal
- sysconf (page 43) Get Configurable System Variables

4.2 Background

4.2.1 Users and Groups

RTEMS provides a single process, multi-threaded execution environment. In this light, the notion of user and group is somewhat without meaning. But RTEMS does provide services to provide a synthetic version of user and group. By default, a single user and group is associated with the application. Thus unless special actions are taken, every thread in the application shares the same user and group Id. The initial rationale for providing user and group Id functionality in RTEMS was for the filesystem infrastructure to implement file permission checks. The effective user/group Id capability has since been used to implement permissions checking by the ftpd server.

In addition to the "real" user and group Ids, a process may have an effective user/group Id. This allows a process to function using a more limited permission set for certain operations.

4.2.2 User and Group Names

POSIX considers user and group Ids to be a unique integer that may be associated with a name. This is usually accomplished via a file named /etc/passwd for user Id mapping and /etc/groups for group Id mapping. Again, although RTEMS is effectively a single process and thus single user system, it provides limited support for user and group names. When configured with an appropriate filesystem, RTEMS will access the appropriate files to map user and group Ids to names.

If these files do not exist, then RTEMS will synthesize a minimal version so this family of services return without error. It is important to remember that a design goal of the RTEMS POSIX services is to provide useable and meaningful results even though a full process model is not available.

4.2.3 Environment Variables

POSIX allows for variables in the run-time environment. These are name/value pairs that make be dynamically set and obtained by programs. In a full POSIX environment with command line shell and multiple processes, environment variables may be set in one process - such as the shell - and inherited by child processes. In RTEMS, there is only one process and thus only one set of environment variables across all processes.

4.2. Background 33

4.3 Operations

4.3.1 Accessing User and Group Ids

The user Id associated with the current thread may be obtain using the getuid() service. Similarly, the group Id may be obtained using the getgid() service.

4.3.2 Accessing Environment Variables

The value associated with an environment variable may be obtained using the getenv() service and set using the putenv() service.

4.4 Directives

This section details the process environment manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

4.4.1 getpid - Get Process ID

CALLING SEQUENCE:

```
int getpid( void );
```

STATUS CODES:

The process Id is returned.

DESCRIPTION:

This service returns the process Id.

NOTES:

NONE

4.4.2 getppid - Get Parent Process ID

CALLING SEQUENCE:

```
int getppid( void );
```

STATUS CODES:

The parent process Id is returned.

DESCRIPTION:

This service returns the parent process Id.

NOTES:

NONE

4.4.3 getuid - Get User ID

CALLING SEQUENCE:

```
int getuid( void );
```

STATUS CODES:

The effective user Id is returned.

DESCRIPTION:

This service returns the effective user Id.

NOTES:

NONE

4.4.4 geteuid - Get Effective User ID

CALLING SEQUENCE:

```
int geteuid( void );
```

STATUS CODES:

The effective group Id is returned.

DESCRIPTION:

This service returns the effective group Id.

NOTES:

NONE

4.4.5 getgid - Get Real Group ID

CALLING SEQUENCE:

```
int getgid( void );
```

STATUS CODES:

The group Id is returned.

DESCRIPTION:

This service returns the group Id.

NOTES:

NONE

4.4.6 getegid - Get Effective Group ID

CALLING SEQUENCE:

```
int getegid( void );
```

STATUS CODES:

The effective group Id is returned.

DESCRIPTION:

This service returns the effective group Id.

NOTES:

NONE

4.4.7 setuid - Set User ID

CALLING SEQUENCE:

```
int setuid(
    uid_t uid
);
```

STATUS CODES:

This service returns 0.

DESCRIPTION:

This service sets the user Id to uid.

NOTES:

NONE

4.4.8 setgid - Set Group ID

CALLING SEQUENCE:

```
int setgid(
    gid_t gid
);
```

STATUS CODES:

This service returns 0.

DESCRIPTION:

This service sets the group Id to gid.

NOTES:

NONE

4.4.9 getgroups - Get Supplementary Group IDs

CALLING SEQUENCE:

```
int getgroups(
   int gidsetsize,
   gid_t grouplist[]

);
```

STATUS CODES:

NA

DESCRIPTION:

This service is not implemented as RTEMS has no notion of supplemental groups.

NOTES:

If supported, this routine would only be allowed for the super-user.

4.4.10 getlogin - Get User Name

CALLING SEQUENCE:

```
char *getlogin( void );
```

STATUS CODES:

Returns a pointer to a string containing the name of the current user.

DESCRIPTION:

This routine returns the name of the current user.

NOTES:

This routine is not reentrant and subsequent calls to getlogin() will overwrite the same buffer.

4.4.11 getlogin_r - Reentrant Get User Name

CALLING SEQUENCE:

```
int getlogin_r(
    char *name,
    size_t namesize
4 );
```

STATUS CODES:

EINVAL The arguments were invalid.

DESCRIPTION:

This is a reentrant version of the getlogin() service. The caller specified their own buffer, name, as well as the length of this buffer, namesize.

NOTES:

NONE

4.4.12 getpgrp - Get Process Group ID

CALLING SEQUENCE:

```
pid_t getpgrp( void );
```

STATUS CODES:

The procress group Id is returned.

DESCRIPTION:

This service returns the current progress group Id.

NOTES:

This routine is implemented in a somewhat meaningful way for RTEMS but is truly not functional.

4.4.13 setsid - Create Session and Set Process Group ID

CALLING SEQUENCE:

```
pid_t setsid( void );
```

STATUS CODES:

EPERM | The application does not have permission to create a process group.

DESCRIPTION:

This routine always returns EPERM as RTEMS has no way to create new processes and thus no way to create a new process group.

NOTES:

NONE

4.4.14 setpgid - Set Process Group ID for Job Control

CALLING SEQUENCE:

```
int setpgid(
    pid_t pid,
    pid_t pgid

);
```

STATUS CODES:

ENOSYS The routine is not implemented.

DESCRIPTION:

This service is not implemented for RTEMS as process groups are not supported.

NOTES:

NONE

4.4.15 uname - Get System Name

CALLING SEQUENCE:

```
int uname(
    struct utsname *name
);
```

STATUS CODES:

EPERM The provided structure pointer is invalid.

DESCRIPTION:

This service returns system information to the caller. It does this by filling in the struct utsname format structure for the caller.

NOTES:

The information provided includes the operating system (RTEMS in all configurations), the node number, the release as the RTEMS version, and the CPU family and model. The CPU model name will indicate the multilib executive variant being used.

4.4.16 times - Get process times

CALLING SEQUENCE:

```
#include <sys/time.h>
clock_t times(
struct tms *ptms
4);
```

STATUS CODES:

This routine returns the number of clock ticks that have elapsed since the system was initialized (e.g. the application was started).

DESCRIPTION:

times stores the current process times in ptms. The format of struct tms is as defined in <sys/times.h>. RTEMS fills in the field tms_utime with the number of ticks that the calling thread has executed and the field tms_stime with the number of clock ticks since system boot (also returned). All other fields in the ptms are left zero.

NOTES:

RTEMS has no way to distinguish between user and system time so this routine returns the most meaningful information possible.

4.4.17 getenv - Get Environment Variables

CALLING SEQUENCE:

```
char *getenv(
const char *name
);
```

STATUS CODES:

NULL	when no match
pointer to value	when successful

DESCRIPTION:

This service searches the set of environment variables for a string that matches the specified name. If found, it returns the associated value.

NOTES:

The environment list consists of name value pairs that are of the form name = value.

4.4.18 seteny - Set Environment Variables

CALLING SEQUENCE:

```
int setenv(
    const char *name,
    const char *value,
    int overwrite
);
```

STATUS CODES:

Returns 0 if successful and -1 otherwise.

DESCRIPTION:

This service adds the variable name to the environment with value. If name is not already exist, then it is created. If name exists and overwrite is zero, then the previous value is not overwritten.

NOTES:

NONE

4.4.19 ctermid - Generate Terminal Pathname

CALLING SEQUENCE:

```
char *ctermid(
char *s
);
```

STATUS CODES:

Returns a pointer to a string indicating the pathname for the controlling terminal.

DESCRIPTION:

This service returns the name of the terminal device associated with this process. If s is NULL, then a pointer to a static buffer is returned. Otherwise, s is assumed to have a buffer of sufficient size to contain the name of the controlling terminal.

NOTES:

By default on RTEMS systems, the controlling terminal is /dev/console. Again this implementation is of limited meaning, but it provides true and useful results which should be sufficient to ease porting applications from a full POSIX implementation to the reduced profile supported by RTEMS.

4.4.20 ttyname - Determine Terminal Device Name

CALLING SEQUENCE:

```
char *ttyname(
int fd
);
```

STATUS CODES:

Pointer to a string containing the terminal device name or NULL is returned on any error.

DESCRIPTION:

This service returns a pointer to the pathname of the terminal device that is open on the file descriptor fd. If fd is not a valid descriptor for a terminal device, then NULL is returned.

NOTES:

This routine uses a static buffer.

4.4.21 ttyname r - Reentrant Determine Terminal Device Name

CALLING SEQUENCE:

```
int ttyname_r(
   int fd,
   char *name,
   int namesize
);
```

STATUS CODES:

This routine returns -1 and sets errno as follows:

EBADF	If not a valid descriptor for a terminal device.
EINVAL	If name is NULL or namesize are insufficient.

DESCRIPTION:

This service the pathname of the terminal device that is open on the file descriptor fd.

NOTES:

NONE

4.4.22 isatty - Determine if File Descriptor is Terminal

CALLING SEQUENCE:

```
int isatty(
   int fd
);
```

STATUS CODES:

Returns 1 if fd is a terminal device and 0 otherwise.

DESCRIPTION:

This service returns 1 if fd is an open file descriptor connected to a terminal and 0 otherwise.

NOTES:

4.4.23 sysconf - Get Configurable System Variables

CALLING SEQUENCE:

```
long sysconf(
int name
);
```

STATUS CODES:

The value returned is the actual value of the system resource. If the requested configuration name is a feature flag, then 1 is returned if the available and 0 if it is not. On any other error condition, -1 is returned.

DESCRIPTION:

This service is the mechanism by which an application determines values for system limits or options at runtime.

NOTES:

Much of the information that may be obtained via sysconf has equivalent macros in unistd.h. However, those macros reflect conservative limits which may have been altered by application configuration.

CHAPTER

FIVE

FILES AND DIRECTORIES MANAGER

5.1 Introduction

The files and directories manager is ...

The directives provided by the files and directories manager are:

- opendir (page 50) Open a Directory
- readdir (page 50) Reads a directory
- rewinddir (page 51) Resets the readdir() pointer
- scandir (page 51) Scan a directory for matching entries
- telldir (page 52) Return current location in directory stream
- closedir (page 52) Ends directory read operation
- getdents (page 66) Get directory entries
- chdir (page 53) Changes the current working directory
- fchdir (page 53) Changes the current working directory
- getcwd (page 54) Gets current working directory
- open (page 54) Opens a file
- creat (page 56) Create a new file or rewrite an existing one
- umask (page 56) Sets a file creation mask
- link (page 57) Creates a link to a file
- symlink (page 58) Creates a symbolic link to a file
- readlink (page 58) Obtain the name of the link destination
- mkdir (page 59) Makes a directory
- mkfifo (page 60) Makes a FIFO special file
- unlink (page 60) Removes a directory entry
- rmdir (page 61) Delete a directory
- rename (page 61) Renames a file
- stat (page 62) Gets information about a file.
- fstat (page 63) Gets file status
- lstat (page 63) Gets file status
- access (page 64) Check permissions for a file.
- chmod (page 64) Changes file mode
- fchmod (page 65) Changes permissions of a file
- *chown* (page 67) Changes the owner and/ or group of a file
- utime (page 67) Change access and/or modification times of an inode
- ftruncate (page 68) Truncate a file to a specified length
- truncate (page 68) Truncate a file to a specified length

- pathconf (page 69) Gets configuration values for files
- fpathconf (page 70) Get configuration values for files
- mknod (page 71) Create a directory

5.1. Introduction 47

5.2 Background

5.2.1 Path Name Evaluation

A pathname is a string that consists of no more than PATH_MAX bytes, including the terminating null character. A pathname has an optional beginning slash, followed by zero or more filenames separated by slashes. If the pathname refers to a directory, it may also have one or more trailing slashes. Multiple successive slahes are considered to be the same as one slash.

POSIX allows a pathname that begins with precisely two successive slashes to be interpreted in an implementation-defined manner. RTEMS does not currently recognize this as a special condition. Any number of successive slashes is treated the same as a single slash. POSIX requires that an implementation treat more than two leading slashes as a single slash.

5.3 Operations

There is currently no text in this section.

5.3. Operations 49

5.4 Directives

This section details the files and directories manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

5.4.1 opendir - Open a Directory

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <dirent.h>
int opendir(
    const char *dirname

);
```

STATUS CODES:

EACCES	Search permission was denied on a component of the path prefix of dirname, or read
	permission is denied
EMFILE	Too many file descriptors in use by process
ENFILE	Too many files are currently open in the system.
ENOENT	Directory does not exist, or name is an empty string.
ENOMEM	Insufficient memory to complete the operation.
ENOTDIR	name is not a directory.

DESCRIPTION:

This routine opens a directory stream corresponding to the directory specified by the dirname argument. The directory stream is positioned at the first entry.

NOTES:

The routine is implemented in Cygnus newlib.

5.4.2 readdir - Reads a directory

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <dirent.h>

int readdir(
DIR *dirp

);
```

STATUS CODES:

EBADF I	nvalid file descriptor
---------	------------------------

DESCRIPTION:

The readdir() function returns a pointer to a structure direct representing the next directory entry from the directory stream pointed to by dirp. On end-of-file, NULL is returned.

The readdir() function may (or may not) return entries for . or . . Your program should tolerate reading dot and dot-dot but not require them.

The data pointed to be readdir() may be overwritten by another call to readdir() for the same directory stream. It will not be overwritten by a call for another directory.

NOTES:

If ptr is not a pointer returned by malloc(), calloc(), or realloc() or has been deallocated with free() or realloc(), the results are not portable and are probably disastrous.

The routine is implemented in Cygnus newlib.

5.4.3 rewinddir - Resets the readdir() pointer

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <dirent.h>

void rewinddir(
    DIR *dirp
);
```

STATUS CODES:

No value is returned.

DESCRIPTION:

The rewinddir() function resets the position associated with the directory stream pointed to by dirp. It also causes the directory stream to refer to the current state of the directory.

NOTES:

NONE

If dirp is not a pointer by opendir(), the results are undefined.

The routine is implemented in Cygnus newlib.

5.4.4 scandir - Scan a directory for matching entries

CALLING SEQUENCE:

```
#include <dirent.h>
int scandir(
    const char    *dir,
    struct dirent ***namelist,
    int (*select)(const struct dirent *),
    int (*compar)(const struct dirent ***, const struct dirent ***)

7 );
```

STATUS CODES:

FNOMEM	Insufficient memory to complete the operatio	n
	insulficient inclifully to complete the operation	11.

DESCRIPTION:

The scandir() function scans the directory dir, calling select() on each directory entry. Entries for which select() returns non-zero are stored in strings allocated via malloc(), sorted using qsort() with the comparison function compar(), and collected in array namelist which is allocated via malloc(). If select is NULL, all entries are selected.

NOTES:

The routine is implemented in Cygnus newlib.

5.4.5 telldir - Return current location in directory stream

CALLING SEQUENCE:

```
#include <dirent.h>
off_t telldir(
    DIR *dir
);
```

STATUS CODES:

EBADF | Invalid directory stream descriptor dir.

DESCRIPTION:

The telldir() function returns the current location associated with the directory stream dir.

NOTES:

The routine is implemented in Cygnus newlib.

5.4.6 closedir - Ends directory read operation

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <dirent.h>
int closedir(
    DIR *dirp
);
```

STATUS CODES:

EBADF Invalid file descriptor

DESCRIPTION:

The directory stream associated with dirp is closed. The value in dirp may not be usable after a call to closedir().

NOTES:

NONE

The argument to closedir() must be a pointer returned by opendir(). If it is not, the results are not portable and most likely unpleasant.

The routine is implemented in Cygnus newlib.

5.4.7 chdir - Changes the current working directory

CALLING SEQUENCE:

```
#include <unistd.h>
int chdir(
const char *path
);
#include <unistd.h>
int chdir(
#include <unistd.h>
int chdir(
#include <unistd.h>
#include <unistd.h
#include <
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EACCES	Search permission is denied for a directory in a file's path prefix.	
ENAMETOOLONG	ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.	
ENOTDIR	A component of the specified pathname was not a directory when directory	
	was expected.	

DESCRIPTION:

The chdir() function causes the directory named by path to become the current working directory; that is, the starting point for searches of pathnames not beginning with a slash.

If chdir() detects an error, the current working directory is not changed.

NOTES:

NONE

5.4.8 fchdir - Changes the current working directory

CALLING SEQUENCE:

```
#include <unistd.h>
int fchdir(
   int fd
);
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EACCES	Search permission is denied for a directory in a file's path prefix.
ENAMETOOLON\$ Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.
ENOTDIR	A component of the specified pathname was not a directory when directory was expected.

DESCRIPTION:

The fchdir() function causes the directory named by fd to become the current working directory; that is, the starting point for searches of pathnames not beginning with a slash.

If fchdir() detects an error, the current working directory is not changed.

NOTES:

NONE

5.4.9 getcwd - Gets current working directory

CALLING SEQUENCE:

```
#include <unistd.h>
int getcwd( void );
```

STATUS CODES:

EINVAL	Invalid argument
ERANGE	Result is too large
EACCES	Search permission is denied for a directory in a file's path prefix.

DESCRIPTION:

The getcwd() function copies the absolute pathname of the current working directory to the character array pointed to by buf. The size argument is the number of bytes available in buf

NOTES:

There is no way to determine the maximum string length that fetcwd() may need to return. Applications should tolerate getting ERANGE and allocate a larger buffer.

It is possible for getcwd() to return EACCES if, say, login puts the process into a directory without read access.

The 1988 standard uses int instead of size_t for the second parameter.

5.4.10 open - Opens a file

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
#include <fcntl.h>
int open(
    const char *path,
    int oflag,
    mode_t mode

8 );
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix.	
EEXIST	The named file already exists.	
EINTR	Function was interrupted by a signal.	
EISDIR	Attempt to open a directory for writing or to rename a file to be a directory.	
EMFILE	Too many file descriptors are in use by this process.	
ENAMETOOLO	ENAMETOOLONGLength of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENFILE	Too many files are currently open in the system.	
ENOENT	A file or directory does not exist.	
ENOSPC	No space left on disk.	
ENOTDIR	A component of the specified pathname was not a directory when a directory	
	was expected.	
ENXIO	No such device. This error may also occur when a device is not ready, for	
	example, a tape drive is off-line.	
EROFS	Read-only file system.	

DESCRIPTION:

The open function establishes a connection between a file and a file descriptor. The file descriptor is a small integer that is used by I/O functions to reference the file. The path argument points to the pathname for the file.

The oflag argument is the bitwise inclusive OR of the values of symbolic constants. The programmer must specify exactly one of the following three symbols:

O_RDONLY	Open for reading only.
O_WRONLY	Open for writing only.
O_RDWR	Open for reading and writing.

Any combination of the following symbols may also be used.

0_	Set the file offset to the end-of-file prior to each write.	
APPEN	ND	
0_	If the file does not exist, allow it to be created. This flag indicates that the mode	
CREAT	argument is present in the call to open.	
0_	This flag may be used only if O_CREAT is also set. It causes the call to open to fail if the	
EXCL	file already exists.	
0_	Do not assign controlling terminal.	
NOCT	Υ	
0_	Do no wait for the device or file to be ready or available. After the file is open, the	
NONBL	.00% and write calls return immediately. If the process would be delayed in the read	
	or write opermation, -1 is returned and "errno" is set to EAGAIN instead of blocking the	
	caller.	
0_	This flag should be used only on ordinary files opened for writing. It causes the file to	
TRUNG	TRUN¢ be tuncated to zero length	

Upon successful completion, open returns a non-negative file descriptor.

NOTES:

NONE

5.4.11 creat - Create a new file or rewrite an existing one

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
#include <fcntl.h>
int creat(
    const char *path,
    mode_t mode

7 );
```

STATUS CODES:

EEXIST	path already exists and O_CREAT and O_EXCL were used.
EISDIR	path refers to a directory and the access requested involved writing
ETXTBSY	path refers to an executable image which is currently being executed and write
	access was requested
EFAULT	path points outside your accessible address space
EACCES	The requested access to the file is not allowed, or one of the directories in path
	did not allow search (execute) permission.
ENAMETOOL Onwath was too long.	
ENOENT	A directory component in path does not exist or is a dangling symbolic link.
ENOTDIR	A component used as a directory in path is not, in fact, a directory.
EMFILE	The process alreadyh has the maximum number of files open.
ENFILE	The limit on the total number of files open on the system has been reached.
ENOMEM	Insufficient kernel memory was available.
EROFS	path refers to a file on a read-only filesystem and write access was requested

DESCRIPTION:

creat attempts to create a file and return a file descriptor for use in read, write, etc.

NOTES:

NONE

The routine is implemented in Cygnus newlib.

5.4.12 umask - Sets a file creation mask.

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
mode_t umask(
mode_t cmask
);
```

STATUS CODES:

DESCRIPTION:

The umask() function sets the process file creation mask to cmask. The file creation mask is used during open(), creat(), mkdir(), mkfifo() calls to turn off permission bits in the mode argument. Bit positions that are set in cmask are cleared in the mode of the created file.

NOTES:

NONE

The cmask argument should have only permission bits set. All other bits should be zero.

In a system which supports multiple processes, the file creation mask is inherited across fork() and exec() calls. This makes it possible to alter the default permission bits of created files. RTEMS does not support multiple processes so this behavior is not possible.

5.4.13 link - Creates a link to a file

CALLING SEQUENCE:

```
#include <unistd.h>
int link(
    const char *existing,
    const char *new
);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EEXIST	The named file already exists.
EMLINK	The number of links would exceed LINK_MAX.
ENAMETOOLONGingth of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.
ENOSPC	No space left on disk.
ENOTDIR	A component of the specified pathname was not a directory when a directory was
	expected.
EPERM	Operation is not permitted. Process does not have the appropriate priviledges or
	permissions to perform the requested operations.
EROFS	Read-only file system.
EXDEV	Attempt to link a file to another file system.

DESCRIPTION:

The link() function atomically creates a new link for an existing file and increments the link count for the file.

If the link() function fails, no directories are modified.

The existing argument should not be a directory.

The caller may (or may not) need permission to access the existing file.

NOTES:

NONE

5.4.14 symlink - Creates a symbolic link to a file

CALLING SEQUENCE:

```
#include <unistd.h>
int symlink(
    const char *topath,
    const char *frompath

);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EEXIST	The named file already exists.
ENAMETOOL	ONength of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.
ENOENT	A file or directory does not exist.
ENOSPC	No space left on disk.
ENOTDIR	A component of the specified pathname was not a directory when a directory was
	expected.
EPERM	Operation is not permitted. Process does not have the appropriate priviledges or
	permissions to perform the requested operations.
EROFS	Read-only file system.

DESCRIPTION:

The symlink() function creates a symbolic link from the frombath to the topath. The symbolic link will be interpreted at run-time.

If the symlink() function fails, no directories are modified.

The caller may (or may not) need permission to access the existing file.

NOTES:

NONE

5.4.15 readlink - Obtain the name of a symbolic link destination

CALLING SEQUENCE:

```
#include <unistd.h>
int readlink(
    const char *path,
    char *buf,
    size_t bufsize
);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix	
ENAMETOOLONG	ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.	
ENOTDIR	A component of the prefix pathname was not a directory when a directory was	
	expected.	
EL00P	Too many symbolic links were encountered in the pathname.	
EINVAL	The pathname does not refer to a symbolic link	
EFAULT	An invalid pointer was passed into the readlink() routine.	

DESCRIPTION:

The readlink() function places the symbolic link destination into buf argument and returns the number of characters copied.

If the symbolic link destination is longer than bufsize characters the name will be truncated.

NOTES:

NONE

5.4.16 mkdir - Makes a directory

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int mkdir(
    const char *path,
    mode_t mode

);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EEXIST	The name file already exist.
EMLINK	The number of links would exceed LINK_MAX
ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.
ENOSPC	No space left on disk.
ENOTDIR	A component of the specified pathname was not a directory when a directory
	was expected.
EROFS	Read-only file system.

DESCRIPTION:

The mkdir() function creates a new diectory named path. The permission bits (modified by the file creation mask) are set from mode. The owner and group IDs for the directory are set from the effective user ID and group ID.

The new directory may (or may not) contain entries for . and . . but is otherwise empty.

NOTES:

NONE

5.4.17 mkfifo - Makes a FIFO special file

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int mkfifo(
    const char *path,
    mode_t mode

b);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EEXIST	The named file already exists.
ENOENT	A file or directory does not exist.
ENOSPC	No space left on disk.
ENOTDIR	A component of the specified path was not a directory when a directory was ex-
	pected.
EROFS	Read-only file system.

DESCRIPTION:

The mkfifo() function creates a new FIFO special file named path. The permission bits (modified by the file creation mask) are set from mode. The owner and group IDs for the FIFO are set from the efective user ID and group ID.

NOTES:

NONE

5.4.18 unlink - Removes a directory entry

CALLING SEQUENCE:

```
#include <unistd.h>
int unlink(
    const char path
);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EBUSY	The directory is in use.
ENAMETOOL	ONength of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.
ENOENT	A file or directory does not exist.
ENOTDIR	A component of the specified path was not a directory when a directory was
	expected.
EPERM	Operation is not permitted. Process does not have the appropriate priviledges or
	permissions to perform the requested operations.
EROFS	Read-only file system.

DESCRIPTION:

The unlink function removes the link named by path and decrements the link count of the file referenced by the link. When the link count goes to zero and no process has the file open, the space occupied by the file is freed and the file is no longer accessible.

NOTES:

NONE

5.4.19 rmdir - Delete a directory

CALLING SEQUENCE:

```
#include <unistd.h>
int rmdir(
const char *pathname

);
```

STATUS CODES:

EPERM	The filesystem containing pathname does not support the removal of directories.	
EFAULT	pathname points ouside your accessible address space.	
EACCES	Write access to the directory containing pathname was not allowed for the process's	
	effective uid, or one of the directories in "pathname" did not allow search (execute)	
	permission.	
EPERM	The directory containing pathname has the stickybit (S_ISVTX) set and the process's	
	effective uid is neither the uid of the file to be delected nor that of the director	
	containing it.	
ENAMETOOpoNoname was too long.		
ENOENT	A directory component in pathname does not exist or is a dangling symbolic link.	
ENOTDIR	pathname, or a component used as a directory in pathname, is not, in fact, a directory.	
ENOTEMPT pathname contains entries other than . and		
EBUSY	pathname is the current working directory or root directory of some process	
EBUSY	pathname is the current directory or root directory of some process.	
ENOMEM	Insufficient kernel memory was available	
EROGS	pathname refers to a file on a read-only filesystem.	
EL00P	pathname contains a reference to a circular symbolic link	

DESCRIPTION:

rmdir deletes a directory, which must be empty

NOTES:

NONE

5.4.20 rename - Renames a file

CALLING SEQUENCE:

```
#include <unistd.h>
int rename(
    const char *old,
```

(continues on next page)

(continued from previous page)

```
const char *new
;
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix.
EBUSY	The directory is in use.
EEXIST	The named file already exists.
EINVAL	Invalid argument.
EISDIR	Attempt to open a directory for writing or to rename a file to be a directory.
EMLINK	The number of links would exceed LINK_MAX.
ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect	
ENOENT	A file or directory does no exist.
ENOSPC	No space left on disk.
ENOTDIR	A component of the specified pathname was not a directory when a directory
	was expected.
ENOTEMPTY	Attempt to delete or rename a non-empty directory.
EROFS	Read-only file system
EXDEV	Attempt to link a file to another file system.

DESCRIPTION:

The rename() function causes the file known bo old to now be known as new.

Ordinary files may be renamed to ordinary files, and directories may be renamed to directories; however, files cannot be converted using rename(). The new pathname may not contain a path prefix of old.

NOTES:

If a file already exists by the name new, it is removed. The rename() function is atomic. If the rename() detects an error, no files are removed. This guarantees that the rename("x", "x") does not remove x.

You may not rename dot or dot-dot.

The routine is implemented in Cygnus newlib using link() and unlink().

5.4.21 stat - Gets information about a file

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int stat(
    const char *path,
    struct stat *buf

6 );
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix.	
EBADF	Invalid file descriptor.	
ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.		
ENOENT	A file or directory does not exist.	
ENOTDIR	A component of the specified pathname was not a directory when a directory	
	was expected.	

The path argument points to a pathname for a file. Read, write, or execute permission for the file is not required, but all directories listed in path must be searchable. The stat() function obtains information about the named file and writes it to the area pointed to by buf.

NOTES:

NONE

5.4.22 fstat - Gets file status

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int fstat(
   int fildes,
   struct stat *buf

6 );
```

STATUS CODES:

EBADF	Invalid file descriptor

DESCRIPTION:

The fstat() function obtains information about the file associated with fildes and writes it to the area pointed to by the buf argument.

NOTES:

If the filesystem object referred to by fildes is a link, then the information returned in buf refers to the destination of that link. This is in contrast to lstat() which does not follow the link.

5.4.23 lstat - Gets file status

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int lstat(
   int   fildes,
   struct stat *buf

);
```

STATUS CODES:

EBADF	Invalid file descriptor
-------	-------------------------

DESCRIPTION:

The lstat() function obtains information about the file associated with fildes and writes it to the area pointed to by the buf argument.

NOTES:

If the filesystem object referred to by fildes is a link, then the information returned in buf refers to the link itself. This is in contrast to fstat() which follows the link.

The 1stat() routine is defined by BSD 4.3 and SVR4 and not included in POSIX 1003.1b-1996.

5.4.24 access - Check permissions for a file

CALLING SEQUENCE:

```
#include <unistd.h>
int access(
    const char *pathname,
    int mode
);
```

STATUS CODES:

EACCES	The requested access would be denied, either to the file itself or one of the	
	directories in pathname.	
EFAULT	pathname points outside your accessible address space.	
EINVAL	Mode was incorrectly specified.	
ENAMETOOLONGathname is too long.		
ENOENT	A directory component in pathname would have been accessible but does not	
	exist or was a dangling symbolic link.	
ENOTDIR	A component used as a directory in pathname is not, in fact, a directory.	
ENOMEM	Insufficient kernel memory was available.	

DESCRIPTION:

Access checks whether the process would be allowed to read, write or test for existence of the file (or other file system object) whose name is pathname. If pathname is a symbolic link permissions of the file referred by this symbolic link are tested.

Mode is a mask consisting of one or more of R_OK, W_OK, X_OK and F_OK.

NOTES:

NONE

5.4.25 chmod - Changes file mode.

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int chmod(
    const char *path,
    mode_t mode
);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix	
ENAMETOOL	ENAMETOOL ONength of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.	
ENOENT	A file or directory does not exist.	
ENOTDIR	A component of the specified pathname was not a directory when a directory was	
	expected.	
EPERM	Operation is not permitted. Process does not have the appropriate priviledges or	
	permissions to perform the requested operations.	
EROFS	Read-only file system.	

DESCRIPTION:

Set the file permission bits, the set user ID bit, and the set group ID bit for the file named by path to mode. If the effective user ID does not match the owner of the file and the calling process does not have the appropriate privileges, chmod() returns -1 and sets errno to EPERM.

NOTES:

NONE

5.4.26 fchmod - Changes permissions of a file

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <sys/stat.h>
int fchmod(
   int fildes,
   mode_t mode
);
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix.
EBADF	The descriptor is not valid.
EFAULT	path points outside your accessible address space.
EIO	A low-level I/o error occurred while modifying the inode.
EL00P	path contains a circular reference
ENAMETOOLONG Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect	
ENOENT	A file or directory does no exist.
ENOMEM	Insufficient kernel memory was avaliable.
ENOTDIR	A component of the specified pathname was not a directory when a directory
	was expected.
EPERM	The effective UID does not match the owner of the file, and is not zero
EROFS	Read-only file system

The mode of the file given by path or referenced by filedes is changed.

NOTES:

NONE

5.4.27 getdents - Get directory entries

CALLING SEQUENCE:

```
#include <unistd.h>
#include <linux/dirent.h>
#include <linux/unistd.h>
long getdents(
    int dd_fd,
    char *dd_buf,
    int dd_len
);
```

STATUS CODES:

A successful call to getdents returns the number of bytes read. On end of directory, 0 is returned. When an error occurs, -1 is returned, and errno is set appropriately.

EBADF	Invalid file descriptor fd.
EFAULT	Argument points outside the calling process's address space.
EINVAL	Result buffer is too small.
ENOENT	No such directory.
ENOTDIR	File descriptor does not refer to a directory.

DESCRIPTION:

getdents reads several dirent structures from the directory pointed by fd into the memory area pointed to by dirp. The parameter count is the size of the memory area.

NOTES:

NONE

5.4.28 chown - Changes the owner and/or group of a file.

CALLING SEQUENCE:

```
#include <sys/types.h>
#include <unistd.h>
int chown(
    const char *path,
    uid_t owner,
    gid_t group

7 );
```

STATUS CODES:

EACCES	Search permission is denied for a directory in a file's path prefix
EINVAL	Invalid argument
ENAMETOOL	ONEngth of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.
ENOENT	A file or directory does not exist.
ENOTDIR	A component of the specified pathname was not a directory when a directory was
	expected.
EPERM	Operation is not permitted. Process does not have the appropriate priviledges or
	permissions to perform the requested operations.
EROFS	Read-only file system.

DESCRIPTION:

The user ID and group ID of the file named by path are set to owner and path, respectively.

For regular files, the set group ID (S_ISGID) and set user ID (S_ISUID) bits are cleared.

Some systems consider it a security violation to allow the owner of a file to be changed, If users are billed for disk space usage, loaning a file to another user could result in incorrect billing. The chown() function may be restricted to privileged users for some or all files. The group ID can still be changed to one of the supplementary group IDs.

NOTES:

This function may be restricted for some file. The pathconf function can be used to test the _PC_CHOWN_RESTRICTED flag.

5.4.29 utime - Change access and/or modification times of an inode

CALLING SEQUENCE:

```
#include <sys/types.h>
int utime(
    const char    *filename,
    struct utimbuf *buf

);
```

STATUS CODES:

EACCES	Permission to write the file is denied
ENOENT	Filename does not exist

Utime changes the access and modification times of the inode specified by filename to the actime and modifine fields of buf respectively. If buf is NULL, then the access and modification times of the file are set to the current time.

NOTES:

NONE

5.4.30 ftruncate - truncate a file to a specified length

CALLING SEQUENCE:

```
#include <unistd.h>
int ftrunctate(
   int fd,
   size_t length
);
```

STATUS CODES:

ENOTDIR	A component of the path prefix is not a directory.	
EINVAL	The pathname contains a character with the high-order bit set.	
ENAMETOOL	ENAMETOOL ONG length of the specified pathname exceeds PATH_MAX bytes, or the length of a	
	component of the pathname exceeds NAME_MAX bytes.	
ENOENT	The named file does not exist.	
EACCES	The named file is not writable by the user.	
EACCES	Search permission is denied for a component of the path prefix.	
EL00P	Too many symbolic links were encountered in translating the pathname	
EISDIR	The named file is a directory.	
EROFS	The named file resides on a read-only file system	
ETXTBSY	The file is a pure procedure (shared text) file that is being executed	
EIO	An I/O error occurred updating the inode.	
EFAULT	Path points outside the process's allocated address space.	
EBADF	The fd is not a valid descriptor.	

DESCRIPTION:

truncate() causes the file named by path or referenced by fd to be truncated to at most length bytes in size. If the file previously was larger than this size, the extra data is lost. With ftruncate(), the file must be open for writing.

NOTES:

NONE

5.4.31 truncate - truncate a file to a specified length

CALLING SEQUENCE:

```
#include <unistd.h>
int trunctate(
    const char *path,
    size_t length
);
```

STATUS CODES:

ENOTDIR	A component of the path prefix is not a directory.
EINVAL	The pathname contains a character with the high-order bit set.
ENAMETOOL	ONG length of the specified pathname exceeds PATH_MAX bytes, or the length of a
	component of the pathname exceeds NAME_MAX bytes.
ENOENT	The named file does not exist.
EACCES	The named file is not writable by the user.
EACCES	Search permission is denied for a component of the path prefix.
EL00P	Too many symbolic links were encountered in translating the pathname
EISDIR	The named file is a directory.
EROFS	The named file resides on a read-only file system
ETXTBSY	The file is a pure procedure (shared text) file that is being executed
EIO	An I/O error occurred updating the inode.
EFAULT	Path points outside the process's allocated address space.
EBADF	The fd is not a valid descriptor.

DESCRIPTION:

truncate() causes the file named by path or referenced by "fd" to be truncated to at most length bytes in size. If the file previously was larger than this size, the extra data is lost. With ftruncate(), the file must be open for writing.

NOTES:

NONE

5.4.32 pathconf - Gets configuration values for files

CALLING SEQUENCE:

STATUS CODES:

EINVAL	Invalid argument
EACCES	Permission to write the file is denied
ENAMETOOLONG	Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.
ENOENT	A file or directory does not exist
ENOTDIR	A component of the specified path was not a directory whan a directory was
	expected.

pathconf() gets a value for the configuration option name for the open file descriptor filedes. The possible values for name are:

PC	Returns the maximum number of links to the file. If filedes or "path" refer to a
LINK_	directory, then the value applies to the whole directory. The corresponding macro
MAX	is _POSIX_LINK_MAX.
PC	Returns the maximum length of a formatted input line, where filedes or path
MAX_	must refer to a terminal. The corresponding macro is _POSIX_MAX_CANON.
CANON	
PC	Returns the maximum length of an input line, where filedes or path must refer
MAX_	to a terminal. The corresponding macro is "POSIX_MAX_INPUT".
INPUT	
PC	Returns the maximum length of a filename in the directory path or filedes. The
NAME_	process is allowed to create. The corresponding macro is _POSIX_NAME_MAX.
MAX	
PC	returns the maximum length of a relative pathname when path or "filedes" is the
PATH_	current working directory. The corresponding macro is _POSIX_PATH_MAX.
MAX	
PC	returns the size of the pipe buffer, where filedes must refer to a pipe or FIFO
PIPE_	and path must refer to a FIFO. The corresponding macro is <code>_POSIX_PIPE_BUF</code> .
BUF	
PC	Returns nonzero if the chown(2) call may not be used on this file. If "filedes"
CHOWN_	or path refer to a directory, then this applies to all files in that directory. The
RESTRICTE	D corresponding macro is _POSIX_CHOWN_RESTRICTED.

NOTES:

Files with name lengths longer than the value returned for name equal <code>_PC_NAME_MAX</code> may exist in the given directory.

5.4.33 fpathconf - Gets configuration values for files

CALLING SEQUENCE:

```
#include <unistd.h>
int fpathconf(
    int filedes,
    int name
);
```

STATUS CODES:

EINVAL	Invalid argument
EACCES	Permission to write the file is denied
ENAMETOOLONG	Length of a filename string exceeds PATH_MAX and _POSIX_NO_TRUNC is in effect.
ENOENT	A file or directory does not exist
ENOTDIR	A component of the specified path was not a directory whan a directory was
	expected.

pathconf() gets a value for the configuration option name for the open file descriptor filedes. The possible values for name are:

PC	Returns the maximum number of links to the file. If filedes or path refer to a
LINK_	directory, then the value applies to the whole directory. The corresponding macro
MAX	is _POSIX_LINK_MAX.
PC	returns the maximum length of a formatted input line, where filedes or path
MAX_	must refer to a terminal. The corresponding macro is _POSIX_MAX_CANON.
CANON	
PC	Returns the maximum length of an input line, where filedes or path must refer
MAX_	to a terminal. The corresponding macro is _POSIX_MAX_INPUT.
INPUT	
PC	Returns the maximum length of a filename in the directory path or filedes. The
NAME_	process is allowed to create. The corresponding macro is <code>_POSIX_NAME_MAX</code> .
MAX	
PC	Returns the maximum length of a relative pathname when path or filedes is the
PATH_	current working directory. The corresponding macro is _POSIX_PATH_MAX.
MAX	
PC	Returns the size of the pipe buffer, where filedes must refer to a pipe or FIFO
PIPE_	and path must refer to a FIFO. The corresponding macro is _POSIX_PIPE_BUF.
BUF	
PC	Returns nonzero if the chown() call may not be used on this file. If filedes
CHOWN_	or path refer to a directory, then this applies to all files in that directory. The
RESTRICTE	D corresponding macro is _POSIX_CHOWN_RESTRICTED.

NOTES:

NONE

5.4.34 mknod - create a directory

CALLING SEQUENCE:

```
#include <unistd.h>
#include <fcntl.h>
#include <sys/types.h>
#include <sys/stat.h>

long mknod(
    const char *pathname,
    mode_t    mode,
    dev_t    dev

);
```

STATUS CODES:

mknod returns zero on success, or -1 if an error occurred (in which case, errno is set appropriately).

ENAMETOOLOMAthname was too long.	
ENOENT	A directory component in pathname does not exist or is a dangling symbolic link.
ENOTDIR	A component used in the directory pathname is not, in fact, a directory.
ENOMEM	Insufficient kernel memory was available
EROFS	pathname refers to a file on a read-only filesystem.
EL00P	pathname contains a reference to a circular symbolic link, ie a symbolic link whose
	expansion contains a reference to itself.
ENOSPC	The device containing pathname has no room for the new node.

mknod attempts to create a filesystem node (file, device special file or named pipe) named pathname, specified by mode and dev.

mode specifies both the permissions to use and the type of node to be created.

It should be a combination (using bitwise OR) of one of the file types listed below and the permissions for the new node.

The permissions are modified by the process's umask in the usual way: the permissions of the created node are (mode & ~umask).

The file type should be one of S_IFREG, S_IFCHR, S_IFBLK and S_IFIFO to specify a normal file (which will be created empty), character special file, block special file or FIFO (named pipe), respectively, or zero, which will create a normal file.

If the file type is S_IFCHR or S_IFBLK then dev specifies the major and minor numbers of the newly created device special file; otherwise it is ignored.

The newly created node will be owned by the effective uid of the process. If the directory containing the node has the set group id bit set, or if the filesystem is mounted with BSD group semantics, the new node will inherit the group ownership from its parent directory; otherwise it will be owned by the effective gid of the process.

NOTES:

NONE

CHAPTER

SIX

INPUT AND OUTPUT PRIMITIVES MANAGER

6.1 Introduction

The input and output primitives manager is ...

The directives provided by the input and output primitives manager are:

- pipe (page 77) Create an Inter-Process Channel
- dup (page 77) Duplicates an open file descriptor
- dup2 (page 78) Duplicates an open file descriptor
- close (page 78) Closes a file
- read (page 79) Reads from a file
- write (page 80) Writes to a file
- fcntl (page 80) Manipulates an open file descriptor
- lseek (page 82) Reposition read/write file offset
- fsync (page 82) Synchronize file complete in-core state with that on disk
- fdatasync (page 83) Synchronize file in-core data with that on disk
- sync (page 84) Schedule file system updates
- mount (page 84) Mount a file system
- unmount (page 85) Unmount file systems
- readv (page 85) Vectored read from a file
- writev (page 86) Vectored write to a file
- aio read (page 86) Asynchronous Read
- aio write (page 87) Asynchronous Write
- lio listio (page 87) List Directed I/O
- aio error (page 88) Retrieve Error Status of Asynchronous I/O Operation
- aio return (page 88) Retrieve Return Status Asynchronous I/O Operation
- aio cancel (page 88) Cancel Asynchronous I/O Request
- aio suspend (page 89) Wait for Asynchronous I/O Request
- aio fsync (page 89) Asynchronous File Synchronization

6.2 Background

There is currently no text in this section.

6.2. Background 75

6.3 Operations

There is currently no text in this section.

6.4 Directives

This section details the input and output primitives manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

6.4.1 pipe - Create an Inter-Process Channel

CALLING SEQUENCE:

```
#include <unistd.h>
int pipe(
    int fildes[2]

);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.2 dup - Duplicates an open file descriptor

CALLING SEQUENCE:

```
#include <unistd.h>
int dup(
    int fildes
4);
```

STATUS CODES:

EBADF	Invalid file descriptor.
EINTR	Function was interrupted by a signal.
EMFILE	The process already has the maximum number of file descriptors open and tried to
	open a new one.

DESCRIPTION:

The dup function returns the lowest numbered available file descriptor. This new descriptor refers to the same open file as the original descriptor and shares any locks.

NOTES:

NONE

6.4.3 dup2 - Duplicates an open file descriptor

CALLING SEQUENCE:

```
#include <unistd.h>
int dup2(
    int fildes,
    int fildes2
);
```

STATUS CODES:

EBADF	Invalid file descriptor.
EINTR	Function was interrupted by a signal.
EMFILE	The process already has the maximum number of file descriptors open and tried to
	open a new one.

DESCRIPTION:

dup2 creates a copy of the file descriptor oldfd.

The old and new descriptors may be used interchangeably. They share locks, file position pointers and flags; for example, if the file position is modified by using 1seek on one of the descriptors, the position is also changed for the other.

NOTES:

NONE

6.4.4 close - Closes a file

CALLING SEQUENCE:

```
#include <unistd.h>
int close(
   int fildes
);
```

STATUS CODES:

EBADF	Invalid file descriptor
EINTR	Function was interrupted by a signal.

DESCRIPTION:

The close() function deallocates the file descriptor named by fildes and makes it available for reuse. All outstanding record locks owned by this process for the file are unlocked.

NOTES:

A signal can interrupt the close() function. In that case, close() returns -1 with errno set to EINTR. The file may or may not be closed.

6.4.5 read - Reads from a file

CALLING SEQUENCE:

```
#include <unistd.h>
ssize_t read(
    int fildes,
    void *buf,
    size_t nbyte
);
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EAGAIN	The O_NONBLOCK flag is set for a file descriptor and the process would be delayed	
	in the I/O operation.	
EBADF	Invalid file descriptor	
EINTR	Function was interrupted by a signal.	
EIO	Input or output error	
EINVAL	Bad buffer pointer	

DESCRIPTION:

The read() function reads nbyte bytes from the file associated with fildes into the buffer pointed to by buf.

The read() function returns the number of bytes actually read and placed in the buffer. This will be less than nbyte if:

- The number of bytes left in the file is less than nbyte.
- The read() request was interrupted by a signal.
- The file is a pipe or FIFO or special file with less than nbytes immediately available for reading.

When attempting to read from any empty pipe or FIFO:

- If no process has the pipe open for writing, zero is returned to indicate end-of-file.
- If some process has the pipe open for writing and O_NONBLOCK is set, -1 is returned and errno is set to EAGAIN.
- If some process has the pipe open for writing and O_NONBLOCK is clear, read() waits for some data to be written or the pipe to be closed.

When attempting to read from a file other than a pipe or FIFO and no data is available.

- If O_NONBLOCK is set, -1 is returned and errno is set to EAGAIN.
- If O NONBLOCK is clear, read() waits for some data to become available.
- The O NONBLOCK flag is ignored if data is available.

NOTES:

NONE

6.4.6 write - Writes to a file

CALLING SEQUENCE:

```
#include <unistd.h>
ssize_t write(
   int fildes,
   const void *buf,
   size_t nbyte
6 );
```

STATUS CODES:

EAGAIN	The O_NONBLOCK flag is set for a file descriptor and the process would be delayed
	in the I/O operation.
EBADF	Invalid file descriptor
EFBIG	An attempt was made to write to a file that exceeds the maximum file size
EINTR	The function was interrupted by a signal.
EIO	Input or output error.
ENOSPC	No space left on disk.
EPIPE	Attempt to write to a pope or FIFO with no reader.
EINVAL	Bad buffer pointer

DESCRIPTION:

The write() function writes nbyte from the array pointed to by buf into the file associated with fildes.

If nybte is zero and the file is a regular file, the write() function returns zero and has no other effect. If nbyte is zero and the file is a special file, te results are not portable.

The write() function returns the number of bytes written. This number will be less than nbytes if there is an error. It will never be greater than nbytes.

NOTES:

NONE

6.4.7 fcntl - Manipulates an open file descriptor

CALLING SEQUENCE:

```
#include <fcntl.h>
int fcntl(
    int fildes,
    int cmd,
    ...
);
```

STATUS CODES:

EACCESS	Search permission is denied for a direcotry in a file's path prefix.
EAGAIN	The O_NONBLOCK flag is set for a file descriptor and the process would be delayed
	in the I/O operation.
EBADF	Invalid file descriptor
EDEADLK	An fcntl with function F_SETLKW would cause a deadlock.
EINTR	The functioin was interrupted by a signal.
EINVAL	Invalid argument
EMFILE	Too many file descriptor or in use by the process.
ENOLCK	No locks available

fcntl() performs one of various miscellaneous operations on "fd". The operation in question is determined by cmd:

F_	Makes arg be a copy of fd, closing fd first if necessary. The same functionality can
DUPFD	be more easily achieved by using dup2(). The old and new descriptors may be used
	interchangeably. They share locks, file position pointers and flags; for example, if the
	file position is modified by using lseek() on one of the descriptors, the position is
	also changed for the other. The two descriptors do not share the close-on-exec flag,
	however. The close-on-exec flag of the copy is off, meaning that it will be closed on
	exec. On success, the new descriptor is returned.
F_	Read the close-on-exec flag. If the low-order bit is 0, the file will remain open across
GETFD	exec, otherwise it will be closed.
F_	Set the close-on-exec flag to the value specified by arg (only the least significant bit
SETFD	is used).
F_	Read the descriptor's flags (all flags (as set by open()) are returned).
GETFL	
F_	Set the descriptor's flags to the value specified by arg. Only"O_APPEND" and 0_
SETFL	NONBLOCK may be set. The flags are shared between copies (made with dup() etc.) of
	the same file descriptor. The flags and their semantics are described in open().
F_	Manage discretionary file locks. The third argument arg is a pointer to a struct flock
GETLK,	(that may be overwritten by this call).
F_	
SETLK	
and	
F_	
SETLK	V
F_	Return the flock structure that prevents us from obtaining the lock, or set the "l_type"
GETLK	field of the lock to F_UNLCK if there is no obstruction.
F_	The lock is set (when l_type is F_RDLCK or F_WRLCK) or cleared (when it is F_UNLCK. If
SETLK	lock is held by someone else, this call returns -1 and sets errno to EACCES or EAGAIN.
F_	Like F_SETLK, but instead of returning an error we wait for the lock to be released.
SETLK	
F_	Get the process ID (or process group) of the owner of a socket. Process groups are
GETOW	returned as negative values.
F_	Set the process or process group that owns a socket. For these commands, ownership
SETOW	N means receiving SIGIO or SIGURG signals. Process groups are specified using negative
	values.

NOTES:

The errors returned by dup2 are different from those returned by F_DUPFD.

6.4.8 lseek - Reposition read/write file offset

CALLING SEQUENCE:

```
#include <unistd.h>
off_t lseek(
    int fildes,
    off_t offset,
    int whence
6 );
```

STATUS CODES:

EBADF	fildes is not an open file descriptor.
ESPIPE	fildes is associated with a pipe, socket or FIFO.
EINVAL	whence is not a proper value.

DESCRIPTION:

The 1seek function repositions the offset of the file descriptor fildes to the argument offset according to the directive whence. The argument fildes must be an open file descriptor. Lseek repositions the file pointer fildes as follows:

- If whence is SEEK SET, the offset is set to offset bytes.
- If whence is SEEK CUR, the offset is set to its current location plus offset bytes.
- If whence is SEEK END, the offset is set to the size of the file plus offset bytes.

The 1seek function allows the file offset to be set beyond the end of the existing end-of-file of the file. If data is later written at this point, subsequent reads of the data in the gap return bytes of zeros (until data is actually written into the gap).

Some devices are incapable of seeking. The value of the pointer associated with such a device is undefined.

NOTES:

NONE

6.4.9 fsync - Synchronize file complete in-core state with that on disk

CALLING SEQUENCE:

```
#include <unistd.h>
int fsync(
   int fildes
4
);
```

STATUS CODES:

On success, zero is returned. On error, -1 is returned, and errno is set appropriately.

EBADF	fd is not a valid descriptor open for writing
EINVAL	fd is bound to a special file which does not support support synchronization
EROFS	fd is bound to a special file which does not support support synchronization
EIO	An error occurred during synchronization

fsync copies all in-core parts of a file to disk.

NOTES:

NONE

6.4.10 fdatasync - Synchronize file in-core data with that on disk

CALLING SEQUENCE:

```
#include <unistd.h>
int fdatasync(
   int fildes
4);
```

STATUS CODES:

On success, zero is returned. On error, -1 is returned, and errno is set appropriately.

EBADF	fd is not a valid file descriptor open for writing.
EINVAL	fd is bound to a special file which does not support synchronization.
EIO	An error occurred during synchronization.
EROFS	fd is bound to a special file which dows not support synchronization.

DESCRIPTION:

fdatasync flushes all data buffers of a file to disk (before the system call returns). It resembles fsync but is not required to update the metadata such as access time.

Applications that access databases or log files often write a tiny data fragment (e.g., one line in a log file) and then call fsync immediately in order to ensure that the written data is physically stored on the harddisk. Unfortunately, fsync will always initiate two write operations: one for the newly written data and another one in order to update the modification time stored in the inode. If the modification time is not a part of the transaction concept fdatasync can be used to avoid unnecessary inode disk write operations.

NOTES:

NONE

6.4.11 sync - Schedule file system updates

CALLING SEQUENCE:

```
#include <unistd.h>
void sync(
void
);
```

STATUS CODES:

NONE

DESCRIPTION:

The sync service causes all information in memory that updates file systems to be scheduled for writing out to all file systems.

NOTES:

The writing of data to the file systems is only guaranteed to be scheduled upon return. It is not necessarily complete upon return from sync.

6.4.12 mount - Mount a file system

CALLING SEQUENCE:

```
#include <libio.h>
int mount(
    rtems_filesystem_mount_table_entry_t **mt_entry,
    rtems_filesystem_operations_table *fs_ops,
    rtems_filesystem_options_t fsoptions,
    char *device,
    char *mount_point
);
```

STATUS CODES:

- ENOMEM
 - Unable to allocate memory needed.
- EINVAL
 - The filesystem does not support being mounted.
- EINVAL
 - Attempt to mount a read-only filesystem as writeable.

DESCRIPTION:

The mount routines mounts the filesystem class which uses the filesystem operations specified by fs_ops and fsoptions. The filesystem is mounted at the directory mount_point and the mode of the mounted filesystem is specified by fsoptions. If this filesystem class requires a device, then the name of the device must be specified by device.

If this operation succeeds, the mount table entry for the mounted filesystem is returned in mt_entry.

NOTES:

This method is not defined in the POSIX standard.

6.4.13 unmount - Unmount file systems

CALLING SEQUENCE:

```
#include <libio.h>
int unmount(
const char *mount_path
);
```

STATUS CODES:

- EBUSY
 - Filesystem is in use or the root filesystem.
- EACCESS
 - Unable to allocate memory needed.

DESCRIPTION:

The unmount routine removes the attachment of the filesystem specified by mount_path.

NOTES:

This method is not defined in the POSIX standard.

6.4.14 ready - Vectored read from a file

CALLING SEQUENCE:

```
#include <sys/uio.h>
ssize_t readv(
    int fildes,
    const struct iovec *iov,
    int iovcnt

);
```

STATUS CODES:

In addition to the errors detected by *Input and Output Primitives Manager read - Reads from a file*, *read()*, this routine may return -1 and sets error based upon the following errors:

EINVAL	The sum of the iov_len values in the iov array overflowed an ssize_t.
EINVAL	The iovent argument was less than or equal to 0, or greater than IOV_MAX.

DESCRIPTION:

The readv() function is equivalent to read() except as described here. The readv() function shall place the input data into the iovent buffers specified by the members of the iov array: iov[0], iov[1], ..., iov[iovent-1].

Each iovec entry specifies the base address and length of an area in memory where data should be placed. The readv() function always fills an area completely before proceeding to the next.

NOTES:

NONE

6.4.15 writev - Vectored write to a file

CALLING SEQUENCE:

```
#include <sys/uio.h>
ssize_t writev(
    int fildes,
    const struct iovec *iov,
    int iovent
);
```

STATUS CODES:

In addition to the errors detected by *Input and Output Primitives Manager write - Write to a file, write()*, this routine may return -1 and sets errno based upon the following errors:

EINVAL	The sum of the iov_len values in the iov array overflowed an ssize_t.
EINVAL	The iovcnt argument was less than or equal to 0, or greater than IOV_MAX.

DESCRIPTION:

The writev() function is equivalent to write(), except as noted here. The writev() function gathers output data from the iovent buffers specified by the members of the iov array: iov[0], iov[1], ..., iov[iovent-1]. The iovent argument is valid if greater than 0 and less than or equal to IOV_MAX.

Each iovec entry specifies the base address and length of an area in memory from which data should be written. The writev() function always writes a complete area before proceeding to the next.

If fd refers to a regular file and all of the iov_len members in the array pointed to by iov are 0, writev() returns 0 and has no other effect. For other file types, the behavior is unspecified by POSIX.

NOTES:

NONE

6.4.16 aio read - Asynchronous Read

CALLING SEQUENCE:

```
#include <aio.h>
int aio_read(
    struct aiocb *aiocbp

4 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.17 aio_write - Asynchronous Write

CALLING SEQUENCE:

```
#include <aio.h>
int aio_write(
    struct aiocb *aiocbp

4 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.18 lio listio - List Directed I/O

CALLING SEQUENCE:

```
#include <aio.h>
int lio_listio(
    int mode,
    struct aiocb *restrict const list[restrict],
    int nent,
    struct sigevent *restrict sig

7 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.19 aio_error - Retrieve Error Status of Asynchronous I/O Operation

CALLING SEQUENCE:

```
#include <aio.h>
int aio_error(
const struct aiocb *aiocbp

4 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.20 aio return - Retrieve Return Status Asynchronous I/O Operation

CALLING SEQUENCE:

```
#include <aio.h>
ssize_t aio_return(
struct aiocb *aiocbp

);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.21 aio_cancel - Cancel Asynchronous I/O Request

CALLING SEQUENCE:

```
#include <aio.h>
int aio_cancel(
    int fildes,
    struct aiocb *aiocbp

5);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.22 aio suspend - Wait for Asynchronous I/O Request

CALLING SEQUENCE:

```
#include <aio.h>
int aio_suspend(
    const struct aiocb *const list[],
    int nent,
    const struct timespec *timeout
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

6.4.23 aio fsync - Asynchronous File Synchronization

CALLING SEQUENCE:

```
#include <aio.h>
int aio_fsync(
    int op,
    struct aiocb *aiocbp

);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

CHAPTER

SEVEN

DEVICE- AND CLASS- SPECIFIC FUNCTIONS MANAGER

7.1 Introduction

The device- and class- specific functions manager is ...

The directives provided by the device- and class- specific functions manager are:

- cfgetispeed (page 95) Reads terminal input baud rate
- cfgetospeed (page 95) Reads terminal output baud rate
- cfsetispeed (page 96) Sets terminal input baud rate
- cfsetospeed (page 96) Set terminal output baud rate
- tcgetattr (page 97) Gets terminal attributes
- tcsetattr (page 97) Set terminal attributes
- tcsendbreak (page 97) Sends a break to a terminal
- tcdrain (page 98) Waits for all output to be transmitted to the terminal
- tcflush (page 98) Discards terminal data
- tcflow (page 99) Suspends/restarts terminal output
- tcgetpgrp (page 99) Gets foreground process group ID
- tcsetpgrp (page 99) Sets foreground process group ID

7.2 Background

There is currently no text in this section.

7.2. Background 93

7.3 Operations

There is currently no text in this section.

7.4 Directives

This section details the device- and class- specific functions manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

7.4.1 cfgetispeed - Reads terminal input baud rate

CALLING SEQUENCE:

```
#include <termios.h>
speed_t cfgetispeed(
    const struct termios *termios_p

4 );
```

STATUS CODES:

The cfgetispeed() function returns a code for baud rate.

DESCRIPTION:

The cfsetispeed() function stores a code for the terminal speed stored in a struct termios. The codes are defined in <termios.h> by the macros B0, B50, B75, B110, B134, B150, B200, B300, B600, B1200, B1800, B2400, B4800, B9600, B19200, and B38400.

The cfsetispeed() function does not do anything to the hardware. It merely stores a value for use by tcsetattr().

NOTES:

Baud rates are defined by symbols, such as B110, B1200, B2400. The actual number returned for any given speed may change from system to system.

7.4.2 cfgetospeed - Reads terminal output baud rate

CALLING SEQUENCE:

STATUS CODES:

The cfgetospeed() function returns the termios code for the baud rate.

DESCRIPTION:

The cfgetospeed() function returns a code for the terminal speed stored in a struct termios. The codes are defined in <termios.h> by the macros BO, B50, B75, B110, B134, B150, B200, B300, B600, B1200, B1800, B2400, B4800, B9600, B19200, and B38400.

The cfgetospeed() function does not do anything to the hardware. It merely returns the value stored by a previous call to tcgetattr().

NOTES:

Baud rates are defined by symbols, such as B110, B1200, B2400. The actual number returned for any given speed may change from system to system.

7.4.3 cfsetispeed - Sets terminal input baud rate

CALLING SEQUENCE:

```
#include <termios.h>
int cfsetispeed(
    struct termios *termios_p,
    speed_t speed
);
```

STATUS CODES:

The cfsetispeed() function returns a zero when successful and returns -1 when an error occurs.

DESCRIPTION:

The cfsetispeed() function stores a code for the terminal speed stored in a struct termios. The codes are defined in <termios.h> by the macros B0, B50, B75, B110, B134, B150, B200, B300, B600, B1200, B1800, B2400, B4800, B9600, B19200, and B38400.

NOTES:

This function merely stores a value in the termios structure. It does not change the terminal speed until a tcsetattr() is done. It does not detect impossible terminal speeds.

7.4.4 cfsetospeed - Sets terminal output baud rate

CALLING SEQUENCE:

```
#include <termios.h>
int cfsetospeed(
    struct termios *termios_p,
    speed_t speed
);
```

STATUS CODES:

The cfsetospeed() function returns a zero when successful and returns -1 when an error occurs.

DESCRIPTION:

The cfsetospeed() function stores a code for the terminal speed stored in a struct termios. The codes are defined in <termios.h> by the macros B0, B50, B75, B110, B134, B150, B200, B300, B600, B1200, B1800, B2400, B4800, B9600, B19200, and B38400.

The cfsetospeed() function does not do anything to the hardware. It merely stores a value for use by tcsetattr().

NOTES:

This function merely stores a value in the termios structure. It does not change the terminal speed until a tcsetattr() is done. It does not detect impossible terminal speeds.

7.4.5 tcgetattr - Gets terminal attributes

CALLING SEQUENCE:

```
#include <termios.h>
int tcgetattr(
    int fildes,
    struct termios *termios_p
);
```

STATUS CODES:

EBADF	Invalid file descriptor]
ENOOTY	Terminal control function attempted for a file that is not a terminal.	1

DESCRIPTION:

The tcgetattr() gets the parameters associated with the terminal referred to by fildes and stores them into the termios() structure pointed to by termios_p.

NOTES:

NONE

7.4.6 tcsetattr - Set terminal attributes

CALLING SEQUENCE:

```
#include <termios.h>
int tcsetattr(
    int fildes,
    int optional_actions,
    const struct termios *termios_p

6
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

7.4.7 tcsendbreak - Sends a break to a terminal

CALLING SEQUENCE:

```
#include <termios.h>
int tcsendbreak(
    int fildes,
    int duration
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

7.4.8 tcdrain - Waits for all output to be transmitted to the terminal.

CALLING SEQUENCE:

```
#include <termios.h>
int tcdrain(
int fildes

4);
```

STATUS CODES:

EBADF	Invalid file descriptor
EINTR	Function was interrupted by a signal
ENOTTY	Terminal control function attempted for a file that is not a terminal.

DESCRIPTION:

The tcdrain() function waits until all output written to fildes has been transmitted.

NOTES:

NONE

7.4.9 tcflush - Discards terminal data

CALLING SEQUENCE:

```
#include <termios.h>
int tcflush(
    int fildes,
    int queue_selector
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

7.4.10 tcflow - Suspends/restarts terminal output.

CALLING SEQUENCE:

```
#include <termios.h>
int tcflow(
    int fildes,
    int action
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

7.4.11 tcgetpgrp - Gets foreground process group ID

CALLING SEQUENCE:

```
#include <unistd.h>
pid_t tcgetpgrp(
    int fildes

4
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

7.4.12 tcsetpgrp - Sets foreground process group ID

CALLING SEQUENCE:

```
#include <unistd.h>
int tcsetpgrp(
    int fildes,
    pid_t pgid_id
);
```

STATUS CODES:

E The

DESCI	רמזכ	rt/	AT.
コンドっちしょ	KIPI	H.	NN:

NOTES:

This routine is not currently supported by RTEMS but could be in a future version.

CHAPTER

EIGHT

LANGUAGE-SPECIFIC SERVICES FOR THE C PROGRAMMING LANGUAGE MANAGER

8.1 Introduction

The language-specific services for the C programming language manager is ...

The directives provided by the language-specific services for the C programming language manager are:

- setlocale (page 105) Set the Current Locale
- fileno (page 105) Obtain File Descriptor Number for this File
- fdopen (page 105) Associate Stream with File Descriptor
- flockfile (page 106) Acquire Ownership of File Stream
- ftrylockfile (page 106) Poll to Acquire Ownership of File Stream
- funlockfile (page 106) Release Ownership of File Stream
- getc unlocked (page 106) Get Character without Locking
- getchar unlocked (page 107) Get Character from stdin without Locking
- putc unlocked (page 107) Put Character without Locking
- putchar unlocked (page 107) Put Character to stdin without Locking
- setjmp (page 108) Save Context for Non-Local Goto
- longjmp (page 108) Non-Local Jump to a Saved Context
- sigsetimp (page 108) Save Context with Signal Status for Non-Local Goto
- siglongjmp (page 108) Non-Local Jump with Signal Status to a Saved Context
- tzset (page 109) Initialize Time Conversion Information
- strtok r (page 109) Reentrant Extract Token from String
- *asctime r* (page 109) Reentrant struct tm to ASCII Time Conversion
- ctime r (page 110) Reentrant time t to ASCII Time Conversion
- *gmtime r* (page 110) Reentrant UTC Time Conversion
- localtime_r (page 110) Reentrant Local Time Conversion
- rand r (page 111) Reentrant Random Number Generation

8.2 Background

There is currently no text in this section.

8.2. Background 103

8.3 Operations

There is currently no text in this section.

8.4 Directives

This section details the language-specific services for the C programming language manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

8.4.1 setlocale - Set the Current Locale

CALLING SEQUENCE:

```
#include <locale.h>
char *setlocale(int category, const char *locale);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.2 fileno - Obtain File Descriptor Number for this File

CALLING SEQUENCE:

```
#include <stdio.h>
int fileno(FILE *stream);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.3 fdopen - Associate Stream with File Descriptor

CALLING SEQUENCE:

```
#include <stdio.h>
FILE *fdopen(int fildes, const char *mode);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.4 flockfile - Acquire Ownership of File Stream

CALLING SEQUENCE:

```
#include <stdio.h>
void flockfile(FILE *file);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.5 ftrylockfile - Poll to Acquire Ownership of File Stream

CALLING SEQUENCE:

```
#include <stdio.h>
int ftrylockfile(FILE *file);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.6 funlockfile - Release Ownership of File Stream

CALLING SEQUENCE:

```
#include <stdio.h>
void funlockfile(FILE *file);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.7 getc_unlocked - Get Character without Locking

CALLING SEQUENCE:

```
#include <stdio.h>
int getc_unlocked(FILE *stream);
```

	STATUS CODES:
	E The
	DESCRIPTION.
	DESCRIPTION:
	NOTES:
	8.4.8 getchar_unlocked - Get Character from stdin without Locking
	CALLING SEQUENCE:
2	<pre>#include <stdio.h> int getchar_unlocked(void);</stdio.h></pre>
	STATUS CODES:
	E The
	DESCRIPTION:
	NOTES:
	8.4.9 putc_unlocked - Put Character without Locking
	CALLING SEQUENCE:
2	<pre>#include <stdio.h> int putc_unlocked(int c, FILE *stream);</stdio.h></pre>
	STATUS CODES:
	E The
	DESCRIPTION:
	NOTES:
	8.4.10 putchar_unlocked - Put Character to stdin without Locking
	CALLING SEQUENCE:
2	<pre>#include <stdio.h> int putchar_unlocked(int c);</stdio.h></pre>
	STATUS CODES:
	E The
	DESCRIPTION:

8.4. Directives

NOTES:

8.4.11 setjmp - Save Context for Non-Local Goto

```
#include <setjmp.h>
int setjmp(jmp_buf env);
```

STATUS CODES:

The

DESCRIPTION:

NOTES:

8.4.12 longjmp - Non-Local Jump to a Saved Context

CALLING SEQUENCE:

```
#include <setjmp.h>
void longjmp(jmp_buf env, int val);
```

STATUS CODES:

The

DESCRIPTION:

NOTES:

8.4.13 sigsetimp - Save Context with Signal Status for Non-Local Goto

CALLING SEQUENCE:

```
#include <setjmp.h>
int sigsetjmp(sigjmp_buf env, int savemask);
```

STATUS CODES:

The

DESCRIPTION:

NOTES:

8.4.14 siglongjmp - Non-Local Jump with Signal Status to a Saved Context

CALLING SEQUENCE:

```
#include <setjmp.h>
void siglongjmp(sigjmp_buf env, int val);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.15 tzset - Initialize Time Conversion Information

CALLING SEQUENCE:

```
#include <time.h>
extern int daylight;
extern long timezone;
extern char *tzname[2];
void tzset(void);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.16 strtok_r - Reentrant Extract Token from String

CALLING SEQUENCE:

```
#include <string.h>
char *strtok_r(char *restrict s, const char *restrict sep,
char **restrict state);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.17 asctime_r - Reentrant struct tm to ASCII Time Conversion

CALLING SEQUENCE:

```
#include <time.h>
char *asctime_r(const struct tm *restrict tm, char *restrict buf);
```

STAT	I I C	α	nrc.
3171			IJI "D.

E The

DESCRIPTION:

NOTES:

8.4.18 ctime r - Reentrant time t to ASCII Time Conversion

CALLING SEQUENCE:

```
#include <time.h>
char *ctime_r(const time_t *clock, char *buf);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.19 gmtime_r - Reentrant UTC Time Conversion

CALLING SEQUENCE:

```
#include <time.h>
struct tm *gmtime_r(const time_t *restrict timer,
struct tm *restrict result);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

8.4.20 localtime r - Reentrant Local Time Conversion

CALLING SEQUENCE:

```
#include <time.h>
struct tm *localtime_r(const time_t *restrict timer,
struct tm *restrict result);
```

STATUS CODES:

E | The

DESCRIPTION:

NOTES:

8.4.21 rand_r - Reentrant Random Number Generation

CALLING SEQUENCE:

```
#include <stdlib.h>
int rand_r(unsigned *seed);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

CHAPTER

NINE

SYSTEM DATABASES MANAGER

9.1 Introduction

The system databases manager is ...

The directives provided by the system databases manager are:

- getgrgid (page 117) Get Group File Entry for ID
- *getgrgid r* (page 117) Reentrant Get Group File Entry
- getgrnam (page 117) Get Group File Entry for Name
- getgrnam r (page 118) Reentrant Get Group File Entry for Name
- getpwuid (page 118) Get Password File Entry for UID
- getpwuid_r (page 119) Reentrant Get Password File Entry for UID
- getpwnam (page 119) Get Password File Entry for Name
- getpwnam_r (page 119) Reentrant Get Password File Entry for Name

9.2 Background

There is currently no text in this section.

9.2. Background 115

9.3 Operations

There is currently no text in this section.

9.4 Directives

This section details the system databases manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

9.4.1 getgrgid - Get Group File Entry for ID

CALLING SEQUENCE:

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.2 getgrgid_r - Reentrant Get Group File Entry

CALLING SEQUENCE:

```
#include <grp.h>
int getgrgid_r(
    gid_t gid,
    struct group *grp,
    char *buffer,
    size_t bufsize,
    struct group **result
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.3 getgrnam - Get Group File Entry for Name

CALLING SEQUENCE:

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.4 getgrnam_r - Reentrant Get Group File Entry for Name

CALLING SEQUENCE:

```
#include <grp.h>
int getgrnam_r(
    const char *name,
    struct group *grp,
    char *buffer,
    size_t bufsize,
    struct group **result
);
```

STATUS CODES:

| E | The

DESCRIPTION:

NOTES:

9.4.5 getpwuid - Get Password File Entry for UID

CALLING SEQUENCE:

```
#include <pwd.h>
struct passwd *getpwuid(
    uid_t uid
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.6 getpwuid_r - Reentrant Get Password File Entry for UID

CALLING SEQUENCE:

```
#include <pwd.h>
int getpwuid_r(
    uid_t uid,
    struct passwd *pwd,
    char *buffer,
    size_t bufsize,
    struct passwd **result
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.7 getpwnam - Password File Entry for Name

CALLING SEQUENCE:

```
#include <pwd.h>
struct passwd *getpwnam(
    const char *name

4 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

9.4.8 getpwnam r - Reentrant Get Password File Entry for Name

CALLING SEQUENCE:

```
#include <pwd.h>
int getpwnam_r(
    const char *name,
    struct passwd *pwd,
    char *buffer,
    size_t bufsize,
    struct passwd **result
);
```

STATUS CODES:

	Е	The

DESCRIPTION:

NOTES:

CHAPTER

TEN

SEMAPHORE MANAGER

10.1 Introduction

The semaphore manager provides functions to allocate, delete, and control semaphores. This manager is based on the POSIX 1003.1 standard.

The directives provided by the semaphore manager are:

- sem init (page 125) Initialize an unnamed semaphore
- sem destroy (page 125) Destroy an unnamed semaphore
- sem open (page 126) Open a named semaphore
- sem close (page 127) Close a named semaphore
- sem unlink (page 127) Remove a named semaphore
- sem wait (page 128) Lock a semaphore
- sem trywait (page 128) Lock a semaphore
- sem_timedwait (page 129) Wait on a Semaphore for a Specified Time
- sem post (page 129) Unlock a semaphore
- sem getvalue (page 130) Get the value of a semeaphore

10.2 Background

10.2.1 Theory

Semaphores are used for synchronization and mutual exclusion by indicating the availability and number of resources. The task (the task which is returning resources) notifying other tasks of an event increases the number of resources held by the semaphore by one. The task (the task which will obtain resources) waiting for the event decreases the number of resources held by the semaphore by one. If the number of resources held by a semaphore is insufficient (namely 0), the task requiring resources will wait until the next time resources are returned to the semaphore. If there is more than one task waiting for a semaphore, the tasks will be placed in the queue.

10.2.2 "sem t" Structure

The sem_t structure is used to represent semaphores. It is passed as an argument to the semaphore directives and is defined as follows:

```
typedef int sem_t;
```

10.2.3 Building a Semaphore Attribute Set

10.2. Background 123

10.3 Operations

10.3.1 Using as a Binary Semaphore

Although POSIX supports mutexes, they are only visible between threads. To work between processes, a binary semaphore must be used.

Creating a semaphore with a limit on the count of 1 effectively restricts the semaphore to being a binary semaphore. When the binary semaphore is available, the count is 1. When the binary semaphore is unavailable, the count is 0.

Since this does not result in a true binary semaphore, advanced binary features like the Priority Inheritance and Priority Ceiling Protocols are not available.

There is currently no text in this section.

10.4 Directives

This section details the semaphore manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

10.4.1 sem init - Initialize an unnamed semaphore

CALLING SEQUENCE:

```
int sem_init(
    sem_t *sem,
    int pshared,
    unsigned int value
);
```

STATUS CODES:

EINVAL The value argument exceeds SEM_VALUE_MAX		
ENOSPCA resource required to initialize the semaphore has been exhausted The limit on		
semaphores (SEM_VALUE_MAX) has been reached		
ENOSYS The function sem_init is not supported by this implementation		
EPERM The process lacks appropriate privileges to initialize the semaphore		

DESCRIPTION:

The sem_init function is used to initialize the unnamed semaphore referred to by sem. The value of the initialized semaphore is the parameter value. The semaphore remains valid until it is destroyed.

NOTES:

If the functions completes successfully, it shall return a value of zero. otherwise, it shall return a value of -1 and set errno to specify the error that occurred.

Multiprocessing is currently not supported in this implementation.

10.4.2 sem destroy - Destroy an unnamed semaphore

CALLING SEQUENCE:

```
int sem_destroy(
    sem_t *sem
);
```

STATUS CODES:

EINVAL	The value argument exceeds SEM_VALUE_MAX
ENOSYS	The function sem_init is not supported by this implementation
EBUSY	There are currently processes blocked on the semaphore

DESCRIPTION:

The sem_destroy function is used to destroy an unnamed semaphore refered to by sem. sem_destroy can only be used on a semaphore that was created using sem init.

NOTES:

If the functions completes successfully, it shall return a value of zero. Otherwise, it shall return a value of -1 and set errno to specify the error that occurred.

Multiprocessing is currently not supported in this implementation.

10.4.3 sem open - Open a named semaphore

CALLING SEQUENCE:

```
int sem_open(
    const char *name,
    int oflag
);
```

ARGUMENTS:

The following flag bit may be set in oflag:

0_	Creates the semaphore if it does not already exist. If O_CREAT is set and the semaphore
CREA	Talready exists then O_CREAT has no effect. Otherwise, sem_open() creates a semaphore.
	The O_CREAT flag requires the third and fourth argument: mode and value of type
	mode_t and unsigned int, respectively.
0_	If O_EXCL and O_CREAT are set, all call to sem_open() shall fail if the semaphore name
EXCL	exists

STATUS CODES:

EACCES	Valid name specified but oflag permissions are denied, or the semaphore name
	specified does not exist and permission to create the named semaphore is denied.
EEXIST	O_CREAT and O_EXCL are set and the named semaphore already exists.
EINTR	The sem_open() operation was interrupted by a signal.
EINVAL	The sem_open() operation is not supported for the given name.
EMFILE	Too many semaphore descriptors or file descriptors in use by this process.
ENAMETOOLICING length of the name exceed PATH_MAX or name component is longer th	
	MAX while POSIX_NO_TRUNC is in effect.
ENOENT	O_CREAT is not set and the named semaphore does not exist.
ENOSPC	There is insufficient space for the creation of a new named semaphore.
ENOSYS	The function sem_open() is not supported by this implementation.

DESCRIPTION:

The sem_open() function establishes a connection between a specified semaphore and a process. After a call to sem_open with a specified semaphore name, a process can reference to semaphore by the associated name using the address returned by the call. The oflag arguments listed above control the state of the semaphore by determining if the semaphore is created or accessed by a call to sem_open().

NOTES:

10.4.4 sem_close - Close a named semaphore

CALLING SEQUENCE:

```
int sem_close(
    sem_t *sem_close
3);
```

STATUS CODES:

EACCES	The semaphore argument is not a valid semaphore descriptor.
ENOSYS	The function sem_close is not supported by this implementation.

DESCRIPTION:

The sem_close() function is used to indicate that the calling process is finished using the named semaphore indicated by sem. The function sem_close deallocates any system resources that were previously allocated by a sem_open system call. If sem_close() completes successfully it returns a 1, otherwise a value of -1 is return and errno is set.

NOTES:

10.4.5 sem unlink - Unlink a semaphore

CALLING SEQUENCE:

```
int sem_unlink(
    const char *name
);
```

STATUS CODES:

EACCESS	Permission is denied to unlink a semaphore.
ENAMETOOLONG	The length of the strong name exceed NAME_MAX while POSIX_NO_TRUNC is in
	effect.
ENOENT	The name of the semaphore does not exist.
ENOSPC	There is insufficient space for the creation of a new named semaphore.
ENOSYS	The function sem_unlink is not supported by this implementation.

DESCRIPTION:

The sem_unlink() function shall remove the semaphore name by the string name. If a process is currently accessing the name semaphore, the sem_unlink command has no effect. If one or more processes have the semaphore open when the sem_unlink function is called, the destruction of semaphores shall be postponed until all reference to semaphore are destroyed by calls to sem_close, _exit(), or exec. After all references have been destroyed, it returns immediately.

If the termination is successful, the function shall return 0. Otherwise, a -1 is returned and the errno is set.

NOTES:

10.4.6 sem wait - Wait on a Semaphore

CALLING SEQUENCE:

```
int sem_wait(
    sem_t *sem
);
```

STATUS CODES:

EINVAL The sem argument does not refer to a valid semaphore

DESCRIPTION:

This function attempts to lock a semaphore specified by sem. If the semaphore is available, then the semaphore is locked (i.e., the semaphore value is decremented). If the semaphore is unavailable (i.e., the semaphore value is zero), then the function will block until the semaphore becomes available. It will then successfully lock the semaphore. The semaphore remains locked until released by a sem_post() call.

If the call is unsuccessful, then the function returns -1 and sets errno to the appropriate error code.

NOTES:

Multiprocessing is not supported in this implementation.

10.4.7 sem_trywait - Non-blocking Wait on a Semaphore

CALLING SEQUENCE:

```
int sem_trywait(
    sem_t *sem
);
```

STATUS CODES:

EAGAIN	The semaphore is not available (i.e., the semaphore value is zero), so the semaphore
	could not be locked.
EINVAL	The sem argument does not refewr to a valid semaphore

DESCRIPTION:

This function attempts to lock a semaphore specified by sem. If the semaphore is available, then the semaphore is locked (i.e., the semaphore value is decremented) and the function returns a value of 0. The semaphore remains locked until released by a sem_post() call. If the semaphore is unavailable (i.e., the semaphore value is zero), then the function will return a value of -1 immediately and set errno to EAGAIN.

If the call is unsuccessful, then the function returns -1 and sets errno to the appropriate error code.

NOTES:

Multiprocessing is not supported in this implementation.

10.4.8 sem timedwait - Wait on a Semaphore for a Specified Time

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The sem argument does not refewr to a valid semaphore
EINVAL	The nanoseconds field of timeout is invalid.
	The calling thread was unable to get the semaphore within the specified timeout period.

DESCRIPTION:

This function attemtps to lock a semaphore specified by sem, and will wait for the semaphore until the absolute time specified by abstime. If the semaphore is available, then the semaphore is locked (i.e., the semaphore value is decremented) and the function returns a value of 0. The semaphore remains locked until released by a sem_post() call. If the semaphore is unavailable, then the function will wait for the semaphore to become available for the amount of time specified by timeout.

If the semaphore does not become available within the interval specified by timeout, then the function returns -1 and sets errno to EAGAIN. If any other error occurs, the function returns -1 and sets errno to the appropriate error code.

NOTES:

Multiprocessing is not supported in this implementation.

10.4.9 sem_post - Unlock a Semaphore

CALLING SEQUENCE:

```
int sem_post(
    sem_t *sem
);
```

STATUS CODES:

EINVAL The sem argument does not refer to a valid semaphore

DESCRIPTION:

This function attempts to release the semaphore specified by sem. If other tasks are waiting on the semaphore, then one of those tasks (which one depends on the scheduler being used) is allowed to lock the semaphore and return from its sem_wait(), sem_trywait(), or sem_timedwait() call. If there are no other tasks waiting on the semaphore, then the semaphore value is simply incremented. sem_post() returns 0 upon successful completion.

If an error occurs, the function returns -1 and sets errno to the appropriate error code.

NOTES:

Multiprocessing is not supported in this implementation.

10.4.10 sem getvalue - Get the value of a semaphore

CALLING SEQUENCE:

```
int sem_getvalue(
    sem_t *sem,
    int *sval
4);
```

STATUS CODES:

EINVAL	The sem argument does not refer to a valid semaphore
ENOSYS	The function sem_getvalue is not supported by this implementation

DESCRIPTION:

The sem_getvalue functions sets the location referenced by the sval argument to the value of the semaphore without affecting the state of the semaphore. The updated value represents a semaphore value that occurred at some point during the call, but is not necessarily the actual value of the semaphore when it returns to the calling process.

If sem is locked, the value returned by sem_getvalue will be zero or a negative number whose absolute value is the number of processes waiting for the semaphore at some point during the call.

NOTES:

If the functions completes successfully, it shall return a value of zero. Otherwise, it shall return a value of -1 and set errno to specify the error that occurred.

CHAPTER

ELEVEN

MUTEX MANAGER

11.1 Introduction

The mutex manager implements the functionality required of the mutex manager as defined by POSIX 1003.1b-1996. This standard requires that a compliant operating system provide the facilties to ensure that threads can operate with mutual exclusion from one another and defines the API that must be provided.

The services provided by the mutex manager are:

- pthread mutexattr init (page 135) Initialize a Mutex Attribute Set
- pthread mutexattr destroy (page 135) Destroy a Mutex Attribute Set
- pthread mutexattr setprotocol (page 136) Set the Blocking Protocol
- pthread mutexattr getprotocol (page 136) Get the Blocking Protocol
- pthread mutexattr setprioceiling (page 137) Set the Priority Ceiling
- pthread_mutexattr_getprioceiling (page 137) Get the Priority Ceiling
- pthread mutexattr setpshared (page 138) Set the Visibility
- pthread mutexattr getpshared (page 138) Get the Visibility
- pthread_mutex_init (page 138) Initialize a Mutex
- pthread mutex destroy (page 139) Destroy a Mutex
- pthread_mutex_lock (page 139) Lock a Mutex
- pthread_mutex_trylock (page 140) Poll to Lock a Mutex
- pthread mutex timedlock (page 140) Lock a Mutex with Timeout
- pthread mutex unlock (page 141) Unlock a Mutex
- pthread mutex setprioceiling (page 141) Dynamically Set the Priority Ceiling
- pthread mutex getprioceiling (page 141) Dynamically Get the Priority Ceiling

11.2 Background

11.2.1 Mutex Attributes

Mutex attributes are utilized only at mutex creation time. A mutex attribute structure may be initialized and passed as an argument to the mutex_init routine. Note that the priority ceiling of a mutex may be set at run-time.

blocking protcol	is the XXX
priority ceiling	is the XXX
pshared	is the XXX

11.2.2 PTHREAD MUTEX INITIALIZER

This is a special value that a variable of type pthread_mutex_t may be statically initialized to as shown below:

```
pthread_mutex_t my_mutex = PTHREAD_MUTEX_INITIALIZER;
```

This indicates that my_mutex will be automatically initialized by an implicit call to pthread_mutex_init the first time the mutex is used.

Note that the mutex will be initialized with default attributes.

11.2. Background

11.3 Operations

There is currently no text in this section.

11.4 Services

This section details the mutex manager's services. A subsection is dedicated to each of this manager's services and describes the calling sequence, related constants, usage, and status codes.

11.4.1 pthread mutexattr init - Initialize a Mutex Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutexattr_init(
    pthread_mutexattr_t *attr

4 );
```

STATUS CODES:

EINVAL

The attribute pointer argument is invalid.

DESCRIPTION:

The pthread_mutexattr_init routine initializes the mutex attributes object specified by attr with the default value for all of the individual attributes.

NOTES:

XXX insert list of default attributes here.

11.4.2 pthread mutexattr destroy - Destroy a Mutex Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutexattr_destroy(
pthread_mutexattr_t *attr

4 );
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.

DESCRIPTION:

The pthread_mutex_attr_destroy routine is used to destroy a mutex attributes object. The behavior of using an attributes object after it is destroyed is implementation dependent.

NOTES:

NONE

11.4. Services 135

11.4.3 pthread_mutexattr_setprotocol - Set the Blocking Protocol

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutexattr_setprotocol(
   pthread_mutexattr_t *attr,
   int   protocol

);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The protocol argument is invalid.

DESCRIPTION:

The pthread_mutexattr_setprotocol routine is used to set value of the protocol attribute. This attribute controls the order in which threads waiting on this mutex will receive it.

The protocol can be one of the following:

PTHREAD_PRIO_	in which case blocking order is FIFO.
NONE	
PTHREAD_PRIO_	in which case blocking order is priority with the priority inheritance
INHERIT	protocol in effect.
PTHREAD_PRIO_	in which case blocking order is priority with the priority ceiling protocol
PROTECT	in effect.

NOTES:

There is currently no way to get simple priority blocking ordering with POSIX mutexes even though this could easily by supported by RTEMS.

11.4.4 pthread_mutexattr_getprotocol - Get the Blocking Protocol

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The protocol pointer argument is invalid.

DESCRIPTION:

The pthread_mutexattr_getprotocol routine is used to obtain the value of the protocol attribute. This attribute controls the order in which threads waiting on this mutex will receive it.

NOTES:

NONE

11.4.5 pthread mutexattr setprioceiling - Set the Priority Ceiling

CALLING SEQUENCE:

STATUS CODES:

	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The prioceiling argument is invalid.

DESCRIPTION:

The pthread_mutexattr_setprioceiling routine is used to set value of the prioceiling attribute. This attribute specifies the priority that is the ceiling for threads obtaining this mutex. Any task obtaining this mutex may not be of greater priority that the ceiling. If it is of lower priority, then its priority will be elevated to prioceiling.

NOTES:

NONE

11.4.6 pthread_mutexattr_getprioceiling - Get the Priority Ceiling

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The prioceiling pointer argument is invalid.

DESCRIPTION:

11.4. Services 137

The pthread_mutexattr_getprioceiling routine is used to obtain the value of the prioceiling attribute. This attribute specifies the priority ceiling for this mutex.

NOTES:

NONE

11.4.7 pthread_mutexattr_setpshared - Set the Visibility

CALLING SEQUENCE:

STATUS CODES:

	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The pshared argument is invalid.

DESCRIPTION:

NOTES:

11.4.8 pthread mutexattr getpshared - Get the Visibility

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
	The attribute set is not initialized.
EINVAL	The pshared pointer argument is invalid.

DESCRIPTION:

NOTES:

11.4.9 pthread mutex init - Initialize a Mutex

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_init(
    pthread_mutex_t *mutex,
    const pthread_mutexattr_t *attr

);
```

STATUS CODES:

EINVAL	The attribute set is not initialized.
EINVAL	The specified protocol is invalid.
EAGAIN	The system lacked the necessary resources to initialize another mutex.
ENOMEM	Insufficient memory exists to initialize the mutex.
EBUSY	Attempted to reinialize the object reference by mutex, a previously initialized, but
	not yet destroyed.

DESCRIPTION:

NOTES:

11.4.10 pthread_mutex_destroy - Destroy a Mutex

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_destroy(
pthread_mutex_t *mutex

4 );
```

STATUS CODES:

EINVAL	The specified mutex is invalid.
EBUSY	Attempted to destroy the object reference by mutex, while it is locked or referenced
	by another thread.

DESCRIPTION:

NOTES:

11.4.11 pthread_mutex_lock - Lock a Mutex

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_lock(
    pthread_mutex_t *mutex
);
```

STATUS CODES:

11.4. Services 139

EINVA	The specified mutex is invalid.
EINVA	The mutex has the protocol attribute of PTHREAD_PRIO_PROTECT and the priority of the
	calling thread is higher than the current priority ceiling.
EDEADI	KThe current thread already owns the mutex.

DESCRIPTION:

NOTES:

11.4.12 pthread_mutex_trylock - Poll to Lock a Mutex

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_trylock(
    pthread_mutex_t *mutex
);
```

STATUS CODES:

EINVAL	EINVALThe specified mutex is invalid.	
EINVAL	EINVALThe mutex has the protocol attribute of PTHREAD_PRIO_PROTECT and the priority of the	
	calling thread is higher than the current priority ceiling.	
EBUSY 7	The mutex is already locked.	

DESCRIPTION:

NOTES:

11.4.13 pthread_mutex_timedlock - Lock a Mutex with Timeout

CALLING SEQUENCE:

```
#include <pthread.h>
#include <time.h>
int pthread_mutex_timedlock(
pthread_mutex_t *mutex,
const struct timespec *timeout

);
```

STATUS CODES:

EINVAL	The specified mutex is invalid.
EINVAL	The nanoseconds field of timeout is invalid.
EINVAL	The mutex has the protocol attribute of PTHREAD_PRIO_PROTECT and the priority of
	the calling thread is higher than the current priority ceiling.
EDEADLK The current thread already owns the mutex.	
ETIMEDOUThe calling thread was unable to obtain the mutex within the specified timeout	
	period.

DESCRIPTION:

NOTES:

11.4.14 pthread mutex unlock - Unlock a Mutex

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_unlock(
    pthread_mutex_t *mutex

4 );
```

STATUS CODES:

The specified mutex is invalid.	EINVAL
---------------------------------	--------

DESCRIPTION:

NOTES:

11.4.15 pthread mutex setprioceiling - Dynamically Set the Priority Ceiling

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The oldceiling pointer parameter is invalid.
EINVAL	The prioceiling parameter is an invalid priority.
EINVAL	The specified mutex is invalid.

DESCRIPTION:

NOTES:

11.4.16 pthread mutex getprioceiling - Get the Current Priority Ceiling

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_mutex_getprioceiling(
    pthread_mutex_t *mutex,
    int *prioceiling

);
```

11.4. Services 141

STATUS CODES:

EINVAL	The prioceiling pointer parameter is invalid.
EINVAL	The specified mutex is invalid.

DESCRIPTION:

NOTES:

CHAPTER

TWELVE

CONDITION VARIABLE MANAGER

12.1 Introduction

The condition variable manager ...

The directives provided by the condition variable manager are:

- pthread condattr init (page 147) Initialize a Condition Variable Attribute Set
- pthread condattr destroy (page 147) Destroy a Condition Variable Attribute Set
- pthread_condattr_setpshared (page 147) Set Process Shared Attribute
- pthread condattr getpshared (page 148) Get Process Shared Attribute
- pthread cond init (page 148) Initialize a Condition Variable
- pthread_cond_destroy (page 148) Destroy a Condition Variable
- pthread cond signal (page 149) Signal a Condition Variable
- pthread cond broadcast (page 149) Broadcast a Condition Variable
- pthread cond wait (page 150) Wait on a Condition Variable
- pthread cond timedwait (page 150) With with Timeout a Condition Variable

12.2 Background

There is currently no text in this section.

12.2. Background 145

12.3 Operations

There is currently no text in this section.

12.4 Directives

This section details the condition variable manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

12.4.1 pthread condattr init - Initialize a Condition Variable Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_condattr_init(
    pthread_condattr_t *attr

4
);
```

STATUS CODES:

- ENOMEM
 - Insufficient memory is available to initialize the condition variable attributes object.

DESCRIPTION:

NOTES:

12.4.2 pthread condattr destroy - Destroy a Condition Variable Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_condattr_destroy(
    pthread_condattr_t *attr

4
);
```

STATUS CODES:

```
EINVAL The attribute object specified is invalid.
```

DESCRIPTION:

NOTES:

12.4.3 pthread_condattr_setpshared - Set Process Shared Attribute

CALLING SEQUENCE:

12.4. Directives

STATUS CODES:

EINVAL | Invalid argument passed.

DESCRIPTION:

NOTES:

12.4.4 pthread_condattr_getpshared - Get Process Shared Attribute

CALLING SEQUENCE:

STATUS CODES:

EINVAL Invalid argument passed.

DESCRIPTION:

NOTES:

12.4.5 pthread_cond_init - Initialize a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_init(
   pthread_cond_t *cond,
   const pthread_condattr_t *attr
);
```

STATUS CODES:

EAGAIN	The system lacked a resource other than memory necessary to create the initialize
	the condition variable object.
ENOMEM	Insufficient memory is available to initialize the condition variable object.
EBUSY	The specified condition variable has already been initialized.
EINVAL	The specified attribute value is invalid.

DESCRIPTION:

NOTES:

12.4.6 pthread_cond_destroy - Destroy a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_destroy(
    pthread_cond_t *cond

4 );
```

STATUS CODES:

EINVAL	The specified condition variable is invalid.
EBUSY	The specified condition variable is currently in use.

DESCRIPTION:

NOTES:

12.4.7 pthread_cond_signal - Signal a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_signal(
    pthread_cond_t *cond

4
);
```

STATUS CODES:

EINVAL The specified condition variable is not valid.

DESCRIPTION:

NOTES:

This routine should not be invoked from a handler from an asynchronous signal handler or an interrupt service routine.

12.4.8 pthread cond broadcast - Broadcast a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_broadcast(
    pthread_cond_t *cond
);
```

STATUS CODES:

EINVAL The specified condition variable is not valid.

DESCRIPTION:

NOTES:

This routine should not be invoked from a handler from an asynchronous signal handler or an interrupt service routine.

12.4. Directives

12.4.9 pthread_cond_wait - Wait on a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_wait(
   pthread_cond_t *cond,
   pthread_mutex_t *mutex
);
```

STATUS CODES:

EINVAIThe specified condition variable or mutex is not initialized OR different mutexes were specified for concurrent pthread_cond_wait() and pthread_cond_timedwait() operations on the same condition variable OR the mutex was not owned by the current thread at the time of the call.

DESCRIPTION:

NOTES:

12.4.10 pthread_cond_timedwait - Wait with Timeout a Condition Variable

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cond_timedwait(
   pthread_cond_t *cond,
   pthread_mutex_t *mutex,
   const struct timespec *abstime
);
```

STATUS CODES:

EINVAIThe nanoseconds field of timeout is invalid.

EINVAIThe specified condition variable or mutex is not initialized OR different mutexes were specified for concurrent pthread_cond_wait() and pthread_cond_timedwait() operations on the same condition variable OR the mutex was not owned by the current thread at the time of the call.

ETIMEDIAL specified time has elapsed without the condition variable being satisfied.

DESCRIPTION:

NOTES:

CHAPTER

THIRTEEN

MEMORY MANAGEMENT MANAGER

13.1 Introduction

The memory management manager is ...

The directives provided by the memory management manager are:

- mlockall (page 155) Lock the Address Space of a Process
- munlockall (page 155) Unlock the Address Space of a Process
- mlock (page 155) Lock a Range of the Process Address Space
- munlock (page 156) Unlock a Range of the Process Address Space
- munmap (page 157) Unmap Previously Mapped Addresses
- mprotect (page 158) Change Memory Protection
- msync (page 158) Memory Object Synchronization
- shm open (page 159) Open a Shared Memory Object
- shm unlink (page 159) Remove a Shared Memory Object

13.2 Background

There is currently no text in this section.

13.2. Background 153

13.3 Operations

There is currently no text in this section.

13.4 Directives

This section details the memory management manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

13.4.1 mlockall - Lock the Address Space of a Process

CALLING SEQUENCE:

```
#include <sys/mman.h>
int mlockall(
   int flags
4 );
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.2 munlockall - Unlock the Address Space of a Process

CALLING SEQUENCE:

```
#include <sys/mman.h>
int munlockall(
    void
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.3 mlock - Lock a Range of the Process Address Space

CALLING SEQUENCE:

```
#include <sys/mman.h>
int mlock(
    const void *addr,
    size_t len
);
```

13.4. Directives

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.4 munlock - Unlock a Range of the Process Address Space

CALLING SEQUENCE:

```
#include <sys/mman.h>
int munlock(
    const void *addr,
    size_t len
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.5 mmap - Map Process Addresses to a Memory Object

CALLING SEQUENCE:

```
#include <sys/mman.h>
void *mmap(
    void *addr,
    size_t len,
    int prot,
    int flags,
    int fildes,
    off_t off
);
```

STATUS CODES:

EBAD# The fildes argument is not a valid open file descriptor.

EINVALThe value of len is zero.

EINVALTHE value of flags is invalid (neither MAP_PRIVATE nor MAP_SHARED is set).

EINVALTHE addr argument (if MAP_FIXED was specified) or off is not a multiple of the page size as returned by sysconf(), or is considered invalid by the implementation.

ENODEVThe fildes argument refers to a file whose type is not supported by mmap.

ENOMEMMAP_FIXED was specified, and the range [addr,addr+len) exceeds that allowed for the address space of a process; or, if MAP_FIXED was not specified and there is insufficient room in the address space to effect the mapping.

ENOT \$UMAP_FIXED or MAP_PRIVATE was specified in the flags argument and the implementation does not support this functionality.

ENOT\$UPhe implementation does not support the combination of accesses requested in the prot argument.

ENXIO Addresses in the range [off,off+len) are invalid for the object specified by fildes.

ENXIO MAP_FIXED was specified in flags and the combination of addr, len, and off is invalid for the object specified by fildes.

EOVERFIBE file is a regular file and the value of off plus len exceeds the offset maximum established in the open file description associated with fildes.

DESCRIPTION:

mmap establishes a mapping between an address pa for len bytes to the memory object represented by the file descriptor fildes at offset off for len bytes. The value of pa is an implementation-defined function of the parameter addr and the values of flags. A successful mmap() call shall return pa as its result. An unsuccessful call returns MAP_FAILED and sets errno accordingly.

NOTES:

RTEMS is a single address space operating system without privilege separation between the kernel and user space. Therefore, the implementation of mmap has a number of implementation-specific issues to be aware of:

- Read, write and execute permissions are allowed because the memory in RTEMS does not normally have protections but we cannot hide access to memory. Thus, the use of PROT_NONE for the prot argument is not supported. Similarly, there is no restriction of write access, so PROT_WRITE must be in the prot argument.
- Anonymous mappings must have fildes set to -1 and off set to 0. Shared mappings are not supported with Anonymous mappings.
- MAP_FIXED is not supported for shared memory objects with MAP_SHARED.
- Support for shared mappings is dependent on the underlying object's filesystem implementation of an mmap_h file operation handler.

13.4.6 munmap - Unmap Previously Mapped Addresses

CALLING SEQUENCE:

```
#include <sys/mman.h>
int munmap(
    void *addr,

(continues on next page)
```

13.4. Directives

(continued from previous page)

```
size_t len
;
;
```

STATUS CODES:

EINVAL	Addresses in the range [addr,addr+len) are outside the valid range for the address
	space.
EINVAL	The len argument is 0.

DESCRIPTION:

The munmap() function shall remove any mappings for those entire pages containing any part of the address space of the process starting at addr and continuing for len bytes. If there are no mappings in the specified address range, then munmap() has no effect.

Upon successful completion, munmap() shall return 0; otherwise, it shall return -1 and set errno to indicate the error.

NOTES:

13.4.7 mprotect - Change Memory Protection

CALLING SEQUENCE:

```
#include <sys/mman.h>
int mprotect(
    void *addr,
    size_t len,
    int prot
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.8 msync - Memory Object Synchronization

CALLING SEQUENCE:

```
#include <sys/mman.h>
int msync(
    void *addr,
    size_t len,
    int flags
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

13.4.9 shm open - Open a Shared Memory Object

CALLING SEQUENCE:

```
#include <sys/mman.h>
int shm_open(
    const char *name,
    int oflag,
    mode_t mode
);
```

STATUS CODES:

EACCES The shared memory object exists and the permissions specified by oflag are denied, or	
the shared memory object does not exist and permission to create the shared memory	
object is denied, or O_TRUNC is specified and write permission is denied.	
EEXIST O_CREAT and O_EXCL are set and the named shared memory object already exists.	
EINVAL The shm_open() operation is not supported for the given name.	
EMFILE All file descriptors available to the process are currently open.	
ENFILE Too many shared memory objects are currently open in the system.	
ENOENT O_CREAT is not set and the named shared memory object does not exist.	
ENOSPC There is insufficient space for the creation of the new shared memory object.	
ENAME TOTAL ENGLISH of the name argument exceeds _POSIX_PATH_MAX.	

DESCRIPTION:

The shm_open() function shall establish a connection between a shared memory object and a file descriptor. It shall create an open file description that refers to the shared memory object and a file descriptor that refers to that open file description. The name argument points to a string naming a shared memory object.

If successful, shm_open() shall return a file descriptor for the shared memory object. Upon successful completion, the shm_open() function shall return a non-negative integer representing the file descriptor. Otherwise, it shall return -1 and set errno to indicate the error.

NOTES:

An application can set the <code>_POSIX_Shm_Object_operations</code> to control the behavior of shared memory objects when accessed via the file descriptor.

The name must be valid for an RTEMS SuperCore Object.

13.4.10 shm unlink - Remove a Shared Memory Object

CALLING SEQUENCE:

13.4. Directives

```
#include <sys/mman.h>
int shm_unlink(
    const char *name
);
```

STATUS CODES:

ENOENT	The named shared memory object does not exist.
ENAMETOOLONG	The length of the name argument exceeds _POSIX_PATH_MAX.

DESCRIPTION:

The shm_unlink() function shall remove the name of the shared memory object named by the string pointed to by name.

If one or more references to the shared memory object exist when the object is unlinked, the name shall be removed before shm_unlink() returns, but the removal of the memory object contents shall be postponed until all open and map references to the shared memory object have been removed.

Even if the object continues to exist after the last shm_unlink(), reuse of the name shall subsequently cause shm_open() to behave as if no shared memory object of this name exists.

Upon successful completion, a value of zero shall be returned. Otherwise, a value of -1 shall be returned and errno set to indicate the error. If -1 is returned, the named shared memory object shall not be changed by this function call.

NOTES:

CHAPTER

FOURTEEN

SCHEDULER MANAGER

14.1 Introduction

The scheduler manager ...

The directives provided by the scheduler manager are:

- sched_get_priority_min (page 165) Get Minimum Priority Value
- sched_get_priority_max (page 165) Get Maximum Priority Value
- sched_rr_get_interval (page 166) Get Timeslicing Quantum
- sched_yield (page 166) Yield the Processor

14.2 Background

14.2.1 Priority

In the RTEMS implementation of the POSIX API, the priorities range from the low priority of sched_get_priority_min() to the highest priority of sched_get_priority_max(). Numerically higher values represent higher priorities.

14.2.2 Scheduling Policies

The following scheduling policies are available:

SCHED FIFO

Priority-based, preemptive scheduling with no timeslicing. This is equivalent to what is called "manual round-robin" scheduling.

SCHED RR

Priority-based, preemptive scheduling with timeslicing. Time quantums are maintained on a per-thread basis and are not reset at each context switch. Thus, a thread which is preempted and subsequently resumes execution will attempt to complete the unused portion of its time quantum.

SCHED OTHER

Priority-based, preemptive scheduling with timeslicing. Time quantums are maintained on a per-thread basis and are reset at each context switch.

SCHED SPORADIC

Priority-based, preemptive scheduling utilizing three additional parameters: budget, replenishment period, and low priority. Under this policy, the thread is allowed to execute for "budget" amount of time before its priority is lowered to "low priority". At the end of each replenishment period, the thread resumes its initial priority and has its budget replenished.

14.2. Background 163

14.3 Operations

There is currently no text in this section.

14.4 Directives

This section details the scheduler manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

14.4.1 sched get priority min - Get Minimum Priority Value

CALLING SEQUENCE:

```
#include <sched.h>
int sched_get_priority_min(
    int policy
);
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

```
EINVAL The indicated policy is invalid.
```

DESCRIPTION:

This routine return the minimum (numerically and logically lowest) priority for the specified policy.

NOTES:

NONE

14.4.2 sched get priority max - Get Maximum Priority Value

CALLING SEQUENCE:

```
#include <sched.h>
int sched_get_priority_max(
    int policy
);
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EINVAL The indicated policy is invalid.

DESCRIPTION:

This routine return the maximum (numerically and logically highest) priority for the specified policy.

NOTES:

NONE

14.4. Directives

14.4.3 sched_rr_get_interval - Get Timeslicing Quantum

CALLING SEQUENCE:

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

ESRCH	The indicated process id is invalid.
EINVAL	The specified interval pointer parameter is invalid.

DESCRIPTION:

This routine returns the length of the timeslice quantum in the interval parameter for the specified pid.

NOTES:

The pid argument should be 0 to indicate the calling process.

14.4.4 sched_yield - Yield the Processor

CALLING SEQUENCE:

```
#include <sched.h>
int sched_yield( void );
```

STATUS CODES:

This routine always returns zero to indicate success.

DESCRIPTION:

This call forces the calling thread to yield the processor to another thread. Normally this is used to implement voluntary round-robin task scheduling.

NOTES:

NONE

CHAPTER

FIFTEEN

CLOCK MANAGER

15.1 Introduction

The clock manager provides services two primary classes of services. The first focuses on obtaining and setting the current date and time. The other category of services focus on allowing a thread to delay for a specific length of time.

The directives provided by the clock manager are:

- clock gettime (page 171) Obtain Time of Day
- clock_settime (page 171) Set Time of Day
- clock_getres (page 172) Get Clock Resolution
- sleep (page 172) Delay Process Execution
- usleep (page 172) Delay Process Execution in Microseconds
- nanosleep (page 173) Delay with High Resolution
- gettimeofday (page 173) Get the Time of Day
- time (page 174) Get time in seconds

15.2 Background

There is currently no text in this section.

15.2. Background 169

15.3 Operations

There is currently no text in this section.

15.4 Directives

This section details the clock manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

15.4.1 clock_gettime - Obtain Time of Day

CALLING SEQUENCE:

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EINVAL	The tp pointer parameter is invalid.	
EINVAL	The clock_id specified is invalid.	

DESCRIPTION:

NOTES:

NONE

15.4.2 clock_settime - Set Time of Day

CALLING SEQUENCE:

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EINVAL	WAL The tp pointer parameter is invalid.	
EINVAL	The clock_id specified is invalid.	
EINVAL	The contents of the tp structure are invalid.	

DESCRIPTION:

NOTES:

NONE

15.4. Directives

15.4.3 clock_getres - Get Clock Resolution

CALLING SEQUENCE:

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EINVAL	AL The res pointer parameter is invalid.	
EINVAL	The clock_id specified is invalid.	

DESCRIPTION:

NOTES:

If res is NULL, then the resolution is not returned.

15.4.4 sleep - Delay Process Execution

CALLING SEQUENCE:

```
#include <unistd.h>
unsigned int sleep(
unsigned int seconds
);
```

STATUS CODES:

This routine returns the number of unslept seconds.

DESCRIPTION:

The sleep() function delays the calling thread by the specified number of seconds.

NOTES:

This call is interruptible by a signal.

15.4.5 usleep - Delay Process Execution in Microseconds

CALLING SEQUENCE:

```
#include <time.h>
useconds_t usleep(
useconds_t useconds
);
```

STATUS CODES:

This routine returns the number of unslept seconds.

The sleep() function delays the calling thread by the specified number of seconds.

The usleep() function suspends the calling thread from execution until either the number of microseconds specified by the useconds argument has elapsed or a signal is delivered to the calling thread and its action is to invoke a signal-catching function or to terminate the process.

Because of other activity, or because of the time spent in processing the call, the actual length of time the thread is blocked may be longer than the amount of time specified.

NOTES:

This call is interruptible by a signal.

The Single UNIX Specification allows this service to be implemented using the same timer as that used by the alarm() service. This is *NOT* the case for *RTEMS* and this call has no interaction with the SIGALRM signal.

15.4.6 nanosleep - Delay with High Resolution

CALLING SEQUENCE:

```
#include <time.h>
int nanosleep(
    const struct timespec *rqtp,
    struct timespec *rmtp
);
```

STATUS CODES:

On error, this routine returns -1 and sets errno to one of the following:

EINTR	The routine was interrupted by a signal.
EAGAIN	The requested sleep period specified negative seconds or nanoseconds.
EINVAL	The requested sleep period specified an invalid number for the nanoseconds field.

DESCRIPTION:

NOTES:

This call is interruptible by a signal.

15.4.7 gettimeofday - Get the Time of Day

CALLING SEQUENCE:

```
#include <sys/time.h>
#include <unistd.h>
int gettimeofday(
    struct timeval *tp,
    struct timezone *tzp

6 );
```

15.4. Directives

STATUS CODES:

On error, this routine returns -1 and sets errno as appropriate.

EPERM	settimeofdat is called by someone other than the superuser.
EINVAL	Timezone (or something else) is invalid.
EFAULT	One of tv or tz pointed outside your accessible address space

DESCRIPTION:

This routine returns the current time of day in the tp structure.

NOTES:

Currently, the timezone information is not supported. The tzp argument is ignored.

15.4.8 time - Get time in seconds

CALLING SEQUENCE:

```
#include <time.h>
int time(
    time_t *tloc

4 );
```

STATUS CODES:

This routine returns the number of seconds since the Epoch.

DESCRIPTION:

time returns the time since 00:00:00 GMT, January 1, 1970, measured in seconds

If tloc in non null, the return value is also stored in the memory pointed to by t.

NOTES:

NONE

CHAPTER

SIXTEEN

TIMER MANAGER

16.1 Introduction

The timer manager is ...

The services provided by the timer manager are:

- timer_create (page 179) Create a Per-Process Timer
- timer_delete (page 179) Delete a Per-Process Timer
- timer_settime (page 179) Set Next Timer Expiration
- timer_gettime (page 180) Get Time Remaining on Timer
- timer_getoverrun (page 180) Get Timer Overrun Count

16.2 Background

16.2. Background 177

16.3 Operations

16.4 System Calls

This section details the timer manager's services. A subsection is dedicated to each of this manager's services and describes the calling sequence, related constants, usage, and status codes.

16.4.1 timer create - Create a Per-Process Timer

CALLING SEQUENCE:

STATUS CODES:

EXXX -

DESCRIPTION:

NOTES:

16.4.2 timer delete - Delete a Per-Process Timer

CALLING SEQUENCE:

```
#include <time.h>
int timer_delete(
    timer_t timerid
);
```

STATUS CODES:

EXXX -

DESCRIPTION:

NOTES:

16.4.3 timer_settime - Set Next Timer Expiration

CALLING SEQUENCE:

16.4. System Calls

21TTAT2	CODES:
o iai uo	(A)I)Iii).

EXXX -

DESCRIPTION:

NOTES:

16.4.4 timer_gettime - Get Time Remaining on Timer

CALLING SEQUENCE:

STATUS CODES:

EXXX -

DESCRIPTION:

NOTES:

16.4.5 timer getoverrun - Get Timer Overrun Count

CALLING SEQUENCE:

```
#include <time.h>
int timer_getoverrun(
    timer_t timerid
);
```

STATUS CODES:

EXXX -

DESCRIPTION:

NOTES:

CHAPTER

SEVENTEEN

MESSAGE PASSING MANAGER

17.1 Introduction

The message passing manager is the means to provide communication and synchronization capabilities using POSIX message queues.

The directives provided by the message passing manager are:

- mq open (page 187) Open a Message Queue
- mq_close (page 188) Close a Message Queue
- mq unlink (page 188) Remove a Message Queue
- mq_send (page 189) Send a Message to a Message Queue
- mq_receive (page 190) Receive a Message from a Message Queue
- mq notify (page 191) Notify Process that a Message is Available
- mq setattr (page 192) Set Message Queue Attributes
- mq_getattr (page 192) Get Message Queue Attributes

17.2 Background

17.2.1 Theory

Message queues are named objects that operate with readers and writers. In addition, a message queue is a priority queue of discrete messages. POSIX message queues offer a certain, basic amount of application access to, and control over, the message queue geometry that can be changed.

17.2.2 Messages

A message is a variable length buffer where information can be stored to support communication. The length of the message and the information stored in that message are user-defined and can be actual data, pointer(s), or empty. There is a maximum acceptable length for a message that is associated with each message queue.

17.2.3 Message Queues

Message queues are named objects similar to the pipes of POSIX. They are a means of communicating data between multiple processes and for passing messages among tasks and ISRs. Message queues can contain a variable number of messages from 0 to an upper limit that is user defined. The maximum length of the message can be set on a per message queue basis. Normally messages are sent and received from the message queue in FIFO order. However, messages can also be prioritized and a priority queue established for the passing of messages. Synchronization is needed when a task waits for a message to arrive at a queue. Also, a task may poll a queue for the arrival of a message.

The message queue descriptor mqd_t represents the message queue. It is passed as an argument to all of the message queue functions.

17.2.4 Building a Message Queue Attribute Set

The mq_attr structure is used to define the characteristics of the message queue.

```
struct mq_attr{
    long mq_flags;
    long mq_maxmsg;
    long mq_msgsize;
    long mq_curmsgs;
6 };
```

All of these attributes are set when the message queue is created using mq_{open} . The mq_{flags} field is not used in the creation of a message queue, it is only used by $mq_{setattr}$ and $mq_{getattr}$. The structure mq_{attr} is passed as an argument to $mq_{setattr}$ and $mq_{getattr}$.

The mq_flags contain information affecting the behavior of the message queue. The O_NONBLOCK mq_flag is the only flag that is defined. In mq_setattr, the mq_flag can be set to dynamically change the blocking and non-blocking behavior of the message queue. If the non-block flag is set then the message queue is non-blocking, and requests to send and receive messages do not block waiting for resources. For a blocking message queue, a request to send might have to wait for an empty message queue, and a request to receive might have to wait for a message

17.2. Background 183

to arrive on the queue. Both mq_maxmsg and mq_msgsize affect the sizing of the message queue. mq_maxmsg specifies how many messages the queue can hold at any one time. mq_msgsize specifies the size of any one message on the queue. If either of these limits is exceeded, an error message results.

Upon return from mq_getattr, the mq_curmsgs is set according to the current state of the message queue. This specifies the number of messages currently on the queue.

17.2.5 Notification of a Message on the Queue

Every message queue has the ability to notify one (and only one) process whenever the queue's state changes from empty (0 messages) to nonempty. This means that the process does not have to block or constantly poll while it waits for a message. By calling mq_notify, you can attach a notification request to a message queue. When a message is received by an empty queue, if there are no processes blocked and waiting for the message, then the queue notifies the requesting process of a message arrival. There is only one signal sent by the message queue, after that the notification request is de-registered and another process can attach its notification request. After receipt of a notification, a process must re-register if it wishes to be notified again.

If there is a process blocked and waiting for the message, that process gets the message, and notification is not sent. It is also possible for another process to receive the message after the notification is sent but before the notified process has sent its receive request.

Only one process can have a notification request attached to a message queue at any one time. If another process attempts to register a notification request, it fails. You can de-register for a message queue by passing a NULL to mq_notify, this removes any notification request attached to the queue. Whenever the message queue is closed, all notification attachments are removed.

17.2.6 POSIX Interpretation Issues

There is one significant point of interpretation related to the RTEMS implementation of POSIX message queues:

What happens to threads already blocked on a message queue when the mode of that same message queue is changed from blocking to non-blocking?

The RTEMS POSIX implementation decided to unblock all waiting tasks with an EAGAIN status just as if a non-blocking version of the same operation had returned unsatisfied. This case is not discussed in the POSIX standard and other implementations may have chosen alternative behaviors.

17.3 Operations

17.3.1 Opening or Creating a Message Queue

If the message queue already exists, mq_open() opens it, if the message queue does not exist, mq_open() creates it. When a message queue is created, the geometry of the message queue is contained in the attribute structure that is passed in as an argument. This includes mq_msgsize that dictates the maximum size of a single message, and the mq_maxmsg that dictates the maximum number of messages the queue can hold at one time. The blocking or non-blocking behavior of the queue can also specified.

17.3.2 Closing a Message Queue

The mq_close() function is used to close the connection made to a message queue that was made during mq_open. The message queue itself and the messages on the queue are persistent and remain after the queue is closed.

17.3.3 Removing a Message Queue

The mq_unlink() function removes the named message queue. If the message queue is not open when mq_unlink is called, then the queue is immediately eliminated. Any messages that were on the queue are lost, and the queue can not be opened again. If processes have the queue open when mq_unlink is called, the removal of the queue is delayed until the last process using the queue has finished. However, the name of the message queue is removed so that no other process can open it.

17.3.4 Sending a Message to a Message Queue

The mq_send() function adds the message in priority order to the message queue. Each message has an assigned a priority. The highest priority message is be at the front of the queue.

The maximum number of messages that a message queue may accept is specified at creation by the mq_maxmsg field of the attribute structure. If this amount is exceeded, the behavior of the process is determined according to what oflag was used when the message queue was opened. If the queue was opened with O_NONBLOCK flag set, the process does not block, and an error is returned. If the O_NONBLOCK flag was not set, the process does block and wait for space on the queue.

17.3.5 Receiving a Message from a Message Queue

The mq_receive() function is used to receive the oldest of the highest priority message(s) from the message queue specified by mqdes. The messages are received in FIFO order within the priorities. The received message's priority is stored in the location referenced by the msg_prio. If the msg_prio is a NULL, the priority is discarded. The message is removed and stored in an area pointed to by msg_ptr whose length is of msg_len. The msg_len must be at least equal to the mg_msgsize attribute of the message queue.

The blocking behavior of the message queue is set by O_NONBLOCK at mq_open or by setting O_NONBLOCK in mq_flags in a call to mq_setattr. If this is a blocking queue, the process does

17.3. Operations

block and wait on an empty queue. If this a non-blocking queue, the process does not block. Upon successful completion, mq_receive returns the length of the selected message in bytes and the message is removed from the queue.

17.3.6 Notification of Receipt of a Message on an Empty Queue

The mq_notify() function registers the calling process to be notified of message arrival at an empty message queue. Every message queue has the ability to notify one (and only one) process whenever the queue's state changes from empty (0 messages) to nonempty. This means that the process does not have to block or constantly poll while it waits for a message. By calling mq_notify, a notification request is attached to a message queue. When a message is received by an empty queue, if there are no processes blocked and waiting for the message, then the queue notifies the requesting process of a message arrival. There is only one signal sent by the message queue, after that the notification request is de-registered and another process can attach its notification request. After receipt of a notification, a process must re-register if it wishes to be notified again.

If there is a process blocked and waiting for the message, that process gets the message, and notification is not sent. Only one process can have a notification request attached to a message queue at any one time. If another process attempts to register a notification request, it fails. You can de-register for a message queue by passing a NULL to mq_notify, this removes any notification request attached to the queue. Whenever the message queue is closed, all notification attachments are removed.

17.3.7 Setting the Attributes of a Message Queue

The mq_setattr() function is used to set attributes associated with the open message queue description referenced by the message queue descriptor specified by mqdes. The *omqstat represents the old or previous attributes. If omqstat is non-NULL, the function mq_setattr() stores, in the location referenced by omqstat, the previous message queue attributes and the current queue status. These values are the same as would be returned by a call to mq_getattr() at that point.

There is only one mq_attr.mq_flag that can be altered by this call. This is the flag that deals with the blocking and non-blocking behavior of the message queue. If the flag is set then the message queue is non-blocking, and requests to send or receive do not block while waiting for resources. If the flag is not set, then message send and receive may involve waiting for an empty queue or waiting for a message to arrive.

17.3.8 Getting the Attributes of a Message Queue

The mq_getattr() function is used to get status information and attributes of the message queue associated with the message queue descriptor. The results are returned in the mq_attr structure referenced by the mqstat argument. All of these attributes are set at create time, except the blocking/non-blocking behavior of the message queue which can be dynamically set by using mq_setattr. The attribute mq_curmsg is set to reflect the number of messages on the queue at the time that mq_getattr was called.

17.4 Directives

This section details the message passing manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

17.4.1 mq_open - Open a Message Queue

CALLING SEQUENCE:

```
#include <mqueue.h>
mqd_t mq_open(
const char *name,
int oflag,
mode_t mode,
struct mq_attr *attr

);
```

STATUS CODES:

EACCES	Either the message queue exists and the permissions requested in oflags were
	denied, or the message does not exist and permission to create one is denied.
EEXIST	You tried to create a message queue that already exists.
EINVAL	An inappropriate name was given for the message queue, or the values of
	mq-maxmsg or mq_msgsize were less than 0.
ENOENT	The message queue does not exist, and you did not specify to create it.
EINTR	The call to mq_open was interrupted by a signal.
EMFILE	The process has too many files or message queues open. This is a process limit
	error.
ENFILE	The system has run out of resources to support more open message queues. This is
	a system error.
ENAMETO	ևապ <u>տ</u> ame is too long.

DESCRIPTION:

The mq_open() function establishes the connection between a process and a message queue with a message queue descriptor. If the message queue already exists, mq_open opens it, if the message queue does not exist, mq_open creates it. Message queues can have multiple senders and receivers. If mq_open is successful, the function returns a message queue descriptor. Otherwise, the function returns a -1 and sets errno to indicate the error.

The name of the message queue is used as an argument. For the best of portability, the name of the message queue should begin with a "/" and no other "/" should be in the name. Different systems interpret the name in different ways.

The oflags contain information on how the message is opened if the queue already exists. This may be O_RDONLY for read only, O_WRONLY for write only, of O_RDWR, for read and write.

In addition, the of lags contain information needed in the creation of a message queue.

17.4. Directives

0_	If the non-block flag is set then the message queue is non-blocking, and requests to
NONB	LOGENIA and receive messages do not block waiting for resources. If the flag is not set
	then the message queue is blocking, and a request to send might have to wait for an
	empty message queue. Similarly, a request to receive might have to wait for a message
	to arrive on the queue.
0_	This call specifies that the call the mq_open is to create a new message queue. In this
CREA	T case the mode and attribute arguments of the function call are utilized. The message
	queue is created with a mode similar to the creation of a file, read and write permission
	creator, group, and others. The geometry of the message queue is contained in the
	attribute structure. This includes mq_msgsize that dictates the maximum size of a
	single message, and the mq_maxmsg that dictates the maximum number of messages
	the queue can hold at one time. If a NULL is used in the mq_attr argument, then the
	message queue is created with implementation defined defaults.
0_	is always set if O_CREAT flag is set. If the message queue already exists, O_EXCL causes
EXCL	an error message to be returned, otherwise, the new message queue fails and appends
	to the existing one.

NOTES:

The mq_open() function does not add or remove messages from the queue. When a new message queue is being created, the mq_flag field of the attribute structure is not used.

17.4.2 mq close - Close a Message Queue

CALLING SEQUENCE:

```
#include <mqueue.h>
int mq_close(
    mqd_t mqdes
);
```

STATUS CODES:

EINVAL The descriptor does not represent a valid open message queue

DESCRIPTION:

The mq_close function removes the association between the message queue descriptor, mqdes, and its message queue. If mq_close() is successfully completed, the function returns a value of zero; otherwise, the function returns a value of -1 and sets errno to indicate the error.

NOTES:

If the process had successfully attached a notification request to the message queue via mq_notify, this attachment is removed, and the message queue is available for another process to attach for notification. mq_close has no effect on the contents of the message queue, all the messages that were in the queue remain in the queue.

17.4.3 mq unlink - Remove a Message Queue

CALLING SEQUENCE:

```
#include <mqueue.h>
int mq_unlink(
    const char *name
4 );
```

STATUS CODES:

EINVAL The descriptor does not represent a valid message queue

DESCRIPTION:

The mq_unlink() function removes the named message queue. If the message queue is not open when mq_unlink is called, then the queue is immediately eliminated. Any messages that were on the queue are lost, and the queue can not be opened again. If processes have the queue open when mq_unlink is called, the removal of the queue is delayed until the last process using the queue has finished. However, the name of the message queue is removed so that no other process can open it. Upon successful completion, the function returns a value of zero. Otherwise, the named message queue is not changed by this function call, and the function returns a value of -1 and sets errno to indicate the error.

NOTES:

Calls to mq_open() to re-create the message queue may fail until the message queue is actually removed. However, the mq_unlink() call need not block until all references have been closed; it may return immediately.

17.4.4 mq send - Send a Message to a Message Queue

CALLING SEQUENCE:

```
#include<mqueue.h>
int mq_send(
    mqd_t    mqdes,
    const char *msg_ptr,
    size_t    msg_len,
    unsigned int msg_prio
7 );
```

STATUS CODES:

EBADF	The descriptor does not represent a valid message queue, or the queue was opened
	for read only O_RDONLY
EINVAL	The value of msg_prio was greater than the MQ_PRIO_MAX.
EMSGSI	ZEThe msg_len is greater than the mq_msgsize attribute of the message queue
EAGAIN	The message queue is non-blocking, and there is no room on the queue for another
	message as specified by the mq_maxmsg.
EINTR	The message queue is blocking. While the process was waiting for free space on the
	queue, a signal arrived that interrupted the wait.

DESCRIPTION:

The mq_send() function adds the message pointed to by the argument msg_ptr to the message queue specified by mqdes. Each message is assigned a priority, from 0 to MQ_PRIO_MAX.

17.4. Directives

MQ_PRIO_MAX is defined in limits.h> and must be at least 32. Messages are added to the queue in order of their priority. The highest priority message is at the front of the queue.

The maximum number of messages that a message queue may accept is specified at creation by the mq_maxmsg field of the attribute structure. If this amount is exceeded, the behavior of the process is determined according to what oflag was used when the message queue was opened. If the queue was opened with O_NONBLOCK flag set, then the EAGAIN error is returned. If the O_NONBLOCK flag was not set, the process blocks and waits for space on the queue, unless it is interrupted by a signal.

Upon successful completion, the mq_send() function returns a value of zero. Otherwise, no message is enqueued, the function returns -1, and errno is set to indicate the error.

NOTES:

If the specified message queue is not full, mq_send inserts the message at the position indicated by the msg_prio argument.

17.4.5 mq_receive - Receive a Message from a Message Queue

CALLING SEQUENCE:

```
#include <mqueue.h>
size_t mq_receive(
    mqd_t mqdes,
    char *msg_ptr,
    size_t msg_len,
    unsigned int *msg_prio

7 );
```

STATUS CODES:

EBADF	The descriptor does not represent a valid message queue, or the queue was opened
	for write only O_WRONLY
EMSGSI	ZEThe msg_len is less than the mq_msgsize attribute of the message queue
EAGAIN	The message queue is non-blocking, and the queue is empty
EAGAIN	The operation would block but has been called from an ISR
EINTR	The message queue is blocking. While the process was waiting for a message to
	arrive on the queue, a signal arrived that interrupted the wait.

DESCRIPTION:

The mq_receive function is used to receive the oldest of the highest priority message(s) from the message queue specified by mqdes. The messages are received in FIFO order within the priorities. The received message's priority is stored in the location referenced by the msg_prio. If the msg_prio is a NULL, the priority is discarded. The message is removed and stored in an area pointed to by msg_ptr whose length is of msg_len. The msg_len must be at least equal to the mq_msgsize attribute of the message queue.

The blocking behavior of the message queue is set by O_NONBLOCK at mq_open or by setting O_NONBLOCK in mq_flags in a call to mq_setattr. If this is a blocking queue, the process blocks and waits on an empty queue. If this a non-blocking queue, the process does not block.

Upon successful completion, mq_receive returns the length of the selected message in bytes and the message is removed from the queue. Otherwise, no message is removed from the queue, the function returns a value of -1, and sets errno to indicate the error.

NOTES:

If the size of the buffer in bytes, specified by the msg_len argument, is less than the mq_msgsize attribute of the message queue, the function fails and returns an error

17.4.6 mq notify - Notify Process that a Message is Available

CALLING SEQUENCE:

STATUS CODES:

EBADF	The descriptor does not refer to a valid message queue
EBUSY	A notification request is already attached to the queue

DESCRIPTION:

If the argument notification is not NULL, this function registers the calling process to be notified of message arrival at an empty message queue associated with the specified message queue descriptor, mqdes.

Every message queue has the ability to notify one (and only one) process whenever the queue's state changes from empty (0 messages) to nonempty. This means that the process does not have to block or constantly poll while it waits for a message. By calling mq_notify, a notification request is attached to a message queue. When a message is received by an empty queue, if there are no processes blocked and waiting for the message, then the queue notifies the requesting process of a message arrival. There is only one signal sent by the message queue, after that the notification request is de-registered and another process can attach its notification request. After receipt of a notification, a process must re-register if it wishes to be notified again.

If there is a process blocked and waiting for the message, that process gets the message, and notification is not be sent. Only one process can have a notification request attached to a message queue at any one time. If another process attempts to register a notification request, it fails. You can de-register for a message queue by passing a NULL to mq_notify; this removes any notification request attached to the queue. Whenever the message queue is closed, all notification attachments are removed.

Upon successful completion, mq_notify returns a value of zero; otherwise, the function returns a value of -1 and sets errno to indicate the error.

NOTES:

It is possible for another process to receive the message after the notification is sent but before the notified process has sent its receive request.

17.4. Directives

17.4.7 mq setattr - Set Message Queue Attributes

CALLING SEQUENCE:

STATUS CODES:

EBADF	The message queue descriptor does not refer to a valid, open queue.
EINVAL	The mq_flag value is invalid.

DESCRIPTION:

The mq_setattr function is used to set attributes associated with the open message queue description referenced by the message queue descriptor specified by mqdes. The *omqstat represents the old or previous attributes. If omqstat is non-NULL, the function mq_setattr() stores, in the location referenced by omqstat, the previous message queue attributes and the current queue status. These values are the same as would be returned by a call to mq_getattr() at that point.

There is only one mq_attr.mq_flag which can be altered by this call. This is the flag that deals with the blocking and non-blocking behavior of the message queue. If the flag is set then the message queue is non-blocking, and requests to send or receive do not block while waiting for resources. If the flag is not set, then message send and receive may involve waiting for an empty queue or waiting for a message to arrive.

Upon successful completion, the function returns a value of zero and the attributes of the message queue have been changed as specified. Otherwise, the message queue attributes is unchanged, and the function returns a value of -1 and sets errno to indicate the error.

NOTES:

All other fields in the mq_attr are ignored by this call.

17.4.8 mq getattr - Get Message Queue Attributes

CALLING SEQUENCE:

```
#include <mqueue.h>
int mq_getattr(
    mqd_t    mqdes,
    struct mq_attr *mqstat
);
```

STATUS CODES:

EBADF The message queue descriptor does not refer to a valid, open message queue.

DESCRIPTION:

The mqdes argument specifies a message queue descriptor. The mq_getattr function is used to get status information and attributes of the message queue associated with the message queue descriptor. The results are returned in the mq_attr structure referenced by the mqstat argument. All of these attributes are set at create time, except the blocking/non-blocking behavior of the message queue which can be dynamically set by using mq_setattr. The attribute mq_curmsg is set to reflect the number of messages on the queue at the time that mq_getattr was called.

Upon successful completion, the mq_getattr function returns zero. Otherwise, the function returns -1 and sets errno to indicate the error.

NOTES:

17.4. Directives

RTEMS POSIX API Guide,	Release 5.0.0-m2	2005-1 (02 2n	d May 2020)	Chapter 17 Section	on 17.4

CHAPTER

EIGHTEEN

THREAD MANAGER

18.1 Introduction

The thread manager implements the functionality required of the thread manager as defined by POSIX 1003.1b. This standard requires that a compliant operating system provide the facilties to manage multiple threads of control and defines the API that must be provided.

The services provided by the thread manager are:

- pthread attr init (page 200) Initialize a Thread Attribute Set
- pthread_attr_destroy (page 200) Destroy a Thread Attribute Set
- pthread attr setdetachstate (page 201) Set Detach State
- pthread attr getdetachstate (page 201) Get Detach State
- pthread_attr_setstacksize (page 202) Set Thread Stack Size
- pthread attr getstacksize (page 202) Get Thread Stack Size
- pthread attr setstackaddr (page 203) Set Thread Stack Address
- pthread attr getstackaddr (page 203) Get Thread Stack Address
- pthread attr setscope (page 204) Set Thread Scheduling Scope
- pthread_attr_getscope (page 204) Get Thread Scheduling Scope
- pthread attr setinheritsched (page 205) Set Inherit Scheduler Flag
- pthread attr getinheritsched (page 206) Get Inherit Scheduler Flag
- pthread attr setschedpolicy (page 206) Set Scheduling Policy
- pthread attr getschedpolicy (page 207) Get Scheduling Policy
- pthread attr setschedparam (page 207) Set Scheduling Parameters
- pthread attr getschedparam (page 208) Get Scheduling Parameters
- pthread attr getaffinity np (page 208) Get Thread Affinity Attribute
- pthread attr setaffinity np (page 209) Set Thread Affinity Attribute
- pthread_create (page 209) Create a Thread
- pthread exit (page 210) Terminate the Current Thread
- pthread detach (page 211) Detach a Thread
- pthread getconcurrency (page 211) Get Thread Level of Concurrency
- pthread setconcurrency (page 212) Set Thread Level of Concurrency
- pthread_getattr_np (page 212) Get Thread Attributes
- pthread_join (page 213) Wait for Thread Termination
- pthread self (page 213) Get Thread ID
- pthread_equal (page 214) Compare Thread IDs
- pthread once (page 214) Dynamic Package Initialization
- pthread setschedparam (page 214) Set Thread Scheduling Parameters

- pthread_getschedparam (page 215) Get Thread Scheduling Parameters
- pthread_getaffinity_np (page 216) Get Thread Affinity
- pthread_setaffinity_np (page 216) Set Thread Affinity

18.1. Introduction

18.2 Background

18.2.1 Thread Attributes

Thread attributes are utilized only at thread creation time. A thread attribute structure may be initialized and passed as an argument to the pthread_create routine.

stack address

is the address of the optionally user specified stack area for this thread. If this value is NULL, then RTEMS allocates the memory for the thread stack from the RTEMS Workspace Area. Otherwise, this is the user specified address for the memory to be used for the thread's stack. Each thread must have a distinct stack area. Each processor family has different alignment rules which should be followed.

stack size

is the minimum desired size for this thread's stack area. If the size of this area as specified by the stack size attribute is smaller than the minimum for this processor family and the stack is not user specified, then RTEMS will automatically allocate a stack of the minimum size for this processor family.

contention scope

specifies the scheduling contention scope. RTEMS only supports the PTHREAD SCOPE PROCESS scheduling contention scope.

scheduling inheritance

specifies whether a user specified or the scheduling policy and parameters of the currently executing thread are to be used. When this is PTHREAD_INHERIT_SCHED, then the scheduling policy and parameters of the currently executing thread are inherited by the newly created thread.

scheduling policy and parameters

specify the manner in which the thread will contend for the processor. The scheduling parameters are interpreted based on the specified policy. All policies utilize the thread priority parameter.

18.3 Operations

There is currently no text in this section.

18.3. Operations

18.4 Services

This section details the thread manager's services. A subsection is dedicated to each of this manager's services and describes the calling sequence, related constants, usage, and status codes.

18.4.1 pthread attr init - Initialize a Thread Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_init(
    pthread_attr_t *attr

4 );
```

STATUS CODES:

```
EINVAL The attribute pointer argument is invalid.
```

DESCRIPTION:

The pthread_attr_init routine initializes the thread attributes object specified by attr with the default value for all of the individual attributes.

NOTES:

The settings in the default attributes are implementation defined. For RTEMS, the default attributes are as follows:

stackadr	is not set to indicate that RTEMS is to allocate the stack memory.
stacksize	is set to PTHREAD_MINIMUM_STACK_SIZE.
con-	is set to PTHREAD_SCOPE_PROCESS.
tention-	
scope	
inher-	is set to PTHREAD_INHERIT_SCHED to indicate that the created thread inherits its
itsched	scheduling attributes from its parent.
detach-	is set to PTHREAD_CREATE_JOINABLE.
state	

18.4.2 pthread attr destroy - Destroy a Thread Attribute Set

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_destroy(
    pthread_attr_t *attr

4
);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.

The pthread_attr_destroy routine is used to destroy a thread attributes object. The behavior of using an attributes object after it is destroyed is implementation dependent.

NOTES:

NONE

18.4.3 pthread attr setdetachstate - Set Detach State

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setdetachstate(
    pthread_attr_t *attr,
    int detachstate
);
```

STATUS CODES:

	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The detachstate argument is invalid.

DESCRIPTION:

The pthread_attr_setdetachstate routine is used to value of the detachstate attribute. This attribute controls whether the thread is created in a detached state.

The detachstate can be either PTHREAD_CREATE_DETACHED or PTHREAD_CREATE_JOINABLE. The default value for all threads is PTHREAD_CREATE_JOINABLE.

NOTES:

If a thread is in a detached state, then the use of the ID with the pthread_detach or pthread_join routines is an error.

18.4.4 pthread_attr_getdetachstate - Get Detach State

CALLING SEQUENCE:

STATUS CODES:

18.4. Services 201

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The detatchstate pointer argument is invalid.

The pthread_attr_getdetachstate routine is used to obtain the current value of the detachstate attribute as specified by the attr thread attribute object.

NOTES:

NONE

18.4.5 pthread_attr_setstacksize - Set Thread Stack Size

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setstacksize(
   pthread_attr_t *attr,
   size_t stacksize
);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.

DESCRIPTION:

The pthread_attr_setstacksize routine is used to set the stacksize attribute in the attr thread attribute object.

NOTES:

As required by POSIX, RTEMS defines the feature symbol <code>_POSIX_THREAD_ATTR_STACKSIZE</code> to indicate that this routine is supported.

If the specified stacksize is below the minimum required for this CPU (PTHREAD_STACK_MIN, then the stacksize will be set to the minimum for this CPU.

18.4.6 pthread_attr_getstacksize - Get Thread Stack Size

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_getstacksize(
    const pthread_attr_t *attr,
    size_t *stacksize
);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The stacksize pointer argument is invalid.

The pthread_attr_getstacksize routine is used to obtain the stacksize attribute in the attr thread attribute object.

NOTES:

As required by POSIX, RTEMS defines the feature symbol <code>_POSIX_THREAD_ATTR_STACKSIZE</code> to indicate that this routine is supported.

18.4.7 pthread attr setstackaddr - Set Thread Stack Address

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setstackaddr(
    pthread_attr_t *attr,
    void    *stackaddr

);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.

DESCRIPTION:

The pthread_attr_setstackaddr routine is used to set the stackaddr attribute in the attr thread attribute object.

NOTES:

As required by POSIX, RTEMS defines the feature symbol <code>_POSIX_THREAD_ATTR_STACKADDR</code> to indicate that this routine is supported.

It is imperative to the proper operation of the system that each thread have sufficient stack space.

18.4.8 pthread attr getstackaddr - Get Thread Stack Address

CALLING SEQUENCE:

18.4. Services 203

STATUS CODES:

	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The stackaddr pointer argument is invalid.

DESCRIPTION:

The pthread_attr_getstackaddr routine is used to obtain the stackaddr attribute in the attr thread attribute object.

NOTES:

As required by POSIX, RTEMS defines the feature symbol <code>_POSIX_THREAD_ATTR_STACKADDR</code> to indicate that this routine is supported.

18.4.9 pthread_attr_setscope - Set Thread Scheduling Scope

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The contention scope specified is not valid.
ENOTSUP	The contention scope specified (PTHREAD_SCOPE_SYSTEM) is not supported.

DESCRIPTION:

The pthread_attr_setscope routine is used to set the contention scope field in the thread attribute object attr to the value specified by contentionscope.

The contentionscope must be either PTHREAD_SCOPE_SYSTEM to indicate that the thread is to be within system scheduling contention or PTHREAD_SCOPE_PROCESS indicating that the thread is to be within the process scheduling contention scope.

NOTES:

As required by POSIX, RTEMS defines the feature symbol <code>_POSIX_THREAD_PRIORITY_SCHEDULING</code> to indicate that the family of routines to which this routine belongs is supported.

18.4.10 pthread_attr_getscope - Get Thread Scheduling Scope

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The contentionscope pointer argument is invalid.

DESCRIPTION:

The pthread_attr_getscope routine is used to obtain the value of the contention scope field in the thread attributes object attr. The current value is returned in contentionscope.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.11 pthread attr setinheritsched - Set Inherit Scheduler Flag

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setinheritsched(
    pthread_attr_t *attr,
    int inheritsched

);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The specified scheduler inheritance argument is invalid.

DESCRIPTION:

The pthread_attr_setinheritsched routine is used to set the inherit scheduler field in the thread attribute object attr to the value specified by inheritsched.

The contentionscope must be either PTHREAD_INHERIT_SCHED to indicate that the thread is to inherit the scheduling policy and parameters from the creating thread, or PTHREAD_EXPLICIT_SCHED to indicate that the scheduling policy and parameters for this thread are to be set from the corresponding values in the attributes object. If contentionscope is PTHREAD_INHERIT_SCHED, then the scheduling attributes in the attr structure will be ignored at thread creation time.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4. Services 205

18.4.12 pthread_attr_getinheritsched - Get Inherit Scheduler Flag

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The inheritsched pointer argument is invalid.

DESCRIPTION:

The pthread_attr_getinheritsched routine is used to object the current value of the inherit scheduler field in the thread attribute object attr.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.13 pthread attr setschedpolicy - Set Scheduling Policy

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setschedpolicy(
    pthread_attr_t *attr,
    int    policy
);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
ENOTSUP	The specified scheduler policy argument is invalid.

DESCRIPTION:

The pthread_attr_setschedpolicy routine is used to set the scheduler policy field in the thread attribute object attr to the value specified by policy.

Scheduling policies may be one of the following:

- SCHED_DEFAULT
- SCHED_FIFO
- SCHED_RR
- SCHED_SPORADIC

• SCHED_OTHER

The precise meaning of each of these is discussed elsewhere in this manual.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.14 pthread attr getschedpolicy - Get Scheduling Policy

CALLING SEQUENCE:

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The specified scheduler policy argument pointer is invalid.

DESCRIPTION:

The pthread_attr_getschedpolicy routine is used to obtain the scheduler policy field from the thread attribute object attr. The value of this field is returned in policy.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.15 pthread attr setschedparam - Set Scheduling Parameters

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_setschedparam(
   pthread_attr_t *attr,
   const struct sched_param param
  );
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The specified scheduler parameter argument is invalid.

DESCRIPTION:

18.4. Services 207

The pthread_attr_setschedparam routine is used to set the scheduler parameters field in the thread attribute object attr to the value specified by param.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.16 pthread attr getschedparam - Get Scheduling Parameters

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_attr_getschedparam(
     const pthread_attr_t *attr,
     struct sched_param *param

);
```

STATUS CODES:

EINVAL	The attribute pointer argument is invalid.
EINVAL	The attribute set is not initialized.
EINVAL	The specified scheduler parameter argument pointer is invalid.

DESCRIPTION:

The pthread_attr_getschedparam routine is used to obtain the scheduler parameters field from the thread attribute object attr. The value of this field is returned in param.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.17 pthread_attr_getaffinity_np - Get Thread Affinity Attribute

CALLING SEQUENCE:

STATUS CODES:

EFAULT	The attribute pointer argument is invalid.	
EFAULT	The cpuset pointer argument is invalid.	
EINVAL	The cpusetsize does not match the value of affinitysetsize field in the thread	
	attribute object.	

DESCRIPTION:

The pthread_attr_getaffinity_np routine is used to obtain the affinityset field from the thread attribute object attr. The value of this field is returned in cpuset.

NOTES:

NONE

18.4.18 pthread attr setaffinity np - Set Thread Affinity Attribute

CALLING SEQUENCE:

```
#define _GNU_SOURCE
#include <pthread.h>
int pthread_attr_setaffinity_np(
    pthread_attr_t *attr,
    size_t cpusetsize,
    const cpu_set_t *cpuset
);
```

STATUS CODES:

EFAULT	The attribute pointer argument is invalid.	
EFAULT	The cpuset pointer argument is invalid.	
EINVAL	The cpusetsize does not match the value of affinitysetsize field in the thread	
	attribute object.	
EINVAL	The cpuset did not select a valid cpu.	
EINVAL	The cpuset selected a cpu that was invalid.	

DESCRIPTION:

The pthread_attr_setaffinity_np routine is used to set the affinityset field in the thread attribute object attr. The value of this field is returned in cpuset.

NOTES:

NONE

18.4.19 pthread_create - Create a Thread

CALLING SEQUENCE:

STATUS CODES:

18.4. Services 209

EINVALThe attribute set is not initialized.

EINVALThe user specified a stack address and the size of the area was not large enough to meet this processor's minimum stack requirements.

EINVALThe specified scheduler inheritance policy was invalid.

ENOT\$UPhe specified contention scope was PTHREAD_SCOPE_PROCESS.

EINVALThe specified thread priority was invalid.

EINVALThe specified scheduling policy was invalid.

EINVALTHE scheduling policy was SCHED_SPORADIC and the specified replenishment period is less than the initial budget.

EINVALThe scheduling policy was SCHED_SPORADIC and the specified low priority is invalid.

EAGAINThe system lacked the necessary resources to create another thread, or the self imposed limit on the total number of threads in a process PTHREAD_THREAD_MAX would be exceeded.

EINVALInvalid argument passed.

DESCRIPTION:

The pthread_create routine is used to create a new thread with the attributes specified by attr. If the attr argument is NULL, then the default attribute set will be used. Modification of the contents of attr after this thread is created does not have an impact on this thread.

The thread begins execution at the address specified by start_routine with arg as its only argument. If start_routine returns, then it is functionally equivalent to the thread executing the pthread_exit service.

Upon successful completion, the ID of the created thread is returned in the thread argument.

NOTES:

There is no concept of a single main thread in RTEMS as there is in a tradition UNIX system. POSIX requires that the implicit return of the main thread results in the same effects as if there were a call to exit. This does not occur in RTEMS.

The signal mask of the newly created thread is inherited from its creator and the set of pending signals for this thread is empty.

18.4.20 pthread exit - Terminate the Current Thread

CALLING SEQUENCE:

```
#include <pthread.h>
void pthread_exit(
    void *status
);
```

STATUS CODES:

NONE

DESCRIPTION:

The pthread_exit routine is used to terminate the calling thread. The status is made available to any successful join with the terminating thread.

When a thread returns from its start routine, it results in an implicit call to the pthread_exit routine with the return value of the function serving as the argument to pthread_exit.

NOTES:

Any cancellation cleanup handlers that hace been pushed and not yet popped shall be popped in reverse of the order that they were pushed. After all cancellation cleanup handlers have been executed, if the thread has any thread-specific data, destructors for that data will be invoked.

Thread termination does not release or free any application visible resources including byt not limited to mutexes, file descriptors, allocated memory, etc.. Similarly, exitting a thread does not result in any process-oriented cleanup activity.

There is no concept of a single main thread in RTEMS as there is in a tradition UNIX system. POSIX requires that the implicit return of the main thread results in the same effects as if there were a call to exit. This does not occur in RTEMS.

All access to any automatic variables allocated by the threads is lost when the thread exits. Thus references (i.e. pointers) to local variables of a thread should not be used in a global manner without care. As a specific example, a pointer to a local variable should NOT be used as the return value.

18.4.21 pthread detach - Detach a Thread

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_detach(
    pthread_t thread
);
```

STATUS CODES:

ESRCH	The thread specified is invalid.
EINVAL	The thread specified is not a joinable thread.

DESCRIPTION:

The pthread_detach routine is used to to indicate that storage for thread can be reclaimed when the thread terminates without another thread joinging with it.

NOTES:

If any threads have previously joined with the specified thread, then they will remain joined with that thread. Any subsequent calls to pthread_join on the specified thread will fail.

18.4.22 pthread getconcurrency - Obtain Thread Concurrency

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_getconcurrency(void);
```

18.4. Services 211

STATUS CODES:

This method returns the current concurrency mapping value.

DESCRIPTION:

The pthread_getconcurrency method returns the number of user threads mapped onto kernel threads. For RTEMS, user and kernel threads are mapped 1:1 and per the POSIX standard this method returns 1 initially and the value last set by pthread_setconcurrency otherwise.

NOTES:

NONE

18.4.23 pthread_setconcurrency - Set Thread Concurrency

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_setconcurrency(void);
```

STATUS CODES:

This method returns 0 on success.

DESCRIPTION:

The pthread_setconcurrency method requests the number of user threads mapped onto kernel threads. Per the POSIX standard, this is considered a request and may have no impact.

For RTEMS, user and kernel threads are always mapped 1:1 and thus this method has no change on the mapping. However, pthread_getconcurrency will return the value set.

NOTES:

NONE

18.4.24 pthread getattr np - Get Thread Attributes

CALLING SEQUENCE:

STATUS CODES:

ESRCH	The thread specified is invalid.
EINVAL	The attribute pointer argument is invalid.

DESCRIPTION:

The pthread_getattr_np routine is used to obtain the attributes associated with thread.

NOTES:

Modification of the execution modes and priority through the Classic API may result in a combination that is not representable in the POSIX API.

18.4.25 pthread_join - Wait for Thread Termination

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_join(
   pthread_t thread,
   void **value_ptr
);
```

STATUS CODES:

ESRCH	The thread specified is invalid.
EINVAL	The thread specified is not a joinable thread.
EDEADLK	A deadlock was detected or thread is the calling thread.

DESCRIPTION:

The pthread_join routine suspends execution of the calling thread until thread terminates. If thread has already terminated, then this routine returns immediately. The value returned by thread (i.e. passed to pthread_exit is returned in value_ptr.

When this routine returns, then thread has been terminated.

NOTES:

The results of multiple simultaneous joins on the same thread is undefined.

If any threads have previously joined with the specified thread, then they will remain joined with that thread. Any subsequent calls to pthread_join on the specified thread will fail.

If value ptr is NULL, then no value is returned.

18.4.26 pthread self - Get Thread ID

CALLING SEQUENCE:

```
#include <pthread.h>
pthread_t pthread_self( void );
```

STATUS CODES:

The value returned is the ID of the calling thread.

DESCRIPTION:

This routine returns the ID of the calling thread.

NOTES:

NONE

18.4. Services 213

18.4.27 pthread equal - Compare Thread IDs

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_equal(
    pthread_t t1,
    pthread_t t2
);
```

STATUS CODES:

zero	The thread ids are not equal.
non-zero	The thread ids are equal.

DESCRIPTION:

The pthread_equal routine is used to compare two thread IDs and determine if they are equal.

NOTES:

The behavior is undefined if the thread IDs are not valid.

18.4.28 pthread_once - Dynamic Package Initialization

CALLING SEQUENCE:

```
#include <pthread.h>
pthread_once_t once_control = PTHREAD_ONCE_INIT;
int pthread_once(
   pthread_once_t *once_control,
   void (*init_routine)(void)
);
```

STATUS CODES:

NONE

DESCRIPTION:

The pthread_once routine is used to provide controlled initialization of variables. The first call to pthread_once by any thread with the same once_control will result in the init_routine being invoked with no arguments. Subsequent calls to pthread_once with the same once_control will have no effect.

The init_routine is guaranteed to have run to completion when this routine returns to the caller.

NOTES:

The behavior of pthread_once is undefined if once_control is automatic storage (i.e. on a task stack) or is not initialized using PTHREAD_ONCE_INIT.

18.4.29 pthread setschedparam - Set Thread Scheduling Parameters

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_setschedparam(
   pthread_t thread,
   int policy,
   struct sched_param *param
);
```

STATUS CODES:

EINVAL	The scheduling parameters indicated by the parameter param is invalid.
EINVAL	The value specified by policy is invalid.
EINVAL	The scheduling policy was SCHED_SPORADIC and the specified replenishment period is
	less than the initial budget.
EINVAL	The scheduling policy was SCHED_SPORADIC and the specified low priority is invalid.

DESCRIPTION:

The pthread_setschedparam routine is used to set the scheduler parameters currently associated with the thread specified by thread to the policy specified by policy. The contents of param are interpreted based upon the policy argument.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4.30 pthread getschedparam - Get Thread Scheduling Parameters

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_getschedparam(
   pthread_t thread,
   int *policy,
   struct sched_param *param

6 );
```

STATUS CODES:

EINVAL	The policy pointer argument is invalid.
EINVAL	The scheduling parameters pointer argument is invalid.
ESRCH	The thread indicated by the parameter thread is invalid.

DESCRIPTION:

The pthread_getschedparam routine is used to obtain the scheduler policy and parameters associated with thread. The current policy and associated parameters values returned in policy and param, respectively.

NOTES:

As required by POSIX, RTEMS defines the feature symbol _POSIX_THREAD_PRIORITY_SCHEDULING to indicate that the family of routines to which this routine belongs is supported.

18.4. Services 215

18.4.31 pthread_getaffinity_np - Get Thread Affinity

CALLING SEQUENCE:

STATUS CODES:

EFAULT	The cpuset pointer argument is invalid.
EINVAL	The cpusetsize does not match the value of affinitysetsize field in the thread
	attribute object.

DESCRIPTION:

The pthread_getaffinity_np routine is used to obtain the affinity.set field from the thread control object associated with the id. The value of this field is returned in cpuset.

NOTES:

NONE

18.4.32 pthread_setaffinity_np - Set Thread Affinity

CALLING SEQUENCE:

STATUS CODES:

EFAULT	The cpuset pointer argument is invalid.
EINVAL	The cpusetsize does not match the value of affinitysetsize field in the thread
	attribute object.
EINVAL	The cpuset did not select a valid cpu.
EINVAL	The cpuset selected a cpu that was invalid.

DESCRIPTION:

The pthread_setaffinity_np routine is used to set the affinityset field of the thread object id. The value of this field is returned in cpuset

NOTES:

NONE

CHAPTER

NINETEEN

KEY MANAGER

19.1 Introduction

The key manager allows for the creation and deletion of Data keys specific to threads.

The directives provided by the key manager are:

- pthread_key_create (page 221) Create Thread Specific Data Key
- pthread_key_delete (page 221) Delete Thread Specific Data Key
- pthread_setspecific (page 222) Set Thread Specific Key Value
- pthread getspecific (page 222) Get Thread Specific Key Value

19.2 Background

There is currently no text in this section.

19.2. Background 219

19.3 Operations

There is currently no text in this section.

19.4 Directives

This section details the key manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

19.4.1 pthread key create - Create Thread Specific Data Key

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_key_create(
    pthread_key_t *key,
    void (*destructor)( void )

);
```

STATUS CODES:

EAGAIN	There were not enough resources available to create another key.
ENOMEM	Insufficient memory exists to create the key.

DESCRIPTION

The pthread_key_create() function shall create a thread-specific data key visible to all threads in the process. Key values provided by pthread_key_create() are opaque objects used to locate thread-specific data. Although the same key value may be used by different threads, the values bound to the key by pthread_setspecific() are maintained on a per-thread basis and persist for the life of the calling thread.

Upon key creation, the value NULL shall be associated with the new key in all active threads. Upon thread creation, the value NULL shall be associated with all defined keys in the new thread.

NOTES

An optional destructor function may be associated with each key value. At thread exit, if a key value has a non-NULL destructor pointer, and the thread has a non-NULL value associated with that key, the value of the key is set to NULL, and then the function pointed to is called with the previously associated value as its sole argument. The order of destructor calls is unspecified if more than one destructor exists for a thread when it exits.

19.4.2 pthread key delete - Delete Thread Specific Data Key

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_key_delete(
    pthread_key_t key
4);
```

STATUS CODES:

EINVAL | The key was invalid

19.4. Directives 221

DESCRIPTION:

The pthread_key_delete() function shall delete a thread-specific data key previously returned by pthread_key_create(). The thread-specific data values associated with key need not be NULL at the time pthread_key_delete() is called. It is the responsibility of the application to free any application storage or perform any cleanup actions for data structures related to the deleted key or associated thread-specific data in any threads; this cleanup can be done either before or after pthread_key_delete() is called. Any attempt to use key following the call to pthread_key_delete() results in undefined behavior.

NOTES:

The pthread_key_delete() function shall be callable from within destructor functions. No destructor functions shall be invoked by pthread_key_delete(). Any destructor function that may have been associated with key shall no longer be called upon thread exit.

19.4.3 pthread setspecific - Set Thread Specific Key Value

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_setspecific(
   pthread_key_t key,
   const void *value

);
```

STATUS CODES:

DESCRIPTION:

The pthread_setspecific() function shall associate a thread-specific value with a key obtained via a previous call to pthread_key_create(). Different threads may bind different values to the same key. These values are typically pointers to blocks of dynamically allocated memory that have been reserved for use by the calling thread.

NOTES:

The effect of calling pthread_setspecific() with a key value not obtained from pthread_key_create() or after key has been deleted with pthread_key_delete() is undefined.

pthread_setspecific() may be called from a thread-specific data destructor function. Calling pthread_setspecific() from a thread-specific data destructor routine may result either in lost storage (after at least PTHREAD_DESTRUCTOR_ITERATIONS attempts at destruction) or in an infinite loop.

19.4.4 pthread getspecific - Get Thread Specific Key Value

CALLING SEQUENCE:

(continued from previous page)

```
pthread_key_t key
);
```

STATUS CODES:

NULL	There is no thread-specific data associated with the specified key.
non-NULL	The data associated with the specified key.

DESCRIPTION:

The pthread_getspecific() function shall return the value currently bound to the specified key on behalf of the calling thread.

NOTES:

The effect of calling pthread_getspecific() with a key value not obtained from pthread_key_create() or after key has been deleted with pthread_key_delete() is undefined.

pthread_getspecific() may be called from a thread-specific data destructor function. A call to pthread_getspecific() for the thread-specific data key being destroyed shall return the value NULL, unless the value is changed (after the destructor starts) by a call to pthread_setspecific().

19.4. Directives

RTEMS POSIX API Guide, Release 5.0.0-m2005-1	(02 2nd May 2020)	Chapter 19 Section 19.4

CHAPTER

TWENTY

THREAD CANCELLATION MANAGER

20.1 Introduction

The thread cancellation manager is ...

The directives provided by the thread cancellation manager are:

- pthread cancel (page 229) Cancel Execution of a Thread
- pthread_setcancelstate (page 229) Set Cancelability State
- pthread_setcanceltype (page 229) Set Cancelability Type
- pthread testcancel (page 230) Create Cancellation Point
- pthread cleanup push (page 230) Establish Cancellation Handler
- pthread_cleanup_pop (page 230) Remove Cancellation Handler

20.2 Background

There is currently no text in this section.

20.2. Background 227

20.3 Operations

There is currently no text in this section.

20.4 Directives

This section details the thread cancellation manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

20.4.1 pthread cancel - Cancel Execution of a Thread

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_cancel(
    pthread_t thread
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

20.4.2 pthread_setcancelstate - Set Cancelability State

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_setcancelstate(
    int state,
    int *oldstate
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

20.4.3 pthread_setcanceltype - Set Cancelability Type

CALLING SEQUENCE:

```
#include <pthread.h>
int pthread_setcanceltype(
    int type,
    int *oldtype

5);
```

20.4. Directives

CTAT	TIC	α	DEC.
STAT	U.S	w	DES:

E The

DESCRIPTION:

NOTES:

20.4.4 pthread_testcancel - Create Cancellation Point

CALLING SEQUENCE:

```
#include <pthread.h>
void pthread_testcancel(
    void
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

20.4.5 pthread_cleanup_push - Establish Cancellation Handler

CALLING SEQUENCE:

```
#include <pthread.h>
void pthread_cleanup_push(
    void (*routine)(void*),
    void *arg
);
```

STATUS CODES:

E The

DESCRIPTION:

NOTES:

20.4.6 pthread_cleanup_pop - Remove Cancellation Handler

CALLING SEQUENCE:

```
#include <pthread.h>
void pthread_cleanup_pop(
int execute
);
```

Chapter 20 Section 20.4	RTEMS POSIX	API Guide,	Release 5	.0.0-m2005-1	(02 2nd	May 2020)
STATUS CODES:						
		E The	!			
DESCRIPTION:						
NOTES:						

20.4. Directives 231



CHAPTER

TWENTYONE

SERVICES PROVIDED BY C LIBRARY (LIBC)

21.1 Introduction

This section lists the routines that provided by the Newlib C Library.

21.2 Standard Utility Functions (stdlib.h)

- abort Abnormal termination of a program
- abs Integer absolute value (magnitude)
- · assert Macro for Debugging Diagnostics
- atexit Request execution of functions at program exit
- atof String to double or float
- atoi String to integer
- bsearch Binary search
- calloc Allocate space for arrays
- div Divide two integers
- ecvtbuf Double or float to string of digits
- ecvt Double or float to string of digits (malloc result)
- __env_lock Lock environment list for getenv and setenv
- gvcvt Format double or float as string
- exit End program execution
- getenv Look up environment variable
- labs Long integer absolute value (magnitude)
- 1div Divide two long integers
- malloc Allocate memory
- realloc Reallocate memory
- free Free previously allocated memory
- mallinfo Get information about allocated memory
- __malloc_lock Lock memory pool for malloc and free
- mbstowcs Minimal multibyte string to wide string converter
- mblen Minimal multibyte length
- mbtowc Minimal multibyte to wide character converter
- qsort Sort an array
- rand Pseudo-random numbers
- strtod String to double or float
- strtol String to long
- strtoul String to unsigned long
- system Execute command string
- wcstombs Minimal wide string to multibyte string converter
- · wctomb Minimal wide character to multibyte converter

21.3 Character Type Macros and Functions (ctype.h)

- isalnum Alphanumeric character predicate
- isalpha Alphabetic character predicate
- isascii ASCII character predicate
- iscntrl Control character predicate
- isdigit Decimal digit predicate
- islower Lower-case character predicate
- isprint Printable character predicates (isprint, isgraph)
- ispunct Punctuation character predicate
- isspace Whitespace character predicate
- isupper Uppercase character predicate
- isxdigit Hexadecimal digit predicate
- toascii Force integers to ASCII range
- tolower Translate characters to lower case
- toupper Translate characters to upper case

21.4 Input and Output (stdio.h)

- clearerr Clear file or stream error indicator
- fclose Close a file
- feof Test for end of file
- ferror Test whether read/write error has occurred
- fflush Flush buffered file output
- fgetc Get a character from a file or stream
- fgetpos Record position in a stream or file
- fgets Get character string from a file or stream
- fiprintf Write formatted output to file (integer only)
- fopen Open a file
- fdopen Turn an open file into a stream
- fputc Write a character on a stream or file
- fputs Write a character string in a file or stream
- fread Read array elements from a file
- freopen Open a file using an existing file descriptor
- fseek Set file position
- fsetpos Restore position of a stream or file
- ftell Return position in a stream or file
- fwrite Write array elements from memory to a file or stream
- getc Get a character from a file or stream (macro)
- getchar Get a character from standard input (macro)
- gets Get character string from standard input (obsolete)
- iprintf Write formatted output (integer only)
- mktemp Generate unused file name
- perror Print an error message on standard error
- putc Write a character on a stream or file (macro)
- putchar Write a character on standard output (macro)
- puts Write a character string on standard output
- remove Delete a file's name
- rename Rename a file
- rewind Reinitialize a file or stream
- setbuf Specify full buffering for a file or stream
- setvbuf Specify buffering for a file or stream

- siprintf Write formatted output (integer only)
- printf Write formatted output
- scanf Scan and format input
- tmpfile Create a temporary file
- tmpnam Generate name for a temporary file
- vprintf Format variable argument list

21.5 Strings and Memory (string.h)

 
- bcmp Compare two memory areas
- bcopy Copy memory regions
- bzero Initialize memory to zero
- index Search for character in string
- memchr Find character in memory
- memcmp Compare two memory areas
- memcpy Copy memory regions
- memmove Move possibly overlapping memory
- memset Set an area of memory
- rindex Reverse search for character in string
- strcasecmp Compare strings ignoring case
- strcat Concatenate strings
- strchr Search for character in string
- strcmp Character string compare
- strcoll Locale specific character string compare
- strcpy Copy string
- strcspn Count chars not in string
- strerror Convert error number to string
- strlen Character string length
- strlwr Convert string to lower case
- strncasecmp Compare strings ignoring case
- strncat Concatenate strings
- strncmp Character string compare
- strncpy Counted copy string
- strpbrk Find chars in string
- strrchr Reverse search for character in string
- strspn Find initial match
- strstr Find string segment
- strtok Get next token from a string
- strupr Convert string to upper case
- strxfrm Transform string

21.6 Signal Handling (signal.h)

- raise Send a signal
- signal Specify handler subroutine for a signal

21.7 Time Functions (time.h)

- asctime Format time as string
- clock Cumulative processor time
- ctime Convert time to local and format as string
- difftime Subtract two times
- gmtime Convert time to UTC (GMT) traditional representation
- localtime Convert time to local representation
- mktime Convert time to arithmetic representation
- strftime Flexible calendar time formatter
- time Get current calendar time (as single number)



• setlocale - Select or query locale

21.9 Reentrant Versions of Functions

- Equivalent for errno variable: errno_r XXX
- Locale functions:
 - localeconv_r XXX
 - setlocale_r XXX
- Equivalents for stdio variables:
 - stdin_r XXX
 - stdout_r XXX
 - stderr_r XXX
- Stdio functions:
 - fdopen_r XXX
 - perror_r XXX
 - tempnam_r XXX
 - fopen_r XXX
 - putchar_r XXX
 - tmpnam_r XXX
 - getchar_r XXX
 - puts_r XXX
 - tmpfile_r XXX
 - gets_r XXX
 - remove_r XXX
 - vfprintf_r XXX
 - iprintf_r XXX
 - rename_r XXX
 - vsnprintf_r XXX
 - mkstemp_r XXX
 - snprintf_r XXX
 - vsprintf_r XXX
 - mktemp_t XXX
 - sprintf_r XXX
- Signal functions:
 - init_signal_r XXX
 - signal_r XXX
 - kill_r XXX

- _sigtramp_r XXX
- raise_r XXX
- Stdlib functions:
 - calloc_r XXX
 - mblen_r XXX
 - srand_r XXX
 - dtoa_r XXX
 - mbstowcs_r XXX
 - strtod_r XXX
 - free_r XXX
 - mbtowc_r XXX
 - strtol_r XXX
 - getenv_r XXX
 - memalign_r XXX
 - strtoul_r XXX
 - mallinfo_r XXX
 - mstats_r XXX
 - system_r XXX
 - malloc_r XXX
 - rand_r XXX
 - wcstombs_r XXX
 - malloc_r XXX
 - realloc_r XXX
 - wctomb_r XXX
 - malloc_stats_r XXX
 - setenv_r XXX
- String functions:
 - strtok_r XXX
- System functions:
 - close_r XXX
 - link_r XXX
 - unlink_r XXX
 - execve_r XXX
 - lseek_r XXX

- wait_r XXX
- fcntl_r XXX
- open_r XXX
- write_r XXX
- fork_r XXX
- read_r XXX
- fstat_r XXX
- sbrk_r XXX
- $gettimeofday_r XXX$
- stat_r XXX
- getpid_r XXX
- times_r XXX
- Time function:
 - asctime_r XXX

21.10 Miscellaneous Macros and Functions

• unctrl - Return printable representation of a character

21.11 Variable Argument Lists

- Stdarg (stdarg.h):
 - va_start XXX
 - va_arg XXX
 - va_end XXX
- Vararg (varargs.h):
 - va_alist XXX
 - va_start-trad XXX
 - va_arg-trad XXX
 - $m{-}$ va_end-trad XXX

 
21.12 Reentrant System Calls

- open_r XXX
- close_r XXX
- lseek_r XXX
- read_r XXX
- write_r XXX
- fork_r XXX
- wait_r XXX
- \bullet stat_r XXX
- fstat_r XXX
- $link_r XXX$
- \bullet unlink_r XXX
- sbrk_r XXX

CHAPTER

TWENTYTWO

SERVICES PROVIDED BY THE MATH LIBRARY (LIBM)



This section lists the routines that provided by the Newlib Math Library (libm).

22.2 Standard Math Functions (math.h)

- acos Arccosine
- acosh Inverse hyperbolic cosine
- asin Arcsine
- asinh Inverse hyperbolic sine
- atan Arctangent
- atan2 Arctangent of y/x
- atanh Inverse hyperbolic tangent
- jN Bessel functions (jN and yN)
- cbrt Cube root
- copysign Sign of Y and magnitude of X
- cosh Hyperbolic cosine
- erf Error function (erf and erfc)
- exp Exponential
- expm1 Exponential of x and 1
- fabs Absolute value (magnitude)
- floor Floor and ceiling (floor and ceil)
- fmod Floating-point remainder (modulo)
- frexp Split floating-point number
- gamma Logarithmic gamma function
- hypot Distance from origin
- ilogb Get exponent
- infinity Floating infinity
- isnan Check type of number
- ldexp Load exponent
- log Natural logarithms
- log10 Base 10 logarithms
- log1p Log of 1 + X
- matherr Modifiable math error handler
- modf Split fractional and integer parts
- nan Floating Not a Number
- nextafter Get next representable number
- pow X to the power Y
- remainder remainder of X divided by Y

- scalbn scalbn
- sin Sine or cosine (sin and cos)
- sinh Hyperbolic sine
- sqrt Positive square root
- tan Tangent
- tanh Hyperbolic tangent

CHAPTER

TWENTYTHREE

DEVICE CONTROL

23.1 Introduction

The POSIX Device Control API is defined by POSIX 1003.26 and attempts to provides a portable alternative to the ioctl() service which is not standardized across POSIX implementations. Support for this standard is required by the Open Group's FACE Technical Standard :cits:"FACE:2012:FTS". Unfortunately, this part of the POSIX standard is not widely implemented.

The services provided by the timer manager are:

• posix_devctl_ - Control a Device

23.2 Background

23.2. Background 255

23.3 Operations

23.4 System Calls

This section details the POSIX device control's services. A subsection is dedicated to each of this manager's services and describes the calling sequence, related constants, usage, and status codes.

23.4.1 posix devctl - Control a Device

CALLING SEQUENCE:

STATUS CODES:

The status codes returned reflect those returned by the ioctl() service and the underlying device drivers.

DESCRIPTION:

This method is intended to be a portable alternative to the ioctl() method. The RTEMS implementation follows what is referred to as a library implementation which is a simple wrapper for the ioctl() method. The fd, fcmd, dev_data_ptr, and nbyte parameters are passed unmodified to the ioctl() method.

If the dev_info_ptr parameter is not NULL, then the location pointed to by dev_info_ptr is set to 0.

NOTES:

NONE

23.4. System Calls

RTEMS POSIX API Guide, Release 5.0.0-m2005-1	(02 2nd May 2020)	Chapter 23 Section 23.4

STATUS OF IMPLEMENTATION

This chapter provides an overview of the status of the implementation of the POSIX API for RTEMS. The *POSIX 1003.1b Compliance Guide* provides more detailed information regarding the implementation of each of the numerous functions, constants, and macros specified by the POSIX 1003.1b standard.

RTEMS supports many of the process and user/group oriented services in a "single user/single process" manner. This means that although these services may be of limited usefulness or functionality, they are provided and do work in a coherent manner. This is significant when porting existing code from UNIX to RTEMS.

- Implementation
 - The current implementation of dup() is insufficient.
 - FIFOs mkfifo() are not currently implemented.
 - Asynchronous IO is not implemented.
 - The flockfile() family is not implemented
 - getc/putc unlocked family is not implemented
 - Mapped Memory is partially implemented
 - NOTES:
 - * For Shared Memory and Mapped Memory services, it is unclear what level of support is appropriate and possible for RTEMS.
- Functional Testing
 - Tests for unimplemented services
- Performance Testing
 - There are no POSIX Performance Tests.
- Documentation
 - Many of the service description pages are not complete in this manual. These need to be completed and information added to the background and operations sections.
 - Example programs (not just tests) would be very nice.

RTEMS POSIX API Guide, F	Release 5.0.0-m2005-1	(02 2nd May 2020)	Chapter 24 Section 24.0

CHAPTER

TWENTYFIVE

COMMAND AND VARIABLE INDEX



INDEX

Symbols	check permissions for a file, 64
_exit, 13	chmod, 64
A	chown, 67
	clock_getres, 172 clock_gettime, 171
access, 64	clock_settime, 171
acquire ownership of file stream, 106 add a signal to a signal set, 19	close, 78
aio_cancel, 88	close a message queue, 188
aio_error, 88	close a named semaphore, 127
aio_fsync, 89	closedir, 52
aio_read, 86	closes a file., 78
aio_return, 88	compare thread ids, 214
aio_suspend, 89	creat, 56
aio_write, 87	create a directory, 71
alarm, 28, 29	create a new file or rewrite an existing
asctime_r, 109	one, 56
associate stream with file descriptor, 105	create a process, 9 create a thread, 209
asynchronous file synchronization, 89	create an inter, 77
asynchronous read, 86	create cancellation point, 230
asynchronous write, 87	create session and set process group id,
	39
В	creates a link to a file, 57
broadcast a condition variable, 149	creates a symbolic link to a file, 58
С	ctermid, 41
cancel asynchronous i/o request, 88	ctime_r, 110
cancel execution of a thread, 229	D
cfgetispeed, 95	delay process execution, 172
cfgetospeed, 95	delay with high resolution, 173
cfsetispeed, 96	delete a directory, 61
cfsetospeed, 96	delete a signal from a signal set, 19
change access and/or modification times	destroy a condition variable, 148
of an inode, 67	destroy a condition variable attribute
change memory protection, 158 changes file mode., 64	set, 147 destroy a mutex, 139
changes rise mode., 04 changes permissions of a file, 65	destroy a mutex, 139 destroy a mutex attribute set, 135
changes the current working directory, 53	destroy a thread attribute set, 200
changes the owner and/or group of a file.,	destroy an unnamed semaphore, 125
67	detach a thread, 211
chdir, 53	

determine if file descriptor is terminal,	get detach state, 201
42	get directory entries, 66
determine terminal device name, 41	get effective group id, 36
discards terminal data, 98	get effective user id, 36
dup, 77	get environment variables, 40
dup2, 78	get group file entry for id, 117
duplicates an open file descriptor, 77, 78	get group file entry for name, 117
dynamic package initialization, 214	get inherit scheduler flag, 206
dynamically set the priority ceiling, 141	get maximum priority value, 165
Г	get message queue attributes, 192
E	get minimum priority value, 165
empty a signal set, 20	get parent process id, 35
ends directory read operation, 52	get password file entry for uid, 118
establish cancellation handler, 230	get process group id, 38
examine and change process blocked	get process id, 35
signals, 23	get process shared attribute, 148
examine and change signal action, 21	get process times, 40
examine and change thread blocked	get real group id, 36
signals, 23	get scheduling parameters, 208
examine pending signals, 25	get scheduling policy, 207
execl, 9	get supplementary group ids, 37
execle, 10	get system name, 39
execlp, 11	get the blocking protocol, 136
execute a file, 9-11	get the current priority ceiling, 141
execv, 9	get the priority ceiling, 137
execve, 10	get the time of day, 173
execvp, 11	get the value of a semaphore, 130
F	get the visibility, 138
F	get thread attributes, 212
fchdir, 53	get thread id, 213
fchmod, 65	get thread scheduling parameters, 215
fcntl, 80	get thread scheduling scope, 204
fdatasync, 83	get thread stack address, 203
fdopen, 105	get thread stack size, 202
fileno, 105	get time in seconds, 174
fill a signal set, 20	get timeslicing quantum, 166
flockfile, 106	get user id, 35
fork, 9	get user name, 38
fpathconf, 70	getc_unlocked, 106
fstat, 63	getchar_unlocked, 107
fsync, 82	getcwd, 54
ftruncate, 68	getdents, 66
ftrylockfile, 106	getegid, 36
funlockfile, 106	getenv, 40
	geteuid, 36
G	getgid, 36
generate terminal pathname, 41	getgrgid, 117
get character from stdin without locking,	getgrgid_r, 117
107	getgrnam, 117
get character without locking, 106	getgrnam_r, 118
get clock resolution, 172	getgroups, 37
get configurable system variables, 43	

getlogin, 38 getlogin_r, 38 getpgrp, 38 getpgrp, 35 getppid, 35 getpwnam, 119 getpwnam_r, 119 getpwuid, 118 getpwuid_r, 119 gets configuration values for files, 69,	makes a fifo special file, 60 manipulates an open file descriptor, 80 map process addresses to a memory object,
gets foreground process group id, 99 gets information about a file, 62	mount, 84 mount a file system, 84
gets terminal attributes, 97	mprotect, 158
gettimeofday, 173 getuid, 35	mq_attr, 183 mq_close, 188
gmtime_r, 110	mq_getattr, 192
I	mq_notify, 191 mq_open, 187
initialize a condition variable, 148	mq_receive, 190
initialize a condition variable attribute set, 147	mq_send, 189 mq_setattr, 192
initialize a mutex, 138	mq_unlink, 188
initialize a mutex attribute set, 135	mqd_t, 183
initialize a thread attribute set, 200	msync, 158
initialize an unnamed semaphore, 125 initialize time conversion information,	munlock, 156
109	munlockall, 155 munmap, 157
is signal a member of a signal set, 20 isatty, 42	N
К	nanosleep, 173
	non, 108, 128
kill, 24	notify process that a message is available, 191
L	
link, 57	0
lio_listio, 87	obtain file descriptor number for this
list directed i/o, 87	file, 105
localtime_r, 110 lock a mutex, 139	obtain the name of a symbolic link
lock a mutex with timeout, 140	destination, 58 obtain thread concurrency, 211, 212
lock a range of the process address space, 155	obtain time and concurrency, 211, 212 obtain time of day, 171 open, 54
lock the address space of a process, 155	open a directory, 50
longjmp, 108	open a message queue, 187
lseek, 82	open a named semaphore, 126
lstat, 63	open a shared memory object, 159
M	opendir, 50
makes a directory 59	opens a file, 54

P	pthread_mutex_setprioceiling, 141
password file entry for name, 119	pthread_mutex_timedlock, 140
pathconf, 69	pthread_mutex_trylock, 140
pause, 25	pthread_mutex_unlock, 141
pipe, 77	pthread_mutexattr_destroy, 135
poll to acquire ownership of file stream,	pthread_mutexattr_getprioceiling, 137
106	pthread_mutexattr_getprotocol, 136
poll to lock a mutex, 140	pthread_mutexattr_getpshared, 138
pthread_atfork, 12	pthread_mutexattr_init, 135
pthread_attr_destroy, 200	pthread_mutexattr_setprioceiling, 137
pthread_attr_getdetachstate, 201	pthread_mutexattr_setprotocol, 136
pthread_attr_getinheritsched, 206	pthread_mutexattr_setpshared, 138
	pthread_once, 214
pthread_attr_getschedparam, 208	pthread_self, 213
pthread_attr_getschedpolicy, 207	pthread_setcancelstate, 229
pthread_attr_getscope, 204	pthread_setcanceltype, 229
pthread_attr_getstackaddr, 203	pthread_setconcurrency, 212
pthread_attr_getstacksize, 202	pthread_setschedparam, 214
pthread_attr_init, 200	pthread_sigmask, 23
pthread_attr_setdetachstate, 201	pthread_testcancel, 230
pthread_attr_setinheritsched, 205	
pthread_attr_setschedparam, 207	put character to stdin without locking, 107
pthread_attr_setschedpolicy, 206	
pthread_attr_setscope, 204	put character without locking, 107
pthread_attr_setstackaddr, 203	putc_unlocked, 107
pthread_attr_setstacksize, 202	putchar_unlocked, 107
pthread_cancel, 229	Q
pthread_cleanup_pop, 230	queue a signal to a process, 27
pthread_cleanup_push, 230	queue a signal to a process, 27
pthread_cond_broadcast, 149	R
pthread_cond_destroy, 148	rand_r, 111
pthread_cond_init, 148	read, 79
pthread_cond_signal, 149	readdir, 50
pthread_cond_timedwait, 150	readlink, 58
pthread_cond_wait, 150	reads a directory, 50
pthread_condattr_destroy, 147	reads from a file, 79
pthread_condattr_getpshared, 148	reads terminal input baud rate, 95
pthread_condattr_init, 147	reads terminal output baud rate, 95
pthread_condattr_setpshared, 147	ready, 85
pthread_create, 209	
pthread_detach, 211	receive a message from a message queue, 190
pthread_equal, 214	
pthread_exit, 210	reentrant, 38
pthread_getattr_np, 212	reentrant determine terminal device name,
pthread_getconcurrency, 211	42
pthread_getschedparam, 215	reentrant extract token from string, 109
pthread_join, 213	reentrant get group file entry, 117
pthread_kill, 22	reentrant get group file entry for name,
pthread_mutex_destroy, 139	118
pthread_mutex_getprioceiling, 141	reentrant get password file entry for
	110
pthread_mutex_init, 138	name, 119 reentrant get password file entry for uid,

reentrant get user name, 38	send a signal to a process, 24
reentrant local time conversion, 110	send a signal to a thread, 22
reentrant random number generation, 111	sends a break to a terminal, 97
reentrant struct tm to ascii time	set cancelability state, 229
conversion, 109	set cancelability type, 229
reentrant time_t to ascii time	set detach state, 201
conversion, 110	set environment variables, 41
reentrant utc time conversion, 110	set group id, 37
register fork handlers, 12	set inherit scheduler flag, 205
release ownership of file stream, 106	set message queue attributes, 192
remove a message queue, 188	set process group id for job control, 39
remove a shared memory object, 159	set process shared attribute, 147
remove cancellation handler, 230	set scheduling parameters, 207
removes a directory entry, 60	set scheduling policy, 206
rename, 61	set terminal attributes, 97
renames a file, 61	set the blocking protocol, 136
reposition read/write file offset, 82	set the current locale, 105
resets the readdir() pointer, 51	set the priority ceiling, 137
retrieve error status of asynchronous i/o	set the visibility, 138
operation, 88	set thread scheduling parameters, 214
retrieve return status asynchronous i/o	set thread scheduling scope, 204
operation, 88	set thread stack address, 203
return current location in directory	-
stream, 52	set time of day, 171
rewinddir, 51	set user id, 37
rmdir, 61	setenv, 41
	setgid, 37
S	setjmp, 108
save context for non, 108	setlocale, 105
save context with signal status for non,	setpgid, 39
108	sets a file creation mask., 56
scan a directory for matching entries, 51	sets foreground process group id, 99
scandir, 51	sets terminal input baud rate, 96
<pre>sched_get_priority_max, 165</pre>	sets terminal output baud rate, 96
<pre>sched_get_priority_min, 165</pre>	setsid, 39
sched_rr_get_interval, 166	setuid, 37
sched_yield, 166	shm_open, 159
schedule alarm, 28	shm_unlink, 159
schedule alarm in microseonds, 29	sigaction, 21
sem_close, 127	sigaddset, 19
sem_destroy, 125	sigdelset, 19
sem_getvalue, 130	sigemptyset, 20
sem_init, 125	sigfillset, 20
sem_open, 126	sigismember, 20
sem_post, 129	siglongjmp, 108
sem_t, 123	signal a condition variable, 149
sem_timedwait, 129	sigpending, 25
sem_trywait, 128	sigprocmask, 23
sem_unlink, 127	sigqueue, 27
sem_wait, 128	sigsetjmp, 108
send a message to a message queue, 189	sigsuspend, 25

```
sigtimedwait, 27
                                            usecs delay process execution, 172
sigwait, 26
                                            usleep, 172
sigwaitinfo, 26
                                            utime, 67
sleep, 172
stat, 62
                                            vectored read from a file, 85
strtok_r, 109
                                            vectored write to a file, 86
suspend process execution, 25
suspends/restarts terminal output., 99
                                            W
symlink, 58
                                            wait, 12
sync, 84
                                            wait for a signal, 25
synchronize file complete in, 82
                                            wait for asynchronous i/o request, 89
synchronize file in, 83
                                            wait for process termination, 12
synchronize file systems, 84
                                            wait for thread termination, 213
synchronously accept a signal, 26
                                     with wait on a condition variable, 150
synchronously
                accept a signal
                                            wait on a semaphore, 128
       timeout, 27
                                            wait on a semaphore for a specified time,
sysconf, 43
                                                   129
Т
                                            wait with timeout a condition variable,
tcdrain, 98
                                                   150
tcflow, 99
                                            waitpid, 12
tcflush, 98
                                            waits for all output to be transmitted to
tcgetattr, 97
                                                   the terminal., 98
tcgetpgrp, 99
                                            write, 80
tcsendbreak, 97
                                            writes to a file, 80
tcsetattr, 97
                                            writev, 86
tcsetpgrp, 99
                                            Υ
telldir, 52
terminate a process, 13
                                            yield the processor, 166
terminate the current thread, 210
time, 174
times, 40
truncate, 68
truncate a file to a specified length, 68
ttyname, 41
ttyname_r, 42
tzset, 109
U
umask, 56
uname, 39
unlink, 60
unlink a semaphore, 127
unlock a mutex, 141
unlock a range of the process address
       space, 156
unlock a semaphore, 129
unlock the address space of a process, 155
unmap previously mapped addresses, 157
unmount, 85
unmount file systems, 85
usecs alarm, 29
```