



# RTEMS Classic API Guide

*Release 5.1-rc2 (14th August 2020)*

© 1988, 2020 RTEMS Project and contributors



# CONTENTS

<b>1</b>	<b>Preface</b>	<b>3</b>
<b>2</b>	<b>Overview</b>	<b>7</b>
2.1	Introduction . . . . .	8
2.2	Real-time Application Systems . . . . .	9
2.3	Real-time Executive . . . . .	10
2.4	RTEMS Application Architecture . . . . .	11
2.5	RTEMS Internal Architecture . . . . .	12
2.6	User Customization and Extensibility . . . . .	14
2.7	Portability . . . . .	15
2.8	Memory Requirements . . . . .	16
2.9	Audience . . . . .	17
2.10	Conventions . . . . .	18
2.11	Manual Organization . . . . .	19
<b>3</b>	<b>Key Concepts</b>	<b>23</b>
3.1	Introduction . . . . .	24
3.2	Objects . . . . .	25
3.2.1	Object Names . . . . .	25
3.2.2	Object IDs . . . . .	26
3.2.2.1	Object ID Format . . . . .	26
3.2.3	Object ID Description . . . . .	26
3.3	Communication and Synchronization . . . . .	28
3.4	Locking Protocols . . . . .	29
3.4.1	Priority Inversion . . . . .	29
3.4.2	Immediate Ceiling Priority Protocol (ICPP) . . . . .	29
3.4.3	Priority Inheritance Protocol . . . . .	30
3.4.4	Multiprocessor Resource Sharing Protocol (MrsP) . . . . .	30
3.4.5	O(m) Independence-Preserving Protocol (OMIP) . . . . .	30
3.5	Thread Queues . . . . .	31
3.6	Time . . . . .	32
3.7	Timer and Timeouts . . . . .	33
3.8	Memory Management . . . . .	34
<b>4</b>	<b>RTEMS Data Types</b>	<b>35</b>
4.1	Introduction . . . . .	36
4.2	List of Data Types . . . . .	37

<b>5</b>	<b>Scheduling Concepts</b>	<b>41</b>
5.1	Introduction	42
5.1.1	Scheduling Algorithms	42
5.1.2	Priority Scheduling	43
5.2	Uniprocessor Schedulers	44
5.2.1	Deterministic Priority Scheduler	44
5.2.2	Simple Priority Scheduler	44
5.2.3	Earliest Deadline First Scheduler	44
5.2.4	Constant Bandwidth Server Scheduling (CBS)	45
5.3	SMP Schedulers	46
5.3.1	Earliest Deadline First SMP Scheduler	46
5.3.2	Deterministic Priority SMP Scheduler	46
5.3.3	Simple Priority SMP Scheduler	46
5.3.4	Arbitrary Processor Affinity Priority SMP Scheduler	46
5.4	Scheduling Modification Mechanisms	47
5.4.1	Task Priority and Scheduling	47
5.4.2	Preemption	47
5.4.3	Timeslicing	47
5.4.4	Manual Round-Robin	48
5.5	Dispatching Tasks	49
5.6	Task State Transitions	50
5.7	Directives	53
5.7.1	SCHEDULER_IDENT - Get ID of a scheduler	54
5.7.2	SCHEDULER_IDENT_BY_PROCESSOR - Get ID of a scheduler by processor	55
5.7.3	SCHEDULER_IDENT_BY_PROCESSOR_SET - Get ID of a scheduler by processor set	56
5.7.4	SCHEDULER_GET_MAXIMUM_PRIORITY - Get maximum task priority of a scheduler	57
5.7.5	SCHEDULER_MAP_PRIORITY_TO_POSIX - Map task priority to POSIX thread priority	58
5.7.6	SCHEDULER_MAP_PRIORITY_FROM_POSIX - Map POSIX thread priority to task priority	59
5.7.7	SCHEDULER_GET_PROCESSOR - Get current processor index	60
5.7.8	SCHEDULER_GET_PROCESSOR_MAXIMUM - Get processor maximum	61
5.7.9	SCHEDULER_GET_PROCESSOR_SET - Get processor set of a scheduler	62
5.7.10	SCHEDULER_ADD_PROCESSOR - Add processor to a scheduler	63
5.7.11	SCHEDULER_REMOVE_PROCESSOR - Remove processor from a scheduler	64
<b>6</b>	<b>Initialization Manager</b>	<b>65</b>
6.1	Introduction	66
6.2	Background	67
6.2.1	Initialization Tasks	67
6.2.2	The Idle Task	67
6.2.3	Initialization Manager Failure	67
6.3	Operations	68
6.3.1	Initializing RTEMS	68
6.3.2	Global Construction	72
6.4	Directives	74
6.4.1	INITIALIZE_EXECUTIVE - Initialize RTEMS	75
<b>7</b>	<b>Task Manager</b>	<b>77</b>

7.1	Introduction . . . . .	78
7.2	Background . . . . .	79
	7.2.1 Task Definition . . . . .	79
	7.2.2 Task Control Block . . . . .	79
	7.2.3 Task Memory . . . . .	79
	7.2.4 Task Name . . . . .	80
	7.2.5 Task States . . . . .	80
	7.2.6 Task Priority . . . . .	80
	7.2.7 Task Mode . . . . .	81
	7.2.8 Accessing Task Arguments . . . . .	82
	7.2.9 Floating Point Considerations . . . . .	82
	7.2.10 Building a Task Attribute Set . . . . .	83
	7.2.11 Building a Mode and Mask . . . . .	83
7.3	Operations . . . . .	85
	7.3.1 Creating Tasks . . . . .	85
	7.3.2 Obtaining Task IDs . . . . .	85
	7.3.3 Starting and Restarting Tasks . . . . .	85
	7.3.4 Suspending and Resuming Tasks . . . . .	85
	7.3.5 Delaying the Currently Executing Task . . . . .	86
	7.3.6 Changing Task Priority . . . . .	86
	7.3.7 Changing Task Mode . . . . .	86
	7.3.8 Task Deletion . . . . .	86
	7.3.9 Setting Affinity to a Single Processor . . . . .	87
	7.3.10 Transition Advice for Removed Notepads . . . . .	87
	7.3.11 Transition Advice for Removed Task Variables . . . . .	87
7.4	Directives . . . . .	88
	7.4.1 TASK_CREATE - Create a task . . . . .	89
	7.4.2 TASK_IDENT - Get ID of a task . . . . .	91
	7.4.3 TASK_SELF - Obtain ID of caller . . . . .	92
	7.4.4 TASK_START - Start a task . . . . .	93
	7.4.5 TASK_RESTART - Restart a task . . . . .	94
	7.4.6 TASK_DELETE - Delete a task . . . . .	95
	7.4.7 TASK_EXIT - Delete the calling task . . . . .	96
	7.4.8 TASK_SUSPEND - Suspend a task . . . . .	97
	7.4.9 TASK_RESUME - Resume a task . . . . .	98
	7.4.10 TASK_IS_SUSPENDED - Determine if a task is Suspended . . . . .	99
	7.4.11 TASK_SET_PRIORITY - Set task priority . . . . .	100
	7.4.12 TASK_GET_PRIORITY - Get task priority . . . . .	101
	7.4.13 TASK_MODE - Change the current task mode . . . . .	102
	7.4.14 TASK_WAKE_AFTER - Wake up after interval . . . . .	103
	7.4.15 TASK_WAKE_WHEN - Wake up when specified . . . . .	104
	7.4.16 TASK_GET_SCHEDULER - Get scheduler of a task . . . . .	105
	7.4.17 TASK_SET_SCHEDULER - Set scheduler of a task . . . . .	106
	7.4.18 TASK_GET_AFFINITY - Get task processor affinity . . . . .	108
	7.4.19 TASK_SET_AFFINITY - Set task processor affinity . . . . .	109
	7.4.20 TASK_ITERATE - Iterate Over Tasks . . . . .	110
7.5	Deprecated Directives . . . . .	111
	7.5.1 ITERATE_OVER_ALL_THREADS - Iterate Over Tasks . . . . .	112
7.6	Removed Directives . . . . .	113
	7.6.1 TASK_GET_NOTE - Get task notepad entry . . . . .	114
	7.6.2 TASK_SET_NOTE - Set task notepad entry . . . . .	115

7.6.3	TASK_VARIABLE_ADD - Associate per task variable . . . . .	116
7.6.4	TASK_VARIABLE_GET - Obtain value of a per task variable . . . . .	117
7.6.5	TASK_VARIABLE_DELETE - Remove per task variable . . . . .	118
<b>8</b>	<b>Interrupt Manager</b>	<b>119</b>
8.1	Introduction . . . . .	120
8.2	Background . . . . .	121
8.2.1	Processing an Interrupt . . . . .	121
8.2.2	RTEMS Interrupt Levels . . . . .	122
8.2.3	Disabling of Interrupts by RTEMS . . . . .	122
8.3	Operations . . . . .	123
8.3.1	Establishing an ISR . . . . .	123
8.3.2	Directives Allowed from an ISR . . . . .	123
8.4	Directives . . . . .	126
8.4.1	INTERRUPT_CATCH - Establish an ISR . . . . .	127
8.4.2	INTERRUPT_DISABLE - Disable Interrupts . . . . .	128
8.4.3	INTERRUPT_ENABLE - Restore Interrupt Level . . . . .	129
8.4.4	INTERRUPT_FLASH - Flash Interrupts . . . . .	130
8.4.5	INTERRUPT_LOCAL_DISABLE - Disable Interrupts on Current Processor	131
8.4.6	INTERRUPT_LOCAL_ENABLE - Restore Interrupt Level on Current Pro- cessor . . . . .	133
8.4.7	INTERRUPT_LOCK_INITIALIZE - Initialize an ISR Lock . . . . .	134
8.4.8	INTERRUPT_LOCK_ACQUIRE - Acquire an ISR Lock . . . . .	135
8.4.9	INTERRUPT_LOCK_RELEASE - Release an ISR Lock . . . . .	136
8.4.10	INTERRUPT_LOCK_ACQUIRE_ISR - Acquire an ISR Lock from ISR . . . .	137
8.4.11	INTERRUPT_LOCK_RELEASE_ISR - Release an ISR Lock from ISR . . . .	138
8.4.12	INTERRUPT_IS_IN_PROGRESS - Is an ISR in Progress . . . . .	139
<b>9</b>	<b>Clock Manager</b>	<b>141</b>
9.1	Introduction . . . . .	142
9.2	Background . . . . .	143
9.2.1	Required Support . . . . .	143
9.2.2	Time and Date Data Structures . . . . .	143
9.2.3	Clock Tick and Timeslicing . . . . .	143
9.2.4	Delays . . . . .	144
9.2.5	Timeouts . . . . .	144
9.3	Operations . . . . .	145
9.3.1	Announcing a Tick . . . . .	145
9.3.2	Setting the Time . . . . .	145
9.3.3	Obtaining the Time . . . . .	145
9.3.4	Transition Advice for the Removed rtems_clock_get() . . . . .	146
9.4	Directives . . . . .	147
9.4.1	CLOCK_SET - Set date and time . . . . .	148
9.4.2	CLOCK_GET_TOD - Get date and time in TOD format . . . . .	149
9.4.3	CLOCK_GET_TOD_TIMEVAL - Get date and time in timeval format . . . .	150
9.4.4	CLOCK_GET_SECONDS_SINCE_EPOCH - Get seconds since epoch . . . .	151
9.4.5	CLOCK_GET_TICKS_PER_SECOND - Get ticks per second . . . . .	152
9.4.6	CLOCK_GET_TICKS_SINCE_BOOT - Get current ticks counter value . . . .	153
9.4.7	CLOCK_TICK_LATER - Get tick value in the future . . . . .	154
9.4.8	CLOCK_TICK_LATER_USEC - Get tick value in the future in microseconds	155
9.4.9	CLOCK_TICK_BEFORE - Is tick value is before a point in time . . . . .	156
9.4.10	CLOCK_GET_UPTIME - Get the time since boot . . . . .	157

9.4.11	CLOCK_GET_UPTIME_TIMEVAL - Get the time since boot in timeval format . . . . .	158
9.4.12	CLOCK_GET_UPTIME_SECONDS - Get the seconds since boot . . . . .	159
9.4.13	CLOCK_GET_UPTIME_NANOSECONDS - Get the nanoseconds since boot	160
9.5	Removed Directives . . . . .	161
9.5.1	CLOCK_GET - Get date and time information . . . . .	162
<b>10</b>	<b>Timer Manager</b>	<b>163</b>
10.1	Introduction . . . . .	164
10.2	Background . . . . .	165
10.2.1	Required Support . . . . .	165
10.2.2	Timers . . . . .	165
10.2.3	Timer Server . . . . .	165
10.2.4	Timer Service Routines . . . . .	165
10.3	Operations . . . . .	167
10.3.1	Creating a Timer . . . . .	167
10.3.2	Obtaining Timer IDs . . . . .	167
10.3.3	Initiating an Interval Timer . . . . .	167
10.3.4	Initiating a Time of Day Timer . . . . .	167
10.3.5	Canceling a Timer . . . . .	167
10.3.6	Resetting a Timer . . . . .	167
10.3.7	Initiating the Timer Server . . . . .	168
10.3.8	Deleting a Timer . . . . .	168
10.4	Directives . . . . .	169
10.4.1	TIMER_CREATE - Create a timer . . . . .	170
10.4.2	TIMER_IDENT - Get ID of a timer . . . . .	171
10.4.3	TIMER_CANCEL - Cancel a timer . . . . .	172
10.4.4	TIMER_DELETE - Delete a timer . . . . .	173
10.4.5	TIMER_FIRE_AFTER - Fire timer after interval . . . . .	174
10.4.6	TIMER_FIRE_WHEN - Fire timer when specified . . . . .	175
10.4.7	TIMER_INITIATE_SERVER - Initiate server for task-based timers . . . . .	176
10.4.8	TIMER_SERVER_FIRE_AFTER - Fire task-based timer after interval . . . . .	177
10.4.9	TIMER_SERVER_FIRE_WHEN - Fire task-based timer when specified . . . . .	178
10.4.10	TIMER_RESET - Reset an interval timer . . . . .	179
<b>11</b>	<b>Rate Monotonic Manager</b>	<b>181</b>
11.1	Introduction . . . . .	182
11.2	Background . . . . .	183
11.2.1	Rate Monotonic Manager Required Support . . . . .	183
11.2.2	Period Statistics . . . . .	183
11.2.3	Periodicity Definitions . . . . .	184
11.2.4	Rate Monotonic Scheduling Algorithm . . . . .	185
11.2.5	Schedulability Analysis . . . . .	186
11.2.5.1	Assumptions . . . . .	186
11.2.5.2	Processor Utilization Rule . . . . .	186
11.2.5.3	Processor Utilization Rule Example . . . . .	187
11.2.5.4	First Deadline Rule . . . . .	187
11.2.5.5	First Deadline Rule Example . . . . .	187
11.2.5.6	Relaxation of Assumptions . . . . .	188
11.3	Operations . . . . .	189
11.3.1	Creating a Rate Monotonic Period . . . . .	189
11.3.2	Manipulating a Period . . . . .	189

11.3.3	Obtaining the Status of a Period . . . . .	189
11.3.4	Canceling a Period . . . . .	190
11.3.5	Deleting a Rate Monotonic Period . . . . .	190
11.3.6	Examples . . . . .	190
11.3.7	Simple Periodic Task . . . . .	190
11.3.8	Task with Multiple Periods . . . . .	191
11.4	Directives . . . . .	193
11.4.1	RATE_MONOTONIC_CREATE - Create a rate monotonic period . . . . .	194
11.4.2	RATE_MONOTONIC_IDENT - Get ID of a period . . . . .	195
11.4.3	RATE_MONOTONIC_CANCEL - Cancel a period . . . . .	196
11.4.4	RATE_MONOTONIC_DELETE - Delete a rate monotonic period . . . . .	197
11.4.5	RATE_MONOTONIC_PERIOD - Conclude current/Start next period . . . . .	198
11.4.6	RATE_MONOTONIC_GET_STATUS - Obtain status from a period . . . . .	199
11.4.7	RATE_MONOTONIC_GET_STATISTICS - Obtain statistics from a period . . . . .	200
11.4.8	RATE_MONOTONIC_RESET_STATISTICS - Reset statistics for a period . . . . .	201
11.4.9	RATE_MONOTONIC_RESET_ALL_STATISTICS - Reset statistics for all periods . . . . .	202
11.4.10	RATE_MONOTONIC_REPORT_STATISTICS - Print period statistics report . . . . .	203
<b>12</b>	<b>Semaphore Manager</b>	<b>205</b>
12.1	Introduction . . . . .	206
12.2	Background . . . . .	207
12.2.1	Nested Resource Access . . . . .	207
12.2.2	Priority Inheritance . . . . .	208
12.2.3	Priority Ceiling . . . . .	208
12.2.4	Multiprocessor Resource Sharing Protocol . . . . .	208
12.2.5	Building a Semaphore Attribute Set . . . . .	208
12.2.6	Building a SEMAPHORE_OBTAIN Option Set . . . . .	209
12.3	Operations . . . . .	210
12.3.1	Creating a Semaphore . . . . .	210
12.3.2	Obtaining Semaphore IDs . . . . .	210
12.3.3	Acquiring a Semaphore . . . . .	210
12.3.4	Releasing a Semaphore . . . . .	211
12.3.5	Deleting a Semaphore . . . . .	211
12.4	Directives . . . . .	212
12.4.1	SEMAPHORE_CREATE - Create a semaphore . . . . .	213
12.4.2	SEMAPHORE_IDENT - Get ID of a semaphore . . . . .	215
12.4.3	SEMAPHORE_DELETE - Delete a semaphore . . . . .	216
12.4.4	SEMAPHORE_OBTAIN - Acquire a semaphore . . . . .	217
12.4.5	SEMAPHORE_RELEASE - Release a semaphore . . . . .	219
12.4.6	SEMAPHORE_FLUSH - Unblock all tasks waiting on a semaphore . . . . .	220
12.4.7	SEMAPHORE_SET_PRIORITY - Set priority by scheduler for a semaphore . . . . .	222
<b>13</b>	<b>Barrier Manager</b>	<b>225</b>
13.1	Introduction . . . . .	226
13.2	Background . . . . .	227
13.2.1	Automatic Versus Manual Barriers . . . . .	227
13.2.2	Building a Barrier Attribute Set . . . . .	227
13.3	Operations . . . . .	228
13.3.1	Creating a Barrier . . . . .	228
13.3.2	Obtaining Barrier IDs . . . . .	228
13.3.3	Waiting at a Barrier . . . . .	228



13.3.4	Releasing a Barrier . . . . .	228
13.3.5	Deleting a Barrier . . . . .	228
13.4	Directives . . . . .	229
13.4.1	BARRIER_CREATE - Create a barrier . . . . .	230
13.4.2	BARRIER_IDENT - Get ID of a barrier . . . . .	231
13.4.3	BARRIER_DELETE - Delete a barrier . . . . .	232
13.4.4	BARRIER_WAIT - Wait at a barrier . . . . .	233
13.4.5	BARRIER_RELEASE - Release a barrier . . . . .	234
<b>14</b>	<b>Message Manager</b>	<b>235</b>
14.1	Introduction . . . . .	236
14.2	Background . . . . .	237
14.2.1	Messages . . . . .	237
14.2.2	Message Queues . . . . .	237
14.2.3	Building a Message Queue Attribute Set . . . . .	237
14.2.4	Building a MESSAGE_QUEUE_RECEIVE Option Set . . . . .	238
14.3	Operations . . . . .	239
14.3.1	Creating a Message Queue . . . . .	239
14.3.2	Obtaining Message Queue IDs . . . . .	239
14.3.3	Receiving a Message . . . . .	239
14.3.4	Sending a Message . . . . .	239
14.3.5	Broadcasting a Message . . . . .	240
14.3.6	Deleting a Message Queue . . . . .	240
14.4	Directives . . . . .	241
14.4.1	MESSAGE_QUEUE_CREATE - Create a queue . . . . .	242
14.4.2	MESSAGE_QUEUE_IDENT - Get ID of a queue . . . . .	244
14.4.3	MESSAGE_QUEUE_DELETE - Delete a queue . . . . .	245
14.4.4	MESSAGE_QUEUE_SEND - Put message at rear of a queue . . . . .	246
14.4.5	MESSAGE_QUEUE_URGENT - Put message at front of a queue . . . . .	247
14.4.6	MESSAGE_QUEUE_BROADCAST - Broadcast N messages to a queue . . . . .	248
14.4.7	MESSAGE_QUEUE_RECEIVE - Receive message from a queue . . . . .	249
14.4.8	MESSAGE_QUEUE_GET_NUMBER_PENDING - Get number of messages pending on a queue . . . . .	251
14.4.9	MESSAGE_QUEUE_FLUSH - Flush all messages on a queue . . . . .	252
<b>15</b>	<b>Event Manager</b>	<b>253</b>
15.1	Introduction . . . . .	254
15.2	Background . . . . .	255
15.2.1	Event Sets . . . . .	255
15.2.2	Building an Event Set or Condition . . . . .	255
15.2.3	Building an EVENT_RECEIVE Option Set . . . . .	256
15.3	Operations . . . . .	257
15.3.1	Sending an Event Set . . . . .	257
15.3.2	Receiving an Event Set . . . . .	257
15.3.3	Determining the Pending Event Set . . . . .	257
15.3.4	Receiving all Pending Events . . . . .	257
15.4	Directives . . . . .	258
15.4.1	EVENT_SEND - Send event set to a task . . . . .	259
15.4.2	EVENT_RECEIVE - Receive event condition . . . . .	260
<b>16</b>	<b>Signal Manager</b>	<b>261</b>
16.1	Introduction . . . . .	262

16.2	Background . . . . .	263
16.2.1	Signal Manager Definitions . . . . .	263
16.2.2	A Comparison of ASRs and ISRs . . . . .	263
16.2.3	Building a Signal Set . . . . .	263
16.2.4	Building an ASR Mode . . . . .	264
16.3	Operations . . . . .	265
16.3.1	Establishing an ASR . . . . .	265
16.3.2	Sending a Signal Set . . . . .	265
16.3.3	Processing an ASR . . . . .	266
16.4	Directives . . . . .	267
16.4.1	SIGNAL_CATCH - Establish an ASR . . . . .	268
16.4.2	SIGNAL_SEND - Send signal set to a task . . . . .	269
<b>17</b>	<b>Partition Manager</b>	<b>271</b>
17.1	Introduction . . . . .	272
17.2	Background . . . . .	273
17.2.1	Partition Manager Definitions . . . . .	273
17.2.2	Building a Partition Attribute Set . . . . .	273
17.3	Operations . . . . .	274
17.3.1	Creating a Partition . . . . .	274
17.3.2	Obtaining Partition IDs . . . . .	274
17.3.3	Acquiring a Buffer . . . . .	274
17.3.4	Releasing a Buffer . . . . .	274
17.3.5	Deleting a Partition . . . . .	274
17.4	Directives . . . . .	275
17.4.1	PARTITION_CREATE - Create a partition . . . . .	276
17.4.2	PARTITION_IDENT - Get ID of a partition . . . . .	278
17.4.3	PARTITION_DELETE - Delete a partition . . . . .	279
17.4.4	PARTITION_GET_BUFFER - Get buffer from a partition . . . . .	280
17.4.5	PARTITION_RETURN_BUFFER - Return buffer to a partition . . . . .	281
<b>18</b>	<b>Region Manager</b>	<b>283</b>
18.1	Introduction . . . . .	284
18.2	Background . . . . .	285
18.2.1	Region Manager Definitions . . . . .	285
18.2.2	Building an Attribute Set . . . . .	285
18.2.3	Building an Option Set . . . . .	285
18.3	Operations . . . . .	287
18.3.1	Creating a Region . . . . .	287
18.3.2	Obtaining Region IDs . . . . .	287
18.3.3	Adding Memory to a Region . . . . .	287
18.3.4	Acquiring a Segment . . . . .	287
18.3.5	Releasing a Segment . . . . .	288
18.3.6	Obtaining the Size of a Segment . . . . .	288
18.3.7	Changing the Size of a Segment . . . . .	288
18.3.8	Deleting a Region . . . . .	288
18.4	Directives . . . . .	289
18.4.1	REGION_CREATE - Create a region . . . . .	290
18.4.2	REGION_IDENT - Get ID of a region . . . . .	292
18.4.3	REGION_DELETE - Delete a region . . . . .	293
18.4.4	REGION_EXTEND - Add memory to a region . . . . .	294
18.4.5	REGION_GET_SEGMENT - Get segment from a region . . . . .	295

18.4.6	REGION_RETURN_SEGMENT - Return segment to a region . . . . .	297
18.4.7	REGION_GET_SEGMENT_SIZE - Obtain size of a segment . . . . .	298
18.4.8	REGION_RESIZE_SEGMENT - Change size of a segment . . . . .	299
18.4.9	REGION_GET_INFORMATION - Get region information . . . . .	300
18.4.10	REGION_GET_FREE_INFORMATION - Get region free information . . . . .	301
<b>19</b>	<b>Dual-Ported Memory Manager</b>	<b>303</b>
19.1	Introduction . . . . .	304
19.2	Background . . . . .	305
19.3	Operations . . . . .	306
19.3.1	Creating a Port . . . . .	306
19.3.2	Obtaining Port IDs . . . . .	306
19.3.3	Converting an Address . . . . .	306
19.3.4	Deleting a DPMA Port . . . . .	306
19.4	Directives . . . . .	307
19.4.1	PORT_CREATE - Create a port . . . . .	308
19.4.2	PORT_IDENT - Get ID of a port . . . . .	309
19.4.3	PORT_DELETE - Delete a port . . . . .	310
19.4.4	PORT_EXTERNAL_TO_INTERNAL - Convert external to internal address	311
19.4.5	PORT_INTERNAL_TO_EXTERNAL - Convert internal to external address	312
<b>20</b>	<b>I/O Manager</b>	<b>313</b>
20.1	Introduction . . . . .	314
20.2	Background . . . . .	315
20.2.1	Device Driver Table . . . . .	315
20.2.2	Major and Minor Device Numbers . . . . .	315
20.2.3	Device Names . . . . .	315
20.2.4	Device Driver Environment . . . . .	316
20.2.5	Runtime Driver Registration . . . . .	316
20.2.6	Device Driver Interface . . . . .	316
20.2.7	Device Driver Initialization . . . . .	317
20.3	Operations . . . . .	318
20.3.1	Register and Lookup Name . . . . .	318
20.3.2	Accessing an Device Driver . . . . .	318
20.4	Directives . . . . .	319
20.4.1	IO_REGISTER_DRIVER - Register a device driver . . . . .	320
20.4.2	IO_UNREGISTER_DRIVER - Unregister a device driver . . . . .	321
20.4.3	IO_INITIALIZE - Initialize a device driver . . . . .	322
20.4.4	IO_REGISTER_NAME - Register a device . . . . .	323
20.4.5	IO_LOOKUP_NAME - Lookup a device . . . . .	324
20.4.6	IO_OPEN - Open a device . . . . .	325
20.4.7	IO_CLOSE - Close a device . . . . .	326
20.4.8	IO_READ - Read from a device . . . . .	327
20.4.9	IO_WRITE - Write to a device . . . . .	328
20.4.10	IO_CONTROL - Special device services . . . . .	329
<b>21</b>	<b>Fatal Error Manager</b>	<b>331</b>
21.1	Introduction . . . . .	332
21.2	Background . . . . .	333
21.2.1	Overview . . . . .	333
21.2.2	Fatal Sources . . . . .	333
21.2.3	Internal Error Codes . . . . .	334

21.3	Operations . . . . .	339
21.3.1	Announcing a Fatal Error . . . . .	339
21.4	Directives . . . . .	340
21.4.1	FATAL - Invoke the fatal error handler . . . . .	341
21.4.2	PANIC - Print a message and invoke the fatal error handler . . . . .	342
21.4.3	SHUTDOWN_EXECUTIVE - Shutdown RTEMS . . . . .	343
21.4.4	EXCEPTION_FRAME_PRINT - Prints the exception frame . . . . .	344
21.4.5	FATAL_SOURCE_TEXT - Returns a text for a fatal source . . . . .	345
21.4.6	INTERNAL_ERROR_TEXT - Returns a text for an internal error code . . .	346
21.4.7	FATAL_ERROR_OCCURRED - Invoke the fatal error handler (deprecated)	347
<b>22</b>	<b>Board Support Packages</b>	<b>349</b>
22.1	Introduction . . . . .	350
22.2	Reset and Initialization . . . . .	351
22.2.1	Interrupt Stack Requirements . . . . .	352
22.2.2	Processors with a Separate Interrupt Stack . . . . .	352
22.2.3	Processors Without a Separate Interrupt Stack . . . . .	352
22.3	Device Drivers . . . . .	353
22.3.1	Clock Tick Device Driver . . . . .	353
22.4	User Extensions . . . . .	354
22.5	Multiprocessor Communications Interface (MPCI) . . . . .	355
22.5.1	Tightly-Coupled Systems . . . . .	355
22.5.2	Loosely-Coupled Systems . . . . .	355
22.5.3	Systems with Mixed Coupling . . . . .	355
22.5.4	Heterogeneous Systems . . . . .	356
<b>23</b>	<b>User Extensions Manager</b>	<b>357</b>
23.1	Introduction . . . . .	358
23.2	Background . . . . .	359
23.2.1	Extension Sets . . . . .	359
23.2.2	TCB Extension Area . . . . .	360
23.2.3	Order of Invocation . . . . .	360
23.2.4	Thread Create Extension . . . . .	361
23.2.5	Thread Start Extension . . . . .	361
23.2.6	Thread Restart Extension . . . . .	362
23.2.7	Thread Switch Extension . . . . .	362
23.2.8	Thread Begin Extension . . . . .	363
23.2.9	Thread Exitted Extension . . . . .	363
23.2.10	Thread Termination Extension . . . . .	363
23.2.11	Thread Delete Extension . . . . .	364
23.2.12	Fatal Error Extension . . . . .	364
23.3	Directives . . . . .	365
23.3.1	EXTENSION_CREATE - Create a extension set . . . . .	366
23.3.2	EXTENSION_IDENT - Get ID of a extension set . . . . .	367
23.3.3	EXTENSION_DELETE - Delete a extension set . . . . .	368
<b>24</b>	<b>Configuring a System</b>	<b>369</b>
24.1	Introduction . . . . .	370
24.2	Default Value Selection Philosophy . . . . .	371
24.3	Sizing the RTEMS Workspace . . . . .	372
24.4	Potential Issues with RTEMS Workspace Size Estimation . . . . .	373
24.5	Configuration Example . . . . .	374

24.6	Unlimited Objects . . . . .	376
24.6.1	Unlimited Objects by Class . . . . .	377
24.6.2	Unlimited Objects by Default . . . . .	377
24.7	General System Configuration . . . . .	378
24.7.1	CONFIGURE_DIRTY_MEMORY . . . . .	378
24.7.2	CONFIGURE_DISABLE_NEWLIB_REENTRANCY . . . . .	378
24.7.3	CONFIGURE_EXECUTIVE_RAM_SIZE . . . . .	379
24.7.4	CONFIGURE_EXTRA_TASK_STACKS . . . . .	379
24.7.5	CONFIGURE_INITIAL_EXTENSIONS . . . . .	380
24.7.6	CONFIGURE_INTERRUPT_STACK_SIZE . . . . .	380
24.7.7	CONFIGURE_MALLOC_DIRTY . . . . .	381
24.7.8	CONFIGURE_MAXIMUM_FILE_DESCRIPTOR . . . . .	381
24.7.9	CONFIGURE_MAXIMUM_PROCESSORS . . . . .	382
24.7.10	CONFIGURE_MAXIMUM_THREAD_NAME_SIZE . . . . .	382
24.7.11	CONFIGURE_MEMORY_OVERHEAD . . . . .	383
24.7.12	CONFIGURE_MESSAGE_BUFFER_MEMORY . . . . .	383
24.7.13	CONFIGURE_MICROSECONDS_PER_TICK . . . . .	384
24.7.14	CONFIGURE_MINIMUM_TASK_STACK_SIZE . . . . .	385
24.7.15	CONFIGURE_STACK_CHECKER_ENABLED . . . . .	386
24.7.16	CONFIGURE_TICKS_PER_TIMESLICE . . . . .	386
24.7.17	CONFIGURE_UNIFIED_WORK_AREAS . . . . .	387
24.7.18	CONFIGURE_UNLIMITED_ALLOCATION_SIZE . . . . .	387
24.7.19	CONFIGURE_UNLIMITED_OBJECTS . . . . .	388
24.7.20	CONFIGURE_VERBOSE_SYSTEM_INITIALIZATION . . . . .	388
24.7.21	CONFIGURE_ZERO_WORKSPACE_AUTOMATICALLY . . . . .	388
24.8	Device Driver Configuration . . . . .	390
24.8.1	CONFIGURE_APPLICATION_DOES_NOT_NEED_CLOCK_DRIVER . . . . .	390
24.8.2	CONFIGURE_APPLICATION_EXTRA_DRIVERS . . . . .	390
24.8.3	CONFIGURE_APPLICATION_NEEDS_ATA_DRIVER . . . . .	391
24.8.4	CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER . . . . .	391
24.8.5	CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER . . . . .	392
24.8.6	CONFIGURE_APPLICATION_NEEDS_FRAME_BUFFER_DRIVER . . . . .	392
24.8.7	CONFIGURE_APPLICATION_NEEDS_IDE_DRIVER . . . . .	393
24.8.8	CONFIGURE_APPLICATION_NEEDS_NULL_DRIVER . . . . .	393
24.8.9	CONFIGURE_APPLICATION_NEEDS_RTC_DRIVER . . . . .	393
24.8.10	CONFIGURE_APPLICATION_NEEDS_SIMPLE_CONSOLE_DRIVER . . . . .	394
24.8.11	CONFIGURE_APPLICATION_NEEDS_SIMPLE_TASK_CONSOLE_DRIVER . . . . .	394
24.8.12	CONFIGURE_APPLICATION_NEEDS_STUB_DRIVER . . . . .	395
24.8.13	CONFIGURE_APPLICATION_NEEDS_TIMER_DRIVER . . . . .	395
24.8.14	CONFIGURE_APPLICATION_NEEDS_WATCHDOG_DRIVER . . . . .	396
24.8.15	CONFIGURE_APPLICATION_NEEDS_ZERO_DRIVER . . . . .	396
24.8.16	CONFIGURE_APPLICATION_PREREQUISITE_DRIVERS . . . . .	397
24.8.17	CONFIGURE_ATA_DRIVER_TASK_PRIORITY . . . . .	397
24.8.18	CONFIGURE_MAXIMUM_DRIVERS . . . . .	398
24.9	Classic API Configuration . . . . .	399
24.9.1	CONFIGURE_MAXIMUM_BARRIERS . . . . .	399
24.9.2	CONFIGURE_MAXIMUM_MESSAGE_QUEUES . . . . .	399
24.9.3	CONFIGURE_MAXIMUM_PARTITIONS . . . . .	400
24.9.4	CONFIGURE_MAXIMUM_PERIODS . . . . .	400
24.9.5	CONFIGURE_MAXIMUM_PORTS . . . . .	401
24.9.6	CONFIGURE_MAXIMUM_REGIONS . . . . .	402

24.9.7	CONFIGURE_MAXIMUM_SEMAPHORES	402
24.9.8	CONFIGURE_MAXIMUM_TASKS	403
24.9.9	CONFIGURE_MAXIMUM_TIMERS	404
24.9.10	CONFIGURE_MAXIMUM_USER_EXTENSIONS	404
24.10	Classic API Initialization Task Configuration	406
24.10.1	CONFIGURE_INIT_TASK_ARGUMENTS	406
24.10.2	CONFIGURE_INIT_TASK_ATTRIBUTES	406
24.10.3	CONFIGURE_INIT_TASK_ENTRY_POINT	407
24.10.4	CONFIGURE_INIT_TASK_INITIAL_MODES	407
24.10.5	CONFIGURE_INIT_TASK_NAME	407
24.10.6	CONFIGURE_INIT_TASK_PRIORITY	408
24.10.7	CONFIGURE_INIT_TASK_STACK_SIZE	408
24.10.8	CONFIGURE RTEMS_INIT_TASKS_TABLE	409
24.11	POSIX API Configuration	410
24.11.1	CONFIGURE_MAXIMUM_POSIX_KEYS	410
24.11.2	CONFIGURE_MAXIMUM_POSIX_KEY_VALUE_PAIRS	410
24.11.3	CONFIGURE_MAXIMUM_POSIX_MESSAGE_QUEUES	411
24.11.4	CONFIGURE_MAXIMUM_POSIX_QUEUED_SIGNALS	412
24.11.5	CONFIGURE_MAXIMUM_POSIX_SEMAPHORES	412
24.11.6	CONFIGURE_MAXIMUM_POSIX_SHMS	413
24.11.7	CONFIGURE_MAXIMUM_POSIX_THREADS	414
24.11.8	CONFIGURE_MAXIMUM_POSIX_TIMERS	414
24.11.9	CONFIGURE_MINIMUM_POSIX_THREAD_STACK_SIZE	415
24.12	POSIX Initialization Thread Configuration	416
24.12.1	CONFIGURE_POSIX_INIT_THREAD_ENTRY_POINT	416
24.12.2	CONFIGURE_POSIX_INIT_THREAD_STACK_SIZE	416
24.12.3	CONFIGURE_POSIX_INIT_THREAD_TABLE	417
24.13	Event Recording Configuration	418
24.13.1	CONFIGURE_RECORD_EXTENSIONS_ENABLED	418
24.13.2	CONFIGURE_RECORD_FATAL_DUMP_BASE64	418
24.13.3	CONFIGURE_RECORD_FATAL_DUMP_BASE64_ZLIB	419
24.13.4	CONFIGURE_RECORD_PER_PROCESSOR_ITEMS	419
24.14	Filesystem Configuration	420
24.14.1	CONFIGURE_APPLICATION_DISABLE_FILESYSTEM	420
24.14.2	CONFIGURE_FILESYSTEM_ALL	421
24.14.3	CONFIGURE_FILESYSTEM_DOSFS	421
24.14.4	CONFIGURE_FILESYSTEM_FTPFS	422
24.14.5	CONFIGURE_FILESYSTEM_IMFS	422
24.14.6	CONFIGURE_FILESYSTEM_JFFS2	422
24.14.7	CONFIGURE_FILESYSTEM_NFS	423
24.14.8	CONFIGURE_FILESYSTEM_RFS	423
24.14.9	CONFIGURE_FILESYSTEM_TFTPFS	423
24.14.10	CONFIGURE_IMFS_DISABLE_CHMOD	424
24.14.11	CONFIGURE_IMFS_DISABLE_CHOWN	424
24.14.12	CONFIGURE_IMFS_DISABLE_LINK	424
24.14.13	CONFIGURE_IMFS_DISABLE_MKNOD	425
24.14.14	CONFIGURE_IMFS_DISABLE_MKNOD_DEVICE	425
24.14.15	CONFIGURE_IMFS_DISABLE_MKNOD_FILE	425
24.14.16	CONFIGURE_IMFS_DISABLE_MOUNT	426
24.14.17	CONFIGURE_IMFS_DISABLE_READDIR	426
24.14.18	CONFIGURE_IMFS_DISABLE_READLINK	426

24.14.1	CONFIGURE_IMFS_DISABLE_RENAME . . . . .	427
24.14.2	CONFIGURE_IMFS_DISABLE_RMNOD . . . . .	427
24.14.2	CONFIGURE_IMFS_DISABLE_SYMLINK . . . . .	427
24.14.2	CONFIGURE_IMFS_DISABLE_UNMOUNT . . . . .	428
24.14.2	CONFIGURE_IMFS_DISABLE_UTIME . . . . .	428
24.14.2	CONFIGURE_IMFS_ENABLE_MKFIFO . . . . .	428
24.14.2	CONFIGURE_IMFS_MEMFILE_BYTES_PER_BLOCK . . . . .	429
24.14.2	CONFIGURE_USE_DEVFS_AS_BASE_FILESYSTEM . . . . .	429
24.14.2	CONFIGURE_USE_MINIIMFS_AS_BASE_FILESYSTEM . . . . .	430
24.15	Block Device Cache Configuration . . . . .	432
24.15.1	CONFIGURE_APPLICATION_NEEDS_LIBBLOCK . . . . .	432
24.15.2	CONFIGURE_BDBUF_BUFFER_MAX_SIZE . . . . .	432
24.15.3	CONFIGURE_BDBUF_BUFFER_MIN_SIZE . . . . .	433
24.15.4	CONFIGURE_BDBUF_CACHE_MEMORY_SIZE . . . . .	433
24.15.5	CONFIGURE_BDBUF_MAX_READ_AHEAD_BLOCKS . . . . .	433
24.15.6	CONFIGURE_BDBUF_MAX_WRITE_BLOCKS . . . . .	434
24.15.7	CONFIGURE_BDBUF_READ_AHEAD_TASK_PRIORITY . . . . .	434
24.15.8	CONFIGURE_BDBUF_TASK_STACK_SIZE . . . . .	435
24.15.9	CONFIGURE_SWAPOUT_BLOCK_HOLD . . . . .	435
24.15.1	CONFIGURE_SWAPOUT_SWAP_PERIOD . . . . .	436
24.15.1	CONFIGURE_SWAPOUT_TASK_PRIORITY . . . . .	436
24.15.1	CONFIGURE_SWAPOUT_WORKER_TASK_PRIORITY . . . . .	436
24.15.1	CONFIGURE_SWAPOUT_WORKER_TASKS . . . . .	437
24.16	Task Stack Allocator Configuration . . . . .	438
24.16.1	CONFIGURE_TASK_STACK_ALLOCATOR . . . . .	438
24.16.2	CONFIGURE_TASK_STACK_ALLOCATOR_INIT . . . . .	438
24.16.3	CONFIGURE_TASK_STACK_DEALLOCATOR . . . . .	439
24.16.4	CONFIGURE_TASK_STACK_FROM_ALLOCATOR . . . . .	439
24.16.5	CONFIGURE_TASK_STACK_ALLOCATOR_AVOIDS_WORK_SPACE . . . . .	440
24.17	Idle Task Configuration . . . . .	441
24.17.1	CONFIGURE_IDLE_TASK_BODY . . . . .	441
24.17.2	CONFIGURE_IDLE_TASK_INITIALIZES_APPLICATION . . . . .	441
24.17.3	CONFIGURE_IDLE_TASK_STACK_SIZE . . . . .	442
24.18	General Scheduler Configuration . . . . .	443
24.18.1	CONFIGURE_CBS_MAXIMUM_SERVERS . . . . .	443
24.18.2	CONFIGURE_MAXIMUM_PRIORITY . . . . .	444
24.18.3	CONFIGURE_SCHEDULER_ASSIGNMENTS . . . . .	444
24.18.4	CONFIGURE_SCHEDULER_CBS . . . . .	445
24.18.5	CONFIGURE_SCHEDULER_EDF . . . . .	445
24.18.6	CONFIGURE_SCHEDULER_EDF_SMP . . . . .	446
24.18.7	CONFIGURE_SCHEDULER_NAME . . . . .	446
24.18.8	CONFIGURE_SCHEDULER_PRIORITY . . . . .	447
24.18.9	CONFIGURE_SCHEDULER_PRIORITY_AFFINITY_SMP . . . . .	447
24.18.1	CONFIGURE_SCHEDULER_PRIORITY_SMP . . . . .	448
24.18.1	CONFIGURE_SCHEDULER_SIMPLE . . . . .	448
24.18.1	CONFIGURE_SCHEDULER_SIMPLE_SMP . . . . .	449
24.18.1	CONFIGURE_SCHEDULER_STRONG_APA . . . . .	449
24.18.1	CONFIGURE_SCHEDULER_USER . . . . .	450
24.19	Clustered Scheduler Configuration . . . . .	451
24.19.1	Configuration Step 1 - Scheduler Algorithms . . . . .	451
24.19.2	Configuration Step 2 - Schedulers . . . . .	452

24.19.3	Configuration Step 3 - Scheduler Table . . . . .	452
24.19.4	Configuration Step 4 - Processor to Scheduler Assignment . . . . .	452
24.19.5	Configuration Example . . . . .	453
24.19.6	Configuration Errors . . . . .	454
24.20	BSP Related Configuration Options . . . . .	455
24.20.1	BSP_IDLE_TASK_BODY . . . . .	455
24.20.2	BSP_IDLE_TASK_STACK_SIZE . . . . .	455
24.20.3	BSP_INITIAL_EXTENSION . . . . .	456
24.20.4	BSP_INTERRUPT_STACK_SIZE . . . . .	456
24.20.5	CONFIGURE_BSP_PREREQUISITE_DRIVERS . . . . .	457
24.20.6	CONFIGURE_DISABLE_BSP_SETTINGS . . . . .	457
24.20.7	CONFIGURE_MALLOC_BSP_SUPPORTS_SBRK . . . . .	458
24.21	Multiprocessing Configuration . . . . .	459
24.21.1	CONFIGURE_MP_APPLICATION . . . . .	459
24.21.2	CONFIGURE_EXTRA_MPCI_RECEIVE_SERVER_STACK . . . . .	459
24.21.3	CONFIGURE_MP_MAXIMUM_GLOBAL_OBJECTS . . . . .	460
24.21.4	CONFIGURE_MP_MAXIMUM_NODES . . . . .	460
24.21.5	CONFIGURE_MP_MAXIMUM_PROXIES . . . . .	461
24.21.6	CONFIGURE_MP_MPCI_TABLE_POINTER . . . . .	461
24.21.7	CONFIGURE_MP_NODE_NUMBER . . . . .	462
24.22	PCI Library Configuration . . . . .	463
24.23	Ada Configuration . . . . .	464
24.24	Obsolete Configuration Options . . . . .	465
24.24.1	CONFIGURE_BDBUF_BUFFER_COUNT . . . . .	465
24.24.2	CONFIGURE_BDBUF_BUFFER_SIZE . . . . .	465
24.24.3	CONFIGURE_DISABLE_CLASSIC_API_NOTEPADS . . . . .	465
24.24.4	CONFIGURE_ENABLE_GO . . . . .	465
24.24.5	CONFIGURE_GNAT RTEMS . . . . .	465
24.24.6	CONFIGURE_HAS_OWN_CONFIGURATION_TABLE . . . . .	465
24.24.7	CONFIGURE_HAS_OWN_BDBUF_TABLE . . . . .	465
24.24.8	CONFIGURE_HAS_OWN_DEVICE_DRIVER_TABLE . . . . .	465
24.24.9	CONFIGURE_HAS_OWN_INIT_TASK_TABLE . . . . .	465
24.24.10	CONFIGURE_HAS_OWN_MOUNT_TABLE . . . . .	466
24.24.11	CONFIGURE_HAS_OWN_MULTIPROCESSING_TABLE . . . . .	466
24.24.12	CONFIGURE_LIBIO_MAXIMUM_FILE_DESCRIPTOR . . . . .	466
24.24.13	CONFIGURE_MAXIMUM_ADA_TASKS . . . . .	466
24.24.14	CONFIGURE_MAXIMUM_DEVICES . . . . .	466
24.24.15	CONFIGURE_MAXIMUM_FAKE_ADA_TASKS . . . . .	466
24.24.16	CONFIGURE_MAXIMUM_GO_CHANNELS . . . . .	466
24.24.17	CONFIGURE_MAXIMUM_GOROUTINES . . . . .	466
24.24.18	CONFIGURE_MAXIMUM_MRSP_SEMAPHORES . . . . .	466
24.24.19	CONFIGURE_NUMBER_OF_TERMIOS_PORTS . . . . .	467
24.24.20	CONFIGURE_MAXIMUM_POSIX_BARRIERS . . . . .	467
24.24.21	CONFIGURE_MAXIMUM_POSIX_CONDITION_VARIABLES . . . . .	467
24.24.22	CONFIGURE_MAXIMUM_POSIX_MESSAGE_QUEUE_DESCRIPTOR . . . . .	467
24.24.23	CONFIGURE_MAXIMUM_POSIX_MUTEXES . . . . .	467
24.24.24	CONFIGURE_MAXIMUM_POSIX_RWLOCKS . . . . .	467
24.24.25	CONFIGURE_MAXIMUM_POSIX_SPINLOCKS . . . . .	467
24.24.26	CONFIGURE_POSIX_HAS_OWN_INIT_THREAD_TABLE . . . . .	467
24.24.27	CONFIGURE_SMP_APPLICATION . . . . .	467
24.24.28	CONFIGURE_SMP_MAXIMUM_PROCESSORS . . . . .	468



24.24.2	CONFIGURE_TERMIO <span style="font-family: monospace;">S_DISABLED</span>	468
<b>25</b>	<b>Self-Contained Objects</b>	<b>469</b>
25.1	Introduction	470
25.2	RTEMS Thread API	472
25.3	Mutual Exclusion	473
25.3.1	Static mutex initialization	474
25.3.2	Run-time mutex initialization	475
25.3.3	Lock the mutex	476
25.3.4	Unlock the mutex	477
25.3.5	Set mutex name	478
25.3.6	Get mutex name	479
25.3.7	Mutex destruction	479
25.4	Condition Variables	480
25.4.1	Static condition variable initialization	481
25.4.2	Run-time condition variable initialization	482
25.4.3	Wait for condition signal	483
25.4.4	Signals a condition change	484
25.4.5	Broadcasts a condition change	485
25.4.6	Set condition variable name	486
25.4.7	Get condition variable name	487
25.4.8	Condition variable destruction	487
25.5	Counting Semaphores	488
25.5.1	Static counting semaphore initialization	489
25.5.2	Run-time counting semaphore initialization	490
25.5.3	Wait for a counting semaphore	491
25.5.4	Post a counting semaphore	492
25.5.5	Set counting semaphore name	493
25.5.6	Get counting semaphore name	494
25.5.7	Counting semaphore destruction	494
25.6	Binary Semaphores	495
25.6.1	Static binary semaphore initialization	496
25.6.2	Run-time binary semaphore initialization	497
25.6.3	Wait for a binary semaphore	498
25.6.4	Wait for a binary semaphore with timeout in ticks	499
25.6.5	Tries to wait for a binary semaphore	500
25.6.6	Post a binary semaphore	501
25.6.7	Set binary semaphore name	502
25.6.8	Get binary semaphore name	503
25.6.9	Binary semaphore destruction	503
25.7	Threads	504
<b>26</b>	<b>Multiprocessing Manager</b>	<b>507</b>
26.1	Introduction	508
26.2	Background	509
26.2.1	Nodes	509
26.2.2	Global Objects	509
26.2.3	Global Object Table	510
26.2.4	Remote Operations	510
26.2.5	Proxies	511
26.2.6	Multiprocessor Configuration Table	511
26.3	Multiprocessor Communications Interface Layer	512

26.3.1	INITIALIZATION . . . . .	513
26.3.2	GET_PACKET . . . . .	513
26.3.3	RETURN_PACKET . . . . .	513
26.3.4	RECEIVE_PACKET . . . . .	514
26.3.5	SEND_PACKET . . . . .	514
26.3.6	Supporting Heterogeneous Environments . . . . .	514
26.4	Operations . . . . .	516
26.4.1	Announcing a Packet . . . . .	516
26.5	Directives . . . . .	517
26.5.1	MULTIPROCESSING_ANNOUNCE - Announce the arrival of a packet . . . . .	518
<b>27</b>	<b>Symmetric Multiprocessing (SMP)</b>	<b>519</b>
27.1	Introduction . . . . .	520
27.2	Background . . . . .	521
27.2.1	Application Configuration . . . . .	521
27.2.2	Examples . . . . .	521
27.2.3	Uniprocessor versus SMP Parallelism . . . . .	521
27.2.4	Task Affinity . . . . .	522
27.2.5	Task Migration . . . . .	522
27.2.6	Clustered Scheduling . . . . .	523
27.2.7	OpenMP . . . . .	524
27.2.8	Atomic Operations . . . . .	525
27.3	Application Issues . . . . .	526
27.3.1	Task variables . . . . .	526
27.3.2	Highest Priority Thread Never Walks Alone . . . . .	526
27.3.3	Disabling of Thread Preemption . . . . .	526
27.3.4	Disabling of Interrupts . . . . .	527
27.3.5	Interrupt Service Routines Execute in Parallel With Threads . . . . .	528
27.3.6	Timers Do Not Stop Immediately . . . . .	528
27.3.7	False Sharing of Cache Lines Due to Objects Table . . . . .	528
27.4	Implementation Details . . . . .	529
27.4.1	Low-Level Synchronization . . . . .	529
27.4.2	Internal Locking . . . . .	530
27.4.3	Profiling . . . . .	531
27.4.4	Scheduler Helping Protocol . . . . .	532
27.4.5	Thread Dispatch Details . . . . .	533
27.4.6	Per-Processor Data . . . . .	533
27.4.7	Thread Pinning . . . . .	534
<b>28</b>	<b>PCI Library</b>	<b>535</b>
28.1	Introduction . . . . .	536
28.2	Background . . . . .	537
28.2.1	Software Components . . . . .	537
28.2.2	PCI Configuration . . . . .	538
28.2.2.1	RTEMS Configuration selection . . . . .	538
28.2.2.2	Auto Configuration . . . . .	539
28.2.2.3	Read Configuration . . . . .	539
28.2.2.4	Static Configuration . . . . .	540
28.2.2.5	Peripheral Configuration . . . . .	540
28.2.3	PCI Access . . . . .	540
28.2.3.1	Configuration space . . . . .	541
28.2.3.2	I/O space . . . . .	541

28.2.3.3	Registers over Memory space . . . . .	541
28.2.3.4	Access functions . . . . .	542
28.2.3.5	PCI address translation . . . . .	542
28.2.4	PCI Interrupt . . . . .	543
28.2.5	PCI Shell command . . . . .	543
<b>29</b>	<b>Stack Bounds Checker</b>	<b>545</b>
29.1	Introduction . . . . .	546
29.2	Background . . . . .	547
29.2.1	Task Stack . . . . .	547
29.2.2	Execution . . . . .	547
29.3	Operations . . . . .	548
29.3.1	Initializing the Stack Bounds Checker . . . . .	548
29.3.2	Checking for Blown Task Stack . . . . .	548
29.3.3	Reporting Task Stack Usage . . . . .	548
29.3.4	When a Task Overflows the Stack . . . . .	548
29.4	Routines . . . . .	550
29.4.1	STACK_CHECKER_IS_BLOWN - Has Current Task Blown Its Stack . . . . .	550
29.4.2	STACK_CHECKER_REPORT_USAGE - Report Task Stack Usage . . . . .	550
<b>30</b>	<b>CPU Usage Statistics</b>	<b>551</b>
30.1	Introduction . . . . .	552
30.2	Background . . . . .	553
30.3	Operations . . . . .	554
30.3.1	Report CPU Usage Statistics . . . . .	554
30.3.2	Reset CPU Usage Statistics . . . . .	555
30.4	Directives . . . . .	556
30.4.1	cpu_usage_report - Report CPU Usage Statistics . . . . .	557
30.4.2	cpu_usage_reset - Reset CPU Usage Statistics . . . . .	558
<b>31</b>	<b>Object Services</b>	<b>559</b>
31.1	Introduction . . . . .	560
31.2	Background . . . . .	561
31.2.1	APIs . . . . .	561
31.2.2	Object Classes . . . . .	561
31.2.3	Object Names . . . . .	561
31.3	Operations . . . . .	562
31.3.1	Decomposing and Recomposing an Object Id . . . . .	562
31.3.2	Printing an Object Id . . . . .	562
31.4	Directives . . . . .	564
31.4.1	BUILD_NAME - Build object name from characters . . . . .	565
31.4.2	OBJECT_GET_CLASSIC_NAME - Lookup name from id . . . . .	566
31.4.3	OBJECT_GET_NAME - Obtain object name as string . . . . .	567
31.4.4	OBJECT_SET_NAME - Set object name . . . . .	568
31.4.5	OBJECT_ID_GET_API - Obtain API from Id . . . . .	569
31.4.6	OBJECT_ID_GET_CLASS - Obtain Class from Id . . . . .	570
31.4.7	OBJECT_ID_GET_NODE - Obtain Node from Id . . . . .	571
31.4.8	OBJECT_ID_GET_INDEX - Obtain Index from Id . . . . .	572
31.4.9	BUILD_ID - Build Object Id From Components . . . . .	573
31.4.10	OBJECT_ID_API_MINIMUM - Obtain Minimum API Value . . . . .	574
31.4.11	OBJECT_ID_API_MAXIMUM - Obtain Maximum API Value . . . . .	575
31.4.12	OBJECT_API_MINIMUM_CLASS - Obtain Minimum Class Value . . . . .	576

31.4.13	OBJECT_API_MAXIMUM_CLASS - Obtain Maximum Class Value . . . . .	577
31.4.14	OBJECT_ID_API_MINIMUM_CLASS - Obtain Minimum Class Value for an API . . . . .	578
31.4.15	OBJECT_ID_API_MAXIMUM_CLASS - Obtain Maximum Class Value for an API . . . . .	579
31.4.16	OBJECT_GET_API_NAME - Obtain API Name . . . . .	580
31.4.17	OBJECT_GET_API_CLASS_NAME - Obtain Class Name . . . . .	581
31.4.18	OBJECT_GET_CLASS_INFORMATION - Obtain Class Information . . . . .	582
31.4.19	OBJECT_GET_LOCAL_NODE - Obtain Local Node . . . . .	583
<b>32</b>	<b>Chains</b>	<b>585</b>
32.1	Introduction . . . . .	586
32.2	Background . . . . .	587
32.2.1	Nodes . . . . .	587
32.2.2	Controls . . . . .	587
32.3	Operations . . . . .	588
32.3.1	Multi-threading . . . . .	588
32.3.2	Creating a Chain . . . . .	588
32.3.3	Iterating a Chain . . . . .	588
32.4	Directives . . . . .	590
32.4.1	Initialize Chain With Nodes . . . . .	591
32.4.2	Initialize Empty . . . . .	592
32.4.3	Is Null Node ? . . . . .	593
32.4.4	Head . . . . .	594
32.4.5	Tail . . . . .	595
32.4.6	Are Two Nodes Equal ? . . . . .	596
32.4.7	Is the Chain Empty . . . . .	597
32.4.8	Is this the First Node on the Chain ? . . . . .	598
32.4.9	Is this the Last Node on the Chain ? . . . . .	599
32.4.10	Does this Chain have only One Node ? . . . . .	600
32.4.11	Returns the node count of the chain (unprotected) . . . . .	601
32.4.12	Is this Node the Chain Head ? . . . . .	602
32.4.13	Is this Node the Chain Tail ? . . . . .	603
32.4.14	Extract a Node . . . . .	604
32.4.15	Extract a Node (unprotected) . . . . .	605
32.4.16	Get the First Node . . . . .	606
32.4.17	Get the First Node (unprotected) . . . . .	607
32.4.18	Insert a Node . . . . .	608
32.4.19	Insert a Node (unprotected) . . . . .	609
32.4.20	Append a Node . . . . .	610
32.4.21	Append a Node (unprotected) . . . . .	611
32.4.22	Prepend a Node . . . . .	612
32.4.23	Prepend a Node (unprotected) . . . . .	613
<b>33</b>	<b>Red-Black Trees</b>	<b>615</b>
33.1	Introduction . . . . .	616
33.2	Background . . . . .	617
33.2.1	Nodes . . . . .	617
33.2.2	Controls . . . . .	617
33.3	Operations . . . . .	618
33.4	Directives . . . . .	619
33.4.1	Documentation for the Red-Black Tree Directives . . . . .	619

<b>34 Timespec Helpers</b>	<b>621</b>
34.1 Introduction	622
34.2 Background	623
34.2.1 Time Storage Conventions	623
34.3 Operations	624
34.3.1 Set and Obtain Timespec Value	624
34.3.2 Timespec Math	624
34.3.3 Comparing struct timespec Instances	624
34.3.4 Conversions and Validity Check	624
34.4 Directives	625
34.4.1 TIMESPEC_SET - Set struct timespec Instance	626
34.4.2 TIMESPEC_ZERO - Zero struct timespec Instance	627
34.4.3 TIMESPEC_IS_VALID - Check validity of a struct timespec instance	628
34.4.4 TIMESPEC_ADD_TO - Add Two struct timespec Instances	629
34.4.5 TIMESPEC_SUBTRACT - Subtract Two struct timespec Instances	630
34.4.6 TIMESPEC_DIVIDE - Divide Two struct timespec Instances	631
34.4.7 TIMESPEC_DIVIDE_BY_INTEGER - Divide a struct timespec Instance by an Integer	632
34.4.8 TIMESPEC_LESS_THAN - Less than operator	633
34.4.9 TIMESPEC_GREATER_THAN - Greater than operator	634
34.4.10 TIMESPEC_EQUAL_TO - Check equality of timespecs	635
34.4.11 TIMESPEC_GET_SECONDS - Get Seconds Portion of struct timespec Instance	636
34.4.12 TIMESPEC_GET_NANOSECONDS - Get Nanoseconds Portion of the struct timespec Instance	637
34.4.13 TIMESPEC_TO_TICKS - Convert struct timespec Instance to Ticks	638
34.4.14 TIMESPEC_FROM_TICKS - Convert Ticks to struct timespec Representation	639
<b>35 Constant Bandwidth Server Scheduler API</b>	<b>641</b>
35.1 Introduction	642
35.2 Background	643
35.2.1 Constant Bandwidth Server Definitions	643
35.2.2 Handling Periodic Tasks	643
35.2.3 Registering a Callback Function	643
35.2.4 Limitations	644
35.3 Operations	645
35.3.1 Setting up a server	645
35.3.2 Attaching Task to a Server	645
35.3.3 Detaching Task from a Server	645
35.3.4 Examples	645
35.4 Directives	647
35.4.1 CBS_INITIALIZE - Initialize the CBS library	648
35.4.2 CBS_CLEANUP - Cleanup the CBS library	649
35.4.3 CBS_CREATE_SERVER - Create a new bandwidth server	650
35.4.4 CBS_ATTACH_THREAD - Attach a thread to server	651
35.4.5 CBS_DETACH_THREAD - Detach a thread from server	652
35.4.6 CBS_DESTROY_SERVER - Destroy a bandwidth server	653
35.4.7 CBS_GET_SERVER_ID - Get an ID of a server	654
35.4.8 CBS_GET_PARAMETERS - Get scheduling parameters of a server	655
35.4.9 CBS_SET_PARAMETERS - Set scheduling parameters	656

35.4.10	CBS_GET_EXECUTION_TIME - Get elapsed execution time . . . . .	657
35.4.11	CBS_GET_REMAINING_BUDGET - Get remaining execution time . . . . .	658
35.4.12	CBS_GET_APPROVED_BUDGET - Get scheduler approved execution time	659
<b>36</b>	<b>Ada Support</b>	<b>661</b>
36.1	Introduction . . . . .	662
36.2	Ada Programming Language Support . . . . .	663
36.3	Classic API Ada Bindings . . . . .	664
<b>37</b>	<b>Linker Sets</b>	<b>665</b>
37.1	Introduction . . . . .	666
37.2	Background . . . . .	668
37.3	Directives . . . . .	669
37.3.1	RTEMS_LINKER_SET_BEGIN - Designator of the linker set begin marker	670
37.3.2	RTEMS_LINKER_SET_END - Designator of the linker set end marker . .	671
37.3.3	RTEMS_LINKER_SET_SIZE - The linker set size in characters . . . . .	672
37.3.4	RTEMS_LINKER_SET_ITEM_COUNT - The linker set item count . . . . .	673
37.3.5	RTEMS_LINKER_SET_IS_EMPTY - Is the linker set empty? . . . . .	674
37.3.6	RTEMS_LINKER_SET_FOREACH - Iterate through the linker set items . .	675
37.3.7	RTEMS_LINKER_ROSET_DECLARE - Declares a read-only linker set . . .	676
37.3.8	RTEMS_LINKER_ROSET - Defines a read-only linker set . . . . .	677
37.3.9	RTEMS_LINKER_ROSET_ITEM_DECLARE - Declares a read-only linker set item . . . . .	678
37.3.10	RTEMS_LINKER_ROSET_ITEM_ORDERED_DECLARE - Declares an ordered read-only linker set item . . . . .	679
37.3.11	RTEMS_LINKER_ROSET_ITEM_REFERENCE - References a read-only linker set item . . . . .	680
37.3.12	RTEMS_LINKER_ROSET_ITEM - Defines a read-only linker set item . . .	681
37.3.13	RTEMS_LINKER_ROSET_ITEM_ORDERED - Defines an ordered read- only linker set item . . . . .	682
37.3.14	RTEMS_LINKER_ROSET_CONTENT - Marks a declaration as a read-only linker set content . . . . .	683
37.3.15	RTEMS_LINKER_RWSET_DECLARE - Declares a read-write linker set . .	684
37.3.16	RTEMS_LINKER_RWSET - Defines a read-write linker set . . . . .	685
37.3.17	RTEMS_LINKER_RWSET_ITEM_DECLARE - Declares a read-write linker set item . . . . .	686
37.3.18	RTEMS_LINKER_RWSET_ITEM_ORDERED_DECLARE - Declares an ordered read-write linker set item . . . . .	687
37.3.19	RTEMS_LINKER_RWSET_ITEM_REFERENCE - References a read-write linker set item . . . . .	688
37.3.20	RTEMS_LINKER_RWSET_ITEM - Defines a read-write linker set item . .	689
37.3.21	RTEMS_LINKER_RWSET_ITEM_ORDERED - Defines an ordered read- write linker set item . . . . .	690
37.3.22	RTEMS_LINKER_RWSET_CONTENT - Marks a declaration as a read- write linker set content . . . . .	691
<b>38</b>	<b>Directive Status Codes</b>	<b>693</b>
38.1	Introduction . . . . .	694
38.2	Directives . . . . .	695
38.2.1	STATUS_TEXT - Returns the enumeration name for a status code . . . . .	696
<b>39</b>	<b>Example Application</b>	<b>697</b>

<b>40 Glossary</b>	<b>699</b>
<b>Bibliography</b>	<b>713</b>
<b>Index</b>	<b>717</b>





## Copyrights and License

© 2017 Chris Johns  
© 2017 Kuan-Hsun Chen  
© 2015, 2020 embedded brains GmbH  
© 2015, 2020 Sebastian Huber  
© 2011 Petr Benes  
© 2010 Gedare Bloom  
© 1988, 2018 On-Line Applications Research Corporation (OAR)

This document is available under the [Creative Commons Attribution-ShareAlike 4.0 International Public License](#).

The authors have used their best efforts in preparing this material. These efforts include the development, research, and testing of the theories and programs to determine their effectiveness. No warranty of any kind, expressed or implied, with regard to the software or the material contained in this document is provided. No liability arising out of the application or use of any product described in this document is assumed. The authors reserve the right to revise this material and to make changes from time to time in the content hereof without obligation to notify anyone of such revision or changes.

The RTEMS Project is hosted at <https://www.rtems.org>. Any inquiries concerning RTEMS, its related support components, or its documentation should be directed to the RTEMS Project community.

## RTEMS Online Resources

Home	<a href="https://www.rtems.org">https://www.rtems.org</a>
Documentation	<a href="https://docs.rtems.org">https://docs.rtems.org</a>
Mailing Lists	<a href="https://lists.rtems.org">https://lists.rtems.org</a>
Bug Reporting	<a href="https://devel.rtems.org/wiki/Developer/Bug_Reporting">https://devel.rtems.org/wiki/Developer/Bug_Reporting</a>
Git Repositories	<a href="https://git.rtems.org">https://git.rtems.org</a>
Developers	<a href="https://devel.rtems.org">https://devel.rtems.org</a>



## PREFACE

In recent years, the cost required to develop a software product has increased significantly while the target hardware costs have decreased. Now a larger portion of money is expended in developing, using, and maintaining software. The trend in computing costs is the complete dominance of software over hardware costs. Because of this, it is necessary that formal disciplines be established to increase the probability that software is characterized by a high degree of correctness, maintainability, and portability. In addition, these disciplines must promote practices that aid in the consistent and orderly development of a software system within schedule and budgetary constraints. To be effective, these disciplines must adopt standards which channel individual software efforts toward a common goal.

The push for standards in the software development field has been met with various degrees of success. The Microprocessor Operating Systems Interfaces (MOSI) effort has experienced only limited success. As popular as the UNIX operating system has grown, the attempt to develop a standard interface definition to allow portable application development has only recently begun to produce the results needed in this area. Unfortunately, very little effort has been expended to provide standards addressing the needs of the real-time community. Several organizations have addressed this need during recent years.

The Real Time Executive Interface Definition (RTEID) was developed by Motorola with technical input from Software Components Group [Mot88]. RTEID was adopted by the VMEbus International Trade Association (VITA) as a baseline draft for their proposed standard multiprocessor, real-time executive interface, Open Real-Time Kernel Interface Definition (ORKID) [VIT90]. These two groups worked together with the IEEE P1003.4 committee to ensure that the functionality of their proposed standards is adopted as the real-time extensions to POSIX.

This proposed standard defines an interface for the development of real-time software to ease the writing of real-time application programs that are directly portable across multiple real-time executive implementations. This interface includes both the source code interfaces and run-time behavior as seen by a real-time application. It does not include the details of how a kernel implements these functions. The standard's goal is to serve as a complete definition of external interfaces so that application code that conforms to these interfaces will execute properly in all real-time executive environments. With the use of a standards compliant executive, routines that acquire memory blocks, create and manage message queues, establish and use semaphores, and send and receive signals need not be redeveloped for a different real-time environment as long as the new environment is compliant with the standard. Software developers need only concentrate on the hardware dependencies of the real-time system. Furthermore, most hardware dependencies for real-time applications can be localized to the device drivers.

A compliant executive provides simple and flexible real-time multiprocessing. It easily lends itself to both tightly-coupled and loosely-coupled configurations (depending on the system hard-

ware configuration). Objects such as tasks, queues, events, signals, semaphores, and memory blocks can be designated as global objects and accessed by any task regardless of which processor the object and the accessing task reside.

The acceptance of a standard for real-time executives will produce the same advantages enjoyed from the push for UNIX standardization by AT&T's System V Interface Definition and IEEE's POSIX efforts. A compliant multiprocessing executive will allow close coupling between UNIX systems and real-time executives to provide the many benefits of the UNIX development environment to be applied to real-time software development. Together they provide the necessary laboratory environment to implement real-time, distributed, embedded systems using a wide variety of computer architectures.

A study was completed in 1988, within the Research, Development, and Engineering Center, U.S. Army Missile Command, which compared the various aspects of the Ada programming language as they related to the application of Ada code in distributed and/or multiple processing systems. Several critical conclusions were derived from the study. These conclusions have a major impact on the way the Army develops application software for embedded applications. These impacts apply to both in-house software development and contractor developed software.

A conclusion of the analysis, which has been previously recognized by other agencies attempting to utilize Ada in a distributed or multiprocessing environment, is that the Ada programming language does not adequately support multiprocessing. Ada does provide a mechanism for multi-tasking, however, this capability exists only for a single processor system. The language also does not have inherent capabilities to access global named variables, flags or program code. These critical features are essential in order for data to be shared between processors. However, these drawbacks do have workarounds which are sometimes awkward and defeat the intent of software maintainability and portability goals.

Another conclusion drawn from the analysis, was that the run time executives being delivered with the Ada compilers were too slow and inefficient to be used in modern missile systems. A run time executive is the core part of the run time system code, or operating system code, that controls task scheduling, input/output management and memory management. Traditionally, whenever efficient executive (also known as kernel) code was required by the application, the user developed in-house software. This software was usually written in assembly language for optimization.

Because of this shortcoming in the Ada programming language, software developers in research and development and contractors for project managed systems, are mandated by technology to purchase and utilize off-the-shelf third party kernel code. The contractor, and eventually the Government, must pay a licensing fee for every copy of the kernel code used in an embedded system.

The main drawback to this development environment is that the Government does not own, nor has the right to modify code contained within the kernel. V&V techniques in this situation are more difficult than if the complete source code were available. Responsibility for system failures due to faulty software is yet another area to be resolved under this environment.

The Guidance and Control Directorate began a software development effort to address these problems. A project to develop an experimental run time kernel was begun that will eliminate the major drawbacks of the Ada programming language mentioned above. The Real Time Executive for Multiprocessor Systems (RTEMS) provides full capabilities for management of tasks, interrupts, time, and multiple processors in addition to those features typical of generic operating systems. The code is Government owned, so no licensing fees are necessary. RTEMS has been implemented in both the Ada and C programming languages. It has been ported to the following processor families:

- Adapteva Epiphany
- Altera NIOS II
- Analog Devices Blackfin
- Atmel AVR
- ARM
- Freescale (formerly Motorola) MC68xxx
- Freescale (formerly Motorola) MC683xx
- Freescale (formerly Motorola) ColdFire
- Intel i386 and above
- Lattice Semiconductor LM32
- NEC V850
- MIPS
- Moxie Processor
- OpenRISC
- PowerPC
- Renesas (formerly Hitachi) SuperH
- Renesas (formerly Hitachi) H8/300
- Renesas M32C
- SPARC v7, v8, and V9

Since almost all of RTEMS is written in a high level language, ports to additional processor families require minimal effort.

RTEMS multiprocessor support is capable of handling either homogeneous or heterogeneous systems. The kernel automatically compensates for architectural differences (byte swapping, etc.) between processors. This allows a much easier transition from one processor family to another without a major system redesign.

Since the proposed standards are still in draft form, RTEMS cannot and does not claim compliance. However, the status of the standard is being carefully monitored to guarantee that RTEMS provides the functionality specified in the standard. Once approved, RTEMS will be made compliant.

This document is a detailed users guide for a functionally compliant real-time multiprocessor executive. It describes the user interface and run-time behavior of Release 4.10.99.0 of the C interface to RTEMS.



---

CHAPTER

**TWO**

---

# OVERVIEW

## 2.1 Introduction

RTEMS, Real-Time Executive for Multiprocessor Systems, is a real-time executive (kernel) which provides a high performance environment for embedded military applications including the following features:

- multitasking capabilities
- homogeneous and heterogeneous multiprocessor systems
- event-driven, priority-based, preemptive scheduling
- optional rate monotonic scheduling
- intertask communication and synchronization
- priority inheritance
- responsive interrupt management
- dynamic memory allocation
- high level of user configurability

This manual describes the usage of RTEMS for applications written in the C programming language. Those implementation details that are processor dependent are provided in the Applications Supplement documents. A supplement document which addresses specific architectural issues that affect RTEMS is provided for each processor type that is supported.



## 2.2 Real-time Application Systems

Real-time application systems are a special class of computer applications. They have a complex set of characteristics that distinguish them from other software problems. Generally, they must adhere to more rigorous requirements. The correctness of the system depends not only on the results of computations, but also on the time at which the results are produced. The most important and complex characteristic of real-time application systems is that they must receive and respond to a set of external stimuli within rigid and critical time constraints referred to as deadlines. Systems can be buried by an avalanche of interdependent, asynchronous or cyclical event streams.

Deadlines can be further characterized as either hard or soft based upon the value of the results when produced after the deadline has passed. A deadline is hard if the results have no value or if their use will result in a catastrophic event. In contrast, results which are produced after a soft deadline may have some value.

Another distinguishing requirement of real-time application systems is the ability to coordinate or manage a large number of concurrent activities. Since software is a synchronous entity, this presents special problems. One instruction follows another in a repeating synchronous cycle. Even though mechanisms have been developed to allow for the processing of external asynchronous events, the software design efforts required to process and manage these events and tasks are growing more complicated.

The design process is complicated further by spreading this activity over a set of processors instead of a single processor. The challenges associated with designing and building real-time application systems become very complex when multiple processors are involved. New requirements such as interprocessor communication channels and global resources that must be shared between competing processors are introduced. The ramifications of multiple processors complicate each and every characteristic of a real-time system.

## 2.3 Real-time Executive


Fortunately, real-time operating systems or real-time executives serve as a cornerstone on which to build the application system. A real-time multitasking executive allows an application to be cast into a set of logical, autonomous processes or tasks which become quite manageable. Each task is internally synchronous, but different tasks execute independently, resulting in an asynchronous processing stream. Tasks can be dynamically paused for many reasons resulting in a different task being allowed to execute for a period of time. The executive also provides an interface to other system components such as interrupt handlers and device drivers. System components may request the executive to allocate and coordinate resources, and to wait for and trigger synchronizing conditions. The executive system calls effectively extend the CPU instruction set to support efficient multitasking. By causing tasks to travel through well-defined state transitions, system calls permit an application to demand-switch between tasks in response to real-time events.

By proper grouping of responses to stimuli into separate tasks, a system can now asynchronously switch between independent streams of execution, directly responding to external stimuli as they occur. This allows the system design to meet critical performance specifications which are typically measured by guaranteed response time and transaction throughput. The multiprocessor extensions of RTEMS provide the features necessary to manage the extra requirements introduced by a system distributed across several processors. It removes the physical barriers of processor boundaries from the world of the system designer, enabling more critical aspects of the system to receive the required attention. Such a system, based on an efficient real-time, multiprocessor executive, is a more realistic model of the outside world or environment for which it is designed. As a result, the system will always be more logical, efficient, and reliable.

By using the directives provided by RTEMS, the real-time applications developer is freed from the problem of controlling and synchronizing multiple tasks and processors. In addition, one need not develop, test, debug, and document routines to manage memory, pass messages, or provide mutual exclusion. The developer is then able to concentrate solely on the application. By using standard software components, the time and cost required to develop sophisticated real-time applications is significantly reduced.

## 2.4 RTEMS Application Architecture


One important design goal of RTEMS was to provide a bridge between two critical layers of typical real-time systems. As shown in the following figure, RTEMS serves as a buffer between the project dependent application code and the target hardware. Most hardware dependencies for real-time applications can be localized to the low level device drivers.

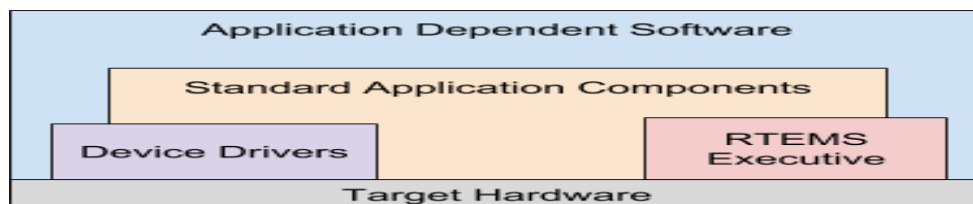

The RTEMS I/O interface manager provides an efficient tool for incorporating these hardware dependencies into the system while simultaneously providing a general mechanism to the application code that accesses them. A well designed real-time system can benefit from this architecture by building a rich library of standard application components which can be used repeatedly in other real-time projects.

## 2.5 RTEMS Internal Architecture

RTEMS can be viewed as a set of layered components that work in harmony to provide a set of services to a real-time application system. The executive interface presented to the application is formed by grouping directives into logical sets called resource managers. Functions utilized by multiple managers such as scheduling, dispatching, and object management are provided in the executive core. The executive core depends on a small set of CPU dependent routines. Together these components provide a powerful run time environment that promotes the development of efficient real-time application systems. The following figure illustrates this organization:

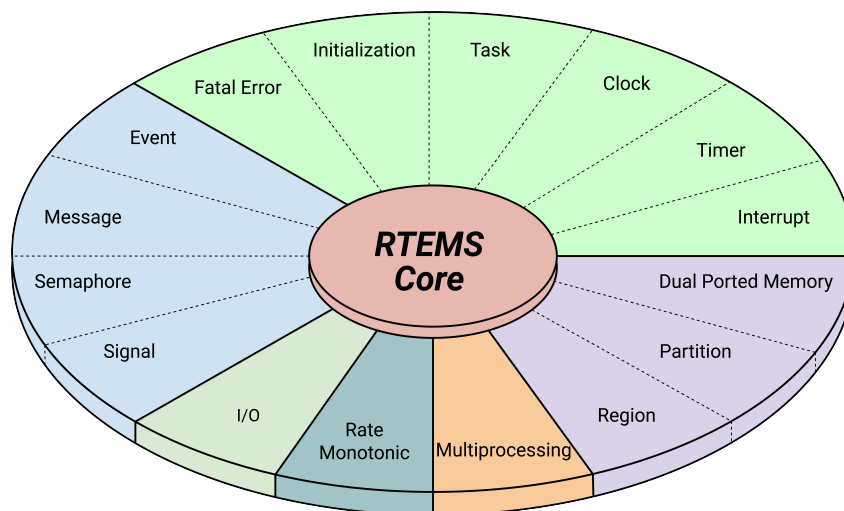

Subsequent chapters present a detailed description of the capabilities provided by each of the following RTEMS managers:

- initialization
- task
- interrupt
- clock
- timer
- semaphore
- message
- event
- signal
- partition
- region
- dual ported memory
- I/O
- fatal error
- rate monotonic
- user extensions

- multiprocessing

## 2.6 User Customization and Extensibility

As thirty-two bit microprocessors have decreased in cost, they have become increasingly common in a variety of embedded systems. A wide range of custom and general-purpose processor boards are based on various thirty-two bit processors. RTEMS was designed to make no assumptions concerning the characteristics of individual microprocessor families or of specific support hardware. In addition, RTEMS allows the system developer a high degree of freedom in customizing and extending its features.

RTEMS assumes the existence of a supported microprocessor and sufficient memory for both RTEMS and the real-time application. Board dependent components such as clocks, interrupt controllers, or I/O devices can be easily integrated with RTEMS. The customization and extensibility features allow RTEMS to efficiently support as many environments as possible.

## 2.7 Portability

The issue of portability was the major factor in the creation of RTEMS. Since RTEMS is designed to isolate the hardware dependencies in the specific board support packages, the real-time application should be easily ported to any other processor. The use of RTEMS allows the development of real-time applications which can be completely independent of a particular microprocessor architecture.

## 2.8 Memory Requirements

Since memory is a critical resource in many real-time embedded systems, RTEMS was specifically designed to automatically leave out all services that are not required from the run-time environment. Features such as networking, various filesystems, and many other features are completely optional. This allows the application designer the flexibility to tailor RTEMS to most efficiently meet system requirements while still satisfying even the most stringent memory constraints. As a result, the size of the RTEMS executive is application dependent.

RTEMS requires RAM to manage each instance of an RTEMS object that is created. Thus the more RTEMS objects an application needs, the more memory that must be reserved. See *Configuring a System* (page 369).

RTEMS utilizes memory for both code and data space. Although RTEMS' data space must be in RAM, its code space can be located in either ROM or RAM.



## 2.9 Audience

This manual was written for experienced real-time software developers. Although some background is provided, it is assumed that the reader is familiar with the concepts of task management as well as intertask communication and synchronization. Since directives, user related data structures, and examples are presented in C, a basic understanding of the C programming language is required to fully understand the material presented. However, because of the similarity of the Ada and C RTEMS implementations, users will find that the use and behavior of the two implementations is very similar. A working knowledge of the target processor is helpful in understanding some of RTEMS' features. A thorough understanding of the executive cannot be obtained without studying the entire manual because many of RTEMS' concepts and features are interrelated. Experienced RTEMS users will find that the manual organization facilitates its use as a reference document.

## 2.10 Conventions

The following conventions are used in this manual:

- Significant words or phrases as well as all directive names are printed in bold type.
- Items in bold capital letters are constants defined by RTEMS. Each language interface provided by RTEMS includes a file containing the standard set of constants, data types, and structure definitions which can be incorporated into the user application.
- A number of type definitions are provided by RTEMS and can be found in `rtems.h`.
- The characters “0x” preceding a number indicates that the number is in hexadecimal format. Any other numbers are assumed to be in decimal format.

## 2.11 Manual Organization

This first chapter has presented the introductory and background material for the RTEMS executive. The remaining chapters of this manual present a detailed description of RTEMS and the environment, including run time behavior, it creates for the user.

A chapter is dedicated to each manager and provides a detailed discussion of each RTEMS manager and the directives which it provides. The presentation format for each directive includes the following sections:

- Calling sequence
- Directive status codes
- Description
- Notes

The following provides an overview of the remainder of this manual:

### **Chapter 3:**

Key Concepts: presents an introduction to the ideas which are common across multiple RTEMS managers.

### **Chapter 4:**

RTEMS Data Types: describes the fundamental data types shared by the services in the RTEMS Classic API.

### **Chapter 5:**

Scheduling Concepts: details the various RTEMS scheduling algorithms and task state transitions.

### **Chapter 6:**

Initialization Manager: describes the functionality and directives provided by the Initialization Manager.

### **Chapter 7:**

Task Manager: describes the functionality and directives provided by the Task Manager.

### **Chapter 8:**

Interrupt Manager: describes the functionality and directives provided by the Interrupt Manager.

### **Chapter 9:**

Clock Manager: describes the functionality and directives provided by the Clock Manager.

### **Chapter 10:**

Timer Manager: describes the functionality and directives provided by the Timer Manager.

### **Chapter 11:**

Rate Monotonic Manager: describes the functionality and directives provided by the Rate Monotonic Manager.

### **Chapter 12:**

Semaphore Manager: describes the functionality and directives provided by the Semaphore Manager.

### **Chapter 13:**

Barrier Manager: describes the functionality and directives provided by the Barrier Manager.

**Chapter 14:**

Message Manager: describes the functionality and directives provided by the Message Manager.

**Chapter 15:**

Event Manager: describes the functionality and directives provided by the Event Manager.

**Chapter 16:**

Signal Manager: describes the functionality and directives provided by the Signal Manager.

**Chapter 17:**

Partition Manager: describes the functionality and directives provided by the Partition Manager.

**Chapter 18:**

Region Manager: describes the functionality and directives provided by the Region Manager.

**Chapter 19:**

Dual-Ported Memory Manager: describes the functionality and directives provided by the Dual-Ported Memory Manager.

**Chapter 20:**

I/O Manager: describes the functionality and directives provided by the I/O Manager.

**Chapter 21:**

Fatal Error Manager: describes the functionality and directives provided by the Fatal Error Manager.

**Chapter 22:**

Board Support Packages: defines the functionality required of user-supplied board support packages.

**Chapter 23:**

User Extensions: shows the user how to extend RTEMS to incorporate custom features.

**Chapter 24:**

Configuring a System: details the process by which one tailors RTEMS for a particular single-processor or multiprocessor application.

**Chapter 25:**

Self-Contained Objects: contains information about objects like threads, mutexes and semaphores.

**Chapter 26:**

Multiprocessing Manager: presents a conceptual overview of the multiprocessing capabilities provided by RTEMS as well as describing the Multiprocessing Communications Interface Layer and Multiprocessing Manager directives.

**Chapter 27:**

Symmetric Multiprocessing (SMP): information regarding the SMP features.

**Chapter 28:**

PCI Library: information about using the PCI bus in RTEMS.

**Chapter 29:**

Stack Bounds Checker: presents the capabilities of the RTEMS task stack checker which can report stack usage as well as detect bounds violations.

**Chapter 30:**

CPU Usage Statistics: presents the capabilities of the CPU Usage statistics gathered on a per task basis along with the mechanisms for reporting and resetting the statistics.

**Chapter 31:**

Object Services: presents a collection of helper services useful when manipulating RTEMS objects. These include methods to assist in obtaining an object's name in printable form. Additional services are provided to decompose an object Id and determine which API and object class it belongs to.

**Chapter 32:**

Chains: presents the methods provided to build, iterate and manipulate doubly-linked chains. This manager makes the chain implementation used internally by RTEMS to user space applications.

**Chapter 33:**

Red-Black Trees: information about how to use the Red-Black Tree API.

**Chapter 34:**

Timespec Helpers: presents a set of helper services useful when manipulating POSIX struct timespec instances.

**Chapter 35:**

Constant Bandwidth Server Scheduler API.

**Chapter 36:**

Ada Support: information about Ada programming language support.

**Chapter 37:**

Directive Status Codes: provides a definition of each of the directive status codes referenced in this manual.

**Chapter 38:**

Linker Sets: information about linker set features.

**Chapter 39:**

Example Application: provides a template for simple RTEMS applications.

**Chapter 40:**

Glossary: defines terms used throughout this manual.

**Chapter 41:**

References: References.

**Chapter 42:**

Index: Index.



## KEY CONCEPTS

## 3.1 Introduction

The facilities provided by RTEMS are built upon a foundation of very powerful concepts. These concepts must be understood before the application developer can efficiently utilize RTEMS. The purpose of this chapter is to familiarize one with these concepts.



## 3.2 Objects

RTEMS provides directives which can be used to dynamically create, delete, and manipulate a set of predefined object types. These types include tasks, message queues, semaphores, memory regions, memory partitions, timers, ports, and rate monotonic periods. The object-oriented nature of RTEMS encourages the creation of modular applications built upon re-usable “building block” routines.

All objects are created on the local node as required by the application and have an RTEMS assigned ID. All objects have a user-assigned name. Although a relationship exists between an object’s name and its RTEMS assigned ID, the name and ID are not identical. Object names are completely arbitrary and selected by the user as a meaningful “tag” which may commonly reflect the object’s use in the application. Conversely, object IDs are designed to facilitate efficient object manipulation by the executive.

### 3.2.1 Object Names

An object name is an unsigned thirty-two bit entity associated with the object by the user. The data type `rtems_name` is used to store object names.

Although not required by RTEMS, object names are often composed of four ASCII characters which help identify that object. For example, a task which causes a light to blink might be called “LITE”. The `rtems_build_name` routine is provided to build an object name from four ASCII characters. The following example illustrates this:

```
1 rtems_name my_name;  
2 my_name = rtems_build_name( 'L', 'I', 'T', 'E' );
```

However, it is not required that the application use ASCII characters to build object names. For example, if an application requires one-hundred tasks, it would be difficult to assign meaningful ASCII names to each task. A more convenient approach would be to name them the binary values one through one-hundred, respectively.

RTEMS provides a helper routine, `rtems_object_get_name`, which can be used to obtain the name of any RTEMS object using just its ID. This routine attempts to convert the name into a printable string.

The following example illustrates the use of this method to print an object name:

```
1 #include <rtems.h>  
2 #include <rtems/bspIo.h>  
3 void print_name(rtems_id id)  
4 {  
5     char buffer[10]; /* name assumed to be 10 characters or less */  
6     char *result;  
7     result = rtems_object_get_name( id, sizeof(buffer), buffer );  
8     printk( "ID=0x%08x name=%s\n", id, ((result) ? result : "no name") );  
9 }
```

### 3.2.2 Object IDs

An object ID is a unique 32-bit unsigned integer value which uniquely identifies an object instance. Object IDs are passed as arguments to many directives in RTEMS and RTEMS translates the ID to an internal object pointer. The efficient manipulation of object IDs is critical to the performance of some RTEMS services.

#### 3.2.2.1 Object ID Format

The thirty-two bit format for an object ID is composed of four parts: API, object class, node, and index. The data type `rtems_id` is used to store object IDs.



The most significant five bits are the object class. The next three bits indicate the API to which the object class belongs. The next eight bits (16-23) are the number of the node on which this object was created. The node number is always one (1) in a single processor system. The least significant sixteen bits form an identifier within a particular object type. This identifier, called the object index, ranges in value from 1 to the maximum number of objects configured for this object type.

### 3.2.3 Object ID Description

The components of an object ID make it possible to quickly locate any object in even the most complicated multiprocessor system. Object ID's are associated with an object by RTEMS when the object is created and the corresponding ID is returned by the appropriate object create directive. The object ID is required as input to all directives involving objects, except those which create an object or obtain the ID of an object.

The object identification directives can be used to dynamically obtain a particular object's ID given its name. This mapping is accomplished by searching the name table associated with this object type. If the name is non-unique, then the ID associated with the first occurrence of the name will be returned to the application. Since object IDs are returned when the object is created, the object identification directives are not necessary in a properly designed single processor application.

In addition, services are provided to portably examine the subcomponents of an RTEMS ID. These services are described in detail later in this manual but are prototyped as follows:

```

1 Objects_APIs rtems_object_id_get_api( rtems_id );
2 uint32_t rtems_object_id_get_class( rtems_id );
3 uint32_t rtems_object_id_get_node( rtems_id );
4 uint16_t rtems_object_id_get_index( rtems_id );

```

An object control block is a data structure defined by RTEMS which contains the information necessary to manage a particular object type. For efficiency reasons, the format of each object type's control block is different. However, many of the fields are similar in function. The number of each type of control block is application dependent and determined by the values specified

in the user's Configuration Table. An object control block is allocated at object create time and freed when the object is deleted. With the exception of user extension routines, object control blocks are not directly manipulated by user applications.

### 3.3 Communication and Synchronization

In real-time multitasking applications, the ability for cooperating execution threads to communicate and synchronize with each other is imperative. A real-time executive should provide an application with the following capabilities:

- Data transfer between cooperating tasks
- Data transfer between tasks and ISRs
- Synchronization of cooperating tasks
- Synchronization of tasks and ISRs

Most RTEMS managers can be used to provide some form of communication and/or synchronization. However, managers dedicated specifically to communication and synchronization provide well established mechanisms which directly map to the application's varying needs. This level of flexibility allows the application designer to match the features of a particular manager with the complexity of communication and synchronization required. The following managers were specifically designed for communication and synchronization:

- Semaphore
- Message Queue
- Event
- Signal

The semaphore manager supports mutual exclusion involving the synchronization of access to one or more shared user resources. Binary semaphores may utilize the optional priority inheritance algorithm to avoid the problem of priority inversion. The message manager supports both communication and synchronization, while the event manager primarily provides a high performance synchronization mechanism. The signal manager supports only asynchronous communication and is typically used for exception handling.

## 3.4 Locking Protocols

RTEMS supports the four locking protocols

- *Immediate Ceiling Priority Protocol (ICPP)* (page 29),
- *Priority Inheritance Protocol* (page 30),
- *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30), and
- *O(m) Independence-Preserving Protocol (OMIP)* (page 30)

for synchronization objects providing mutual-exclusion (mutex). The OMIP is only available in SMP configurations and replaces the priority inheritance protocol in this case. One aim of the locking protocols is to avoid priority inversion.

Since RTEMS 5.1, priority updates due to the locking protocols take place immediately and are propagated recursively. The mutex owner and wait for mutex relationships define a directed acyclic graph (DAG). The run-time of the mutex obtain, release and timeout operations depend on the complexity of this resource dependency graph.

### 3.4.1 Priority Inversion

Priority inversion is a form of indefinite postponement which is common in multitasking, preemptive executives with shared resources. Priority inversion occurs when a high priority tasks requests access to shared resource which is currently allocated to a low priority task. The high priority task must block until the low priority task releases the resource. This problem is exacerbated when the low priority task is prevented from executing by one or more medium priority tasks. Because the low priority task is not executing, it cannot complete its interaction with the resource and release that resource. The high priority task is effectively prevented from executing by lower priority tasks.

### 3.4.2 Immediate Ceiling Priority Protocol (ICPP)

Each mutex using the Immediate Ceiling Priority Protocol (ICPP) has a ceiling priority. The priority of the mutex owner is immediately raised to the ceiling priority of the mutex. In case the thread owning the mutex releases the mutex, then the normal priority of the thread is restored. This locking protocol is beneficial for schedulability analysis, see also [BW01].

This protocol avoids the possibility of changing the priority of the mutex owner multiple times since the ceiling priority must be set to the one of highest priority thread which will ever attempt to acquire that mutex. This requires an overall knowledge of the application as a whole. The need to identify the highest priority thread which will attempt to obtain a particular mutex can be a difficult task in a large, complicated system. Although the priority ceiling protocol is more efficient than the priority inheritance protocol with respect to the maximum number of thread priority changes which may occur while a thread owns a particular mutex, the priority inheritance protocol is more forgiving in that it does not require this apriori information.

### 3.4.3 Priority Inheritance Protocol

The priority of the mutex owner is raised to the highest priority of all threads that currently wait for ownership of this mutex [SRL90]. Since RTEMS 5.1, priority updates due to the priority inheritance protocol take place immediately and are propagated recursively. This means the priority inheritance is transitive since RTEMS 5.1. If a task A owning a priority inheritance mutex blocks on another priority inheritance mutex, then the owner of this mutex inherits the priority of the task A.

### 3.4.4 Multiprocessor Resource Sharing Protocol (MrsP)

The Multiprocessor Resource Sharing Protocol (MrsP) is a generalization of the priority ceiling protocol to clustered scheduling [BW13]. One of the design goals of MrsP is to enable an effective schedulability analysis using the sporadic task model. Each mutex using the MrsP has a ceiling priority for each scheduler instance. The priority of the mutex owner is immediately raised to the ceiling priority of the mutex defined for its home scheduler instance. In case the thread owning the mutex releases the mutex, then the normal priority of the thread is restored. Threads that wait for mutex ownership are not blocked with respect to the scheduler and instead perform a busy wait. The MrsP uses temporary thread migrations to foreign scheduler instances in case of a preemption of the mutex owner. This locking protocol is available since RTEMS 4.11. It was re-implemented in RTEMS 5.1 to overcome some shortcomings of the original implementation [CBHM15].

### 3.4.5 $O(m)$ Independence-Preserving Protocol (OMIP)

The  $O(m)$  Independence-Preserving Protocol (OMIP) is a generalization of the priority inheritance protocol to clustered scheduling which avoids the non-preemptive sections present with priority boosting [Bra13]. The  $m$  denotes the number of processors in the system. Similar to the uniprocessor priority inheritance protocol, the OMIP mutexes do not need any external configuration data, e.g. a ceiling priority. This makes them a good choice for general purpose libraries that need internal locking. The complex part of the implementation is contained in the thread queues and shared with the MrsP support. This locking protocol is available since RTEMS 5.1.

## 3.5 Thread Queues

In case more than one *thread* may wait on a synchronization object, e.g. a semaphore or a message queue, then the waiting threads are added to a data structure called the thread queue. Thread queues are named task wait queues in the Classic API. There are two thread queuing disciplines available which define the order of the threads on a particular thread queue. Threads can wait in FIFO or priority order.

In uniprocessor configurations, the priority queuing discipline just orders the threads according to their current priority and in FIFO order in case of equal priorities. However, in SMP configurations, the situation is a bit more difficult due to the support for clustered scheduling. It makes no sense to compare the priority values of two different scheduler instances. Thus, it is impossible to simply use one plain priority queue for threads of different clusters. Two levels of queues can be used as one way to solve the problem. The top-level queue provides FIFO ordering and contains priority queues. Each priority queue is associated with a scheduler instance and contains only threads of this scheduler instance. Threads are enqueued in the priority queues corresponding to their scheduler instances. To dequeue a thread, the highest priority thread of the first priority queue is selected. Once this is done, the first priority queue is appended to the top-level FIFO queue. This guarantees fairness with respect to the scheduler instances.

Such a two-level queue needs a considerable amount of memory if fast enqueue and dequeue operations are desired. Providing this storage per thread queue would waste a lot of memory in typical applications. Instead, each thread has a queue attached which resides in a dedicated memory space independent of other memory used for the thread (this approach was borrowed from FreeBSD). In case a thread needs to block, there are two options

- the object already has a queue, then the thread enqueues itself to this already present queue and the queue of the thread is added to a list of free queues for this object, or
- otherwise, the queue of the thread is given to the object and the thread enqueues itself to this queue.

In case the thread is dequeued, there are two options

- the thread is the last thread in the queue, then it removes this queue from the object and reclaims it for its own purpose, or
- otherwise, the thread removes one queue from the free list of the object and reclaims it for its own purpose.

Since there are usually more objects than threads, this actually reduces the memory demands. In addition the objects only contain a pointer to the queue structure. This helps to hide implementation details. Inter-cluster priority queues are available since RTEMS 5.1.

A doubly-linked list (chain) is used to implement the FIFO queues yielding a  $O(1)$  worst-case time complexity for enqueue and dequeue operations.

A red-black tree is used to implement the priority queues yielding a  $O(\log(n))$  worst-case time complexity for enqueue and dequeue operations with  $n$  being the count of threads already on the queue.

## 3.6 Time

The development of responsive real-time applications requires an understanding of how RTEMS maintains and supports time-related operations. The basic unit of time in RTEMS is known as a *clock tick* or simply *tick*. The tick interval is defined by the application configuration option `CONFIGURE_MICROSECONDS_PER_TICK` (page 384). The tick interval defines the basic resolution of all interval and calendar time operations. Obviously, the directives which use intervals or wall time cannot operate without some external mechanism which provides a periodic clock tick. This clock tick is provided by the clock driver. The tick precision and stability depends on the clock driver and interrupt latency. Most clock drivers provide a timecounter to measure the time with a higher resolution than the tick.

By tracking time in units of ticks, RTEMS is capable of supporting interval timing functions such as task delays, timeouts, timeslicing, the delayed execution of timer service routines, and the rate monotonic scheduling of tasks. An interval is defined as a number of ticks relative to the current time. For example, when a task delays for an interval of ten ticks, it is implied that the task will not execute until ten clock ticks have occurred. All intervals are specified using data type `rtems_interval`.

A characteristic of interval timing is that the actual interval period may be a fraction of a tick less than the interval requested. This occurs because the time at which the delay timer is set up occurs at some time between two clock ticks. Therefore, the first countdown tick occurs in less than the complete time interval for a tick. This can be a problem if the tick resolution is large.

The rate monotonic scheduling algorithm is a hard real-time scheduling methodology. This methodology provides rules which allows one to guarantee that a set of independent periodic tasks will always meet their deadlines even under transient overload conditions. The rate monotonic manager provides directives built upon the Clock Manager's interval timer support routines.

Interval timing is not sufficient for the many applications which require that time be kept in wall time or true calendar form. Consequently, RTEMS maintains the current date and time. This allows selected time operations to be scheduled at an actual calendar date and time. For example, a task could request to delay until midnight on New Year's Eve before lowering the ball at Times Square. The data type `rtems_time_of_day` is used to specify calendar time in RTEMS services. See *Time and Date Data Structures* (page 143).



## 3.7 Timer and Timeouts

Timer and timeout services are a standard component of an operating system. The use cases fall roughly into two categories:

- Timeouts – used to detect if some operations need more time than expected. Since the unexpected happens hopefully rarely, timeout timers are usually removed before they expire. The critical operations are insert and removal. For example, they are important for the performance of a network stack.
- Timers – used to carry out some work in the future. They usually expire and need a high resolution. An example use case is a time driven scheduler, e.g. rate-monotonic or EDF.

In RTEMS versions prior to 5.1 the timer and timeout support was implemented by means of delta chains. This implementation was unfit for SMP systems due to several reasons. The new implementation present since RTEMS 5.1 uses a red-black tree with the expiration time as the key. This leads to  $O(\log(n))$  worst-case insert and removal operations for  $n$  active timer or timeouts. Each processor provides its own timer and timeout service point so that it scales well with the processor count of the system. For each operation it is sufficient to acquire and release a dedicated SMP lock only once. The drawback is that a 64-bit integer type is required internally for the intervals to avoid a potential overflow of the key values.

An alternative to the red-black tree based implementation would be the use of a timer wheel based algorithm [VL87] which is used in Linux and FreeBSD [VC95] for example. A timer wheel based algorithm offers  $O(1)$  worst-case time complexity for insert and removal operations. The drawback is that the run-time of the clock tick procedure is unpredictable due to the use of a hash table or cascading.

The red-black tree approach was selected for RTEMS, since it offers a more predictable run-time behaviour. However, this sacrifices the constant insert and removal operations offered by the timer wheel algorithms. See also [GN06]. The implementation can re-use the red-black tree support already used in other areas, e.g. for the thread priority queues. Less code is a good thing for size, testing and verification.

## 3.8 Memory Management

RTEMS memory management facilities can be grouped into two classes: dynamic memory allocation and address translation. Dynamic memory allocation is required by applications whose memory requirements vary through the application's course of execution. Address translation is needed by applications which share memory with another CPU or an intelligent Input/Output processor. The following RTEMS managers provide facilities to manage memory:

- Region
- Partition
- Dual Ported Memory

RTEMS memory management features allow an application to create simple memory pools of fixed size buffers and/or more complex memory pools of variable size segments. The partition manager provides directives to manage and maintain pools of fixed size entities such as resource control blocks. Alternatively, the region manager provides a more general purpose memory allocation scheme that supports variable size blocks of memory which are dynamically obtained and freed by the application. The dual-ported memory manager provides executive support for address translation between internal and external dual-ported RAM address space.

# RTEMS DATA TYPES

## 4.1 Introduction

This chapter contains a complete list of the RTEMS primitive data types in alphabetical order. This is intended to be an overview and the user is encouraged to look at the appropriate chapters in the manual for more information about the usage of the various data types.

## 4.2 List of Data Types

The following is a complete list of the RTEMS primitive data types in alphabetical order:

### **rtcms\_address**

The data type used to manage addresses. It is equivalent to a void \* pointer.

### **rtcms\_asr**

The return type for an RTEMS ASR.

### **rtcms\_asr\_entry**

The address of the entry point to an RTEMS ASR.

### **rtcms\_attribute**

The data type used to manage the attributes for RTEMS objects. It is primarily used as an argument to object create routines to specify characteristics of the new object.

### **rtcms\_boolean**

This type is deprecated will be removed in RTEMS 6.1. Use bool instead.

### **rtcms\_context**

This type is deprecated will be removed in RTEMS 6.1.

### **rtcms\_context\_fp**

This type is deprecated will be removed in RTEMS 6.1.

### **rtcms\_device\_driver**

The return type for a RTEMS device driver routine.

### **rtcms\_device\_driver\_entry**

The entry point to a RTEMS device driver routine.

### **rtcms\_device\_major\_number**

The data type used to manage device major numbers.

### **rtcms\_device\_minor\_number**

The data type used to manage device minor numbers.

### **rtcms\_double**

This type is deprecated will be removed in RTEMS 6.1. Use double instead.

### **rtcms\_event\_set**

The data type used to manage and manipulate RTEMS event sets with the Event Manager.

### **rtcms\_extension**

The return type for RTEMS user extension routines.

### **rtcms\_fatal\_extension**

The entry point for a fatal error user extension handler routine.

### **rtcms\_id**

The data type used to manage and manipulate RTEMS object IDs.

### **rtcms\_interrupt\_frame**

The data structure that defines the format of the interrupt stack frame as it appears to a user ISR. This data structure is only defined on architectures that pass the frame pointer to the ISR handler.

### **rtcms\_interrupt\_level**

The data structure used with the `rtcms_interrupt_disable`, `rtcms_interrupt_enable`, and

`rtems_interrupt_flash` routines. This data type is CPU dependent and usually corresponds to the contents of the processor register containing the interrupt mask level.

**rtems\_interval**

The data type used to manage and manipulate time intervals. Intervals are non-negative integers used to measure the length of time in clock ticks.

**rtems\_isr**

The return type of a function implementing an RTEMS ISR.

**rtems\_isr\_entry**

The address of the entry point to an RTEMS ISR. It is equivalent to the entry point of the function implementing the ISR.

**rtems\_mp\_packet\_classes**

The enumerated type which specifies the categories of multiprocessing messages. For example, one of the classes is for messages that must be processed by the Task Manager.

**rtems\_mode**

The data type used to manage and dynamically manipulate the execution mode of an RTEMS task.

**rtems\_mpci\_entry**

The return type of an RTEMS MPCPI routine.

**rtems\_mpci\_get\_packet\_entry**

The address of the entry point to the get packet routine for an MPCPI implementation.

**rtems\_mpci\_initialization\_entry**

The address of the entry point to the initialization routine for an MPCPI implementation.

**rtems\_mpci\_receive\_packet\_entry**

The address of the entry point to the receive packet routine for an MPCPI implementation.

**rtems\_mpci\_return\_packet\_entry**

The address of the entry point to the return packet routine for an MPCPI implementation.

**rtems\_mpci\_send\_packet\_entry**

The address of the entry point to the send packet routine for an MPCPI implementation.

**rtems\_mpci\_table**

The data structure containing the configuration information for an MPCPI.

**rtems\_name**

The data type used to contain the name of a Classic API object. It is an unsigned thirty-two bit integer which can be treated as a numeric value or initialized using `rtems_build_name` to contain four ASCII characters.

**rtems\_option**

The data type used to specify which behavioral options the caller desires. It is commonly used with potentially blocking directives to specify whether the caller is willing to block or return immediately with an error indicating that the resource was not available.

**rtems\_packet\_prefix**

The data structure that defines the first bytes in every packet sent between nodes in an RTEMS multiprocessor system. It contains routing information that is expected to be used by the MPCPI layer.

**rtems\_signal\_set**

The data type used to manage and manipulate RTEMS signal sets with the Signal Manager.

**int8\_t**

The C99 data type that corresponds to signed eight bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**int16\_t**

The C99 data type that corresponds to signed sixteen bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**int32\_t**

The C99 data type that corresponds to signed thirty-two bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**int64\_t**

The C99 data type that corresponds to signed sixty-four bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**rtems\_single**

This type is deprecated will be removed in RTEMS 6.1. Use `float` instead.

**rtems\_status\_code**

The return type for most RTEMS services. This is an enumerated type of approximately twenty-five values. In general, when a service returns a particular status code, it indicates that a very specific error condition has occurred.

**rtems\_task**

The return type for an RTEMS Task.

**rtems\_task\_argument**

The data type for the argument passed to each RTEMS task. In RTEMS 4.7 and older, this is an unsigned thirty-two bit integer. In RTEMS 4.8 and newer, this is based upon the C99 type `uintptr_t` which is guaranteed to be an integer large enough to hold a pointer on the target architecture.

**rtems\_task\_begin\_extension**

The entry point for a task beginning execution user extension handler routine.

**rtems\_task\_create\_extension**

The entry point for a task creation execution user extension handler routine.

**rtems\_task\_delete\_extension**

The entry point for a task deletion user extension handler routine.

**rtems\_task\_entry**

The address of the entry point to an RTEMS ASR. It is equivalent to the entry point of the function implementing the ASR.

**rtems\_task\_exitted\_extension**

The entry point for a task exited user extension handler routine.

**rtems\_task\_priority**

The data type used to manage and manipulate task priorities.

**rtems\_task\_restart\_extension**

The entry point for a task restart user extension handler routine.

**rtems\_task\_start\_extension**

The entry point for a task start user extension handler routine.

**rtems\_task\_switch\_extension**

The entry point for a task context switch user extension handler routine.

**rtems\_tcb**

The data structure associated with each task in an RTEMS system.

**rtems\_time\_of\_day**

The data structure used to manage and manipulate calendar time in RTEMS.

**rtems\_timer\_service\_routine**

The return type for an RTEMS Timer Service Routine.

**rtems\_timer\_service\_routine\_entry**

The address of the entry point to an RTEMS TSR. It is equivalent to the entry point of the function implementing the TSR.

**rtems\_vector\_number**

The data type used to manage and manipulate interrupt vector numbers.

**uint8\_t**

The C99 data type that corresponds to unsigned eight bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**uint16\_t**

The C99 data type that corresponds to unsigned sixteen bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**uint32\_t**

The C99 data type that corresponds to unsigned thirty-two bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**uint64\_t**

The C99 data type that corresponds to unsigned sixty-four bit integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.

**uintptr\_t**

The C99 data type that corresponds to the unsigned integer type that is of sufficient size to represent addresses as unsigned integers. This data type is defined by RTEMS in a manner that ensures it is portable across different target processors.



# SCHEDULING CONCEPTS

## 5.1 Introduction

The concept of scheduling in real-time systems dictates the ability to provide an immediate response to specific external events, particularly the necessity of scheduling tasks to run within a specified time limit after the occurrence of an event. For example, software embedded in life-support systems used to monitor hospital patients must take instant action if a change in the patient's status is detected.

The component of RTEMS responsible for providing this capability is appropriately called the scheduler. The scheduler's sole purpose is to allocate the all important resource of processor time to the various tasks competing for attention.

The directives provided by the scheduler manager are:

- `rtems_scheduler_ident` (page 54) - Get ID of a scheduler
- `rtems_scheduler_ident_by_processor` (page 55) - Get ID of a scheduler by processor
- `rtems_scheduler_ident_by_processor_set` (page 56) - Get ID of a scheduler by processor set
- `rtems_scheduler_get_maximum_priority` (page 57) - Get maximum task priority of a scheduler
- `rtems_scheduler_map_priority_to_posix` (page 58) - Map task priority to POSIX thread priority
- `rtems_scheduler_map_priority_from_posix` (page 59) - Map POSIX thread priority to task priority
- `rtems_scheduler_get_processor` (page 60) - Get current processor index
- `rtems_scheduler_get_processor_maximum` (page 61) - Get processor maximum
- `rtems_scheduler_get_processor_set` (page 62) - Get processor set of a scheduler
- `rtems_scheduler_add_processor` (page 63) - Add processor to a scheduler
- `rtems_scheduler_remove_processor` (page 64) - Remove processor from a scheduler

### 5.1.1 Scheduling Algorithms

RTEMS provides a plugin framework that allows it to support multiple scheduling algorithms. RTEMS includes multiple scheduling algorithms, and the user can select which of these they wish to use in their application at link-time. In addition, the user can implement their own scheduling algorithm and configure RTEMS to use it.

Supporting multiple scheduling algorithms gives the end user the option to select the algorithm which is most appropriate to their use case. Most real-time operating systems schedule tasks using a priority based algorithm, possibly with preemption control. The classic RTEMS scheduling algorithm which was the only algorithm available in RTEMS 4.10 and earlier, is a fixed-priority scheduling algorithm. This scheduling algorithm is suitable for uniprocessor (e.g., non-SMP) systems and is known as the *Deterministic Priority Scheduler*. Unless the user configures another scheduling algorithm, RTEMS will use this on uniprocessor systems.

### 5.1.2 Priority Scheduling

When using priority based scheduling, RTEMS allocates the processor using a priority-based, preemptive algorithm augmented to provide round-robin characteristics within individual priority groups. The goal of this algorithm is to guarantee that the task which is executing on the processor at any point in time is the one with the highest priority among all tasks in the ready state.

When a task is added to the ready chain, it is placed behind all other tasks of the same priority. This rule provides a round-robin within a priority group scheduling characteristic. This means that in a group of equal priority tasks, tasks will execute in the order they become ready or FIFO order. Even though there are ways to manipulate and adjust task priorities, the most important rule to remember is:

---

**Note:** Priority based scheduling algorithms will always select the highest priority task that is ready to run when allocating the processor to a task.

---

Priority scheduling is the most commonly used scheduling algorithm. It should be used by applications in which multiple tasks contend for CPU time or other resources, and there is a need to ensure certain tasks are given priority over other tasks.

There are a few common methods of accomplishing the mechanics of this algorithm. These ways involve a list or chain of tasks in the ready state.

- The least efficient method is to randomly place tasks in the ready chain forcing the scheduler to scan the entire chain to determine which task receives the processor.
- A more efficient method is to schedule the task by placing it in the proper place on the ready chain based on the designated scheduling criteria at the time it enters the ready state. Thus, when the processor is free, the first task on the ready chain is allocated the processor.
- Another mechanism is to maintain a list of FIFOs per priority. When a task is readied, it is placed on the rear of the FIFO for its priority. This method is often used with a bitmap to assist in locating which FIFOs have ready tasks on them. This data structure has  $O(1)$  insert, extract and find highest ready run-time complexities.
- A red-black tree may be used for the ready queue with the priority as the key. This data structure has  $O(\log(n))$  insert, extract and find highest ready run-time complexities while  $n$  is the count of tasks in the ready queue.

RTEMS currently includes multiple priority based scheduling algorithms as well as other algorithms that incorporate deadline. Each algorithm is discussed in the following sections.

## 5.2 Uniprocessor Schedulers

All uniprocessor schedulers included in RTEMS are priority based. The processor is allocated to the highest priority task allowed to run.

### 5.2.1 Deterministic Priority Scheduler

This is the scheduler implementation which has always been in RTEMS. After the 4.10 release series, it was factored into a pluggable scheduler selection. It schedules tasks using a priority based algorithm which takes into account preemption. It is implemented using an array of FIFOs with a FIFO per priority. It maintains a bitmap which is used to track which priorities have ready tasks.

This algorithm is deterministic (e.g., predictable and fixed) in execution time. This comes at the cost of using slightly over three (3) kilobytes of RAM on a system configured to support 256 priority levels.

This scheduler is only aware of a single core.

### 5.2.2 Simple Priority Scheduler

This scheduler implementation has the same behaviour as the Deterministic Priority Scheduler but uses only one linked list to manage all ready tasks. When a task is readied, a linear search of that linked list is performed to determine where to insert the newly readied task.

This algorithm uses much less RAM than the Deterministic Priority Scheduler but is  $O(n)$  where  $n$  is the number of ready tasks. In a small system with a small number of tasks, this will not be a performance issue. Reducing RAM consumption is often critical in small systems that are incapable of supporting a large number of tasks.

This scheduler is only aware of a single core.

### 5.2.3 Earliest Deadline First Scheduler

This is an alternative scheduler in RTEMS for single-core applications. The primary EDF advantage is high total CPU utilization (theoretically up to 100%). It assumes that tasks have priorities equal to deadlines.

This EDF is initially preemptive, however, individual tasks may be declared not-preemptive. Deadlines are declared using only Rate Monotonic manager whose goal is to handle periodic behavior. Period is always equal to the deadline. All ready tasks reside in a single ready queue implemented using a red-black tree.

This implementation of EDF schedules two different types of task priority types while each task may switch between the two types within its execution. If a task does have a deadline declared using the Rate Monotonic manager, the task is deadline-driven and its priority is equal to deadline. On the contrary, if a task does not have any deadline or the deadline is cancelled using the Rate Monotonic manager, the task is considered a background task with priority equal to that assigned upon initialization in the same manner as for priority scheduler. Each background task is of lower importance than each deadline-driven one and is scheduled when no deadline-driven task and no higher priority background task is ready to run.

Every deadline-driven scheduling algorithm requires means for tasks to claim a deadline. The Rate Monotonic Manager is responsible for handling periodic execution. In RTEMS periods are equal to deadlines, thus if a task announces a period, it has to be finished until the end of this period. The call of `rtems_rate_monotonic_period` passes the scheduler the length of an oncoming deadline. Moreover, the `rtems_rate_monotonic_cancel` and `rtems_rate_monotonic_delete` calls clear the deadlines assigned to the task.

#### 5.2.4 Constant Bandwidth Server Scheduling (CBS)

This is an alternative scheduler in RTEMS for single-core applications. The CBS is a budget aware extension of EDF scheduler. The main goal of this scheduler is to ensure temporal isolation of tasks meaning that a task's execution in terms of meeting deadlines must not be influenced by other tasks as if they were run on multiple independent processors.

Each task can be assigned a server (current implementation supports only one task per server). The server is characterized by period (deadline) and computation time (budget). The ratio budget/period yields bandwidth, which is the fraction of CPU to be reserved by the scheduler for each subsequent period.

The CBS is equipped with a set of rules applied to tasks attached to servers ensuring that deadline miss because of another task cannot occur. In case a task breaks one of the rules, its priority is pulled to background until the end of its period and then restored again. The rules are:

- Task cannot exceed its registered budget,
- Task cannot be unblocked when a ratio between remaining budget and remaining deadline is higher than declared bandwidth.

The CBS provides an extensive API. Unlike EDF, the `rtems_rate_monotonic_period` does not declare a deadline because it is carried out using CBS API. This call only announces next period.

## 5.3 SMP Schedulers

All SMP schedulers included in RTEMS are priority based. The processors managed by a scheduler instance are allocated to the highest priority tasks allowed to run.

### 5.3.1 Earliest Deadline First SMP Scheduler

This is a job-level fixed-priority scheduler using the Earliest Deadline First (EDF) method. By convention, the maximum priority level is  $\min(INT\_MAX, 2^{62} - 1)$  for background tasks. Tasks without an active deadline are background tasks. In case deadlines are not used, then the EDF scheduler behaves exactly like a fixed-priority scheduler. The tasks with an active deadline have a higher priority than the background tasks. This scheduler supports *task processor affinities* (page 109) of one-to-one and one-to-all, e.g., a task can execute on exactly one processor or all processors managed by the scheduler instance. The processor affinity set of a task must contain all online processors to select the one-to-all affinity. This is to avoid pathological cases if processors are added/removed to/from the scheduler instance at run-time. In case the processor affinity set contains not all online processors, then a one-to-one affinity will be used selecting the processor with the largest index within the set of processors currently owned by the scheduler instance. This scheduler algorithm supports *thread pinning* (page 534). The ready queues use a red-black tree with the task priority as the key.

This scheduler algorithm is the default scheduler in SMP configurations if more than one processor is configured (`CONFIGURE_MAXIMUM_PROCESSORS` (page 382)).

### 5.3.2 Deterministic Priority SMP Scheduler

A fixed-priority scheduler which uses a table of chains with one chain per priority level for the ready tasks. The maximum priority level is configurable. By default, the maximum priority level is 255 (256 priority levels).

### 5.3.3 Simple Priority SMP Scheduler

A fixed-priority scheduler which uses a sorted chain for the ready tasks. By convention, the maximum priority level is 255. The implementation limit is actually  $2^{63} - 1$ .

### 5.3.4 Arbitrary Processor Affinity Priority SMP Scheduler

A fixed-priority scheduler which uses a table of chains with one chain per priority level for the ready tasks. The maximum priority level is configurable. By default, the maximum priority level is 255 (256 priority levels). This scheduler supports arbitrary task processor affinities. The worst-case run-time complexity of some scheduler operations exceeds  $O(n)$  while  $n$  is the count of ready tasks.

## 5.4 Scheduling Modification Mechanisms

RTEMS provides four mechanisms which allow the user to alter the task scheduling decisions:

- user-selectable task priority level
- task preemption control
- task timeslicing control
- manual round-robin selection

Each of these methods provides a powerful capability to customize sets of tasks to satisfy the unique and particular requirements encountered in custom real-time applications. Although each mechanism operates independently, there is a precedence relationship which governs the effects of scheduling modifications. The evaluation order for scheduling characteristics is always priority, preemption mode, and timeslicing. When reading the descriptions of timeslicing and manual round-robin it is important to keep in mind that preemption (if enabled) of a task by higher priority tasks will occur as required, overriding the other factors presented in the description.

### 5.4.1 Task Priority and Scheduling

The most significant task scheduling modification mechanism is the ability for the user to assign a priority level to each individual task when it is created and to alter a task's priority at run-time. The maximum priority level depends on the configured scheduler. A lower priority level means higher priority (higher importance). The maximum priority level of the default uniprocessor scheduler is 255.

### 5.4.2 Preemption

Another way the user can alter the basic scheduling algorithm is by manipulating the preemption mode flag (`RTEMS_PREEMPT_MASK`) of individual tasks. If preemption is disabled for a task (`RTEMS_NO_PREEMPT`), then the task will not relinquish control of the processor until it terminates, blocks, or re-enables preemption. Even tasks which become ready to run and possess higher priority levels will not be allowed to execute. Note that the preemption setting has no effect on the manner in which a task is scheduled. It only applies once a task has control of the processor.

### 5.4.3 Timeslicing

Timeslicing or round-robin scheduling is an additional method which can be used to alter the basic scheduling algorithm. Like preemption, timeslicing is specified on a task by task basis using the timeslicing mode flag (`RTEMS_TIMESLICE_MASK`). If timeslicing is enabled for a task (`RTEMS_TIMESLICE`), then RTEMS will limit the amount of time the task can execute before the processor is allocated to another task. Each tick of the real-time clock reduces the currently running task's timeslice. When the execution time equals the timeslice, RTEMS will dispatch another task of the same priority to execute. If there are no other tasks of the same priority ready to execute, then the current task is allocated an additional timeslice and continues to run. Remember that a higher priority task will preempt the task (unless preemption is disabled) as soon as it is ready to run, even if the task has not used up its entire timeslice.

#### 5.4.4 Manual Round-Robin

The final mechanism for altering the RTEMS scheduling algorithm is called manual round-robin. Manual round-robin is invoked by using the `rtems_task_wake_after` directive with a time interval of `RTEMS_YIELD_PROCESSOR`. This allows a task to give up the processor and be immediately returned to the ready chain at the end of its priority group. If no other tasks of the same priority are ready to run, then the task does not lose control of the processor.



## 5.5 Dispatching Tasks

The dispatcher is the RTEMS component responsible for allocating the processor to a ready task. In order to allocate the processor to one task, it must be deallocated or retrieved from the task currently using it. This involves a concept called a context switch. To perform a context switch, the dispatcher saves the context of the current task and restores the context of the task which has been allocated to the processor. Saving and restoring a task's context is the storing/loading of all the essential information about a task to enable it to continue execution without any effects of the interruption. For example, the contents of a task's register set must be the same when it is given the processor as they were when it was taken away. All of the information that must be saved or restored for a context switch is located either in the TCB or on the task's stacks.


Tasks that utilize a numeric coprocessor and are created with the `RTEMS_FLOATING_POINT` attribute require additional operations during a context switch. These additional operations are necessary to save and restore the floating point context of `RTEMS_FLOATING_POINT` tasks. To avoid unnecessary save and restore operations, the state of the numeric coprocessor is only saved when a `RTEMS_FLOATING_POINT` task is dispatched and that task was not the last task to utilize the coprocessor.

## 5.6 Task State Transitions

Tasks in an RTEMS system must always be in one of the five allowable task states. These states are: executing, ready, blocked, dormant, and non-existent.

A task occupies the non-existent state before a `rtems_task_create` has been issued on its behalf. A task enters the non-existent state from any other state in the system when it is deleted with the `rtems_task_delete` directive. While a task occupies this state it does not have a TCB or a task ID assigned to it; therefore, no other tasks in the system may reference this task.

When a task is created via the `rtems_task_create` directive, it enters the dormant state. This state is not entered through any other means. Although the task exists in the system, it cannot actively compete for system resources. It will remain in the dormant state until it is started via the `rtems_task_start` directive, at which time it enters the ready state. The task is now permitted to be scheduled for the processor and to compete for other system resources.

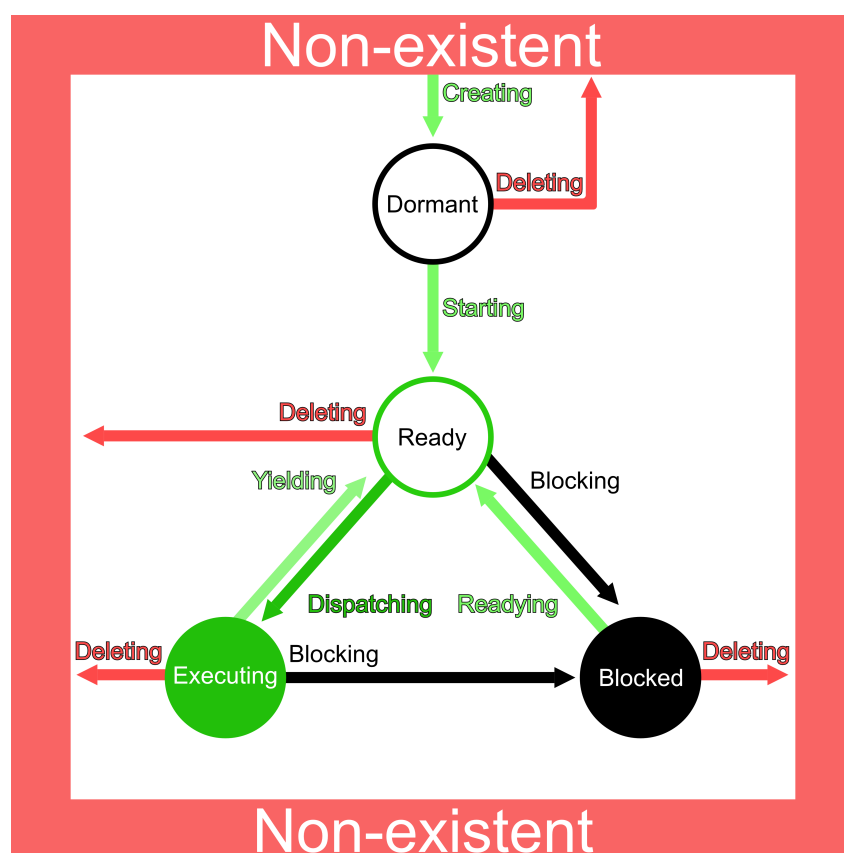

A task occupies the blocked state whenever it is unable to be scheduled to run. A running task may block itself or be blocked by other tasks in the system. The running task blocks itself through voluntary operations that cause the task to wait. The only way a task can block a task other than itself is with the `rtems_task_suspend` directive. A task enters the blocked state due to any of the following conditions:

- A task issues a `rtems_task_suspend` directive which blocks either itself or another task in the system.
- The running task issues a `rtems_barrier_wait` directive.
- The running task issues a `rtems_message_queue_receive` directive with the wait option, and the message queue is empty.

- The running task issues a `rtems_event_receive` directive with the wait option, and the currently pending events do not satisfy the request.
- The running task issues a `rtems_semaphore_obtain` directive with the wait option and the requested semaphore is unavailable.
- The running task issues a `rtems_task_wake_after` directive which blocks the task for the given time interval. If the time interval specified is zero, the task yields the processor and remains in the ready state.
- The running task issues a `rtems_task_wake_when` directive which blocks the task until the requested date and time arrives.
- The running task issues a `rtems_rate_monotonic_period` directive and must wait for the specified rate monotonic period to conclude.
- The running task issues a `rtems_region_get_segment` directive with the wait option and there is not an available segment large enough to satisfy the task's request.

A blocked task may also be suspended. Therefore, both the suspension and the blocking condition must be removed before the task becomes ready to run again.

A task occupies the ready state when it is able to be scheduled to run, but currently does not have control of the processor. Tasks of the same or higher priority will yield the processor by either becoming blocked, completing their timeslice, or being deleted. All tasks with the same priority will execute in FIFO order. A task enters the ready state due to any of the following conditions:

- A running task issues a `rtems_task_resume` directive for a task that is suspended and the task is not blocked waiting on any resource.
- A running task issues a `rtems_message_queue_send`, `rtems_message_queue_broadcast`, or a `rtems_message_queue_urgent` directive which posts a message to the queue on which the blocked task is waiting.
- A running task issues an `rtems_event_send` directive which sends an event condition to a task that is blocked waiting on that event condition.
- A running task issues a `rtems_semaphore_release` directive which releases the semaphore on which the blocked task is waiting.
- A timeout interval expires for a task which was blocked by a call to the `rtems_task_wake_after` directive.
- A timeout period expires for a task which blocked by a call to the `rtems_task_wake_when` directive.
- A running task issues a `rtems_region_return_segment` directive which releases a segment to the region on which the blocked task is waiting and a resulting segment is large enough to satisfy the task's request.
- A rate monotonic period expires for a task which blocked by a call to the `rtems_rate_monotonic_period` directive.
- A timeout interval expires for a task which was blocked waiting on a message, event, semaphore, or segment with a timeout specified.
- A running task issues a directive which deletes a message queue, a semaphore, or a region on which the blocked task is waiting.

- A running task issues a `rtems_task_restart` directive for the blocked task.
- The running task, with its preemption mode enabled, may be made ready by issuing any of the directives that may unblock a task with a higher priority. This directive may be issued from the running task itself or from an ISR. A ready task occupies the executing state when it has control of the CPU. A task enters the executing state due to any of the following conditions:
  - The task is the highest priority ready task in the system.
  - The running task blocks and the task is next in the scheduling queue. The task may be of equal priority as in round-robin scheduling or the task may possess the highest priority of the remaining ready tasks.
  - The running task may reenables its preemption mode and a task exists in the ready queue that has a higher priority than the running task.
  - The running task lowers its own priority and another task is of higher priority as a result.
  - The running task raises the priority of a task above its own and the running task is in preemption mode.

## 5.7 Directives

This section details the scheduler manager. A subsection is dedicated to each of these services and describes the calling sequence, related constants, usage, and status codes.

### 5.7.1 SCHEDULER\_IDENT - Get ID of a scheduler

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_scheduler_ident(  
2     rtems_name name,  
3     rtems_id *id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ADDRESS	The id parameter is NULL.
RTEMS_INVALID_NAME	Invalid scheduler name.

#### DESCRIPTION:

Identifies a scheduler by its name. The scheduler name is determined by the scheduler configuration. See *Configuration Step 3 - Scheduler Table* (page 452) and *CONFIGURE\_SCHEDULER\_NAME* (page 446).

#### NOTES:

None.

## 5.7.2 SCHEDULER\_IDENT\_BY\_PROCESSOR - Get ID of a scheduler by processor

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_scheduler_ident_by_processor(  
2     uint32_t cpu_index,  
3     rtems_id *id  
4 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ ADDRESS	The id parameter is NULL.
RTEMS_INVALID_ NAME	Invalid processor index.
RTEMS_INCORRECT_ STATE	The processor index is valid, however, this processor is not owned by a scheduler.

### DESCRIPTION:

Identifies a scheduler by a processor.

### NOTES:

None.

### 5.7.3 SCHEDULER\_IDENT\_BY\_PROCESSOR\_SET - Get ID of a scheduler by processor set

#### CALLING SEQUENCE:

```

1 rtems_status_code rtems_scheduler_ident_by_processor_set(
2     size_t          cpusetsize,
3     const cpu_set_t *cpuset,
4     rtems_id        *id
5 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ADDRESS	The id parameter is NULL.
RTEMS_INVALID_SIZE	Invalid processor set size.
RTEMS_INVALID_NAME	The processor set contains no online processor.
RTEMS_INCORRECT_STATE	The processor set is valid, however, the highest numbered online processor in the specified processor set is not owned by a scheduler.

#### DESCRIPTION:

Identifies a scheduler by a processor set. The scheduler is selected according to the highest numbered online processor in the specified processor set.

#### NOTES:

None.



#### 5.7.4 SCHEDULER\_GET\_MAXIMUM\_PRIORITY - Get maximum task priority of a scheduler

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_scheduler_get_maximum_priority(  
2   rtems_id          scheduler_id,  
3   rtems_task_priority *priority  
4 );
```

##### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ID	Invalid scheduler instance identifier.
RTEMS_INVALID_ADDRESS	The priority parameter is NULL.

##### DESCRIPTION:

Returns the maximum task priority of the specified scheduler instance in `priority`.

##### NOTES:

None.

### 5.7.5 SCHEDULER\_MAP\_PRIORITY\_TO\_POSIX - Map task priority to POSIX thread priority

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_scheduler_map_priority_to_posix(  
2     rtems_id          scheduler_id,  
3     rtems_task_priority priority,  
4     int               *posix_priority  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ADDRESS	The <code>posix_priority</code> parameter is NULL.
RTEMS_INVALID_ID	Invalid scheduler instance identifier.
RTEMS_INVALID_PRIORITY	Invalid task priority.

#### DESCRIPTION:

Maps a task priority to the corresponding POSIX thread priority.

#### NOTES:

None.

### 5.7.6 SCHEDULER\_MAP\_PRIORITY\_FROM\_POSIX - Map POSIX thread priority to task priority

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_scheduler_map_priority_from_posix(  
2     rtems_id          scheduler_id,  
3     int               posix_priority,  
4     rtems_task_priority *priority  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ADDRESS	The priority parameter is NULL.
RTEMS_INVALID_ID	Invalid scheduler instance identifier.
RTEMS_INVALID_PRIORITY	Invalid POSIX thread priority.

#### DESCRIPTION:

Maps a POSIX thread priority to the corresponding task priority.

#### NOTES:

None.

### 5.7.7 SCHEDULER\_GET\_PROCESSOR - Get current processor index

#### CALLING SEQUENCE:

```
1 uint32_t rtems_scheduler_get_processor( void );
```

#### DIRECTIVE STATUS CODES:

This directive returns the index of the current processor.

#### DESCRIPTION:

In uniprocessor configurations, a value of zero will be returned.

In SMP configurations, an architecture specific method is used to obtain the index of the current processor in the system. The set of processor indices is the range of integers starting with zero up to the processor count minus one.

Outside of sections with disabled thread dispatching the current processor index may change after every instruction since the thread may migrate from one processor to another. Sections with disabled interrupts are sections with thread dispatching disabled.

#### NOTES:

None.

### 5.7.8 SCHEDULER\_GET\_PROCESSOR\_MAXIMUM - Get processor maximum

**CALLING SEQUENCE:**

```
1 uint32_t rtems_scheduler_get_processor_maximum( void );
```

**DIRECTIVE STATUS CODES:**

This directive returns the processor maximum supported by the system.

**DESCRIPTION:**

In uniprocessor configurations, a value of one will be returned.

In SMP configurations, this directive returns the minimum of the processors (physically or virtually) available by the platform and the configured processor maximum. Not all processors in the range from processor index zero to the last processor index (which is the processor maximum minus one) may be configured to be used by a scheduler or online (online processors have a scheduler assigned).

**NOTES:**

None.

## 5.7.9 SCHEDULER\_GET\_PROCESSOR\_SET - Get processor set of a scheduler

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_scheduler_get_processor_set(
2     rtems_id    scheduler_id,
3     size_t     cpusetsize,
4     cpu_set_t  *cpuset
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ID	Invalid scheduler instance identifier.
RTEMS_INVALID_ADDRESS	The cpuset parameter is NULL.
RTEMS_INVALID_NUMBER	The processor set buffer is too small for the set of processors owned by the scheduler instance.

**DESCRIPTION:**

Returns the processor set owned by the scheduler instance in `cpuset`. A set bit in the processor set means that this processor is owned by the scheduler instance and a cleared bit means the opposite.

**NOTES:**

None.

## 5.7.10 SCHEDULER\_ADD\_PROCESSOR - Add processor to a scheduler

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_scheduler_add_processor(
2     rtems_id scheduler_id,
3     uint32_t cpu_index
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_INVALID_ID	Invalid scheduler instance identifier.
RTEMS_NOT_CONFIGURED	The processor is not configured to be used by the application.
RTEMS_INCORRECT_STATE	The processor is configured to be used by the application, however, it is not online.
RTEMS_RESOURCE_IN_USE	The processor is already assigned to a scheduler instance.

**DESCRIPTION:**

Adds a processor to the set of processors owned by the specified scheduler instance.

**NOTES:**

Must be called from task context. This operation obtains and releases the objects allocator lock.

## 5.7.11 SCHEDULER\_REMOVE\_PROCESSOR - Remove processor from a scheduler

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_scheduler_remove_processor(
2     rtems_id scheduler_id,
3     uint32_t cpu_index
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_ SUCCESSFUL	Successful operation.
RTEMS_ INVALID_ ID	Invalid scheduler instance identifier.
RTEMS_ INVALID_ NUMBER	The processor is not owned by the specified scheduler instance.
RTEMS_ RESOURCE_ IN_USE	The set of processors owned by the specified scheduler instance would be empty after the processor removal and there exists a non-idle task that uses this scheduler instance as its home scheduler instance.
RTEMS_ RESOURCE_ IN_USE	A task with a restricted processor affinity exists that uses this scheduler instance as its home scheduler instance and it would be no longer possible to allocate a processor for this task after the removal of this processor.

**DESCRIPTION:**

Removes a processor from set of processors owned by the specified scheduler instance.

**NOTES:**

Must be called from task context. This operation obtains and releases the objects allocator lock. Removing a processor from a scheduler is a complex operation that involves all tasks of the system.



# INITIALIZATION MANAGER

## 6.1 Introduction

The Initialization Manager is responsible for initializing the Board Support Package, RTEMS, device drivers, the root filesystem and the application. The *Fatal Error Manager* (page 331) is responsible for the system shutdown.

The Initialization Manager provides only one directive:

- *rtems\_initialize\_executive* (page 75) - Initialize RTEMS

## 6.2 Background

### 6.2.1 Initialization Tasks

Initialization task(s) are the mechanism by which RTEMS transfers initial control to the user's application. Initialization tasks differ from other application tasks in that they are defined in the User Initialization Tasks Table and automatically created and started by RTEMS as part of its initialization sequence. Since the initialization tasks are scheduled using the same algorithm as all other RTEMS tasks, they must be configured at a priority and mode which will ensure that they will complete execution before other application tasks execute. Although there is no upper limit on the number of initialization tasks, an application is required to define at least one.

A typical initialization task will create and start the static set of application tasks. It may also create any other objects used by the application. Initialization tasks which only perform initialization should delete themselves upon completion to free resources for other tasks. Initialization tasks may transform themselves into a "normal" application task. This transformation typically involves changing priority and execution mode. RTEMS does not automatically delete the initialization tasks.

### 6.2.2 The Idle Task

The Idle Task is the lowest priority task in a system and executes only when no other task is ready to execute. The default implementation of this task consists of an infinite loop. RTEMS allows the Idle Task body to be replaced by a CPU specific implementation, a BSP specific implementation or an application specific implementation.

The Idle Task is preemptible and *WILL* be preempted when any other task is made ready to execute. This characteristic is critical to the overall behavior of any application.

### 6.2.3 Initialization Manager Failure

System initialization errors are fatal. See *Internal Error Codes* (page 334).

## 6.3 Operations

### 6.3.1 Initializing RTEMS

The Initialization Manager `rtems_initialize_executive()` directive is called by the `boot_card()` routine which is invoked by the Board Support Package once a basic C run-time environment is set up. This consists of

- a valid and accessible text section, read-only data, read-write data and zero-initialized data,
- an initialization stack large enough to initialize the rest of the Board Support Package, RTEMS and the device drivers,
- all registers and components mandated by Application Binary Interface, and
- disabled interrupts.

The `rtems_initialize_executive()` directive uses a system initialization *linker set* (page 665) to initialize only those parts of the overall RTEMS feature set that is necessary for a particular application. Each RTEMS feature used the application may optionally register an initialization handler. The system initialization API is available via `#included <rtems/sysinit.h>`.

A list of all initialization steps follows. Some steps are optional depending on the requested feature set of the application. The initialization steps are execute in the order presented here.

#### **RTEMS\_SYSINIT\_RECORD**

Initialization of the event recording is the first initialization step. This allows to record the further system initialization. This step is optional and depends on the *CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS* (page 419) configuration option.

#### **RTEMS\_SYSINIT\_BSP\_EARLY**

The Board Support Package may perform an early platform initialization in this step. This step is optional.

#### **RTEMS\_SYSINIT\_MEMORY**

The Board Support Package should initialize everything so that calls to `_Memory_Get()` can be made after this step. This step is optional.

#### **RTEMS\_SYSINIT\_DIRTY\_MEMORY**

The free memory is dirtied in this step. This step is optional and depends on the *BSP\_DIRTY\_MEMORY* BSP option.

#### **RTEMS\_SYSINIT\_ISR\_STACK**

The stack checker initializes the ISR stacks in this step. This step is optional and depends on the *CONFIGURE\_STACK\_CHECKER\_ENABLED* (page 386) configuration option.

#### **RTEMS\_SYSINIT\_PER\_CPU\_DATA**

The per-CPU data is initialized in this step. This step is mandatory.

#### **RTEMS\_SYSINIT\_SBRK**

The Board Support Package may initialize the `sbrk()` support in this step. This step is optional.

#### **RTEMS\_SYSINIT\_WORKSPACE**

The workspace is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_MALLOC**

The C program heap is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_BSP\_START**

The Board Support Package should perform a general platform initialization in this step (e.g. interrupt controller initialization). This step is mandatory.

**RTEMS\_SYSINIT\_CPU\_COUNTER**

Initialization of the CPU counter hardware and support functions. The CPU counter is initialized early to allow its use in the tracing and profiling of the system initialization sequence. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_INITIAL\_EXTENSIONS**

Registers the initial extensions. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_MP\_EARLY**

In MPCFI configurations, an early MPCFI initialization is performed in this step. This step is mandatory in MPCFI configurations.

**RTEMS\_SYSINIT\_DATA\_STRUCTURES**

This directive is called when the Board Support Package has completed its basic initialization and allows RTEMS to initialize the application environment based upon the information in the Configuration Table, User Initialization Tasks Table, Device Driver Table, User Extension Table, Multiprocessor Configuration Table, and the Multiprocessor Communications Interface (MPCFI) Table.

**RTEMS\_SYSINIT\_MP**

In MPCFI configurations, a general MPCFI initialization is performed in this step. This step is mandatory in MPCFI configurations.

**RTEMS\_SYSINIT\_USER\_EXTENSIONS**

Initialization of the User Extensions object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_TASKS**

Initialization of the Classic Tasks object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_TASKS\_MP**

In MPCFI configurations, the Classic Tasks MPCFI support is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_TIMER**

Initialization of the Classic Timer object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_SIGNAL**

Initialization of the Classic Signal support. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_SIGNAL\_MP**

In MPCFI configurations, the Classic Signal MPCFI support is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_EVENT**

Initialization of the Classic Event support. This step is optional and depends on the application

configuration. This step is only used on MPCPI configurations.

**RTEMS\_SYSINIT\_CLASSIC\_EVENT\_MP**

In MPCPI configurations, the Classic Event MPCPI support is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_MESSAGE\_QUEUE**

Initialization of the Classic Message Queue object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_SEMAPHORE**

Initialization of the Classic Semaphore object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_SEMAPHORE\_MP**

In MPCPI configurations, the Classic Semaphore MPCPI support is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_PARTITION**

Initialization of the Classic Partition object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_PARTITION\_MP**

In MPCPI configurations, the Classic Partition MPCPI support is initialized in this step. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_REGION**

Initialization of the Classic Region object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_DUAL\_PORTED\_MEMORY**

Initialization of the Classic Dual-Ported Memory object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_RATE\_MONOTONIC**

Initialization of the Classic Rate-Monotonic object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_CLASSIC\_BARRIER**

Initialization of the Classic Barrier object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_SIGNALS**

Initialization of the POSIX Signals support. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_THREADS**

Initialization of the POSIX Threads object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_MESSAGE\_QUEUE**

Initialization of the POSIX Message Queue object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_SEMAPHORE**

Initialization of the POSIX Semaphore object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_TIMER**

Initialization of the POSIX Timer object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_SHM**

Initialization of the POSIX Shared Memory object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_KEYS**

Initialization of the POSIX Keys object class. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_CLEANUP**

Initialization of the POSIX Cleanup support. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_IDLE\_THREADS**

Initialization of idle threads. This step is mandatory.

**RTEMS\_SYSINIT\_LIBIO**

Initialization of IO library. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_ROOT\_FILESYSTEM**

Initialization of the root filesystem. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_DRVMGR**

Driver manager initialization. This step is optional and depends on the application configuration. Only available if the driver manager is enabled.

**RTEMS\_SYSINIT\_MP\_SERVER**

In MPCFI configurations, the MPCFI server is initialized in this step. This step is mandatory in MPCFI configurations.

**RTEMS\_SYSINIT\_BSP\_PRE\_DRIVERS**

Initialization step performed right before device drivers are initialized. This step is mandatory.

**RTEMS\_SYSINIT\_DRVMGR\_LEVEL\_1**

Driver manager level 1 initialization. This step is optional and depends on the application configuration. Only available if the driver manager is enabled.

**RTEMS\_SYSINIT\_DEVICE\_DRIVERS**

This step initializes all statically configured device drivers and performs all RTEMS initialization which requires device drivers to be initialized. This step is mandatory. In a multiprocessor configuration, this service will initialize the Multiprocessor Communications Interface (MPCFI) and synchronize with the other nodes in the system.

**RTEMS\_SYSINIT\_DRVMGR\_LEVEL\_2**

Driver manager level 2 initialization. This step is optional and depends on the application configuration. Only available if the driver manager is enabled.

**RTEMS\_SYSINIT\_DRVMGR\_LEVEL\_3**

Driver manager level 3 initialization. This step is optional and depends on the application configuration. Only available if the driver manager is enabled.

**RTEMS\_SYSINIT\_DRVMGR\_LEVEL\_4**

Driver manager level 4 initialization. This step is optional and depends on the application configuration. Only available if the driver manager is enabled.

**RTEMS\_SYSINIT\_MP\_FINALIZE**

Finalize MPCIE initialization. This step is mandatory on MPCIE configurations.

**RTEMS\_SYSINIT\_CLASSIC\_USER\_TASKS**

Creates and starts the Classic initialization tasks. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_POSIX\_USER\_THREADS**

Creates POSIX initialization threads. This step is optional and depends on the application configuration.

**RTEMS\_SYSINIT\_STD\_FILE\_DESCRIPTOR**

Open the standard input, output and error file descriptors. This step is optional and depends on the application configuration.

The final action of the `rtems_initialize_executive()` directive is to start multitasking and switch to the highest priority ready thread. RTEMS does not return to the initialization context and the initialization stack may be re-used for interrupt processing.

Many of RTEMS actions during initialization are based upon the contents of the Configuration Table. For more information regarding the format and contents of this table, please refer to the chapter *Configuring a System* (page 369).

### 6.3.2 Global Construction

The global construction is carried out by the first Classic API initialization task (first is defined by index zero in the Classic API initialization task configuration table). If no Classic API initialization task exists, then it is carried out by the first POSIX API initialization thread. If no initialization task or thread exists, then no global construction is performed, see for example *Specify Idle Task Performs Application Initialization*. The Classic API task or POSIX API thread which carries out global construction is called the main thread.

Global construction runs before the entry function of the main thread. The configuration of the main thread must take the global construction into account. In particular, the main thread stack size, priority, attributes and initial modes must be set accordingly. Thread-local objects and POSIX key values created during global construction are accessible by the main thread. If other initialization tasks are configured, and one of them has a higher priority than the main thread and the main thread is preemptible, this task executes before the global construction. In case the main thread blocks during global construction, then other tasks may run. In SMP configurations, other initialization tasks may run in parallel with global construction. Tasks created during global construction may preempt the main thread or run in parallel in SMP configurations. All RTEMS services allowed in task context are allowed during global construction.

Global constructors are C++ global object constructors or functions with the constructor attribute. For example, the following test program

```
1 #include <stdio.h>
2 #include <assert.h>
3
4 class A {
5     public:
6         A()
7         {
8             puts( "A:A()" );
9         }
}
```

(continues on next page)



(continued from previous page)

```
10 };
11
12 static A a;
13
14 static thread_local int i;
15
16 static thread_local int j;
17
18 static __attribute__(( __constructor__ )) void b( void )
19 {
20     i = 1;
21     puts( "b()" );
22 }
23
24 static __attribute__(( __constructor__( 1000 ) )) void c( void )
25 {
26     puts( "c()" );
27 }
28
29 int main( void )
30 {
31     assert( i == 1 );
32     assert( j == 0 );
33     return 0;
34 }
```

should output:

```
1 c()
2 b()
3 A:A()
```

## 6.4 Directives

This section details the Initialization Manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 6.4.1 INITIALIZE\_EXECUTIVE - Initialize RTEMS

**CALLING SEQUENCE:**

```
1 void rtems_initialize_executive(void);
```

**DIRECTIVE STATUS CODES:**

NONE - This function will not return to the caller.

**DESCRIPTION:**

Iterates through the system initialization linker set and invokes the registered handlers. The final step is to start multitasking.

**NOTES:**

This directive should be called by `boot_card()` only.

This directive *does not return* to the caller. Errors in the initialization sequence are usually fatal and lead to a system termination.



# TASK MANAGER

## 7.1 Introduction

The task manager provides a comprehensive set of directives to create, delete, and administer tasks. The directives provided by the task manager are:

- *rtems\_task\_create* (page 89) - Create a task
- *rtems\_task\_ident* (page 91) - Get ID of a task
- *rtems\_task\_self* (page 92) - Obtain ID of caller
- *rtems\_task\_start* (page 93) - Start a task
- *rtems\_task\_restart* (page 94) - Restart a task
- *rtems\_task\_delete* (page 95) - Delete a task
- *rtems\_task\_exit* (page 96) - Delete the calling task
- *rtems\_task\_suspend* (page 97) - Suspend a task
- *rtems\_task\_resume* (page 98) - Resume a task
- *rtems\_task\_is\_suspended* (page 99) - Determine if a task is suspended
- *rtems\_task\_set\_priority* (page 100) - Set task priority
- *rtems\_task\_get\_priority* (page 101) - Get task priority
- *rtems\_task\_mode* (page 102) - Change current task's mode
- *rtems\_task\_wake\_after* (page 103) - Wake up after interval
- *rtems\_task\_wake\_when* (page 104) - Wake up when specified
- *rtems\_task\_get\_scheduler* (page 105) - Get scheduler of a task
- *rtems\_task\_set\_scheduler* (page 106) - Set scheduler of a task
- *rtems\_task\_get\_affinity* (page 108) - Get task processor affinity
- *rtems\_task\_set\_affinity* (page 109) - Set task processor affinity
- *rtems\_task\_iterate* (page 110) - Iterate Over Tasks

## 7.2 Background

### 7.2.1 Task Definition

Many definitions of a task have been proposed in computer literature. Unfortunately, none of these definitions encompasses all facets of the concept in a manner which is operating system independent. Several of the more common definitions are provided to enable each user to select a definition which best matches their own experience and understanding of the task concept:

- a “dispatchable” unit.
- an entity to which the processor is allocated.
- an atomic unit of a real-time, multiprocessor system.
- single threads of execution which concurrently compete for resources.
- a sequence of closely related computations which can execute concurrently with other computational sequences.

From RTEMS’ perspective, a task is the smallest thread of execution which can compete on its own for system resources. A task is manifested by the existence of a task control block (TCB).

### 7.2.2 Task Control Block

The Task Control Block (TCB) is an RTEMS defined data structure which contains all the information that is pertinent to the execution of a task. During system initialization, RTEMS reserves a TCB for each task configured. A TCB is allocated upon creation of the task and is returned to the TCB free list upon deletion of the task.

The TCB’s elements are modified as a result of system calls made by the application in response to external and internal stimuli. TCBs are the only RTEMS internal data structure that can be accessed by an application via user extension routines. The TCB contains a task’s name, ID, current priority, current and starting states, execution mode, TCB user extension pointer, scheduling control structures, as well as data required by a blocked task.

A task’s context is stored in the TCB when a task switch occurs. When the task regains control of the processor, its context is restored from the TCB. When a task is restarted, the initial state of the task is restored from the starting context area in the task’s TCB.

### 7.2.3 Task Memory

The system uses two separate memory areas to manage a task. One memory area is the *Task Control Block* (page 79). The other memory area is allocated from the stack space or provided by the user and contains

- the task stack,
- the thread-local storage (*TLS*), and
- an optional architecture-specific floating-point context.

The size of the thread-local storage is determined at link time. A user-provided task stack must take the size of the thread-local storage into account.

On architectures with a dedicated floating-point context, the application configuration assumes that every task is a floating-point task, but whether or not a task is actually floating-point is determined at runtime during task creation (see *Floating Point Considerations* (page 82)). In highly memory constrained systems this potential overestimate of the task stack space can be mitigated through the `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385) configuration option and aligned task stack sizes for the tasks. A user-provided task stack must take the potential floating-point context into account.

#### 7.2.4 Task Name

By default, the task name is defined by the task object name given to `rtems_task_create()` (page 89). The task name can be obtained with the `pthread_getname_np()` function. Optionally, a new task name may be set with the `pthread_setname_np()` function. The maximum size of a task name is defined by the application configuration option `CONFIGURE_MAXIMUM_THREAD_NAME_SIZE` (page 382).

#### 7.2.5 Task States

A task may exist in one of the following five states:

- *executing* - Currently scheduled to the CPU
- *ready* - May be scheduled to the CPU
- *blocked* - Unable to be scheduled to the CPU
- *dormant* - Created task that is not started
- *non-existent* - Uncreated or deleted task

An active task may occupy the executing, ready, blocked or dormant state, otherwise the task is considered non-existent. One or more tasks may be active in the system simultaneously. Multiple tasks communicate, synchronize, and compete for system resources with each other via system calls. The multiple tasks appear to execute in parallel, but actually each is dispatched to the CPU for periods of time determined by the RTEMS scheduling algorithm. The scheduling of a task is based on its current state and priority.

#### 7.2.6 Task Priority

A task's priority determines its importance in relation to the other tasks executing on the same processor. RTEMS supports 255 levels of priority ranging from 1 to 255. The data type `rtems_task_priority` is used to store task priorities.

Tasks of numerically smaller priority values are more important tasks than tasks of numerically larger priority values. For example, a task at priority level 5 is of higher privilege than a task at priority level 10. There is no limit to the number of tasks assigned to the same priority.

Each task has a priority associated with it at all times. The initial value of this priority is assigned at task creation time. The priority of a task may be changed at any subsequent time.

Priorities are used by the scheduler to determine which ready task will be allowed to execute. In general, the higher the logical priority of a task, the more likely it is to receive processor execution time.



### 7.2.7 Task Mode

A task's execution mode is a combination of the following four components:

- preemption
- ASR processing
- timeslicing
- interrupt level

It is used to modify RTEMS' scheduling process and to alter the execution environment of the task. The data type `rtems_task_mode` is used to manage the task execution mode.

The preemption component allows a task to determine when control of the processor is relinquished. If preemption is disabled (`RTEMS_NO_PREEMPT`), the task will retain control of the processor as long as it is in the executing state - even if a higher priority task is made ready. If preemption is enabled (`RTEMS_PREEMPT`) and a higher priority task is made ready, then the processor will be taken away from the current task immediately and given to the higher priority task.

The timeslicing component is used by the RTEMS scheduler to determine how the processor is allocated to tasks of equal priority. If timeslicing is enabled (`RTEMS_TIMESLICE`), then RTEMS will limit the amount of time the task can execute before the processor is allocated to another ready task of equal priority. The length of the timeslice is application dependent and specified in the Configuration Table. If timeslicing is disabled (`RTEMS_NO_TIMESLICE`), then the task will be allowed to execute until a task of higher priority is made ready. If `RTEMS_NO_PREEMPT` is selected, then the timeslicing component is ignored by the scheduler.

The asynchronous signal processing component is used to determine when received signals are to be processed by the task. If signal processing is enabled (`RTEMS_ASR`), then signals sent to the task will be processed the next time the task executes. If signal processing is disabled (`RTEMS_NO_ASR`), then all signals received by the task will remain posted until signal processing is enabled. This component affects only tasks which have established a routine to process asynchronous signals.

The interrupt level component is used to determine which interrupts will be enabled when the task is executing. `RTEMS_INTERRUPT_LEVEL(n)` specifies that the task will execute at interrupt level `n`.

<code>RTEMS_PREEMPT</code>	enable preemption (default)
<code>RTEMS_NO_PREEMPT</code>	disable preemption
<code>RTEMS_NO_TIMESLICE</code>	disable timeslicing (default)
<code>RTEMS_TIMESLICE</code>	enable timeslicing
<code>RTEMS_ASR</code>	enable ASR processing (default)
<code>RTEMS_NO_ASR</code>	disable ASR processing
<code>RTEMS_INTERRUPT_LEVEL(0)</code>	enable all interrupts (default)
<code>RTEMS_INTERRUPT_LEVEL(n)</code>	execute at interrupt level <code>n</code>

The set of default modes may be selected by specifying the `RTEMS_DEFAULT_MODES` constant.

## 7.2.8 Accessing Task Arguments

All RTEMS tasks are invoked with a single argument which is specified when they are started or restarted. The argument is commonly used to communicate startup information to the task. The simplest manner in which to define a task which accesses its argument is:

```
1 rtems_task user_task(  
2     rtems_task_argument argument  
3 );
```

Application tasks requiring more information may view this single argument as an index into an array of parameter blocks.

## 7.2.9 Floating Point Considerations

Please consult the *RTEMS CPU Architecture Supplement* if this section is relevant on your architecture. On some architectures the floating-point context is contained in the normal task context and this section does not apply.

Creating a task with the `RTEMS_FLOATING_POINT` attribute flag results in additional memory being allocated for the task to store the state of the numeric coprocessor during task switches. This additional memory is **not** allocated for `RTEMS_NO_FLOATING_POINT` tasks. Saving and restoring the context of a `RTEMS_FLOATING_POINT` task takes longer than that of a `RTEMS_NO_FLOATING_POINT` task because of the relatively large amount of time required for the numeric coprocessor to save or restore its computational state.

Since RTEMS was designed specifically for embedded military applications which are floating point intensive, the executive is optimized to avoid unnecessarily saving and restoring the state of the numeric coprocessor. In uniprocessor configurations, the state of the numeric coprocessor is only saved when a `RTEMS_FLOATING_POINT` task is dispatched and that task was not the last task to utilize the coprocessor. In a uniprocessor system with only one `RTEMS_FLOATING_POINT` task, the state of the numeric coprocessor will never be saved or restored.

Although the overhead imposed by `RTEMS_FLOATING_POINT` tasks is minimal, some applications may wish to completely avoid the overhead associated with `RTEMS_FLOATING_POINT` tasks and still utilize a numeric coprocessor. By preventing a task from being preempted while performing a sequence of floating point operations, a `RTEMS_NO_FLOATING_POINT` task can utilize the numeric coprocessor without incurring the overhead of a `RTEMS_FLOATING_POINT` context switch. This approach also avoids the allocation of a floating point context area. However, if this approach is taken by the application designer, **no** tasks should be created as `RTEMS_FLOATING_POINT` tasks. Otherwise, the floating point context will not be correctly maintained because RTEMS assumes that the state of the numeric coprocessor will not be altered by `RTEMS_NO_FLOATING_POINT` tasks. Some architectures with a dedicated floating-point context raise a processor exception if a task with `RTEMS_NO_FLOATING_POINT` issues a floating-point instruction, so this approach may not work at all.

If the supported processor type does not have hardware floating capabilities or a standard numeric coprocessor, RTEMS will not provide built-in support for hardware floating point on that processor. In this case, all tasks are considered `RTEMS_NO_FLOATING_POINT` whether created as `RTEMS_FLOATING_POINT` or `RTEMS_NO_FLOATING_POINT` tasks. A floating point emulation software library must be utilized for floating point operations.

On some processors, it is possible to disable the floating point unit dynamically. If this capability is supported by the target processor, then RTEMS will utilize this capability to enable the float-

ing point unit only for tasks which are created with the RTEMS\_FLOATING\_POINT attribute. The consequence of a RTEMS\_NO\_FLOATING\_POINT task attempting to access the floating point unit is CPU dependent but will generally result in an exception condition.

### 7.2.10 Building a Task Attribute Set

In general, an attribute set is built by a bitwise OR of the desired components. The set of valid task attribute components is listed below:

RTEMS_NO_FLOATING_POINT	does not use coprocessor (default)
RTEMS_FLOATING_POINT	uses numeric coprocessor
RTEMS_LOCAL	local task (default)
RTEMS_GLOBAL	global task

Attribute values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. A component listed as a default is not required to appear in the component list, although it is a good programming practice to specify default components. If all defaults are desired, then RTEMS\_DEFAULT\_ATTRIBUTES should be used.

This example demonstrates the attribute\_set parameter needed to create a local task which utilizes the numeric coprocessor. The attribute\_set parameter could be RTEMS\_FLOATING\_POINT or RTEMS\_LOCAL | RTEMS\_FLOATING\_POINT. The attribute\_set parameter can be set to RTEMS\_FLOATING\_POINT because RTEMS\_LOCAL is the default for all created tasks. If the task were global and used the numeric coprocessor, then the attribute\_set parameter would be RTEMS\_GLOBAL | RTEMS\_FLOATING\_POINT.

### 7.2.11 Building a Mode and Mask

In general, a mode and its corresponding mask is built by a bitwise OR of the desired components. The set of valid mode constants and each mode's corresponding mask constant is listed below:

RTEMS_PREEMPT	is masked by RTEMS_PREEMPT_MASK and enables preemption
RTEMS_NO_PREEMPT	is masked by RTEMS_PREEMPT_MASK and disables preemption
RTEMS_NO_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and disables timeslicing
RTEMS_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and enables timeslicing
RTEMS_ASR	is masked by RTEMS_ASR_MASK and enables ASR processing
RTEMS_NO_ASR	is masked by RTEMS_ASR_MASK and disables ASR processing
RTEMS_INTERRUPT_ LEVEL(0)	is masked by RTEMS_INTERRUPT_MASK and enables all interrupts
RTEMS_INTERRUPT_ LEVEL(n)	is masked by RTEMS_INTERRUPT_MASK and sets interrupts level n

Mode values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each mode appears exactly once in the component list. A mode component listed as a default is not required to appear in the mode component list, although it is a good programming practice to specify default components. If all defaults are desired, the mode RTEMS\_DEFAULT\_MODES and the mask RTEMS\_ALL\_MODE\_MASKS should be used.

The following example demonstrates the mode and mask parameters used with the `rtems_task_mode` directive to place a task at interrupt level 3 and make it non-preemptible. The mode should be set to `RTEMS_INTERRUPT_LEVEL(3) | RTEMS_NO_PREEMPT` to indicate the desired preemption mode and interrupt level, while the mask parameter should be set to `RTEMS_INTERRUPT_MASK | RTEMS_NO_PREEMPT_MASK` to indicate that the calling task's interrupt level and preemption mode are being altered.

## 7.3 Operations

### 7.3.1 Creating Tasks

The `rtems_task_create` directive creates a task by allocating a task control block, assigning the task a user-specified name, allocating it a stack and floating point context area, setting a user-specified initial priority, setting a user-specified initial mode, and assigning it a task ID. Newly created tasks are initially placed in the dormant state. All RTEMS tasks execute in the most privileged mode of the processor.

### 7.3.2 Obtaining Task IDs

When a task is created, RTEMS generates a unique task ID and assigns it to the created task until it is deleted. The task ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_task_create` directive, the task ID is stored in a user provided location. Second, the task ID may be obtained later using the `rtems_task_ident` directive. The task ID is used by other directives to manipulate this task.

### 7.3.3 Starting and Restarting Tasks

The `rtems_task_start` directive is used to place a dormant task in the ready state. This enables the task to compete, based on its current priority, for the processor and other system resources. Any actions, such as suspension or change of priority, performed on a task prior to starting it are nullified when the task is started.

With the `rtems_task_start` directive the user specifies the task's starting address and argument. The argument is used to communicate some startup information to the task. As part of this directive, RTEMS initializes the task's stack based upon the task's initial execution mode and start address. The starting argument is passed to the task in accordance with the target processor's calling convention.

The `rtems_task_restart` directive restarts a task at its initial starting address with its original priority and execution mode, but with a possibly different argument. The new argument may be used to distinguish between the original invocation of the task and subsequent invocations. The task's stack and control block are modified to reflect their original creation values. Although references to resources that have been requested are cleared, resources allocated by the task are NOT automatically returned to RTEMS. A task cannot be restarted unless it has previously been started (i.e. dormant tasks cannot be restarted). All restarted tasks are placed in the ready state.

### 7.3.4 Suspending and Resuming Tasks

The `rtems_task_suspend` directive is used to place either the caller or another task into a suspended state. The task remains suspended until a `rtems_task_resume` directive is issued. This implies that a task may be suspended as well as blocked waiting either to acquire a resource or for the expiration of a timer.

The `rtems_task_resume` directive is used to remove another task from the suspended state. If the task is not also blocked, resuming it will place it in the ready state, allowing it to once again

compete for the processor and resources. If the task was blocked as well as suspended, this directive clears the suspension and leaves the task in the blocked state.

Suspending a task which is already suspended or resuming a task which is not suspended is considered an error. The `rtems_task_is_suspended` can be used to determine if a task is currently suspended.

### 7.3.5 Delaying the Currently Executing Task

The `rtems_task_wake_after` directive creates a sleep timer which allows a task to go to sleep for a specified interval. The task is blocked until the delay interval has elapsed, at which time the task is unblocked. A task calling the `rtems_task_wake_after` directive with a delay interval of `RTEMS_YIELD_PROCESSOR` ticks will yield the processor to any other ready task of equal or greater priority and remain ready to execute.

The `rtems_task_wake_when` directive creates a sleep timer which allows a task to go to sleep until a specified date and time. The calling task is blocked until the specified date and time has occurred, at which time the task is unblocked.

### 7.3.6 Changing Task Priority

The `rtems_task_set_priority` directive is used to obtain or change the current priority of either the calling task or another task. If the new priority requested is `RTEMS_CURRENT_PRIORITY` or the task's actual priority, then the current priority will be returned and the task's priority will remain unchanged. If the task's priority is altered, then the task will be scheduled according to its new priority.

The `rtems_task_restart` directive resets the priority of a task to its original value.

### 7.3.7 Changing Task Mode

The `rtems_task_mode` directive is used to obtain or change the current execution mode of the calling task. A task's execution mode is used to enable preemption, timeslicing, ASR processing, and to set the task's interrupt level.

The `rtems_task_restart` directive resets the mode of a task to its original value.

### 7.3.8 Task Deletion

RTEMS provides the `rtems_task_delete` directive to allow a task to delete itself or any other task. This directive removes all RTEMS references to the task, frees the task's control block, removes it from resource wait queues, and deallocates its stack as well as the optional floating point context. The task's name and ID become inactive at this time, and any subsequent references to either of them is invalid. In fact, RTEMS may reuse the task ID for another task which is created later in the application. A specialization of `rtems_task_delete` is `rtems_task_exit` which deletes the calling task.

Unexpired delay timers (i.e. those used by `rtems_task_wake_after` and `rtems_task_wake_when`) and timeout timers associated with the task are automatically deleted, however, other resources dynamically allocated by the task are NOT automatically returned to RTEMS. Therefore, before a task is deleted, all of its dynamically allocated resources should be deallocated by the user.

This may be accomplished by instructing the task to delete itself rather than directly deleting the task. Other tasks may instruct a task to delete itself by sending a “delete self” message, event, or signal, or by restarting the task with special arguments which instruct the task to delete itself.

### 7.3.9 Setting Affinity to a Single Processor

On some embedded applications targeting SMP systems, it may be beneficial to lock individual tasks to specific processors. In this way, one can designate a processor for I/O tasks, another for computation, etc.. The following illustrates the code sequence necessary to assign a task an affinity for processor with index `processor_index`.

```
1 #include <rtems.h>
2 #include <assert.h>
3
4 void pin_to_processor(rtems_id task_id, int processor_index)
5 {
6     rtems_status_code sc;
7     cpu_set_t cpuset;
8     CPU_ZERO(&cpuset);
9     CPU_SET(processor_index, &cpuset);
10    sc = rtems_task_set_affinity(task_id, sizeof(cpuset), &cpuset);
11    assert(sc == RTEMS_SUCCESSFUL);
12 }
```

It is important to note that the `cpuset` is not validated until the `rtems_task_set_affinity` call is made. At that point, it is validated against the current system configuration.

### 7.3.10 Transition Advice for Removed Notepads

Task notepads and the associated directives `TASK_GET_NOTE` - *Get task notepad entry* (page 114) and `TASK_SET_NOTE` - *Set task notepad entry* (page 115) were removed in RTEMS 5.1. These were never thread-safe to access and subject to conflicting use of the notepad index by libraries which were designed independently.

It is recommended that applications be modified to use services which are thread safe and not subject to issues with multiple applications conflicting over the key (e.g. notepad index) selection. For most applications, POSIX Keys should be used. These are available in all RTEMS build configurations. It is also possible that thread-local storage (TLS) is an option for some use cases.

### 7.3.11 Transition Advice for Removed Task Variables

Task notepads and the associated directives `TASK_VARIABLE_ADD` - *Associate per task variable* (page 116), `TASK_VARIABLE_GET` - *Obtain value of a per task variable* (page 117) and `TASK_VARIABLE_DELETE` - *Remove per task variable* (page 118) were removed in RTEMS 5.1. Task variables must be replaced by POSIX Keys or thread-local storage (TLS). POSIX Keys are available in all configurations and support value destructors. For the TLS support consult the *RTEMS CPU Architecture Supplement*.

## 7.4 Directives

This section details the task manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.



## 7.4.1 TASK\_CREATE - Create a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_create(
2   rtems_name      name,
3   rtems_task_priority initial_priority,
4   size_t         stack_size,
5   rtems_mode      initial_modes,
6   rtems_attribute attribute_set,
7   rtems_id        *id
8 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task created successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	invalid task name
RTEMS_INVALID_PRIORITY	invalid task priority
RTEMS_TOO_MANY	too many tasks created
RTEMS_UNSATISFIED	not enough memory for stack/FP context
RTEMS_UNSATISFIED	non-preemption mode not supported on SMP system
RTEMS_UNSATISFIED	interrupt level mode not supported on SMP system
RTEMS_TOO_MANY	too many global objects

**DESCRIPTION:**

This directive creates a task which resides on the local node. It allocates and initializes a TCB, a stack, and an optional floating point context area. The mode parameter contains values which sets the task's initial execution mode. The RTEMS\_FLOATING\_POINT attribute should be specified if the created task is to use a numeric coprocessor. For performance reasons, it is recommended that tasks not using the numeric coprocessor should specify the RTEMS\_NO\_FLOATING\_POINT attribute. If the RTEMS\_GLOBAL attribute is specified, the task can be accessed from remote nodes. The task id, returned in id, is used in other task related directives to access the task. When created, a task is placed in the dormant state and can only be made ready to execute using the directive rtems\_task\_start.

**NOTES:**

This directive may cause the calling task to be preempted.

The scheduler of the new task is the scheduler of the executing task at some point during the task creation. The specified task priority must be valid for the selected scheduler.

The task processor affinity is initialized to the set of online processors.

If the requested stack size is less than the configured minimum stack size, then RTEMS will use the configured minimum as the stack size for this task. In addition to being able to specify the task stack size as a integer, there are two constants which may be specified:

**RTEMS\_MINIMUM\_STACK\_SIZE**

The minimum stack size *RECOMMENDED* for use on this processor. This value is selected by the RTEMS developers conservatively to minimize the risk of blown stacks for most user applications. Using this constant when specifying the task stack size, indicates that the

stack size will be at least `RTEMS_MINIMUM_STACK_SIZE` bytes in size. If the user configured minimum stack size is larger than the recommended minimum, then it will be used.

#### **RTEMS\_CONFIGURED\_MINIMUM\_STACK\_SIZE**

Indicates this task is to be created with a stack size of the minimum stack size that was configured by the application. If not explicitly configured by the application, the default configured minimum stack size is the processor dependent value `RTEMS_MINIMUM_STACK_SIZE`. Since this uses the configured minimum stack size value, you may get a stack size that is smaller or larger than the recommended minimum. This can be used to provide large stacks for all tasks on complex applications or small stacks on applications that are trying to conserve memory.

Application developers should consider the stack usage of the device drivers when calculating the stack size required for tasks which utilize the driver.

The following task attribute constants are defined by RTEMS:

<code>RTEMS_NO_FLOATING_POINT</code>	does not use coprocessor (default)
<code>RTEMS_FLOATING_POINT</code>	uses numeric coprocessor
<code>RTEMS_LOCAL</code>	local task (default)
<code>RTEMS_GLOBAL</code>	global task

The following task mode constants are defined by RTEMS:

<code>RTEMS_PREEMPT</code>	enable preemption (default)
<code>RTEMS_NO_PREEMPT</code>	disable preemption
<code>RTEMS_NO_TIMESLICE</code>	disable timeslicing (default)
<code>RTEMS_TIMESLICE</code>	enable timeslicing
<code>RTEMS_ASR</code>	enable ASR processing (default)
<code>RTEMS_NO_ASR</code>	disable ASR processing
<code>RTEMS_INTERRUPT_LEVEL(0)</code>	enable all interrupts (default)
<code>RTEMS_INTERRUPT_LEVEL(n)</code>	execute at interrupt level n

The interrupt level portion of the task execution mode supports a maximum of 256 interrupt levels. These levels are mapped onto the interrupt levels actually supported by the target processor in a processor dependent fashion.

Tasks should not be made global unless remote tasks must interact with them. This avoids the system overhead incurred by the creation of a global task. When a global task is created, the task's name and id must be transmitted to every node in the system for insertion in the local copy of the global object table.

The total number of global objects, including tasks, is limited by the `maximum_global_objects` field in the Configuration Table.

## 7.4.2 TASK\_IDENT - Get ID of a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_ident(
2   rtems_name name,
3   uint32_t node,
4   rtems_id *id
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	invalid task name
RTEMS_INVALID_NODE	invalid node id

**DESCRIPTION:**

This directive obtains the task id associated with the task name specified in name. A task may obtain its own id by specifying RTEMS\_SELF or its own task name in name. If the task name is not unique, then the task id returned will match one of the tasks with that name. However, this task id is not guaranteed to correspond to the desired task. The task id, returned in id, is used in other task related directives to access the task.

**NOTES:**

This directive will not cause the running task to be preempted.

If node is RTEMS\_SEARCH\_ALL\_NODES, all nodes are searched with the local node being searched first. All other nodes are searched with the lowest numbered node searched first.

If node is a valid node number which does not represent the local node, then only the tasks exported by the designated node are searched.

This directive does not generate activity on remote nodes. It accesses only the local copy of the global object table.

### 7.4.3 TASK\_SELF - Obtain ID of caller

**CALLING SEQUENCE:**

```
1 rtems_id rtems_task_self(void);
```

**DIRECTIVE STATUS CODES:**

Returns the object Id of the calling task.

**DESCRIPTION:**

This directive returns the Id of the calling task.

**NOTES:**

If called from an interrupt service routine, this directive will return the Id of the interrupted task.

## 7.4.4 TASK\_START - Start a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_start(
2     rtems_id      id,
3     rtems_task_entry entry_point,
4     rtems_task_argument argument
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	ask started successfully
RTEMS_INVALID_ADDRESS	invalid task entry point
RTEMS_INVALID_ID	invalid task id
RTEMS_INCORRECT_STATE	task not in the dormant state
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot start remote task

**DESCRIPTION:**

This directive readies the task, specified by `id`, for execution based on the priority and execution mode specified when the task was created. The starting address of the task is given in `entry_point`. The task's starting argument is contained in `argument`. This argument can be a single value or used as an index into an array of parameter blocks. The type of this numeric argument is an unsigned integer type with the property that any valid pointer to void can be converted to this type and then converted back to a pointer to void. The result will compare equal to the original pointer.

**NOTES:**

The calling task will be preempted if its preemption mode is enabled and the task being started has a higher priority.

Any actions performed on a dormant task such as suspension or change of priority are nullified when the task is initiated via the `rtems_task_start` directive.

## 7.4.5 TASK\_RESTART - Restart a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_restart(
2   rtems_id      id,
3   rtems_task_argument argument
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task restarted successfully
RTEMS_INVALID_ID	task id invalid
RTEMS_INCORRECT_STATE	task never started
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot restart remote task

**DESCRIPTION:**

This directive resets the task specified by `id` to begin execution at its original starting address. The task's priority and execution mode are set to the original creation values. If the task is currently blocked, RTEMS automatically makes the task ready. A task can be restarted from any state, except the dormant state.

The task's starting argument is contained in `argument`. This argument can be a single value or an index into an array of parameter blocks. The type of this numeric argument is an unsigned integer type with the property that any valid pointer to void can be converted to this type and then converted back to a pointer to void. The result will compare equal to the original pointer. This new argument may be used to distinguish between the initial `rtems_task_start` of the task and any ensuing calls to `rtems_task_restart` of the task. This can be beneficial in deleting a task. Instead of deleting a task using the `rtems_task_delete` directive, a task can delete another task by restarting that task, and allowing that task to release resources back to RTEMS and then delete itself.

**NOTES:**

If `id` is `RTEMS_SELF`, the calling task will be restarted and will not return from this directive.

The calling task will be preempted if its preemption mode is enabled and the task being restarted has a higher priority.

The task must reside on the local node, even if the task was created with the `RTEMS_GLOBAL` option.

## 7.4.6 TASK\_DELETE - Delete a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_delete(
2     rtems_id id
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task deleted successfully
RTEMS_INVALID_ID	task id invalid
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot restart remote task

**DESCRIPTION:**

This directive deletes a task, either the calling task or another task, as specified by id. RTEMS stops the execution of the task and reclaims the stack memory, any allocated delay or timeout timers, the TCB, and, if the task is RTEMS\_FLOATING\_POINT, its floating point context area. RTEMS does not reclaim the following resources: region segments, partition buffers, semaphores, timers, or rate monotonic periods.

**NOTES:**

A task is responsible for releasing its resources back to RTEMS before deletion. To insure proper deallocation of resources, a task should not be deleted unless it is unable to execute or does not hold any RTEMS resources. If a task holds RTEMS resources, the task should be allowed to deallocate its resources before deletion. A task can be directed to release its resources and delete itself by restarting it with a special argument or by sending it a message, an event, or a signal.

Deletion of the current task (RTEMS\_SELF) will force RTEMS to select another task to execute.

When a global task is deleted, the task id must be transmitted to every node in the system for deletion from the local copy of the global object table.

The task must reside on the local node, even if the task was created with the RTEMS\_GLOBAL option.

### 7.4.7 TASK\_EXIT - Delete the calling task

#### CALLING SEQUENCE:

```
1 void rtems_task_exit( void ) RTEMS_NO_RETURN;
```

#### DIRECTIVE STATUS CODES:

NONE - This function will not return to the caller.

#### DESCRIPTION:

This directive deletes the calling task.

#### NOTES:

This directive must be called from a regular task context with enabled interrupts, otherwise one of the fatal errors

- *INTERNAL\_ERROR\_BAD\_THREAD\_DISPATCH\_DISABLE\_LEVEL* (page 334), or
- *INTERNAL\_ERROR\_BAD\_THREAD\_DISPATCH\_ENVIRONMENT* (page 334)

will occur.

The `rtems_task_exit()` call is equivalent to the following code sequence:

```
1 pthread_detach(pthread_self());  
2 pthread_exit(NULL);
```

See also *rtems\_task\_delete()* (page 95).



### 7.4.8 TASK\_SUSPEND - Suspend a task

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_task_suspend(  
2     rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task suspended successfully
RTEMS_INVALID_ID	task id invalid
RTEMS_ALREADY_SUSPENDED	task already suspended

**DESCRIPTION:**

This directive suspends the task specified by `id` from further execution by placing it in the suspended state. This state is additive to any other blocked state that the task may already be in. The task will not execute again until another task issues the `rtems_task_resume` directive for this task and any blocked state has been removed.

**NOTES:**

The requesting task can suspend itself by specifying `RTEMS_SELF` as `id`. In this case, the task will be suspended and a successful return code will be returned when the task is resumed.

Suspending a global task which does not reside on the local node will generate a request to the remote node to suspend the specified task.

If the task specified by `id` is already suspended, then the `RTEMS_ALREADY_SUSPENDED` status code is returned.

### 7.4.9 TASK\_RESUME - Resume a task

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_task_resume(  
2     rtems_id id  
3 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	task resumed successfully
RTEMS_INVALID_ID	task id invalid
RTEMS_INCORRECT_STATE	task not suspended

#### DESCRIPTION:

This directive removes the task specified by id from the suspended state. If the task is in the ready state after the suspension is removed, then it will be scheduled to run. If the task is still in a blocked state after the suspension is removed, then it will remain in that blocked state.

#### NOTES:

The running task may be preempted if its preemption mode is enabled and the local task being resumed has a higher priority.

Resuming a global task which does not reside on the local node will generate a request to the remote node to resume the specified task.

If the task specified by id is not suspended, then the RTEMS\_INCORRECT\_STATE status code is returned.

### 7.4.10 TASK\_IS\_SUSPENDED - Determine if a task is Suspended

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_task_is_suspended(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task is NOT suspended
RTEMS_ALREADY_SUSPENDED	task is currently suspended
RTEMS_INVALID_ID	task id invalid
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported on remote tasks

**DESCRIPTION:**

This directive returns a status code indicating whether or not the specified task is currently suspended.

**NOTES:**

This operation is not currently supported on remote tasks.

## 7.4.11 TASK\_SET\_PRIORITY - Set task priority

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_set_priority(
2   rtems_id          id,
3   rtems_task_priority new_priority,
4   rtems_task_priority *old_priority
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	task priority set successfully
RTEMS_INVALID_ID	invalid task id
RTEMS_INVALID_ADDRESS	invalid return argument pointer
RTEMS_INVALID_PRIORITY	invalid task priority

**DESCRIPTION:**

This directive manipulates the priority of the task specified by `id`. An `id` of `RTEMS_SELF` is used to indicate the calling task. When `new_priority` is not equal to `RTEMS_CURRENT_PRIORITY`, the specified task's previous priority is returned in `old_priority`. When `new_priority` is `RTEMS_CURRENT_PRIORITY`, the specified task's current priority is returned in `old_priority`. Valid priorities range from a high of 1 to a low of 255.

**NOTES:**

The calling task may be preempted if its preemption mode is enabled and it lowers its own priority or raises another task's priority.

In case the new priority equals the current priority of the task, then nothing happens.

Setting the priority of a global task which does not reside on the local node will generate a request to the remote node to change the priority of the specified task.

If the task specified by `id` is currently holding any binary semaphores which use the priority inheritance algorithm, then the task's priority cannot be lowered immediately. If the task's priority were lowered immediately, then priority inversion results. The requested lowering of the task's priority will occur when the task has released all priority inheritance binary semaphores. The task's priority can be increased regardless of the task's use of priority inheritance binary semaphores.

## 7.4.12 TASK\_GET\_PRIORITY - Get task priority

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_get_priority(
2   rtems_id          task_id,
3   rtems_id          scheduler_id,
4   rtems_task_priority *priority
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	Successful operation.
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	Directive is illegal on remote tasks.
RTEMS_INVALID_ADDRESS	The priority parameter is NULL.
RTEMS_INVALID_ID	Invalid task or scheduler identifier.
RTEMS_NOT_DEFINED	The task has no priority within the specified scheduler instance. This error is only possible in SMP configurations.

**DESCRIPTION:**

This directive returns the current priority of the task specified by `task_id` with respect to the scheduler instance specified by `scheduler_id`. A task id of `RTEMS_SELF` is used to indicate the calling task.

**NOTES:**

The current priority reflects temporary priority adjustments due to locking protocols, the rate-monotonic period objects on some schedulers and other mechanisms.

## 7.4.13 TASK\_MODE - Change the current task mode

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_mode(
2     rtems_mode mode_set,
3     rtems_mode mask,
4     rtems_mode *previous_mode_set
5 );

```

**DIRECTIVE STATUS CODES:****DESCRIPTION:**

This directive manipulates the execution mode of the calling task. A task's execution mode enables and disables preemption, timeslicing, asynchronous signal processing, as well as specifying the current interrupt level. To modify an execution mode, the mode class(es) to be changed must be specified in the mask parameter and the desired mode(s) must be specified in the mode parameter.

**NOTES:**

The calling task will be preempted if it enables preemption and a higher priority task is ready to run.

Enabling timeslicing has no effect if preemption is disabled. For a task to be timesliced, that task must have both preemption and timeslicing enabled.

A task can obtain its current execution mode, without modifying it, by calling this directive with a mask value of RTEMS\_CURRENT\_MODE.

To temporarily disable the processing of a valid ASR, a task should call this directive with the RTEMS\_NO\_ASR indicator specified in mode.

The set of task mode constants and each mode's corresponding mask constant is provided in the following table:

RTEMS_PREEMPT	is masked by RTEMS_PREEMPT_MASK and enables preemption
RTEMS_NO_PREEMPT	is masked by RTEMS_PREEMPT_MASK and disables preemption
RTEMS_NO_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and disables timeslicing
RTEMS_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and enables timeslicing
RTEMS_ASR	is masked by RTEMS_ASR_MASK and enables ASR processing
RTEMS_NO_ASR	is masked by RTEMS_ASR_MASK and disables ASR processing
RTEMS_INTERRUPT_LEVEL(0)	is masked by RTEMS_INTERRUPT_MASK and enables all interrupts
RTEMS_INTERRUPT_LEVEL(n)	is masked by RTEMS_INTERRUPT_MASK and sets interrupts level n

#### 7.4.14 TASK\_WAKE\_AFTER - Wake up after interval

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_task_wake_after(  
2     rtems_interval ticks  
3 );
```

##### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	always successful
------------------	-------------------

##### DESCRIPTION:

This directive blocks the calling task for the specified number of system clock ticks. When the requested interval has elapsed, the task is made ready. The clock tick directives automatically updates the delay period.

##### NOTES:

Setting the system date and time with the `rtems_clock_set` directive has no effect on a `rtems_task_wake_after` blocked task.

A task may give up the processor and remain in the ready state by specifying a value of `RTEMS_YIELD_PROCESSOR` in ticks.

The maximum timer interval that can be specified is the maximum value which can be represented by the `uint32_t` type.

A clock tick is required to support the functionality of this directive.

## 7.4.15 TASK\_WAKE\_WHEN - Wake up when specified

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_wake_when(
2   rtems_time_of_day *time_buffer
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	awakened at date/time successfully
RTEMS_INVALID_ADDRESS	time_buffer is NULL
RTEMS_INVALID_TIME_OF_DAY	invalid time buffer
RTEMS_NOT_DEFINED	system date and time is not set

**DESCRIPTION:**

This directive blocks a task until the date and time specified in `time_buffer`. At the requested date and time, the calling task will be unblocked and made ready to execute.

**NOTES:**

The ticks portion of `time_buffer` structure is ignored. The timing granularity of this directive is a second.

A clock tick is required to support the functionality of this directive.



## 7.4.16 TASK\_GET\_SCHEDULER - Get scheduler of a task

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_task_get_scheduler(  
2     rtems_id task_id,  
3     rtems_id *scheduler_id  
4 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successful operation
RTEMS_INVALID_ADDRESS	scheduler_id is NULL
RTEMS_INVALID_ID	invalid task id

**DESCRIPTION:**

Returns the scheduler identifier of a task identified by task\_id in scheduler\_id.

**NOTES:**

None.

## 7.4.17 TASK\_SET\_SCHEDULER - Set scheduler of a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_set_scheduler(
2   rtems_id          task_id,
3   rtems_id          scheduler_id,
4   rtems_task_priority priority
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successful operation
RTEMS_INVALID_ID	invalid task or scheduler id
RTEMS_INVALID_PRIORITY	invalid task priority
RTEMS_RESOURCE_IN_USE	the task is in the wrong state to perform a scheduler change
RTEMS_UNSATISFIED	the processor set of the scheduler is empty
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported on remote tasks

**DESCRIPTION:**

Sets the scheduler of a task identified by `task_id` to the scheduler identified by `scheduler_id`. The scheduler of a task is initialized to the scheduler of the task that created it. The priority of the task is set to `priority`.

**NOTES:**

It is recommended to set the scheduler of a task before it is started or in case it is guaranteed that the task owns no resources. Otherwise, sporadic `RTEMS_RESOURCE_IN_USE` errors may occur.

**EXAMPLE:**

```

1 #include <rtems.h>
2 #include <assert.h>
3
4 rtems_task task( rtems_task_argument arg );
5
6 void example( void )
7 {
8   rtems_status_code sc;
9   rtems_id          task_id;
10  rtems_id          scheduler_id;
11  rtems_name        scheduler_name;
12
13  scheduler_name = rtems_build_name( 'W', 'O', 'R', 'K' );
14
15  sc = rtems_scheduler_ident( scheduler_name, &scheduler_id );
16  assert( sc == RTEMS_SUCCESSFUL );
17
18  sc = rtems_task_create(

```

(continues on next page)

(continued from previous page)

```
19     rtems_build_name( 'T', 'A', 'S', 'K' ),
20     1,
21     RTEMS_MINIMUM_STACK_SIZE,
22     RTEMS_DEFAULT_MODES,
23     RTEMS_DEFAULT_ATTRIBUTES,
24     &task_id
25 );
26 assert( sc == RTEMS_SUCCESSFUL );
27
28 sc = rtems_task_set_scheduler( task_id, scheduler_id, 2 );
29 assert( sc == RTEMS_SUCCESSFUL );
30
31 sc = rtems_task_start( task_id, task, 0 );
32 assert( sc == RTEMS_SUCCESSFUL );
33 }
```

## 7.4.18 TASK\_GET\_AFFINITY - Get task processor affinity

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_get_affinity(
2   rtems_id  id,
3   size_t    cpusetsize,
4   cpu_set_t *cpuset
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successful operation
RTEMS_INVALID_ADDRESS	cpuset is NULL
RTEMS_INVALID_ID	invalid task id
RTEMS_INVALID_NUMBER	the affinity set buffer is too small for the current processor affinity set of the task

**DESCRIPTION:**

Returns the current processor affinity set of the task in cpuset. A set bit in the affinity set means that the task can execute on this processor and a cleared bit means the opposite.

**NOTES:**

The task processor affinity is initialized to the set of online processors.

## 7.4.19 TASK\_SET\_AFFINITY - Set task processor affinity

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_set_affinity(
2   rtems_id      id,
3   size_t        cpusetsize,
4   const cpu_set_t *cpuset
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successful operation
RTEMS_INVALID_ADDRESS	cpuset is NULL
RTEMS_INVALID_ID	invalid task id
RTEMS_INVALID_NUMBER	invalid processor affinity set

**DESCRIPTION:**

Sets the processor affinity set for the task specified by `cpuset`. A set bit in the affinity set means that the task can execute on this processor and a cleared bit means the opposite.

**NOTES:**

This function will not change the scheduler of the task. The intersection of the processor affinity set and the set of processors owned by the scheduler of the task must be non-empty. It is not an error if the processor affinity set contains processors that are not part of the set of processors owned by the scheduler instance of the task. A task will simply not run under normal circumstances on these processors since the scheduler ignores them. Some locking protocols may temporarily use processors that are not included in the processor affinity set of the task. It is also not an error if the processor affinity set contains processors that are not part of the system.

In case a scheduler without support for task affinities is used for the task, then the task processor affinity set must contain all online processors of the system. This prevents odd corner cases if processors are added/removed at run-time to/from scheduler instances.

## 7.4.20 TASK\_ITERATE - Iterate Over Tasks

### CALLING SEQUENCE:

```
1 typedef bool ( *rtcms_task_visitor )( rtcms_tcb *tcb, void *arg );
2
3 void rtcms_task_iterate(
4     rtcms_task_visitor visitor,
5     void *arg
6 );
```

### DIRECTIVE STATUS CODES:

NONE

### DESCRIPTION:

Iterates over all tasks in the system. This operation covers all tasks of all APIs. The user should be careful in accessing the contents of the thread control block tcb. The visitor argument arg is passed to all invocations of visitor in addition to the thread control block. The iteration stops immediately in case the visitor function returns true.

### NOTES:

Must be called from task context. This operation obtains and releases the objects allocator lock. The task visitor is called while owning the objects allocator lock. It is possible to perform blocking operations in the task visitor, however, take care that no deadlocks via the object allocator lock can occur.

## 7.5 Deprecated Directives

### 7.5.1 ITERATE\_OVER\_ALL\_THREADS - Iterate Over Tasks

**Warning:** This directive is deprecated. Its use is unsafe. Use *TASK\_ITERATE - Iterate Over Tasks* (page 110) instead.

#### CALLING SEQUENCE:

```
1 typedef void (*rtcms_per_thread_routine)(Thread_Control *the_thread);
2 void rtcms_iterate_over_all_threads(
3     rtcms_per_thread_routine routine
4 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This directive iterates over all of the existant threads in the system and invokes routine on each of them. The user should be careful in accessing the contents of the\_thread.

This routine is intended for use in diagnostic utilities and is not intended for routine use in an operational system.

#### NOTES:

There is **no protection** while this routine is called. The thread control block may be in an inconsistent state or may change due to interrupts or activity on other processors.



## 7.6 Removed Directives

## 7.6.1 TASK\_GET\_NOTE - Get task notepad entry

**Warning:** This directive was removed in RTEMS 5.1.

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_get_note(
2   rtems_id id,
3   uint32_t notepad,
4   uint32_t *note
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	note value obtained successfully
RTEMS_INVALID_ADDRESS	note parameter is NULL
RTEMS_INVALID_ID	invalid task id
RTEMS_INVALID_NUMBER	invalid notepad location

**DESCRIPTION:**

This directive returns the note contained in the notepad location of the task specified by id.

**NOTES:**

This directive will not cause the running task to be preempted.

If id is set to RTEMS\_SELF, the calling task accesses its own notepad.

The sixteen notepad locations can be accessed using the constants RTEMS\_NOTEPAD\_0 through RTEMS\_NOTEPAD\_15.

Getting a note of a global task which does not reside on the local node will generate a request to the remote node to obtain the notepad entry of the specified task.

## 7.6.2 TASK\_SET\_NOTE - Set task notepad entry

**Warning:** This directive was removed in RTEMS 5.1.

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_task_set_note(  
2   rtems_id id,  
3   uint32_t notepad,  
4   uint32_t note  
5 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	note set successfully
RTEMS_INVALID_ID	invalid task id
RTEMS_INVALID_NUMBER	invalid notepad location

### DESCRIPTION:

This directive sets the notepad entry for the task specified by `id` to the value `note`.

### NOTES:

If `id` is set to `RTEMS_SELF`, the calling task accesses its own notepad.

This directive will not cause the running task to be preempted.

The sixteen notepad locations can be accessed using the constants `RTEMS_NOTEPAD_0` through `RTEMS_NOTEPAD_15`.

Setting a note of a global task which does not reside on the local node will generate a request to the remote node to set the notepad entry of the specified task.

## 7.6.3 TASK\_VARIABLE\_ADD - Associate per task variable

<b>Warning:</b> This directive was removed in RTEMS 5.1.
--

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_variable_add(
2     rtems_id tid,
3     void      **task_variable,
4     void      (*dtor)(void *)
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	per task variable added successfully
RTEMS_INVALID_ADDRESS	task_variable is NULL
RTEMS_INVALID_ID	invalid task id
RTEMS_NO_MEMORY	invalid task id
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported on remote tasks

**DESCRIPTION:**

This directive adds the memory location specified by the ptr argument to the context of the given task. The variable will then be private to the task. The task can access and modify the variable, but the modifications will not appear to other tasks, and other tasks' modifications to that variable will not affect the value seen by the task. This is accomplished by saving and restoring the variable's value each time a task switch occurs to or from the calling task. If the dtor argument is non-NULL it specifies the address of a 'destructor' function which will be called when the task is deleted. The argument passed to the destructor function is the task's value of the variable.

**NOTES:**

Task variables increase the context switch time to and from the tasks that own them so it is desirable to minimize the number of task variables. One efficient method is to have a single task variable that is a pointer to a dynamically allocated structure containing the task's private 'global' data. In this case the destructor function could be 'free'.

Per-task variables are disabled in SMP configurations and this service is not available.

## 7.6.4 TASK\_VARIABLE\_GET - Obtain value of a per task variable

**Warning:** This directive was removed in RTEMS 5.1.

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_task_variable_get(
2     rtems_id tid,
3     void **task_variable,
4     void **task_variable_value
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	per task variable obtained successfully
RTEMS_INVALID_ADDRESS	task_variable is NULL
RTEMS_INVALID_ADDRESS	task_variable_value is NULL
RTEMS_INVALID_ADDRESS	task_variable is not found
RTEMS_NO_MEMORY	invalid task id
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported on remote tasks

**DESCRIPTION:**

This directive looks up the private value of a task variable for a specified task and stores that value in the location pointed to by the result argument. The specified task is usually not the calling task, which can get its private value by directly accessing the variable.

**NOTES:**

If you change memory which task\_variable\_value points to, remember to declare that memory as volatile, so that the compiler will optimize it correctly. In this case both the pointer task\_variable\_value and data referenced by task\_variable\_value should be considered volatile.

Per-task variables are disabled in SMP configurations and this service is not available.

### 7.6.5 TASK\_VARIABLE\_DELETE - Remove per task variable

**Warning:** This directive was removed in RTEMS 5.1.

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_task_variable_delete(  
2     rtems_id id,  
3     void **task_variable  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	per task variable deleted successfully
RTEMS_INVALID_ID	invalid task id
RTEMS_NO_MEMORY	invalid task id
RTEMS_INVALID_ADDRESS	task_variable is NULL
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported on remote tasks

#### DESCRIPTION:

This directive removes the given location from a task's context.

#### NOTES:

Per-task variables are disabled in SMP configurations and this service is not available.

# INTERRUPT MANAGER

## 8.1 Introduction

Any real-time executive must provide a mechanism for quick response to externally generated interrupts to satisfy the critical time constraints of the application. The interrupt manager provides this mechanism for RTEMS. This manager permits quick interrupt response times by providing the critical ability to alter task execution which allows a task to be preempted upon exit from an ISR. The interrupt manager includes the following directive:

- *rtems\_interrupt\_catch* (page 127) - Establish an ISR
- *rtems\_interrupt\_disable* (page 128) - Disable Interrupts
- *rtems\_interrupt\_enable* (page 129) - Restore Interrupt Level
- *rtems\_interrupt\_flash* (page 130) - Flash Interrupt
- *rtems\_interrupt\_local\_disable* (page 131) - Disable Interrupts on Current Processor
- *rtems\_interrupt\_local\_enable* (page 133) - Restore Interrupt Level on Current Processor
- *rtems\_interrupt\_lock\_initialize* (page 134) - Initialize an ISR Lock
- *rtems\_interrupt\_lock\_acquire* (page 135) - Acquire an ISR Lock
- *rtems\_interrupt\_lock\_release* (page 136) - Release an ISR Lock
- *rtems\_interrupt\_lock\_acquire\_isr* (page 137) - Acquire an ISR Lock from ISR
- *rtems\_interrupt\_lock\_release\_isr* (page 138) - Release an ISR Lock from ISR
- *rtems\_interrupt\_is\_in\_progress* (page 139) - Is an ISR in Progress



## 8.2 Background

### 8.2.1 Processing an Interrupt

The interrupt manager allows the application to connect a function to a hardware interrupt vector. When an interrupt occurs, the processor will automatically vector to RTEMS. RTEMS saves and restores all registers which are not preserved by the normal C calling convention for the target processor and invokes the user's ISR. The user's ISR is responsible for processing the interrupt, clearing the interrupt if necessary, and device specific manipulation.

The `rtems_interrupt_catch` directive connects a procedure to an interrupt vector. The vector number is managed using the `rtems_vector_number` data type.

The interrupt service routine is assumed to abide by these conventions and have a prototype similar to the following:

```
1 rtems_isr user_isr(  
2   rtems_vector_number vector  
3 );
```

The vector number argument is provided by RTEMS to allow the application to identify the interrupt source. This could be used to allow a single routine to service interrupts from multiple instances of the same device. For example, a single routine could service interrupts from multiple serial ports and use the vector number to identify which port requires servicing.

To minimize the masking of lower or equal priority level interrupts, the ISR should perform the minimum actions required to service the interrupt. Other non-essential actions should be handled by application tasks. Once the user's ISR has completed, it returns control to the RTEMS interrupt manager which will perform task dispatching and restore the registers saved before the ISR was invoked.

The RTEMS interrupt manager guarantees that proper task scheduling and dispatching are performed at the conclusion of an ISR. A system call made by the ISR may have readied a task of higher priority than the interrupted task. Therefore, when the ISR completes, the postponed dispatch processing must be performed. No dispatch processing is performed as part of directives which have been invoked by an ISR.

Applications must adhere to the following rule if proper task scheduling and dispatching is to be performed:

---

**Note:** The interrupt manager must be used for all ISRs which may be interrupted by the highest priority ISR which invokes an RTEMS directive.

---

Consider a processor which allows a numerically low interrupt level to interrupt a numerically greater interrupt level. In this example, if an RTEMS directive is used in a level 4 ISR, then all ISRs which execute at levels 0 through 4 must use the interrupt manager.

Interrupts are nested whenever an interrupt occurs during the execution of another ISR. RTEMS supports efficient interrupt nesting by allowing the nested ISRs to terminate without performing any dispatch processing. Only when the outermost ISR terminates will the postponed dispatching occur.

### 8.2.2 RTEMS Interrupt Levels

Many processors support multiple interrupt levels or priorities. The exact number of interrupt levels is processor dependent. RTEMS internally supports 256 interrupt levels which are mapped to the processor's interrupt levels. For specific information on the mapping between RTEMS and the target processor's interrupt levels, refer to the Interrupt Processing chapter of the Applications Supplement document for a specific target processor.

### 8.2.3 Disabling of Interrupts by RTEMS

During the execution of directive calls, critical sections of code may be executed. When these sections are encountered, RTEMS disables all maskable interrupts before the execution of the section and restores them to the previous level upon completion of the section. RTEMS has been optimized to ensure that interrupts are disabled for a minimum length of time. The maximum length of time interrupts are disabled by RTEMS is processor dependent and is detailed in the Timing Specification chapter of the Applications Supplement document for a specific target processor.

Non-maskable interrupts (NMI) cannot be disabled, and ISRs which execute at this level **MUST NEVER** issue RTEMS system calls. If a directive is invoked, unpredictable results may occur due to the inability of RTEMS to protect its critical sections. However, ISRs that make no system calls may safely execute as non-maskable interrupts.

## 8.3 Operations

### 8.3.1 Establishing an ISR

The `rtems_interrupt_catch` directive establishes an ISR for the system. The address of the ISR and its associated CPU vector number are specified to this directive. This directive installs the RTEMS interrupt wrapper in the processor's Interrupt Vector Table and the address of the user's ISR in the RTEMS' Vector Table. This directive returns the previous contents of the specified vector in the RTEMS' Vector Table.

### 8.3.2 Directives Allowed from an ISR

Using the interrupt manager ensures that RTEMS knows when a directive is being called from an ISR. The ISR may then use system calls to synchronize itself with an application task. The synchronization may involve messages, events or signals being passed by the ISR to the desired task. Directives invoked by an ISR must operate only on objects which reside on the local node. The following is a list of RTEMS system calls that may be made from an ISR:

- Task Management Although it is acceptable to operate on the `RTEMS_SELF` task (e.g. the currently executing task), while in an ISR, this will refer to the interrupted task. Most of the time, it is an application implementation error to use `RTEMS_SELF` from an ISR.
  - `rtems_task_suspend`
  - `rtems_task_resume`
- Interrupt Management
  - `rtems_interrupt_enable`
  - `rtems_interrupt_disable`
  - `rtems_interrupt_flash`
  - `rtems_interrupt_lock_acquire`
  - `rtems_interrupt_lock_release`
  - `rtems_interrupt_lock_acquire_isr`
  - `rtems_interrupt_lock_release_isr`
  - `rtems_interrupt_is_in_progress`
  - `rtems_interrupt_catch`
- Clock Management
  - `rtems_clock_set`
  - `rtems_clock_get_tod`
  - `rtems_clock_get_tod_timeval`
  - `rtems_clock_get_seconds_since_epoch`
  - `rtems_clock_get_ticks_per_second`
  - `rtems_clock_get_ticks_since_boot`

- `rtems_clock_get_uptime`
- Timer Management
  - `rtems_timer_cancel`
  - `rtems_timer_reset`
  - `rtems_timer_fire_after`
  - `rtems_timer_fire_when`
  - `rtems_timer_server_fire_after`
  - `rtems_timer_server_fire_when`
- Event Management
  - `rtems_event_send`
  - `rtems_event_system_send`
  - `rtems_event_transient_send`
- Semaphore Management
  - `rtems_semaphore_release`
- Message Management
  - `rtems_message_queue_broadcast`
  - `rtems_message_queue_send`
  - `rtems_message_queue_urgent`
- Signal Management
  - `rtems_signal_send`
- Dual-Ported Memory Management
  - `rtems_port_external_to_internal`
  - `rtems_port_internal_to_external`
- IO Management The following services are safe to call from an ISR if and only if the device driver service invoked is also safe. The IO Manager itself is safe but the invoked driver entry point may or may not be.
  - `rtems_io_initialize`
  - `rtems_io_open`
  - `rtems_io_close`
  - `rtems_io_read`
  - `rtems_io_write`
  - `rtems_io_control`
- Fatal Error Management
  - `rtems_fatal`
  - `rtems_fatal_error_occurred`

- Multiprocessing
  - `rtems_multiprocessing_announce`

## 8.4 Directives

This section details the interrupt manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 8.4.1 INTERRUPT\_CATCH - Establish an ISR

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_interrupt_catch(  
2   rtems_isr_entry   new_isr_handler,  
3   rtems_vector_number vector,  
4   rtems_isr_entry   *old_isr_handler  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	ISR established successfully
RTEMS_INVALID_NUMBER	illegal vector number
RTEMS_INVALID_ADDRESS	illegal ISR entry point or invalid old_isr_handler

#### DESCRIPTION:

This directive establishes an interrupt service routine (ISR) for the specified interrupt vector number. The `new_isr_handler` parameter specifies the entry point of the ISR. The entry point of the previous ISR for the specified vector is returned in `old_isr_handler`.

To release an interrupt vector, pass the old handler's address obtained when the vector was first capture.

#### NOTES:

This directive will not cause the calling task to be preempted.

## 8.4.2 INTERRUPT\_DISABLE - Disable Interrupts

**CALLING SEQUENCE:**

```

1 void rtems_interrupt_disable(
2   rtems_interrupt_level level
3 );

```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive disables all maskable interrupts and returns the previous interrupt level in level.

**NOTES:**

A later invocation of the `rtems_interrupt_enable` directive should be used to restore the interrupt level.

This directive is implemented as a macro which sets the level parameter.

This directive will not cause the calling task to be preempted.

This directive is only available in uniprocessor configurations. The directive `rtems_interrupt_local_disable` is available in all configurations.

```

1 void critical_section( void )
2 {
3   rtems_interrupt_level level;
4
5   /*
6    * Please note that the rtems_interrupt_disable() is a macro. The
7    * previous interrupt level (before the maskable interrupts are
8    * disabled) is returned here in the level macro parameter. This
9    * would be wrong:
10   *
11   * rtems_interrupt_disable( &level );
12   */
13   rtems_interrupt_disable( level );
14
15   /* Critical section, maskable interrupts are disabled */
16
17   {
18     rtems_interrupt_level level2;
19
20     rtems_interrupt_disable( level2 );
21
22     /* Nested critical section */
23
24     rtems_interrupt_enable( level2 );
25   }
26
27   /* Maskable interrupts are still disabled */
28
29   rtems_interrupt_enable( level );
30 }

```



### 8.4.3 INTERRUPT\_ENABLE - Restore Interrupt Level

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_enable(  
2   rtems_interrupt_level level  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive restores the interrupt level specified by level.

**NOTES:**

The level parameter value must be obtained by a previous call to `rtems_interrupt_disable` or `rtems_interrupt_flash`. Using an otherwise obtained value is undefined behaviour.

This directive is unsuitable to enable particular interrupt sources, for example in an interrupt controller.

This directive will not cause the calling task to be preempted.

This directive is only available in uniprocessor configurations. The directive `rtems_interrupt_local_enable` is available in all configurations.

### 8.4.4 INTERRUPT\_FLASH - Flash Interrupts

#### CALLING SEQUENCE:

```
1 void rtems_interrupt_flash(  
2   rtems_interrupt_level level  
3 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This directive is functionally equivalent to a `rtems_interrupt_enable( level )` immediately followed by a `rtems_interrupt_disable( level )`. On some architectures it is possible to provide an optimized implementation for this sequence.

#### NOTES:

The `level` parameter value must be obtained by a previous call to `rtems_interrupt_disable` or `rtems_interrupt_flash`. Using an otherwise obtained value is undefined behaviour.

This directive will not cause the calling task to be preempted.

This directive is only available in uniprocessor configurations. The directives `rtems_interrupt_local_disable` and `rtems_interrupt_local_enable` are available in all configurations.

Historically, the interrupt flash directive was heavily used in the operating system implementation. However, this is no longer the case. The interrupt flash directive is provided for backward compatibility reasons.

## 8.4.5 INTERRUPT\_LOCAL\_DISABLE - Disable Interrupts on Current Processor

**CALLING SEQUENCE:**

```

1 void rtems_interrupt_local_disable(
2   rtems_interrupt_level level
3 );

```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive disables all maskable interrupts on the current processor and returns the previous interrupt level in level.

**NOTES:**

A later invocation of the `rtems_interrupt_local_enable` directive should be used to restore the interrupt level.

This directive is implemented as a macro which sets the level parameter.

This directive will not cause the calling task to be preempted.

In SMP configurations, this will not ensure system wide mutual exclusion. Use interrupt locks instead.

```

1 void local_critical_section( void )
2 {
3   rtems_interrupt_level level;
4
5   /*
6    * Please note that the rtems_interrupt_local_disable() is a macro.
7    * The previous interrupt level (before the maskable interrupts are
8    * disabled) is returned here in the level macro parameter. This
9    * would be wrong:
10   *
11   * rtems_interrupt_local_disable( &level );
12   */
13   rtems_interrupt_local_disable( level );
14
15   /*
16    * Local critical section, maskable interrupts on the current
17    * processor are disabled.
18   */
19
20   {
21     rtems_interrupt_level level2;
22
23     rtems_interrupt_local_disable( level2 );
24
25     /* Nested local critical section */
26
27     rtems_interrupt_local_enable( level2 );
28   }
29
30   /* Maskable interrupts are still disabled */

```

(continues on next page)

(continued from previous page)

```
31  
32 rtems_interrupt_local_enable( level );  
33 }
```

### 8.4.6 INTERRUPT\_LOCAL\_ENABLE - Restore Interrupt Level on Current Processor

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_local_enable(  
2   rtems_interrupt_level level  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive restores the interrupt level specified by `level` on the current processor.

**NOTES:**

The `level` parameter value must be obtained by a previous call to `rtems_interrupt_local_disable`. Using an otherwise obtained value is undefined behaviour.

This directive is unsuitable to enable particular interrupt sources, for example in an interrupt controller.

This directive will not cause the calling task to be preempted.

### 8.4.7 INTERRUPT\_LOCK\_INITIALIZE - Initialize an ISR Lock

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_lock_initialize(  
2   rtems_interrupt_lock *lock,  
3   const char          *name  
4 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

Initializes an interrupt lock. The name must be persistent throughout the lifetime of the lock.

**NOTES:**

Concurrent initialization leads to unpredictable results.

### 8.4.8 INTERRUPT\_LOCK\_ACQUIRE - Acquire an ISR Lock

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_lock_acquire(  
2   rtems_interrupt_lock      *lock,  
3   rtems_interrupt_lock_context *lock_context  
4 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

Maskable interrupts will be disabled. In SMP configurations, this directive acquires an SMP lock.

**NOTES:**

A separate lock context must be provided for each acquire/release pair, for example an automatic variable.

An attempt to recursively acquire the lock may result in an infinite loop with maskable interrupts disabled.

This directive will not cause the calling thread to be preempted. This directive can be used in thread and interrupt context.

### 8.4.9 INTERRUPT\_LOCK\_RELEASE - Release an ISR Lock

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_lock_release(  
2   rtems_interrupt_lock      *lock,  
3   rtems_interrupt_lock_context *lock_context  
4 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

The interrupt level will be restored. In SMP configurations, this directive releases an SMP lock.

**NOTES:**

The lock context must be the one used to acquire the lock, otherwise the result is unpredictable.

This directive will not cause the calling thread to be preempted. This directive can be used in thread and interrupt context.



### 8.4.10 INTERRUPT\_LOCK\_ACQUIRE\_ISR - Acquire an ISR Lock from ISR

**CALLING SEQUENCE:**

```
1 void rtems_interrupt_lock_acquire_isr(  
2   rtems_interrupt_lock      *lock,  
3   rtems_interrupt_lock_context *lock_context  
4 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

The interrupt level will remain unchanged. In SMP configurations, this directive acquires an SMP lock.

**NOTES:**

A separate lock context must be provided for each acquire/release pair, for example an automatic variable.

An attempt to recursively acquire the lock may result in an infinite loop.

This directive is intended for device drivers and should be called from the corresponding interrupt service routine.

In case the corresponding interrupt service routine can be interrupted by higher priority interrupts and these interrupts enter the critical section protected by this lock, then the result is unpredictable.

### 8.4.11 INTERRUPT\_LOCK\_RELEASE\_ISR - Release an ISR Lock from ISR

#### CALLING SEQUENCE:

```
1 void rtems_interrupt_lock_release_isr(  
2   rtems_interrupt_lock      *lock,  
3   rtems_interrupt_lock_context *lock_context  
4 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

The interrupt level will remain unchanged. In SMP configurations, this directive releases an SMP lock.

#### NOTES:

The lock context must be the one used to acquire the lock, otherwise the result is unpredictable.

This directive is intended for device drivers and should be called from the corresponding interrupt service routine.

### 8.4.12 INTERRUPT\_IS\_IN\_PROGRESS - Is an ISR in Progress

**CALLING SEQUENCE:**

```
1 bool rtems_interrupt_is_in_progress( void );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive returns TRUE if the processor is currently servicing an interrupt and FALSE otherwise. A return value of TRUE indicates that the caller is an interrupt service routine, *NOT* a task. The directives available to an interrupt service routine are restricted.

**NOTES:**

This directive will not cause the calling task to be preempted.



# CLOCK MANAGER

## 9.1 Introduction

The clock manager provides support for time of day and other time related capabilities. The directives provided by the clock manager are:

- *rtems\_clock\_set* (page 148) - Set date and time
- *rtems\_clock\_get\_tod* (page 149) - Get date and time in TOD format
- *rtems\_clock\_get\_tod\_timeval* (page 150) - Get date and time in timeval format
- *rtems\_clock\_get\_seconds\_since\_epoch* (page 151) - Get seconds since epoch
- *rtems\_clock\_get\_ticks\_per\_second* (page 152) - Get ticks per second
- *rtems\_clock\_get\_ticks\_since\_boot* (page 153) - Get current ticks counter value
- *rtems\_clock\_tick\_later* (page 154) - Get tick value in the future
- *rtems\_clock\_tick\_later\_usec* (page 155) - Get tick value in the future in microseconds
- *rtems\_clock\_tick\_before* (page 156) - Is tick value is before a point in time
- *rtems\_clock\_get\_uptime* (page 157) - Get time since boot
- *rtems\_clock\_get\_uptime\_timeval* (page 158) - Get time since boot in timeval format
- *rtems\_clock\_get\_uptime\_seconds* (page 159) - Get seconds since boot
- *rtems\_clock\_get\_uptime\_nanoseconds* (page 160) - Get nanoseconds since boot

## 9.2 Background

### 9.2.1 Required Support

For the features provided by the clock manager to be utilized, periodic timer interrupts are required. Therefore, a real-time clock or hardware timer is necessary to create the timer interrupts. The clock tick directive is normally called by the timer ISR to announce to RTEMS that a system clock tick has occurred. Elapsed time is measured in ticks. A tick is defined to be an integral number of microseconds which is specified by the user in the Configuration Table.

### 9.2.2 Time and Date Data Structures

The clock facilities of the clock manager operate upon calendar time. These directives utilize the following date and time structure for the native time and date format:

```
1 struct rtems_tod_control {
2     uint32_t year; /* greater than 1987 */
3     uint32_t month; /* 1 - 12 */
4     uint32_t day; /* 1 - 31 */
5     uint32_t hour; /* 0 - 23 */
6     uint32_t minute; /* 0 - 59 */
7     uint32_t second; /* 0 - 59 */
8     uint32_t ticks; /* elapsed between seconds */
9 };
10 typedef struct rtems_tod_control rtems_time_of_day;
```

The native date and time format is the only format supported when setting the system date and time using the `rtems_clock_set` directive. Some applications expect to operate on a *UNIX-style* date and time data structure. The `rtems_clock_get_tod_timeval` always returns the date and time in `struct timeval` format.

The `struct timeval` data structure has two fields: `tv_sec` and `tv_usec` which are seconds and microseconds, respectively. The `tv_sec` field in this data structure is the number of seconds since the POSIX epoch of *January 1, 1970* but will never be prior to the RTEMS epoch of *January 1, 1988*.

### 9.2.3 Clock Tick and Timeslicing

Timeslicing is a task scheduling discipline in which tasks of equal priority are executed for a specific period of time before control of the CPU is passed to another task. It is also sometimes referred to as the automatic round-robin scheduling algorithm. The length of time allocated to each task is known as the quantum or timeslice.

The system's timeslice is defined as an integral number of ticks, and is specified in the Configuration Table. The timeslice is defined for the entire system of tasks, but timeslicing is enabled and disabled on a per task basis.

The clock tick directives implement timeslicing by decrementing the running task's time-remaining counter when both timeslicing and preemption are enabled. If the task's timeslice has expired, then that task will be preempted if there exists a ready task of equal priority.

### 9.2.4 Delays

A sleep timer allows a task to delay for a given interval or up until a given time, and then wake and continue execution. This type of timer is created automatically by the `rtems_task_wake_after` and `rtems_task_wake_when` directives and, as a result, does not have an RTEMS ID. Once activated, a sleep timer cannot be explicitly deleted. Each task may activate one and only one sleep timer at a time.

### 9.2.5 Timeouts

Timeouts are a special type of timer automatically created when the timeout option is used on the `rtems_message_queue_receive`, `rtems_event_receive`, `rtems_semaphore_obtain` and `rtems_region_get_segment` directives. Each task may have one and only one timeout active at a time. When a timeout expires, it unblocks the task with a timeout status code.



## 9.3 Operations

### 9.3.1 Announcing a Tick

RTEMS provides the several clock tick directives which are called from the user's real-time clock ISR to inform RTEMS that a tick has elapsed. Depending on the timer hardware capabilities the clock driver must choose the most appropriate clock tick directive. The tick frequency value, defined in microseconds, is a configuration parameter found in the Configuration Table. RTEMS divides one million microseconds (one second) by the number of microseconds per tick to determine the number of calls to the clock tick directive per second. The frequency of clock tick calls determines the resolution (granularity) for all time dependent RTEMS actions. For example, calling the clock tick directive ten times per second yields a higher resolution than calling the clock tick two times per second. The clock tick directives are responsible for maintaining both calendar time and the dynamic set of timers.

### 9.3.2 Setting the Time

The `rtems_clock_set` directive allows a task or an ISR to set the date and time maintained by RTEMS. If setting the date and time causes any outstanding timers to pass their deadline, then the expired timers will be fired during the invocation of the `rtems_clock_set` directive.

### 9.3.3 Obtaining the Time

RTEMS provides multiple directives which can be used by an application to obtain the current date and time or date and time related information. These directives allow a task or an ISR to obtain the current date and time or date and time related information. The current date and time can be returned in either native or *UNIX-style* format. Additionally, the application can obtain date and time related information such as the number of seconds since the RTEMS epoch, the number of ticks since the executive was initialized, and the number of ticks per second. The following directives are available:

**rtems\_clock\_get\_tod**

obtain native style date and time

**rtems\_clock\_get\_time\_value**

obtain *UNIX-style* date and time

**rtems\_clock\_get\_ticks\_since\_boot**

obtain number of ticks since RTEMS was initialized

**rtems\_clock\_get\_seconds\_since\_epoch**

obtain number of seconds since RTEMS epoch

**rtems\_clock\_get\_ticks\_per\_second**

obtain number of clock ticks per second

Calendar time operations will return an error code if invoked before the date and time have been set.

### 9.3.4 Transition Advice for the Removed `rtems_clock_get()`

The directive `CLOCK_GET` - *Get date and time information* (page 162) took an untyped pointer with an options argument to indicate the time information desired. This has been replaced with a set of typed directives:

- `CLOCK_GET_SECONDS_SINCE_EPOCH` - *Get seconds since epoch* (page 151)
- `CLOCK_GET_TICKS_PER_SECOND` - *Get ticks per second* (page 152)
- `CLOCK_GET_TICKS_SINCE_BOOT` - *Get current ticks counter value* (page 153)
- `CLOCK_GET_TOD` - *Get date and time in TOD format* (page 149)
- `CLOCK_GET_TOD_TIMEVAL` - *Get date and time in timeval format* (page 150)

These directives directly correspond to what were previously referred to as *clock options*. These strongly typed directives were available for multiple releases in parallel with `rtems_clock_get()` until that directive was removed.

## 9.4 Directives

This section details the clock manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 9.4.1 CLOCK\_SET - Set date and time

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_clock_set(
2   rtems_time_of_day *time_buffer
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	date and time set successfully
RTEMS_INVALID_ADDRESS	time_buffer is NULL
RTEMS_INVALID_CLOCK	invalid time of day

**DESCRIPTION:**

This directive sets the system date and time. The date, time, and ticks in the `time_buffer` structure are all range-checked, and an error is returned if any one is out of its valid range.

**NOTES:**

Years before 1988 are invalid.

The system date and time are based on the configured tick rate (number of microseconds in a tick).

Setting the time forward may cause a higher priority task, blocked waiting on a specific time, to be made ready. In this case, the calling task will be preempted after the next clock tick.

Re-initializing RTEMS causes the system date and time to be reset to an uninitialized state. Another call to `rtems_clock_set` is required to re-initialize the system date and time to application specific specifications.

## 9.4.2 CLOCK\_GET\_TOD - Get date and time in TOD format

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_clock_get_tod(  
2   rtems_time_of_day *time_buffer  
3 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	current time obtained successfully
RTEMS_NOT_DEFINED	system date and time is not set
RTEMS_INVALID_ADDRESS	time_buffer is NULL

### DESCRIPTION:

This directive obtains the system date and time. If the date and time has not been set with a previous call to `rtems_clock_set`, then the `RTEMS_NOT_DEFINED` status code is returned.

### NOTES:

This directive is callable from an ISR.

This directive will not cause the running task to be preempted. Re-initializing RTEMS causes the system date and time to be reset to an uninitialized state. Another call to `rtems_clock_set` is required to re-initialize the system date and time to application specific specifications.

### 9.4.3 CLOCK\_GET\_TOD\_TIMEVAL - Get date and time in timeval format

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_clock_get_tod_interval(  
2     struct timeval *time  
3 );
```

#### DIRECTIVE STATUS CODES:

#### DESCRIPTION:

This directive obtains the system date and time in POSIX struct timeval format. If the date and time has not been set with a previous call to rtems\_clock\_set, then the RTEMS\_NOT\_DEFINED status code is returned.

#### NOTES:

This directive is callable from an ISR.

This directive will not cause the running task to be preempted. Re-initializing RTEMS causes the system date and time to be reset to an uninitialized state. Another call to rtems\_clock\_set is required to re-initialize the system date and time to application specific specifications.

#### 9.4.4 CLOCK\_GET\_SECONDS\_SINCE\_EPOCH - Get seconds since epoch

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_clock_get_seconds_since_epoch(  
2   rtems_interval *the_interval  
3 );
```

##### DIRECTIVE STATUS CODES:

##### DESCRIPTION:

This directive returns the number of seconds since the RTEMS epoch and the current system date and time. If the date and time has not been set with a previous call to `rtems_clock_set`, then the `RTEMS_NOT_DEFINED` status code is returned.

##### NOTES:

This directive is callable from an ISR.

This directive will not cause the running task to be preempted. Re-initializing RTEMS causes the system date and time to be reset to an uninitialized state. Another call to `rtems_clock_set` is required to re-initialize the system date and time to application specific specifications.

### 9.4.5 CLOCK\_GET\_TICKS\_PER\_SECOND - Get ticks per second

**CALLING SEQUENCE:**

```
1 rtems_interval rtems_clock_get_ticks_per_second(void);
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive returns the number of clock ticks per second. This is strictly based upon the microseconds per clock tick that the application has configured.

**NOTES:**

This directive is callable from an ISR.

This directive will not cause the running task to be preempted.



### 9.4.6 CLOCK\_GET\_TICKS\_SINCE\_BOOT - Get current ticks counter value

**CALLING SEQUENCE:**

```
1 rtems_interval rtems_clock_get_ticks_since_boot(void);
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive returns the current tick counter value. With a 1ms clock tick, this counter overflows after 50 days since boot. This is the historical measure of uptime in an RTEMS system. The newer service `rtems_clock_get_uptime` is another and potentially more accurate way of obtaining similar information.

**NOTES:**

This directive is callable from an ISR.

This directive will not cause the running task to be preempted.

### 9.4.7 CLOCK\_TICK\_LATER - Get tick value in the future

**CALLING SEQUENCE:**

```
1 rtems_interval rtems_clock_tick_later(  
2   rtems_interval delta  
3 );
```

**DESCRIPTION:**

Returns the ticks counter value delta ticks in the future.

**NOTES:**

This directive is callable from an ISR.

This directive will not cause the running task to be preempted.

### 9.4.8 CLOCK\_TICK\_LATER\_USEC - Get tick value in the future in microseconds

**CALLING SEQUENCE:**

```
1 rtems_interval rtems_clock_tick_later_usec(  
2     rtems_interval delta_in_usec  
3 );
```

**DESCRIPTION:**

Returns the ticks counter value at least delta microseconds in the future.

**NOTES:**

This directive is callable from an ISR.

This directive will not cause the running task to be preempted.

### 9.4.9 CLOCK\_TICK\_BEFORE - Is tick value is before a point in time

#### CALLING SEQUENCE:

```
1 rtems_interval rtems_clock_tick_before(  
2     rtems_interval tick  
3 );
```

#### DESCRIPTION:

Returns true if the current ticks counter value indicates a time before the time specified by the tick value and false otherwise.

#### NOTES:

This directive is callable from an ISR.

This directive will not cause the running task to be preempted.

#### EXAMPLE:

```
1 status busy( void )  
2 {  
3     rtems_interval timeout = rtems_clock_tick_later_usec( 10000 );  
4     do {  
5         if ( ok() ) {  
6             return success;  
7         }  
8     } while ( rtems_clock_tick_before( timeout ) );  
9     return timeout;  
10 }
```

### 9.4.10 CLOCK\_GET\_UPTIME - Get the time since boot

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_clock_get_uptime(  
2     struct timespec *uptime  
3 );
```

#### DIRECTIVE STATUS CODES:

#### DESCRIPTION:

This directive returns the seconds and nanoseconds since the system was booted. If the BSP supports nanosecond clock accuracy, the time reported will probably be different on every call.

#### NOTES:

This directive may be called from an ISR.

### 9.4.11 CLOCK\_GET\_UPTIME\_TIMEVAL - Get the time since boot in timeval format

**CALLING SEQUENCE:**

```
1 void rtems_clock_get_uptime_timeval(  
2     struct timeval *uptime  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive returns the seconds and microseconds since the system was booted. If the BSP supports nanosecond clock accuracy, the time reported will probably be different on every call.

**NOTES:**

This directive may be called from an ISR.

### 9.4.12 CLOCK\_GET\_UPTIME\_SECONDS - Get the seconds since boot

**CALLING SEQUENCE:**

```
1 time_t rtems_clock_get_uptime_seconds(void);
```

**DIRECTIVE STATUS CODES:**

The system uptime in seconds.

**DESCRIPTION:**

This directive returns the seconds since the system was booted.

**NOTES:**

This directive may be called from an ISR.

### 9.4.13 CLOCK\_GET\_UPTIME\_NANOSECONDS - Get the nanoseconds since boot

**CALLING SEQUENCE:**

```
1 uint64_t rtems_clock_get_uptime_nanoseconds(void);
```

**DIRECTIVE STATUS CODES:**

The system uptime in nanoseconds.

**DESCRIPTION:**

This directive returns the nanoseconds since the system was booted.

**NOTES:**

This directive may be called from an ISR.



## 9.5 Removed Directives

## 9.5.1 CLOCK\_GET - Get date and time information

**Warning:** This directive was removed in RTEMS 5.1. See also *Transition Advice for the Removed `rtems_clock_get()`* (page 146).

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_clock_get(
2   rtems_clock_get_options option,
3   void                *time_buffer
4 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	current time obtained successfully
RTEMS_NOT_DEFINED	system date and time is not set
RTEMS_INVALID_ADDRESS	time_buffer is NULL

**DESCRIPTION:**

This directive obtains the system date and time. If the caller is attempting to obtain the date and time (i.e. option is set to either `RTEMS_CLOCK_GET_SECONDS_SINCE_EPOCH`, `RTEMS_CLOCK_GET_TOD`, or `RTEMS_CLOCK_GET_TIME_VALUE`) and the date and time has not been set with a previous call to `rtems_clock_set`, then the `RTEMS_NOT_DEFINED` status code is returned. The caller can always obtain the number of ticks per second (option is `RTEMS_CLOCK_GET_TICKS_PER_SECOND`) and the number of ticks since the executive was initialized (option is `RTEMS_CLOCK_GET_TICKS_SINCE_BOOT`).

The option argument may taken on any value of the enumerated type `rtems_clock_get_options`. The data type expected for `time_buffer` is based on the value of option as indicated below:

Option	Return type
<code>RTEMS_CLOCK_GET_TOD</code>	( <code>rtems_time_of_day *</code> )
<code>RTEMS_CLOCK_GET_SECONDS_SINCE_EPOCH</code>	( <code>rtems_interval *</code> )
<code>RTEMS_CLOCK_GET_TICKS_SINCE_BOOT</code>	( <code>rtems_interval *</code> )
<code>RTEMS_CLOCK_GET_TICKS_PER_SECOND</code>	( <code>rtems_interval *</code> )
<code>RTEMS_CLOCK_GET_TIME_VALUE</code>	( <code>struct timeval *</code> )

**NOTES:**

This directive is callable from an ISR.

This directive will not cause the running task to be preempted. Re-initializing RTEMS causes the system date and time to be reset to an uninitialized state. Another call to `rtems_clock_set` is required to re-initialize the system date and time to application specific specifications.

# TIMER MANAGER

## 10.1 Introduction

The timer manager provides support for timer facilities. The directives provided by the timer manager are:

- *rtems\_timer\_create* (page 170) - Create a timer
- *rtems\_timer\_ident* (page 171) - Get ID of a timer
- *rtems\_timer\_cancel* (page 172) - Cancel a timer
- *rtems\_timer\_delete* (page 173) - Delete a timer
- *rtems\_timer\_fire\_after* (page 174) - Fire timer after interval
- *rtems\_timer\_fire\_when* (page 175) - Fire timer when specified
- *rtems\_timer\_initiate\_server* (page 176) - Initiate server for task-based timers
- *rtems\_timer\_server\_fire\_after* (page 177) - Fire task-based timer after interval
- *rtems\_timer\_server\_fire\_when* (page 178) - Fire task-based timer when specified
- *rtems\_timer\_reset* (page 179) - Reset an interval timer

## 10.2 Background

### 10.2.1 Required Support

A clock tick is required to support the functionality provided by this manager.

### 10.2.2 Timers

A timer is an RTEMS object which allows the application to schedule operations to occur at specific times in the future. User supplied timer service routines are invoked by either a clock tick directive or a special Timer Server task when the timer fires. Timer service routines may perform any operations or directives which normally would be performed by the application code which invoked a clock tick directive.

The timer can be used to implement watchdog routines which only fire to denote that an application error has occurred. The timer is reset at specific points in the application to ensure that the watchdog does not fire. Thus, if the application does not reset the watchdog timer, then the timer service routine will fire to indicate that the application has failed to reach a reset point. This use of a timer is sometimes referred to as a “keep alive” or a “deadman” timer.

### 10.2.3 Timer Server

The Timer Server task is responsible for executing the timer service routines associated with all task-based timers. This task executes at a priority specified by *rtems\_timer\_initiate\_server()* (page 176) and it may have a priority of zero (the highest priority). In uniprocessor configurations, it is created non-preemptible.

By providing a mechanism where timer service routines execute in task rather than interrupt space, the application is allowed a bit more flexibility in what operations a timer service routine can perform. For example, the Timer Server can be configured to have a floating point context in which case it would be safe to perform floating point operations from a task-based timer. Most of the time, executing floating point instructions from an interrupt service routine is not considered safe. The timer service routines invoked by the Timer Server may block, however, since this blocks the Timer Server itself, other timer service routines that are already pending do not run until the blocked timer service routine finished its work.

The Timer Server is designed to remain blocked until a task-based timer fires. This reduces the execution overhead of the Timer Server.

### 10.2.4 Timer Service Routines

The timer service routine should adhere to C calling conventions and have a prototype similar to the following:

```
1 rtems_timer_service_routine user_routine(  
2     rtems_id timer_id,  
3     void      *user_data  
4 );
```

Where the `timer_id` parameter is the RTEMS object ID of the timer which is being fired and `user_data` is a pointer to user-defined information which may be utilized by the timer service routine. The argument `user_data` may be NULL.

## 10.3 Operations

### 10.3.1 Creating a Timer

The `rtems_timer_create` directive creates a timer by allocating a Timer Control Block (TMCB), assigning the timer a user-specified name, and assigning it a timer ID. Newly created timers do not have a timer service routine associated with them and are not active.

### 10.3.2 Obtaining Timer IDs

When a timer is created, RTEMS generates a unique timer ID and assigns it to the created timer until it is deleted. The timer ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_timer_create` directive, the timer ID is stored in a user provided location. Second, the timer ID may be obtained later using the `rtems_timer_ident` directive. The timer ID is used by other directives to manipulate this timer.

### 10.3.3 Initiating an Interval Timer

The `rtems_timer_fire_after` and `rtems_timer_server_fire_after` directives initiate a timer to fire a user provided timer service routine after the specified number of clock ticks have elapsed. When the interval has elapsed, the timer service routine will be invoked from a clock tick directive if it was initiated by the `rtems_timer_fire_after` directive and from the Timer Server task if initiated by the `rtems_timer_server_fire_after` directive.

### 10.3.4 Initiating a Time of Day Timer

The `rtems_timer_fire_when` and `rtems_timer_server_fire_when` directive initiate a timer to fire a user provided timer service routine when the specified time of day has been reached. When the interval has elapsed, the timer service routine will be invoked from a clock tick directive by the `rtems_timer_fire_when` directive and from the Timer Server task if initiated by the `rtems_timer_server_fire_when` directive.

### 10.3.5 Canceling a Timer

The `rtems_timer_cancel` directive is used to halt the specified timer. Once canceled, the timer service routine will not fire unless the timer is reinitiated. The timer can be reinitiated using the `rtems_timer_reset`, `rtems_timer_fire_after`, and `rtems_timer_fire_when` directives.

### 10.3.6 Resetting a Timer

The `rtems_timer_reset` directive is used to restore an interval timer initiated by a previous invocation of `rtems_timer_fire_after` or `rtems_timer_server_fire_after` to its original interval length. If the timer has not been used or the last usage of this timer was by the `rtems_timer_fire_when` or `rtems_timer_server_fire_when` directive, then an error is returned. The timer service routine is not changed or fired by this directive.

### 10.3.7 Initiating the Timer Server

The `rtems_timer_initiate_server` directive is used to allocate and start the execution of the Timer Server task. The application can specify both the stack size and attributes of the Timer Server. The Timer Server executes at a priority higher than any application task and thus the user can expect to be preempted as the result of executing the `rtems_timer_initiate_server` directive.

### 10.3.8 Deleting a Timer

The `rtems_timer_delete` directive is used to delete a timer. If the timer is running and has not expired, the timer is automatically canceled. The timer's control block is returned to the TMCB free list when it is deleted. A timer can be deleted by a task other than the task which created the timer. Any subsequent references to the timer's name and ID are invalid.



## 10.4 Directives

This section details the timer manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 10.4.1 TIMER\_CREATE - Create a timer

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_timer_create(  
2     rtems_name name,  
3     rtems_id *id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	timer created successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	invalid timer name
RTEMS_TOO_MANY	too many timers created

#### DESCRIPTION:

This directive creates a timer. The assigned timer id is returned in id. This id is used to access the timer with other timer manager directives. For control and maintenance of the timer, RTEMS allocates a TMCB from the local TMCB free pool and initializes it.

#### NOTES:

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

In SMP configurations, the processor of the currently executing thread determines the processor used for the created timer. During the life-time of the timer this processor is used to manage the timer internally.

## 10.4.2 TIMER\_IDENT - Get ID of a timer

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_timer_ident(  
2     rtems_name name,  
3     rtems_id *id  
4 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	timer identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	timer name not found

### DESCRIPTION:

This directive obtains the timer id associated with the timer name to be acquired. If the timer name is not unique, then the timer id will match one of the timers with that name. However, this timer id is not guaranteed to correspond to the desired timer. The timer id is used to access this timer in other timer related directives.

### NOTES:

This directive will not cause the running task to be preempted.

### 10.4.3 TIMER\_CANCEL - Cancel a timer

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_timer_cancel(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer canceled successfully
RTEMS_INVALID_ID	invalid timer id

**DESCRIPTION:**

This directive cancels the timer id. This timer will be reinitiated by the next invocation of `rtems_timer_reset`, `rtems_timer_fire_after`, or `rtems_timer_fire_when` with this id.

**NOTES:**

This directive will not cause the running task to be preempted.

#### 10.4.4 TIMER\_DELETE - Delete a timer

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_timer_delete(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer deleted successfully
RTEMS_INVALID_ID	invalid timer id

**DESCRIPTION:**

This directive deletes the timer specified by id. If the timer is running, it is automatically canceled. The TMCB for the deleted timer is reclaimed by RTEMS.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

A timer can be deleted by a task other than the task which created the timer.

## 10.4.5 TIMER\_FIRE\_AFTER - Fire timer after interval

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_fire_after(
2   rtems_id          id,
3   rtems_interval    ticks,
4   rtems_timer_service_routine_entry routine,
5   void              *user_data
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer initiated successfully
RTEMS_INVALID_ADDRESS	routine is NULL
RTEMS_INVALID_ID	invalid timer id
RTEMS_INVALID_NUMBER	invalid interval

**DESCRIPTION:**

This directive initiates the timer specified by `id`. If the timer is running, it is automatically canceled before being initiated. The timer is scheduled to fire after an interval ticks clock ticks has passed. When the timer fires, the timer service routine `routine` will be invoked with the argument `user_data`.

**NOTES:**

This directive will not cause the running task to be preempted.

## 10.4.6 TIMER\_FIRE\_WHEN - Fire timer when specified

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_fire_when(
2   rtems_id          id,
3   rtems_time_of_day *wall_time,
4   rtems_timer_service_routine_entry routine,
5   void             *user_data
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer initiated successfully
RTEMS_INVALID_ADDRESS	routine is NULL
RTEMS_INVALID_ADDRESS	wall_time is NULL
RTEMS_INVALID_ID	invalid timer id
RTEMS_NOT_DEFINED	system date and time is not set
RTEMS_INVALID_CLOCK	invalid time of day

**DESCRIPTION:**

This directive initiates the timer specified by `id`. If the timer is running, it is automatically canceled before being initiated. The timer is scheduled to fire at the time of day specified by `wall_time`. When the timer fires, the timer service routine `routine` will be invoked with the argument `user_data`.

**NOTES:**

This directive will not cause the running task to be preempted.

## 10.4.7 TIMER\_INITIATE\_SERVER - Initiate server for task-based timers

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_initiate_server(
2     uint32_t      priority,
3     uint32_t      stack_size,
4     rtems_attribute attribute_set
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	Timer Server initiated successfully
RTEMS_TOO_MANY	too many tasks created

**DESCRIPTION:**

This directive initiates the Timer Server task. This task is responsible for executing all timers initiated via the `rtems_timer_server_fire_after` or `rtems_timer_server_fire_when` directives.

**NOTES:**

This directive could cause the calling task to be preempted.

The Timer Server task is created using the `rtems_task_create` service and must be accounted for when configuring the system.

Even through this directive invokes the `rtems_task_create` and `rtems_task_start` directives, it should only fail due to resource allocation problems.



## 10.4.8 TIMER\_SERVER\_FIRE\_AFTER - Fire task-based timer after interval

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_server_fire_after(
2     rtems_id          id,
3     rtems_interval    ticks,
4     rtems_timer_service_routine_entry routine,
5     void              *user_data
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer initiated successfully
RTEMS_INVALID_ADDRESS	routine is NULL
RTEMS_INVALID_ID	invalid timer id
RTEMS_INVALID_NUMBER	invalid interval
RTEMS_INCORRECT_STATE	Timer Server not initiated

**DESCRIPTION:**

This directive initiates the timer specified by id and specifies that when it fires it will be executed by the Timer Server.

If the timer is running, it is automatically canceled before being initiated. The timer is scheduled to fire after an interval ticks clock ticks has passed. When the timer fires, the timer service routine routine will be invoked with the argument user\_data.

**NOTES:**

This directive will not cause the running task to be preempted.

## 10.4.9 TIMER\_SERVER\_FIRE\_WHEN - Fire task-based timer when specified

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_server_fire_when(
2   rtems_id          id,
3   rtems_time_of_day *wall_time,
4   rtems_timer_service_routine_entry routine,
5   void              *user_data
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer initiated successfully
RTEMS_INVALID_ADDRESS	routine is NULL
RTEMS_INVALID_ADDRESS	wall_time is NULL
RTEMS_INVALID_ID	invalid timer id
RTEMS_NOT_DEFINED	system date and time is not set
RTEMS_INVALID_CLOCK	invalid time of day
RTEMS_INCORRECT_STATE	Timer Server not initiated

**DESCRIPTION:**

This directive initiates the timer specified by id and specifies that when it fires it will be executed by the Timer Server.

If the timer is running, it is automatically canceled before being initiated. The timer is scheduled to fire at the time of day specified by wall\_time. When the timer fires, the timer service routine routine will be invoked with the argument user\_data.

**NOTES:**

This directive will not cause the running task to be preempted.

## 10.4.10 TIMER\_RESET - Reset an interval timer

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_timer_reset(
2   rtems_id id
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	timer reset successfully
RTEMS_INVALID_ID	invalid timer id
RTEMS_NOT_DEFINED	attempted to reset a when or newly created timer

**DESCRIPTION:**

This directive resets the timer associated with `id`. This timer must have been previously initiated with either the `rtems_timer_fire_after` or `rtems_timer_server_fire_after` directive. If active the timer is canceled, after which the timer is reinitiated using the same interval and timer service routine which the original `rtems_timer_fire_after` or `rtems_timer_server_fire_after` directive used.

**NOTES:**

If the timer has not been used or the last usage of this timer was by a `rtems_timer_fire_when` or `rtems_timer_server_fire_when` directive, then the `RTEMS_NOT_DEFINED` error is returned.

Restarting a cancelled after timer results in the timer being reinitiated with its previous timer service routine and interval.

This directive will not cause the running task to be preempted.



# RATE MONOTONIC MANAGER

## 11.1 Introduction

The rate monotonic manager provides facilities to implement tasks which execute in a periodic fashion. Critically, it also gathers information about the execution of those periods and can provide important statistics to the user which can be used to analyze and tune the application. The directives provided by the rate monotonic manager are:

- *rtems\_rate\_monotonic\_create* (page 194) - Create a rate monotonic period
- *rtems\_rate\_monotonic\_ident* (page 195) - Get ID of a period
- *rtems\_rate\_monotonic\_cancel* (page 196) - Cancel a period
- *rtems\_rate\_monotonic\_delete* (page 197) - Delete a rate monotonic period
- *rtems\_rate\_monotonic\_period* (page 198) - Conclude current/Start next period
- *rtems\_rate\_monotonic\_get\_status* (page 199) - Obtain status from a period
- *rtems\_rate\_monotonic\_get\_statistics* (page 200) - Obtain statistics from a period
- *rtems\_rate\_monotonic\_reset\_statistics* (page 201) - Reset statistics for a period
- *rtems\_rate\_monotonic\_reset\_all\_statistics* (page 202) - Reset statistics for all periods
- *rtems\_rate\_monotonic\_report\_statistics* (page 203) - Print period statistics report

## 11.2 Background

The rate monotonic manager provides facilities to manage the execution of periodic tasks. This manager was designed to support application designers who utilize the Rate Monotonic Scheduling Algorithm (RMS) to ensure that their periodic tasks will meet their deadlines, even under transient overload conditions. Although designed for hard real-time systems, the services provided by the rate monotonic manager may be used by any application which requires periodic tasks.

### 11.2.1 Rate Monotonic Manager Required Support

A clock tick is required to support the functionality provided by this manager.

### 11.2.2 Period Statistics

This manager maintains a set of statistics on each period object. These statistics are reset implicitly at period creation time and may be reset or obtained at any time by the application. The following is a list of the information kept:

**owner**

is the id of the thread that owns this period.

**count**

is the total number of periods executed.

**missed\_count**

is the number of periods that were missed.

**min\_cpu\_time**

is the minimum amount of CPU execution time consumed on any execution of the periodic loop.

**max\_cpu\_time**

is the maximum amount of CPU execution time consumed on any execution of the periodic loop.

**total\_cpu\_time**

is the total amount of CPU execution time consumed by executions of the periodic loop.

**min\_wall\_time**

is the minimum amount of wall time that passed on any execution of the periodic loop.

**max\_wall\_time**

is the maximum amount of wall time that passed on any execution of the periodic loop.

**total\_wall\_time**

is the total amount of wall time that passed during executions of the periodic loop.

Each period is divided into two consecutive phases. The period starts with the active phase of the task and is followed by the inactive phase of the task. In the inactive phase the task is blocked and waits for the start of the next period. The inactive phase is skipped in case of a period miss. The wall time includes the time during the active phase of the task on which the task is not executing on a processor. The task is either blocked (for example it waits for a resource) or a higher priority tasks executes, thus preventing it from executing. In case the wall

time exceeds the period time, then this is a period miss. The gap between the wall time and the period time is the margin between a period miss or success.

The period statistics information is inexpensive to maintain and can provide very useful insights into the execution characteristics of a periodic task loop. But it is just information. The period statistics reported must be analyzed by the user in terms of what the applications is. For example, in an application where priorities are assigned by the Rate Monotonic Algorithm, it would be very undesirable for high priority (i.e. frequency) tasks to miss their period. Similarly, in nearly any application, if a task were supposed to execute its periodic loop every 10 milliseconds and it averaged 11 milliseconds, then application requirements are not being met.

The information reported can be used to determine the “hot spots” in the application. Given a period’s id, the user can determine the length of that period. From that information and the CPU usage, the user can calculate the percentage of CPU time consumed by that periodic task. For example, a task executing for 20 milliseconds every 200 milliseconds is consuming 10 percent of the processor’s execution time. This is usually enough to make it a good candidate for optimization.

However, execution time alone is not enough to gauge the value of optimizing a particular task. It is more important to optimize a task executing 2 millisecond every 10 milliseconds (20 percent of the CPU) than one executing 10 milliseconds every 100 (10 percent of the CPU). As a general rule of thumb, the higher frequency at which a task executes, the more important it is to optimize that task.

### 11.2.3 Periodicity Definitions

A periodic task is one which must be executed at a regular interval. The interval between successive iterations of the task is referred to as its period. Periodic tasks can be characterized by the length of their period and execution time. The period and execution time of a task can be used to determine the processor utilization for that task. Processor utilization is the percentage of processor time used and can be calculated on a per-task or system-wide basis. Typically, the task’s worst-case execution time will be less than its period. For example, a periodic task’s requirements may state that it should execute for 10 milliseconds every 100 milliseconds. Although the execution time may be the average, worst, or best case, the worst-case execution time is more appropriate for use when analyzing system behavior under transient overload conditions. . . index:: aperiodic task, definition

In contrast, an aperiodic task executes at irregular intervals and has only a soft deadline. In other words, the deadlines for aperiodic tasks are not rigid, but adequate response times are desirable. For example, an aperiodic task may process user input from a terminal.

Finally, a sporadic task is an aperiodic task with a hard deadline and minimum interarrival time. The minimum interarrival time is the minimum period of time which exists between successive iterations of the task. For example, a sporadic task could be used to process the pressing of a fire button on a joystick. The mechanical action of the fire button ensures a minimum time period between successive activations, but the missile must be launched by a hard deadline.



### 11.2.4 Rate Monotonic Scheduling Algorithm

The Rate Monotonic Scheduling Algorithm (RMS) is important to real-time systems designers because it allows one to sufficiently guarantee that a set of tasks is schedulable (see [LL73], [LSD89], [SG90], [Bur91]).

A set of tasks is said to be schedulable if all of the tasks can meet their deadlines. RMS provides a set of rules which can be used to perform a guaranteed schedulability analysis for a task set. This analysis determines whether a task set is schedulable under worst-case conditions and emphasizes the predictability of the system's behavior. It has been proven that:

#### **RMS**

RMS is an optimal fixed-priority algorithm for scheduling independent, preemptible, periodic tasks on a single processor.

RMS is optimal in the sense that if a set of tasks can be scheduled by any fixed-priority algorithm, then RMS will be able to schedule that task set. RMS bases its schedulability analysis on the processor utilization level below which all deadlines can be met.

RMS calls for the static assignment of task priorities based upon their period. The shorter a task's period, the higher its priority. For example, a task with a 1 millisecond period has higher priority than a task with a 100 millisecond period. If two tasks have the same period, then RMS does not distinguish between the tasks. However, RTEMS specifies that when given tasks of equal priority, the task which has been ready longest will execute first. RMS's priority assignment scheme does not provide one with exact numeric values for task priorities. For example, consider the following task set and priority assignments:

Task	Period (in milliseconds)	Priority
1	100	Low
2	50	Medium
3	50	Medium
4	25	High

RMS only calls for task 1 to have the lowest priority, task 4 to have the highest priority, and tasks 2 and 3 to have an equal priority between that of tasks 1 and 4. The actual RTEMS priorities assigned to the tasks must only adhere to those guidelines.

Many applications have tasks with both hard and soft deadlines. The tasks with hard deadlines are typically referred to as the critical task set, with the soft deadline tasks being the non-critical task set. The critical task set can be scheduled using RMS, with the non-critical tasks not executing under transient overload, by simply assigning priorities such that the lowest priority critical task (i.e. longest period) has a higher priority than the highest priority non-critical task. Although RMS may be used to assign priorities to the non-critical tasks, it is not necessary. In this instance, schedulability is only guaranteed for the critical task set.

### 11.2.5 Schedulability Analysis

RMS allows application designers to ensure that tasks can meet all deadlines under fixed-priority assignment, even under transient overload, without knowing exactly when any given task will execute by applying proven schedulability analysis rules.

#### 11.2.5.1 Assumptions

The schedulability analysis rules for RMS were developed based on the following assumptions:

- The requests for all tasks for which hard deadlines exist are periodic, with a constant interval between requests.
- Each task must complete before the next request for it occurs.
- The tasks are independent in that a task does not depend on the initiation or completion of requests for other tasks.
- The execution time for each task without preemption or interruption is constant and does not vary.
- Any non-periodic tasks in the system are special. These tasks displace periodic tasks while executing and do not have hard, critical deadlines.

Once the basic schedulability analysis is understood, some of the above assumptions can be relaxed and the side-effects accounted for.

#### 11.2.5.2 Processor Utilization Rule

The Processor Utilization Rule requires that processor utilization be calculated based upon the period and execution time of each task. The fraction of processor time spent executing task index  $i$  is  $Time(i) / Period(i)$ . The processor utilization can be calculated as follows where  $n$  is the number of tasks in the set being analyzed:

$$Utilization = \sum_{i=1}^n Time_i / Period_i$$

To ensure schedulability even under transient overload, the processor utilization must adhere to the following rule:

$$maximumUtilization = n * (2^{\frac{1}{n}} - 1)$$

As the number of tasks increases, the above formula approaches  $\ln(2)$  for a worst-case utilization factor of approximately 0.693. Many tasks sets can be scheduled with a greater utilization factor. In fact, the average processor utilization threshold for a randomly generated task set is approximately 0.88. See more detail in [LL73].

### 11.2.5.3 Processor Utilization Rule Example

This example illustrates the application of the Processor Utilization Rule to an application with three critical periodic tasks. The following table details the RMS priority, period, execution time, and processor utilization for each task:

Task	RMS Priority	Period	Execution Time	Processor Utilization
1	High	100	15	0.15
2	Medium	200	50	0.25
3	Low	300	100	0.33

The total processor utilization for this task set is 0.73 which is below the upper bound of  $3 * (2^{1/3} - 1)$ , or 0.779, imposed by the Processor Utilization Rule. Therefore, this task set is guaranteed to be schedulable using RMS.

### 11.2.5.4 First Deadline Rule

If a given set of tasks do exceed the processor utilization upper limit imposed by the Processor Utilization Rule, they can still be guaranteed to meet all their deadlines by application of the First Deadline Rule. This rule can be stated as follows:

For a given set of independent periodic tasks, if each task meets its first deadline when all tasks are started at the same time, then the deadlines will always be met for any combination of start times.

A key point with this rule is that ALL periodic tasks are assumed to start at the exact same instant in time. Although this assumption may seem to be invalid, RTEMS makes it quite easy to ensure. By having a non-preemptible user initialization task, all application tasks, regardless of priority, can be created and started before the initialization deletes itself. This technique ensures that all tasks begin to compete for execution time at the same instant - when the user initialization task deletes itself. See more detail in [LSD89].

### 11.2.5.5 First Deadline Rule Example

The First Deadline Rule can ensure schedulability even when the Processor Utilization Rule fails. The example below is a modification of the Processor Utilization Rule example where task execution time has been increased from 15 to 25 units. The following table details the RMS priority, period, execution time, and processor utilization for each task:

Task	RMS Priority	Period	Execution Time	Processor Utilization
1	High	100	25	0.25
2	Medium	200	50	0.25
3	Low	300	100	0.33

The total processor utilization for the modified task set is 0.83 which is above the upper bound of  $3 * (2^{1/3} - 1)$ , or 0.779, imposed by the Processor Utilization Rule. Therefore, this task set is not guaranteed to be schedulable using RMS. However, the First Deadline Rule can guarantee the schedulability of this task set. This rule calls for one to examine each occurrence of deadline until either all tasks have met their deadline or one task failed to meet its first deadline. The

following table details the time of each deadline occurrence, the maximum number of times each task may have run, the total execution time, and whether all the deadlines have been met:

Deadline Time	Task 1	Task 2	Task 3	Total Execution Time	All Deadlines Met?
100	1	1	1	$25 + 50 + 100 = 175$	NO
200	2	1	1	$50 + 50 + 100 = 200$	YES

The key to this analysis is to recognize when each task will execute. For example at time 100, task 1 must have met its first deadline, but tasks 2 and 3 may also have begun execution. In this example, at time 100 tasks 1 and 2 have completed execution and thus have met their first deadline. Tasks 1 and 2 have used  $(25 + 50) = 75$  time units, leaving  $(100 - 75) = 25$  time units for task 3 to begin. Because task 3 takes 100 ticks to execute, it will not have completed execution at time 100. Thus at time 100, all of the tasks except task 3 have met their first deadline.

At time 200, task 1 must have met its second deadline and task 2 its first deadline. As a result, of the first 200 time units, task 1 uses  $(2 * 25) = 50$  and task 2 uses 50, leaving  $(200 - 100)$  time units for task 3. Task 3 requires 100 time units to execute, thus it will have completed execution at time 200. Thus, all of the tasks have met their first deadlines at time 200, and the task set is schedulable using the First Deadline Rule.

#### 11.2.5.6 Relaxation of Assumptions

The assumptions used to develop the RMS schedulability rules are uncommon in most real-time systems. For example, it was assumed that tasks have constant unvarying execution time. It is possible to relax this assumption, simply by using the worst-case execution time of each task.

Another assumption is that the tasks are independent. This means that the tasks do not wait for one another or contend for resources. This assumption can be relaxed by accounting for the amount of time a task spends waiting to acquire resources. Similarly, each task's execution time must account for any I/O performed and any RTEMS directive calls.

In addition, the assumptions did not account for the time spent executing interrupt service routines. This can be accounted for by including all the processor utilization by interrupt service routines in the utilization calculation. Similarly, one should also account for the impact of delays in accessing local memory caused by direct memory access and other processors accessing local dual-ported memory.

The assumption that nonperiodic tasks are used only for initialization or failure-recovery can be relaxed by placing all periodic tasks in the critical task set. This task set can be scheduled and analyzed using RMS. All nonperiodic tasks are placed in the non-critical task set. Although the critical task set can be guaranteed to execute even under transient overload, the non-critical task set is not guaranteed to execute.

In conclusion, the application designer must be fully cognizant of the system and its run-time behavior when performing schedulability analysis for a system using RMS. Every hardware and software factor which impacts the execution time of each task must be accounted for in the schedulability analysis.

## 11.3 Operations

### 11.3.1 Creating a Rate Monotonic Period

The `rtems_rate_monotonic_create` directive creates a rate monotonic period which is to be used by the calling task to delineate a period. RTEMS allocates a Period Control Block (PCB) from the PCB free list. This data structure is used by RTEMS to manage the newly created rate monotonic period. RTEMS returns a unique period ID to the application which is used by other rate monotonic manager directives to access this rate monotonic period.

### 11.3.2 Manipulating a Period

The `rtems_rate_monotonic_period` directive is used to establish and maintain periodic execution utilizing a previously created rate monotonic period. Once initiated by the `rtems_rate_monotonic_period` directive, the period is said to run until it either expires or is reinitiated. The state of the rate monotonic period results in one of the following scenarios:

- If the rate monotonic period is running, the calling task will be blocked for the remainder of the outstanding period and, upon completion of that period, the period will be reinitiated with the specified period.
- If the rate monotonic period is not currently running and has not expired, it is initiated with a length of period ticks and the calling task returns immediately.
- If the rate monotonic period has expired before the task invokes the `rtems_rate_monotonic_period` directive, the postponed job will be released until there is no more postponed jobs. The calling task returns immediately with a timeout error status. In the watchdog routine, the period will still be updated periodically and track the count of the postponed jobs [CvdBruggenC16]. Please note, the count of the postponed jobs is only saturated until 0xffffffff.

### 11.3.3 Obtaining the Status of a Period

If the `rtems_rate_monotonic_period` directive is invoked with a period of `RTEMS_PERIOD_STATUS` ticks, the current state of the specified rate monotonic period will be returned. The following table details the relationship between the period's status and the directive status code returned by the `rtems_rate_monotonic_period` directive:

<code>RTEMS_SUCCESSFUL</code>	period is running
<code>RTEMS_TIMEOUT</code>	period has expired
<code>RTEMS_NOT_DEFINED</code>	period has never been initiated

Obtaining the status of a rate monotonic period does not alter the state or length of that period.

### 11.3.4 Canceling a Period

The `rtems_rate_monotonic_cancel` directive is used to stop the period maintained by the specified rate monotonic period. The period is stopped and the rate monotonic period can be reinitiated using the `rtems_rate_monotonic_period` directive.

### 11.3.5 Deleting a Rate Monotonic Period

The `rtems_rate_monotonic_delete` directive is used to delete a rate monotonic period. If the period is running and has not expired, the period is automatically canceled. The rate monotonic period's control block is returned to the PCB free list when it is deleted. A rate monotonic period can be deleted by a task other than the task which created the period.

### 11.3.6 Examples

The following sections illustrate common uses of rate monotonic periods to construct periodic tasks.

### 11.3.7 Simple Periodic Task

This example consists of a single periodic task which, after initialization, executes every 100 clock ticks.

```

1 rtems_task Periodic_task(rtems_task_argument arg)
2 {
3     rtems_name      name;
4     rtems_id        period;
5     rtems_status_code status;
6     name = rtems_build_name( 'P', 'E', 'R', 'D' );
7     status = rtems_rate_monotonic_create( name, &period );
8     if ( status != RTEMS_SUCCESSFUL ) {
9         printf( "rtems_monotonic_create failed with status of %d.\n", status );
10        exit( 1 );
11    }
12    while ( 1 ) {
13        if ( rtems_rate_monotonic_period( period, 100 ) == RTEMS_TIMEOUT )
14            break;
15        /* Perform some periodic actions */
16    }
17    /* missed period so delete period and SELF */
18    status = rtems_rate_monotonic_delete( period );
19    if ( status != RTEMS_SUCCESSFUL ) {
20        printf( "rtems_rate_monotonic_delete failed with status of %d.\n", status );
21        exit( 1 );
22    }
23    status = rtems_task_delete( RTEMS_SELF ); /* should not return */
24    printf( "rtems_task_delete returned with status of %d.\n", status );
25    exit( 1 );
26 }

```

The above task creates a rate monotonic period as part of its initialization. The first time the loop is executed, the `rtems_rate_monotonic_period` directive will initiate the period for 100 ticks and return immediately. Subsequent invocations of the `rtems_rate_monotonic_period` directive

will result in the task blocking for the remainder of the 100 tick period. If, for any reason, the body of the loop takes more than 100 ticks to execute, the `rtems_rate_monotonic_period` directive will return the `RTEMS_TIMEOUT` status. If the above task misses its deadline, it will delete the rate monotonic period and itself.

### 11.3.8 Task with Multiple Periods

This example consists of a single periodic task which, after initialization, performs two sets of actions every 100 clock ticks. The first set of actions is performed in the first forty clock ticks of every 100 clock ticks, while the second set of actions is performed between the fortieth and seventieth clock ticks. The last thirty clock ticks are not used by this task.

```

1 rtems_task Periodic_task(rtems_task_argument arg)
2 {
3     rtems_name      name_1, name_2;
4     rtems_id       period_1, period_2;
5     name_1 = rtems_build_name( 'P', 'E', 'R', '1' );
6     name_2 = rtems_build_name( 'P', 'E', 'R', '2' );
7     (void) rtems_rate_monotonic_create( name_1, &period_1 );
8     (void) rtems_rate_monotonic_create( name_2, &period_2 );
9     while ( 1 ) {
10        if ( rtems_rate_monotonic_period( period_1, 100 ) == RTEMS_TIMEOUT )
11            break;
12        if ( rtems_rate_monotonic_period( period_2, 40 ) == RTEMS_TIMEOUT )
13            break;
14        /*
15         * Perform first set of actions between clock
16         * ticks 0 and 39 of every 100 ticks.
17         */
18        if ( rtems_rate_monotonic_period( period_2, 30 ) == RTEMS_TIMEOUT )
19            break;
20        /*
21         * Perform second set of actions between clock 40 and 69
22         * of every 100 ticks. THEN ...
23         *
24         * Check to make sure we didn't miss the period_2 period.
25         */
26        if ( rtems_rate_monotonic_period( period_2, RTEMS_PERIOD_STATUS ) == RTEMS_
↪TIMEOUT )
27            break;
28        (void) rtems_rate_monotonic_cancel( period_2 );
29    }
30    /* missed period so delete period and SELF */
31    (void) rtems_rate_monotonic_delete( period_1 );
32    (void) rtems_rate_monotonic_delete( period_2 );
33    (void) rtems_task_delete( RTEMS_SELF );
34 }

```

The above task creates two rate monotonic periods as part of its initialization. The first time the loop is executed, the `rtems_rate_monotonic_period` directive will initiate the `period_1` period for 100 ticks and return immediately. Subsequent invocations of the `rtems_rate_monotonic_period` directive for `period_1` will result in the task blocking for the remainder of the 100 tick period. The `period_2` period is used to control the execution time of the two sets of actions within each 100 tick period established by `period_1`. The `rtems_rate_monotonic_cancel( period_2 )` call is performed to ensure that the `period_2` pe-

riod does not expire while the task is blocked on the `period_1` period. If this cancel operation were not performed, every time the `rtems_rate_monotonic_period( period_2, 40 )` call is executed, except for the initial one, a directive status of `RTEMS_TIMEOUT` is returned. It is important to note that every time this call is made, the `period_2` period will be initiated immediately and the task will not block.

If, for any reason, the task misses any deadline, the `rtems_rate_monotonic_period` directive will return the `RTEMS_TIMEOUT` directive status. If the above task misses its deadline, it will delete the rate monotonic periods and itself.



## 11.4 Directives

This section details the rate monotonic manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 11.4.1 RATE\_MONOTONIC\_CREATE - Create a rate monotonic period

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_rate_monotonic_create(  
2     rtems_name name,  
3     rtems_id *id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	rate monotonic period created successfully
RTEMS_INVALID_NAME	invalid period name
RTEMS_TOO_MANY	too many periods created

#### DESCRIPTION:

This directive creates a rate monotonic period. The assigned rate monotonic id is returned in `id`. This id is used to access the period with other rate monotonic manager directives. For control and maintenance of the rate monotonic period, RTEMS allocates a PCB from the local PCB free pool and initializes it.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

## 11.4.2 RATE\_MONOTONIC\_IDENT - Get ID of a period

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_rate_monotonic_ident(  
2     rtems_name name,  
3     rtems_id *id  
4 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	period identified successfully
RTEMS_INVALID_NAME	period name not found

### DESCRIPTION:

This directive obtains the period id associated with the period name to be acquired. If the period name is not unique, then the period id will match one of the periods with that name. However, this period id is not guaranteed to correspond to the desired period. The period id is used to access this period in other rate monotonic manager directives.

### NOTES:

This directive will not cause the running task to be preempted.

## 11.4.3 RATE\_MONOTONIC\_CANCEL - Cancel a period

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_rate_monotonic_cancel(
2   rtems_id id
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	period canceled successfully
RTEMS_INVALID_ID	invalid rate monotonic period id
RTEMS_NOT_OWNER_OF_RESOURCE	rate monotonic period not created by calling task

**DESCRIPTION:**

This directive cancels the rate monotonic period id. This period will be reinitiated by the next invocation of `rtems_rate_monotonic_period` with id.

**NOTES:**

This directive will not cause the running task to be preempted.

The rate monotonic period specified by id must have been created by the calling task.

#### 11.4.4 RATE\_MONOTONIC\_DELETE - Delete a rate monotonic period

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_rate_monotonic_delete(  
2   rtems_id id  
3 );
```

##### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	period deleted successfully
RTEMS_INVALID_ID	invalid rate monotonic period id

##### DESCRIPTION:

This directive deletes the rate monotonic period specified by id. If the period is running, it is automatically canceled. The PCB for the deleted period is reclaimed by RTEMS.

##### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

A rate monotonic period can be deleted by a task other than the task which created the period.

## 11.4.5 RATE\_MONOTONIC\_PERIOD - Conclude current/Start next period

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_rate_monotonic_period(
2   rtems_id      id,
3   rtems_interval length
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	period initiated successfully
RTEMS_INVALID_ID	invalid rate monotonic period id
RTEMS_NOT_OWNER_OF_RESOURCE	period not created by calling task
RTEMS_NOT_DEFINED	period has never been initiated (only possible when period is set to PERIOD_STATUS)
RTEMS_TIMEOUT	period has expired

**DESCRIPTION:**

This directive initiates the rate monotonic period id with a length of period ticks. If id is running, then the calling task will block for the remainder of the period before reinitiating the period with the specified period. If id was not running (either expired or never initiated), the period is immediately initiated and the directive returns immediately. If id has expired its period, the postponed job will be released immediately and the following calls of this directive will release postponed jobs until there is no more deadline miss.

If invoked with a period of RTEMS\_PERIOD\_STATUS ticks, the current state of id will be returned. The directive status indicates the current state of the period. This does not alter the state or period of the period.

**NOTES:**

This directive will not cause the running task to be preempted.

## 11.4.6 RATE\_MONOTONIC\_GET\_STATUS - Obtain status from a period

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_rate_monotonic_get_status(
2     rtems_id          id,
3     rtems_rate_monotonic_period_status *status
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	period status retrieved successfully
RTEMS_INVALID_ID	invalid rate monotonic period id
RTEMS_INVALID_ADDRESS	invalid address of status
RTEMS_NOT_DEFINED	no status is available due to the cpu usage of the task having been reset since the period initiated

**\*DESCRIPTION:**

This directive returns status information associated with the rate monotonic period id in the following data structure:

```

1 typedef struct {
2     rtems_id          owner;
3     rtems_rate_monotonic_period_states state;
4     rtems_rate_monotonic_period_time_t since_last_period;
5     rtems_thread_cpu_usage_t          executed_since_last_period;
6     uint32_t                      postponed_jobs_count;
7 } rtems_rate_monotonic_period_status;

```

A configure time option can be used to select whether the time information is given in ticks or seconds and nanoseconds. The default is seconds and nanoseconds. If the period's state is RATE\_MONOTONIC\_INACTIVE, both time values will be set to 0. Otherwise, both time values will contain time information since the last invocation of the `rtems_rate_monotonic_period` directive. More specifically, the `since_last_period` value contains the elapsed time which has occurred since the last invocation of the `rtems_rate_monotonic_period` directive and the `executed_since_last_period` contains how much processor time the owning task has consumed since the invocation of the `rtems_rate_monotonic_period` directive. In addition, the `postponed_jobs_count` value contains the count of jobs which are not released yet.

**NOTES:**

This directive will not cause the running task to be preempted.

## 11.4.7 RATE\_MONOTONIC\_GET\_STATISTICS - Obtain statistics from a period

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_rate_monotonic_get_statistics(
2   rtems_id          id,
3   rtems_rate_monotonic_period_statistics *statistics
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	period statistics retrieved successfully
RTEMS_INVALID_ID	invalid rate monotonic period id
RTEMS_INVALID_ADDRESS	invalid address of statistics

**DESCRIPTION:**

This directive returns statistics information associated with the rate monotonic period id in the following data structure:

```

1 typedef struct {
2   uint32_t    count;
3   uint32_t    missed_count;
4   #ifdef RTEMS_ENABLE_NANOSECOND_CPU_USAGE_STATISTICS
5     struct timespec min_cpu_time;
6     struct timespec max_cpu_time;
7     struct timespec total_cpu_time;
8   #else
9     uint32_t    min_cpu_time;
10    uint32_t    max_cpu_time;
11    uint32_t    total_cpu_time;
12  #endif
13  #ifdef RTEMS_ENABLE_NANOSECOND_RATE_MONOTONIC_STATISTICS
14    struct timespec min_wall_time;
15    struct timespec max_wall_time;
16    struct timespec total_wall_time;
17  #else
18    uint32_t    min_wall_time;
19    uint32_t    max_wall_time;
20    uint32_t    total_wall_time;
21  #endif
22 } rtems_rate_monotonic_period_statistics;

```

This directive returns the current statistics information for the period instance associated with id. The information returned is indicated by the structure above.

**NOTES:**

This directive will not cause the running task to be preempted.



### 11.4.8 RATE\_MONOTONIC\_RESET\_STATISTICS - Reset statistics for a period

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_rate_monotonic_reset_statistics(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	period initiated successfully
RTEMS_INVALID_ID	invalid rate monotonic period id

**DESCRIPTION:**

This directive resets the statistics information associated with this rate monotonic period instance.

**NOTES:**

This directive will not cause the running task to be preempted.

### 11.4.9 RATE\_MONOTONIC\_RESET\_ALL\_STATISTICS - Reset statistics for all periods

**CALLING SEQUENCE:**

```
1 void rtems_rate_monotonic_reset_all_statistics(void);
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive resets the statistics information associated with all rate monotonic period instances.

**NOTES:**

This directive will not cause the running task to be preempted.

## 11.4.10 RATE\_MONOTONIC\_REPORT\_STATISTICS - Print period statistics report

**CALLING SEQUENCE:**

```
1 void rtems_rate_monotonic_report_statistics(void);
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive prints a report on all active periods which have executed at least one period. The following is an example of the output generated by this directive.

ID	OWNER	PERIODS	MISSED	CPU TIME	WALL TIME
MIN/MAX/AVG	MIN/MAX/AVG				
0x42010001	TA1	502	0	0/1/0.99	0/0/0.00
0x42010002	TA2	502	0	0/1/0.99	0/0/0.00
0x42010003	TA3	501	0	0/1/0.99	0/0/0.00
0x42010004	TA4	501	0	0/1/0.99	0/0/0.00
0x42010005	TA5	10	0	0/1/0.90	0/0/0.00

**NOTES:**

This directive will not cause the running task to be preempted.



# SEMAPHORE MANAGER

## 12.1 Introduction

The semaphore manager utilizes standard Dijkstra counting semaphores to provide synchronization and mutual exclusion capabilities. The directives provided by the semaphore manager are:

- *rtems\_semaphore\_create* (page 213) - Create a semaphore
- *rtems\_semaphore\_ident* (page 215) - Get ID of a semaphore
- *rtems\_semaphore\_delete* (page 216) - Delete a semaphore
- *rtems\_semaphore\_obtain* (page 217) - Acquire a semaphore
- *rtems\_semaphore\_release* (page 219) - Release a semaphore
- *rtems\_semaphore\_flush* (page 220) - Unblock all tasks waiting on a semaphore
- *rtems\_semaphore\_set\_priority* (page 222) - Set priority by scheduler for a semaphore

## 12.2 Background

A semaphore can be viewed as a protected variable whose value can be modified only with the `rtems_semaphore_create`, `rtems_semaphore_obtain`, and `rtems_semaphore_release` directives. RTEMS supports both binary and counting semaphores. A binary semaphore is restricted to values of zero or one, while a counting semaphore can assume any non-negative integer value.

A binary semaphore (not a simple binary semaphore) can be used to control access to a single resource. In particular, it can be used to enforce mutual exclusion for a critical section in user code (mutex). In this instance, the semaphore would be created with an initial count of one to indicate that no task is executing the critical section of code. Upon entry to the critical section, a task must issue the `rtems_semaphore_obtain` directive to prevent other tasks from entering the critical section. Upon exit from the critical section, the task that obtained the binary semaphore must issue the `rtems_semaphore_release` directive to allow another task to execute the critical section. A binary semaphore must be released by the task that obtained it.

A counting semaphore can be used to control access to a pool of two or more resources. For example, access to three printers could be administered by a semaphore created with an initial count of three. When a task requires access to one of the printers, it issues the `rtems_semaphore_obtain` directive to obtain access to a printer. If a printer is not currently available, the task can wait for a printer to become available or return immediately. When the task has completed printing, it should issue the `rtems_semaphore_release` directive to allow other tasks access to the printer.

Task synchronization may be achieved by creating a semaphore with an initial count of zero. One task waits for the arrival of another task by issuing a `rtems_semaphore_obtain` directive when it reaches a synchronization point. The other task performs a corresponding `rtems_semaphore_release` operation when it reaches its synchronization point, thus unblocking the pending task.

### 12.2.1 Nested Resource Access

Deadlock occurs when a task owning a binary semaphore attempts to acquire that same semaphore and blocks as result. Since the semaphore is allocated to a task, it cannot be deleted. Therefore, the task that currently holds the semaphore and is also blocked waiting for that semaphore will never execute again.

RTEMS addresses this problem by allowing the task holding the binary semaphore to obtain the same binary semaphore multiple times in a nested manner. Each `rtems_semaphore_obtain` must be accompanied with a `rtems_semaphore_release`. The semaphore will only be made available for acquisition by other tasks when the outermost `rtems_semaphore_obtain` is matched with a `rtems_semaphore_release`.

Simple binary semaphores do not allow nested access and so can be used for task synchronization.

### 12.2.2 Priority Inheritance

RTEMS supports *priority inheritance* (page 30) for local, binary semaphores that use the priority task wait queue blocking discipline. In SMP configurations, the *O(m) Independence-Preserving Protocol (OMIP)* (page 30) is used instead.

### 12.2.3 Priority Ceiling

RTEMS supports *priority ceiling* (page 29) for local, binary semaphores that use the priority task wait queue blocking discipline.

### 12.2.4 Multiprocessor Resource Sharing Protocol

RTEMS supports the *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30) for local, binary semaphores that use the priority task wait queue blocking discipline. In uniprocessor configurations, the *Immediate Ceiling Priority Protocol (ICPP)* (page 29) is used instead.

### 12.2.5 Building a Semaphore Attribute Set

In general, an attribute set is built by a bitwise OR of the desired attribute components. The following table lists the set of valid semaphore attributes:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority
RTEMS_BINARY_SEMAPHORE	restrict values to 0 and 1
RTEMS_COUNTING_SEMAPHORE	no restriction on values (default)
RTEMS_SIMPLE_BINARY_SEMAPHORE	restrict values to 0 and 1, do not allow nested access, allow deletion of locked semaphore.
RTEMS_NO_INHERIT_PRIORITY	do not use priority inheritance (default)
RTEMS_INHERIT_PRIORITY	use priority inheritance
RTEMS_NO_PRIORITY_CEILING	do not use priority ceiling (default)
RTEMS_PRIORITY_CEILING	use priority ceiling
RTEMS_NO_MULTIPROCESSOR_RESOURCE_SHARING	do not use Multiprocessor Resource Sharing Protocol (default)
RTEMS_MULTIPROCESSOR_RESOURCE_SHARING	use Multiprocessor Resource Sharing Protocol
RTEMS_LOCAL	local semaphore (default)
RTEMS_GLOBAL	global semaphore


Attribute values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. An attribute listed as a default is not required to appear in the attribute list, although it is a good programming practice to specify default attributes. If all defaults are desired, the attribute RTEMS\_DEFAULT\_ATTRIBUTES should be specified on this call.

This example demonstrates the `attribute_set` parameter needed to create a local semaphore with the task priority waiting queue discipline. The `attribute_set` parameter passed to the `rtcms_semaphore_create` directive could be either `RTEMS_PRIORITY` or `RTEMS_LOCAL | RTEMS_PRIORITY`. The `attribute_set` parameter can be set to `RTEMS_PRIORITY` because



RTEMS\_LOCAL is the default for all created tasks. If a similar semaphore were to be known globally, then the `attribute_set` parameter would be `RTEMS_GLOBAL | RTEMS_PRIORITY`.

Some combinations of these attributes are invalid. For example, priority ordered blocking discipline must be applied to a binary semaphore in order to use either the priority inheritance or priority ceiling functionality. The following tree figure illustrates the valid combinations.

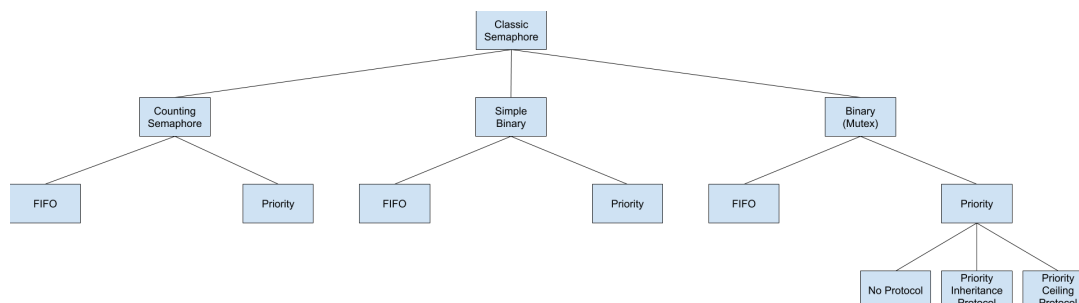

### 12.2.6 Building a SEMAPHORE\_OBTAIN Option Set

In general, an option is built by a bitwise OR of the desired option components. The set of valid options for the `rtems_semaphore_obtain` directive are listed in the following table:

RTEMS_WAIT	task will wait for semaphore (default)
RTEMS_NO_WAIT	task should not wait

Option values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. An option listed as a default is not required to appear in the list, although it is a good programming practice to specify default options. If all defaults are desired, the option `RTEMS_DEFAULT_OPTIONS` should be specified on this call.

This example demonstrates the option parameter needed to poll for a semaphore. The option parameter passed to the `rtems_semaphore_obtain` directive should be `RTEMS_NO_WAIT`.

## 12.3 Operations

### 12.3.1 Creating a Semaphore

The `rtems_semaphore_create` directive creates a binary or counting semaphore with a user-specified name as well as an initial count. If a binary semaphore is created with a count of zero (0) to indicate that it has been allocated, then the task creating the semaphore is considered the current holder of the semaphore. At create time the method for ordering waiting tasks in the semaphore's task wait queue (by FIFO or task priority) is specified. Additionally, the priority inheritance or priority ceiling algorithm may be selected for local, binary semaphores that use the priority task wait queue blocking discipline. If the priority ceiling algorithm is selected, then the highest priority of any task which will attempt to obtain this semaphore must be specified. RTEMS allocates a Semaphore Control Block (SMCB) from the SMCB free list. This data structure is used by RTEMS to manage the newly created semaphore. Also, a unique semaphore ID is generated and returned to the calling task.

### 12.3.2 Obtaining Semaphore IDs

When a semaphore is created, RTEMS generates a unique semaphore ID and assigns it to the created semaphore until it is deleted. The semaphore ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_semaphore_create` directive, the semaphore ID is stored in a user provided location. Second, the semaphore ID may be obtained later using the `rtems_semaphore_ident` directive. The semaphore ID is used by other semaphore manager directives to access this semaphore.

### 12.3.3 Acquiring a Semaphore

The `rtems_semaphore_obtain` directive is used to acquire the specified semaphore. A simplified version of the `rtems_semaphore_obtain` directive can be described as follows:

If the semaphore's count is greater than zero then decrement the semaphore's count  
else wait for release of semaphore then return SUCCESSFUL.

When the semaphore cannot be immediately acquired, one of the following situations applies:

- By default, the calling task will wait forever to acquire the semaphore.
- Specifying `RTEMS_NO_WAIT` forces an immediate return with an error status code.
- Specifying a timeout limits the interval the task will wait before returning with an error status code.

If the task waits to acquire the semaphore, then it is placed in the semaphore's task wait queue in either FIFO or task priority order. If the task blocked waiting for a binary semaphore using priority inheritance and the task's priority is greater than that of the task currently holding the semaphore, then the holding task will inherit the priority of the blocking task. All tasks waiting on a semaphore are returned an error code when the semaphore is deleted.

When a task successfully obtains a semaphore using priority ceiling and the priority ceiling for this semaphore is greater than that of the holder, then the holder's priority will be elevated.

#### 12.3.4 Releasing a Semaphore

The `rtems_semaphore_release` directive is used to release the specified semaphore. A simplified version of the `rtems_semaphore_release` directive can be described as follows:

If there are no tasks are waiting on this semaphore then increment the semaphore's count else assign semaphore to a waiting task and return `SUCCESSFUL`.

If this is the outermost release of a binary semaphore that uses priority inheritance or priority ceiling and the task does not currently hold any other binary semaphores, then the task performing the `rtems_semaphore_release` will have its priority restored to its normal value.

#### 12.3.5 Deleting a Semaphore

The `rtems_semaphore_delete` directive removes a semaphore from the system and frees its control block. A semaphore can be deleted by any local task that knows the semaphore's ID. As a result of this directive, all tasks blocked waiting to acquire the semaphore will be readied and returned a status code which indicates that the semaphore was deleted. Any subsequent references to the semaphore's name and ID are invalid.

## 12.4 Directives

This section details the semaphore manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 12.4.1 SEMAPHORE\_CREATE - Create a semaphore

#### CALLING SEQUENCE:

```

1 rtems_status_code rtems_semaphore_create(
2     rtems_name      name,
3     uint32_t        count,
4     rtems_attribute attribute_set,
5     rtems_task_priority priority_ceiling,
6     rtems_id        *id
7 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	semaphore created successfully
RTEMS_INVALID_NAME	invalid semaphore name
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_TOO_MANY	too many semaphores created
RTEMS_NOT_DEFINED	invalid attribute set
RTEMS_INVALID_NUMBER	invalid starting count for binary semaphore
RTEMS_TOO_MANY	too many global objects

#### DESCRIPTION:

This directive creates a semaphore which resides on the local node. The created semaphore has the user-defined name specified in `name` and the initial count specified in `count`. For control and maintenance of the semaphore, RTEMS allocates and initializes a SMCB. The RTEMS-assigned semaphore id is returned in `id`. This semaphore id is used with other semaphore related directives to access the semaphore.

Specifying `PRIORITY` in `attribute_set` causes tasks waiting for a semaphore to be serviced according to task priority. When `FIFO` is selected, tasks are serviced in First In-First Out order.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The priority inheritance and priority ceiling algorithms are only supported for local, binary semaphores that use the priority task wait queue blocking discipline.

The following semaphore attribute constants are defined by RTEMS:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority
RTEMS_BINARY_SEMAPHORE	restrict values to 0 and 1
RTEMS_COUNTING_SEMAPHORE	no restriction on values (default)
RTEMS_SIMPLE_BINARY_SEMAPHORE	restrict values to 0 and 1, block on nested access, allow deletion of locked semaphore.
RTEMS_NO_INHERIT_PRIORITY	do not use priority inheritance (default)
RTEMS_INHERIT_PRIORITY	use priority inheritance
RTEMS_NO_PRIORITY_CEILING	do not use priority ceiling (default)
RTEMS_PRIORITY_CEILING	use priority ceiling
RTEMS_NO_MULTIPROCESSOR_RESOURCE_SHARING	do not use Multiprocessor Resource Sharing Protocol (default)
RTEMS_MULTIPROCESSOR_RESOURCE_SHARING	use Multiprocessor Resource Sharing Protocol
RTEMS_LOCAL	local semaphore (default)
RTEMS_GLOBAL	global semaphore

Semaphores should not be made global unless remote tasks must interact with the created semaphore. This is to avoid the system overhead incurred by the creation of a global semaphore. When a global semaphore is created, the semaphore's name and id must be transmitted to every node in the system for insertion in the local copy of the global object table.

*Note*, some combinations of attributes are not valid. See the earlier discussion on this.

The total number of global objects, including semaphores, is limited by the `maximum_global_objects` field in the Configuration Table.

It is not allowed to create an initially locked MrsP semaphore and the `RTEMS_INVALID_NUMBER` status code will be returned in SMP configurations in this case. This prevents lock order reversal problems with the allocator mutex.

## 12.4.2 SEMAPHORE\_IDENT - Get ID of a semaphore

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_semaphore_ident(  
2     rtems_name name,  
3     uint32_t node,  
4     rtems_id *id  
5 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	semaphore identified successfully
RTEMS_INVALID_NAME	semaphore name not found
RTEMS_INVALID_NODE	invalid node id

### DESCRIPTION:

This directive obtains the semaphore id associated with the semaphore name. If the semaphore name is not unique, then the semaphore id will match one of the semaphores with that name. However, this semaphore id is not guaranteed to correspond to the desired semaphore. The semaphore id is used by other semaphore related directives to access the semaphore.

### NOTES:

This directive will not cause the running task to be preempted.

If node is RTEMS\_SEARCH\_ALL\_NODES, all nodes are searched with the local node being searched first. All other nodes are searched with the lowest numbered node searched first.

If node is a valid node number which does not represent the local node, then only the semaphores exported by the designated node are searched.

This directive does not generate activity on remote nodes. It accesses only the local copy of the global object table.

### 12.4.3 SEMAPHORE\_DELETE - Delete a semaphore

#### CALLING SEQUENCE:

```

1 rtems_status_code rtems_semaphore_delete(
2     rtems_id id
3 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	semaphore deleted successfully
RTEMS_INVALID_ID	invalid semaphore id
RTEMS_RESOURCE_IN_USE	binary semaphore is in use
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot delete remote semaphore

#### DESCRIPTION:

This directive deletes the semaphore specified by `id`. All tasks blocked waiting to acquire the semaphore will be readied and returned a status code which indicates that the semaphore was deleted. The SMCB for this semaphore is reclaimed by RTEMS.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The calling task will be preempted if it is enabled by the task's execution mode and a higher priority local task is waiting on the deleted semaphore. The calling task will NOT be preempted if all of the tasks that are waiting on the semaphore are remote tasks.

The calling task does not have to be the task that created the semaphore. Any local task that knows the semaphore id can delete the semaphore.

When a global semaphore is deleted, the semaphore id must be transmitted to every node in the system for deletion from the local copy of the global object table.

The semaphore must reside on the local node, even if the semaphore was created with the `RTEMS_GLOBAL` option.

Proxies, used to represent remote tasks, are reclaimed when the semaphore is deleted.



### 12.4.4 SEMAPHORE\_OBTAIN - Acquire a semaphore

#### CALLING SEQUENCE:

```

1 rtems_status_code rtems_semaphore_obtain(
2   rtems_id      id,
3   rtems_option  option_set,
4   rtems_interval timeout
5 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	semaphore obtained successfully
RTEMS_UNSATISFIED	semaphore not available
RTEMS_TIMEOUT	timed out waiting for semaphore
RTEMS_OBJECT_WAS_DELETED	semaphore deleted while waiting
RTEMS_INVALID_ID	invalid semaphore id

#### DESCRIPTION:

This directive acquires the semaphore specified by `id`. The `RTEMS_WAIT` and `RTEMS_NO_WAIT` components of the options parameter indicate whether the calling task wants to wait for the semaphore to become available or return immediately if the semaphore is not currently available. With either `RTEMS_WAIT` or `RTEMS_NO_WAIT`, if the current semaphore count is positive, then it is decremented by one and the semaphore is successfully acquired by returning immediately with a successful return code.

If the calling task chooses to return immediately and the current semaphore count is zero or negative, then a status code is returned indicating that the semaphore is not available. If the calling task chooses to wait for a semaphore and the current semaphore count is zero or negative, then it is decremented by one and the calling task is placed on the semaphore's wait queue and blocked. If the semaphore was created with the `RTEMS_PRIORITY` attribute, then the calling task is inserted into the queue according to its priority. However, if the semaphore was created with the `RTEMS_FIFO` attribute, then the calling task is placed at the rear of the wait queue. If the binary semaphore was created with the `RTEMS_INHERIT_PRIORITY` attribute, then the priority of the task currently holding the binary semaphore is guaranteed to be greater than or equal to that of the blocking task. If the binary semaphore was created with the `RTEMS_PRIORITY_CEILING` attribute, a task successfully obtains the semaphore, and the priority of that task is greater than the ceiling priority for this semaphore, then the priority of the task obtaining the semaphore is elevated to that of the ceiling.

The timeout parameter specifies the maximum interval the calling task is willing to be blocked waiting for the semaphore. If it is set to `RTEMS_NO_TIMEOUT`, then the calling task will wait forever. If the semaphore is available or the `RTEMS_NO_WAIT` option component is set, then timeout is ignored.

In case a semaphore is not available, then `RTEMS_UNSATISFIED` will be returned. This happens immediately in case `RTEMS_NO_WAIT` is specified, or as a result of another task invoking the `rtems_semaphore_flush` directive in case `RTEMS_WAIT` is specified.

Deadlock situations are detected for MrsP semaphores and the `RTEMS_UNSATISFIED` status code will be returned in SMP configurations in this case.

**NOTES:**

The following semaphore acquisition option constants are defined by RTEMS:

RTEMS_WAIT	task will wait for semaphore (default)
RTEMS_NO_WAIT	task should not wait

Attempting to obtain a global semaphore which does not reside on the local node will generate a request to the remote node to access the semaphore. If the semaphore is not available and RTEMS\_NO\_WAIT was not specified, then the task must be blocked until the semaphore is released. A proxy is allocated on the remote node to represent the task until the semaphore is released.

A clock tick is required to support the timeout functionality of this directive.

It is not allowed to obtain a MrsP semaphore more than once by one task at a time (nested access) and the RTEMS\_UNSATISFIED status code will be returned in SMP configurations in this case.

## 12.4.5 SEMAPHORE\_RELEASE - Release a semaphore

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_semaphore_release(
2   rtems_id id
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	semaphore released successfully
RTEMS_INVALID_ID	invalid semaphore id
RTEMS_NOT_OWNER_OF_RESOURCE	calling task does not own semaphore
RTEMS_INCORRECT_STATE	invalid unlock order

**DESCRIPTION:**

This directive releases the semaphore specified by `id`. The semaphore count is incremented by one. If the count is zero or negative, then the first task on this semaphore's wait queue is removed and unblocked. The unblocked task may preempt the running task if the running task's preemption mode is enabled and the unblocked task has a higher priority than the running task.

**NOTES:**

The calling task may be preempted if it causes a higher priority task to be made ready for execution.

Releasing a global semaphore which does not reside on the local node will generate a request telling the remote node to release the semaphore.

If the task to be unblocked resides on a different node from the semaphore, then the semaphore allocation is forwarded to the appropriate node, the waiting task is unblocked, and the proxy used to represent the task is reclaimed.

The outermost release of a local, binary, priority inheritance or priority ceiling semaphore may result in the calling task having its priority lowered. This will occur if the calling task holds no other binary semaphores and it has inherited a higher priority.

The MrsP semaphores must be released in the reversed obtain order, otherwise the `RTEMS_INCORRECT_STATE` status code will be returned in SMP configurations in this case.

## 12.4.6 SEMAPHORE\_FLUSH - Unblock all tasks waiting on a semaphore

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_semaphore_flush(
2   rtems_id id
3 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	semaphore released successfully
RTEMS_INVALID_ID	invalid semaphore id
RTEMS_NOT_DEFINED	operation not defined for the protocol of the semaphore
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported for remote semaphores

**DESCRIPTION:**

This directive unblocks all tasks waiting on the semaphore specified by id. Since there are tasks blocked on the semaphore, the semaphore's count is not changed by this directive and thus is zero before and after this directive is executed. Tasks which are unblocked as the result of this directive will return from the `rtems_semaphore_obtain` directive with a status code of `RTEMS_UNSATISFIED` to indicate that the semaphore was not obtained.

This directive may unblock any number of tasks. Any of the unblocked tasks may preempt the running task if the running task's preemption mode is enabled and an unblocked task has a higher priority than the running task.

**NOTES:**

The calling task may be preempted if it causes a higher priority task to be made ready for execution.

If the task to be unblocked resides on a different node from the semaphore, then the waiting task is unblocked, and the proxy used to represent the task is reclaimed.

It is not allowed to flush a MrsP semaphore and the `RTEMS_NOT_DEFINED` status code will be returned in SMP configurations in this case.

Using the `rtems_semaphore_flush` directive for condition synchronization in concert with another semaphore may be subject to the lost wake-up problem. The following attempt to implement a condition variable is broken.

```

1 #include <rtems.h>
2 #include <assert.h>
3
4 void cnd_wait( rtems_id cnd, rtems_id mtx )
5 {
6   rtems_status_code sc;
7
8   sc = rtems_semaphore_release( mtx );
9   assert( sc == RTEMS_SUCCESSFUL );
10

```

(continues on next page)

(continued from previous page)

```
11  /*
12  * Here, a higher priority task may run and satisfy the condition. We
13  * may never wake up from the next semaphore obtain.
14  */
15
16  sc = rtems_semaphore_obtain( cnd, RTEMS_WAIT, RTEMS_NO_TIMEOUT );
17  assert( sc == RTEMS_UNSATISFIED );
18
19  sc = rtems_semaphore_obtain( mtx, RTEMS_WAIT, RTEMS_NO_TIMEOUT );
20  assert( sc == RTEMS_SUCCESSFUL );
21  }
22
23  void cnd_broadcast( rtems_id cnd )
24  {
25    rtems_status_code sc;
26
27    sc = rtems_semaphore_flush( cnd );
28    assert( sc == RTEMS_SUCCESSFUL );
29  }
```

For barrier synchronization, the *Barrier Manager* (page 225) offers a cleaner alternative to using the `rtems_semaphore_flush` directive. Unlike POSIX barriers, they have a manual release option.

## 12.4.7 SEMAPHORE\_SET\_PRIORITY - Set priority by scheduler for a semaphore

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_semaphore_set_priority(
2     rtems_id          semaphore_id,
3     rtems_id          scheduler_id,
4     rtems_task_priority new_priority,
5     rtems_task_priority *old_priority
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successful operation
RTEMS_INVALID_ID	invalid semaphore or scheduler id
RTEMS_INVALID_ADDRESS	old_priority is NULL
RTEMS_INVALID_PRIORITY	invalid new priority value
RTEMS_NOT_DEFINED	operation not defined for the protocol of the semaphore
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	not supported for remote semaphores

**DESCRIPTION:**

This directive sets the priority value with respect to the specified scheduler of a semaphore.

The special priority value RTEMS\_CURRENT\_PRIORITY can be used to get the current priority value without changing it.

The interpretation of the priority value depends on the protocol of the semaphore object.

- The Multiprocessor Resource Sharing Protocol needs a ceiling priority per scheduler instance. This operation can be used to specify these priority values.
- For the Priority Ceiling Protocol the ceiling priority is used with this operation.
- For other protocols this operation is not defined.

**EXAMPLE:**

```

1 #include <assert.h>
2 #include <stdlib.h>
3 #include <rtems.h>
4
5 #define SCHED_A rtems_build_name(' ', ' ', ' ', 'A')
6 #define SCHED_B rtems_build_name(' ', ' ', ' ', 'B')
7
8 static void Init(rtems_task_argument arg)
9 {
10     rtems_status_code sc;
11     rtems_id          semaphore_id;
12     rtems_id          scheduler_a_id;
13     rtems_id          scheduler_b_id;
14     rtems_task_priority prio;

```

(continues on next page)

(continued from previous page)

```

15
16  /* Get the scheduler identifiers */
17  sc = rtems_scheduler_ident(SCHED_A, &scheduler_a_id);
18  assert(sc == RTEMS_SUCCESSFUL);
19  sc = rtems_scheduler_ident(SCHED_B, &scheduler_b_id);
20  assert(sc == RTEMS_SUCCESSFUL);
21
22  /* Create a MrsP semaphore object */
23  sc = rtems_semaphore_create(
24      rtems_build_name('M', 'R', 'S', 'P'),
25      1,
26      RTEMS_MULTIPROCESSOR_RESOURCE_SHARING | RTEMS_BINARY_SEMAPHORE,
27      1,
28      &semaphore_id
29  );
30  assert(sc == RTEMS_SUCCESSFUL);
31
32  /*
33   * The ceiling priority values per scheduler are equal to the value specified
34   * for object creation.
35   */
36  prio = RTEMS_CURRENT_PRIORITY;
37  sc = rtems_semaphore_set_priority(semaphore_id, scheduler_a_id, prio, &prio);
38  assert(sc == RTEMS_SUCCESSFUL);
39  assert(prio == 1);
40
41  /* Check the old value and set a new ceiling priority for scheduler B */
42  prio = 2;
43  sc = rtems_semaphore_set_priority(semaphore_id, scheduler_b_id, prio, &prio);
44  assert(sc == RTEMS_SUCCESSFUL);
45  assert(prio == 1);
46
47  /* Check the ceiling priority values */
48  prio = RTEMS_CURRENT_PRIORITY;
49  sc = rtems_semaphore_set_priority(semaphore_id, scheduler_a_id, prio, &prio);
50  assert(sc == RTEMS_SUCCESSFUL);
51  assert(prio == 1);
52  prio = RTEMS_CURRENT_PRIORITY;
53  sc = rtems_semaphore_set_priority(semaphore_id, scheduler_b_id, prio, &prio);
54  assert(sc == RTEMS_SUCCESSFUL);
55  assert(prio == 2);
56
57  sc = rtems_semaphore_delete(semaphore_id);
58  assert(sc == RTEMS_SUCCESSFUL);
59
60  exit(0);
61 }
62
63 #define CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER
64 #define CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER
65 #define CONFIGURE_MAXIMUM_TASKS 1
66 #define CONFIGURE_MAXIMUM_SEMAPHORES 1
67 #define CONFIGURE_MAXIMUM_PROCESSORS 2
68
69 #define CONFIGURE_SCHEDULER_SIMPLE_SMP
70

```

(continues on next page)

(continued from previous page)

```
71 #include <rtems/scheduler.h>
72
73 RTEMS_SCHEDULER_CONTEXT_SIMPLE_SMP(a);
74 RTEMS_SCHEDULER_CONTEXT_SIMPLE_SMP(b);
75
76 #define CONFIGURE_SCHEDULER_TABLE_ENTRIES \
77     RTEMS_SCHEDULER_TABLE_SIMPLE_SMP(a, SCHED_A), \
78     RTEMS_SCHEDULER_TABLE_SIMPLE_SMP(b, SCHED_B)
79
80 #define CONFIGURE_SCHEDULER_ASSIGNMENTS \
81     RTEMS_SCHEDULER_ASSIGN(0, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_MANDATORY), \
82     RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_MANDATORY)
83
84 #define CONFIGURE_RTEMS_INIT_TASKS_TABLE
85 #define CONFIGURE_INIT
86
87 #include <rtems/confdefs.h>
```



# BARRIER MANAGER

## 13.1 Introduction

The barrier manager provides a unique synchronization capability which can be used to have a set of tasks block and be unblocked as a set. The directives provided by the barrier manager are:

- *rtems\_barrier\_create* (page 230) - Create a barrier
- *rtems\_barrier\_ident* (page 231) - Get ID of a barrier
- *rtems\_barrier\_delete* (page 232) - Delete a barrier
- *rtems\_barrier\_wait* (page 233) - Wait at a barrier
- *rtems\_barrier\_release* (page 234) - Release a barrier

## 13.2 Background

A barrier can be viewed as a gate at which tasks wait until the gate is opened. This has many analogies in the real world. Horses and other farm animals may approach a closed gate and gather in front of it, waiting for someone to open the gate so they may proceed. Similarly, ticket holders gather at the gates of arenas before concerts or sporting events waiting for the arena personnel to open the gates so they may enter.

Barriers are useful during application initialization. Each application task can perform its local initialization before waiting for the application as a whole to be initialized. Once all tasks have completed their independent initializations, the “application ready” barrier can be released.

### 13.2.1 Automatic Versus Manual Barriers

Just as with a real-world gate, barriers may be configured to be manually opened or automatically opened. All tasks calling the `rtems_barrier_wait` directive will block until a controlling task invokes the `rtems_barrier_release` directive.

Automatic barriers are created with a limit to the number of tasks which may simultaneously block at the barrier. Once this limit is reached, all of the tasks are released. For example, if the automatic limit is ten tasks, then the first nine tasks calling the `rtems_barrier_wait` directive will block. When the tenth task calls the `rtems_barrier_wait` directive, the nine blocked tasks will be released and the tenth task returns to the caller without blocking.

### 13.2.2 Building a Barrier Attribute Set

In general, an attribute set is built by a bitwise OR of the desired attribute components. The following table lists the set of valid barrier attributes:

**RTEMS\_BARRIER\_AUTOMATIC\_RELEASE**

automatically release the barrier when the configured number of tasks are blocked

**RTEMS\_BARRIER\_MANUAL\_RELEASE**

only release the barrier when the application invokes the `rtems_barrier_release` directive.  
(default)

---

**Note:** Barriers only support FIFO blocking order because all waiting tasks are released as a set. Thus the released tasks will all become ready to execute at the same time and compete for the processor based upon their priority.

---

Attribute values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. An attribute listed as a default is not required to appear in the attribute list, although it is a good programming practice to specify default attributes. If all defaults are desired, the attribute `RTEMS_DEFAULT_ATTRIBUTES` should be specified on this call.

This example demonstrates the `attribute_set` parameter needed to create a barrier with the automatic release policy. The `attribute_set` parameter passed to the `rtems_barrier_create` directive will be `RTEMS_BARRIER_AUTOMATIC_RELEASE`. In this case, the user must also specify the `maximum_waiters` parameter.

## 13.3 Operations

### 13.3.1 Creating a Barrier

The `rtems_barrier_create` directive creates a barrier with a user-specified name and the desired attributes. RTEMS allocates a Barrier Control Block (BCB) from the BCB free list. This data structure is used by RTEMS to manage the newly created barrier. Also, a unique barrier ID is generated and returned to the calling task.

### 13.3.2 Obtaining Barrier IDs

When a barrier is created, RTEMS generates a unique barrier ID and assigns it to the created barrier until it is deleted. The barrier ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_barrier_create` directive, the barrier ID is stored in a user provided location. Second, the barrier ID may be obtained later using the `rtems_barrier_ident` directive. The barrier ID is used by other barrier manager directives to access this barrier.

### 13.3.3 Waiting at a Barrier

The `rtems_barrier_wait` directive is used to wait at the specified barrier. The task may wait forever for the barrier to be released or it may specify a timeout. Specifying a timeout limits the interval the task will wait before returning with an error status code.

If the barrier is configured as automatic and there are already one less than the maximum number of waiters, then the call will unblock all tasks waiting at the barrier and the caller will return immediately.

When the task does wait to acquire the barrier, then it is placed in the barrier's task wait queue in FIFO order. All tasks waiting on a barrier are returned an error code when the barrier is deleted.

### 13.3.4 Releasing a Barrier

The `rtems_barrier_release` directive is used to release the specified barrier. When the `rtems_barrier_release` is invoked, all tasks waiting at the barrier are immediately made ready to execute and begin to compete for the processor to execute.

### 13.3.5 Deleting a Barrier

The `rtems_barrier_delete` directive removes a barrier from the system and frees its control block. A barrier can be deleted by any local task that knows the barrier's ID. As a result of this directive, all tasks blocked waiting for the barrier to be released, will be readied and returned a status code which indicates that the barrier was deleted. Any subsequent references to the barrier's name and ID are invalid.

## 13.4 Directives

This section details the barrier manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 13.4.1 BARRIER\_CREATE - Create a barrier

## CALLING SEQUENCE:

```

1 rtems_status_code rtems_barrier_create(
2     rtems_name      name,
3     rtems_attribute attribute_set,
4     uint32_t        maximum_waiters,
5     rtems_id        *id
6 );

```

## DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	barrier created successfully
RTEMS_INVALID_NAME	invalid barrier name
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_TOO_MANY	too many barriers created

## DESCRIPTION:

This directive creates a barrier which resides on the local node. The created barrier has the user-defined name specified in `name` and the initial count specified in `count`. For control and maintenance of the barrier, RTEMS allocates and initializes a BCB. The RTEMS-assigned barrier id is returned in `id`. This barrier id is used with other barrier related directives to access the barrier.

RTEMS_BARRIER_MANUAL_RELEASE	only release
------------------------------	--------------

Specifying `RTEMS_BARRIER_AUTOMATIC_RELEASE` in `attribute_set` causes tasks calling the `rtems_barrier_wait` directive to block until there are `maximum_waiters - 1` tasks waiting at the barrier. When the `maximum_waiters` task invokes the `rtems_barrier_wait` directive, the previous `maximum_waiters - 1` tasks are automatically released and the caller returns.

In contrast, when the `RTEMS_BARRIER_MANUAL_RELEASE` attribute is specified, there is no limit on the number of tasks that will block at the barrier. Only when the `rtems_barrier_release` directive is invoked, are the tasks waiting at the barrier unblocked.

## NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The following barrier attribute constants are defined by RTEMS:

RTEMS_BARRIER_AUTOMATIC_RELEASE	automatically release the barrier when the configured number of tasks are blocked
RTEMS_BARRIER_MANUAL_RELEASE	only release the barrier when the application invokes the <code>rtems_barrier_release</code> directive. (default)

### 13.4.2 BARRIER\_IDENT - Get ID of a barrier

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_barrier_ident(  
2     rtems_name      name,  
3     rtems_id        *id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	barrier identified successfully
RTEMS_INVALID_NAME	barrier name not found
RTEMS_INVALID_NODE	invalid node id

#### DESCRIPTION:

This directive obtains the barrier id associated with the barrier name. If the barrier name is not unique, then the barrier id will match one of the barriers with that name. However, this barrier id is not guaranteed to correspond to the desired barrier. The barrier id is used by other barrier related directives to access the barrier.

#### NOTES:

This directive will not cause the running task to be preempted.

### 13.4.3 BARRIER\_DELETE - Delete a barrier

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_barrier_delete(  
2   rtems_id id  
3 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	barrier deleted successfully
RTEMS_INVALID_ID	invalid barrier id

#### DESCRIPTION:

This directive deletes the barrier specified by `id`. All tasks blocked waiting for the barrier to be released will be readied and returned a status code which indicates that the barrier was deleted. The BCB for this barrier is reclaimed by RTEMS.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The calling task will be preempted if it is enabled by the task's execution mode and a higher priority local task is waiting on the deleted barrier. The calling task will NOT be preempted if all of the tasks that are waiting on the barrier are remote tasks.

The calling task does not have to be the task that created the barrier. Any local task that knows the barrier id can delete the barrier.



## 13.4.4 BARRIER\_WAIT - Wait at a barrier

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_barrier_wait(
2     rtems_id      id,
3     rtems_interval timeout
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	barrier released and task unblocked
RTEMS_UNSATISFIED	barrier not available
RTEMS_TIMEOUT	timed out waiting for barrier
RTEMS_OBJECT_WAS_DELETED	barrier deleted while waiting
RTEMS_INVALID_ID	invalid barrier id

**DESCRIPTION:**

This directive waits at the barrier specified by `id`. The timeout parameter specifies the maximum interval the calling task is willing to be blocked waiting for the barrier. If it is set to `RTEMS_NO_TIMEOUT`, then the calling task will wait until the barrier is released.

Conceptually, the calling task should always be thought of as blocking when it makes this call and being unblocked when the barrier is released. If the barrier is configured for manual release, this rule of thumb will always be valid. If the barrier is configured for automatic release, all callers will block except for the one which is the Nth task which trips the automatic release condition.

**NOTES:**

A clock tick is required to support the timeout functionality of this directive.

### 13.4.5 BARRIER\_RELEASE - Release a barrier

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_barrier_release(  
2     rtems_id id,  
3     uint32_t *released  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	barrier released successfully
RTEMS_INVALID_ID	invalid barrier id

#### DESCRIPTION:

This directive releases the barrier specified by id. All tasks waiting at the barrier will be unblocked.

#### NOTES:

The calling task may be preempted if it causes a higher priority task to be made ready for execution.

# MESSAGE MANAGER

## 14.1 Introduction

The message manager provides communication and synchronization capabilities using RTEMS message queues. The directives provided by the message manager are:

- *rtems\_message\_queue\_create* (page 242) - Create a queue
- *rtems\_message\_queue\_ident* (page 244) - Get ID of a queue
- *rtems\_message\_queue\_delete* (page 245) - Delete a queue
- *rtems\_message\_queue\_send* (page 246) - Put message at rear of a queue
- *rtems\_message\_queue\_urgent* (page 247) - Put message at front of a queue
- *rtems\_message\_queue\_broadcast* (page 248) - Broadcast N messages to a queue
- *rtems\_message\_queue\_receive* (page 249) - Receive message from a queue
- *rtems\_message\_queue\_get\_number\_pending* (page 251) - Get number of messages pending on a queue
- *rtems\_message\_queue\_flush* (page 252) - Flush all messages on a queue

## 14.2 Background

### 14.2.1 Messages

A message is a variable length buffer where information can be stored to support communication. The length of the message and the information stored in that message are user-defined and can be actual data, pointer(s), or empty.

### 14.2.2 Message Queues

A message queue permits the passing of messages among tasks and ISRs. Message queues can contain a variable number of messages. Normally messages are sent to and received from the queue in FIFO order using the `rtems_message_queue_send` directive. However, the `rtems_message_queue_urgent` directive can be used to place messages at the head of a queue in LIFO order.

Synchronization can be accomplished when a task can wait for a message to arrive at a queue. Also, a task may poll a queue for the arrival of a message.

The maximum length message which can be sent is set on a per message queue basis. The message content must be copied in general to/from an internal buffer of the message queue or directly to a peer in certain cases. This copy operation is performed with interrupts disabled. So it is advisable to keep the messages as short as possible.

### 14.2.3 Building a Message Queue Attribute Set

In general, an attribute set is built by a bitwise OR of the desired attribute components. The set of valid message queue attributes is provided in the following table:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority
RTEMS_LOCAL	local message queue (default)
RTEMS_GLOBAL	global message queue

An attribute listed as a default is not required to appear in the attribute list, although it is a good programming practice to specify default attributes. If all defaults are desired, the attribute `RTEMS_DEFAULT_ATTRIBUTES` should be specified on this call.

This example demonstrates the `attribute_set` parameter needed to create a local message queue with the task priority waiting queue discipline. The `attribute_set` parameter to the `rtems_message_queue_create` directive could be either `RTEMS_PRIORITY` or `RTEMS_LOCAL | RTEMS_PRIORITY`. The `attribute_set` parameter can be set to `RTEMS_PRIORITY` because `RTEMS_LOCAL` is the default for all created message queues. If a similar message queue were to be known globally, then the `attribute_set` parameter would be `RTEMS_GLOBAL | RTEMS_PRIORITY`.

#### 14.2.4 Building a MESSAGE\_QUEUE\_RECEIVE Option Set

In general, an option is built by a bitwise OR of the desired option components. The set of valid options for the `rtems_message_queue_receive` directive are listed in the following table:

RTEMS_WAIT	task will wait for a message (default)
RTEMS_NO_WAIT	task should not wait

An option listed as a default is not required to appear in the option OR list, although it is a good programming practice to specify default options. If all defaults are desired, the option `RTEMS_DEFAULT_OPTIONS` should be specified on this call.

This example demonstrates the option parameter needed to poll for a message to arrive. The option parameter passed to the `rtems_message_queue_receive` directive should be `RTEMS_NO_WAIT`.

## 14.3 Operations

### 14.3.1 Creating a Message Queue

The `rtems_message_queue_create` directive creates a message queue with the user-defined name. The user specifies the maximum message size and maximum number of messages which can be placed in the message queue at one time. The user may select FIFO or task priority as the method for placing waiting tasks in the task wait queue. RTEMS allocates a Queue Control Block (QCB) from the QCB free list to maintain the newly created queue as well as memory for the message buffer pool associated with this message queue. RTEMS also generates a message queue ID which is returned to the calling task.

For GLOBAL message queues, the maximum message size is effectively limited to the longest message which the MPCIE is capable of transmitting.

### 14.3.2 Obtaining Message Queue IDs

When a message queue is created, RTEMS generates a unique message queue ID. The message queue ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_message_queue_create` directive, the queue ID is stored in a user provided location. Second, the queue ID may be obtained later using the `rtems_message_queue_ident` directive. The queue ID is used by other message manager directives to access this message queue.

### 14.3.3 Receiving a Message

The `rtems_message_queue_receive` directive attempts to retrieve a message from the specified message queue. If at least one message is in the queue, then the message is removed from the queue, copied to the caller's message buffer, and returned immediately along with the length of the message. When messages are unavailable, one of the following situations applies:

- By default, the calling task will wait forever for the message to arrive.
- Specifying the `RTEMS_NO_WAIT` option forces an immediate return with an error status code.
- Specifying a timeout limits the period the task will wait before returning with an error status.

If the task waits for a message, then it is placed in the message queue's task wait queue in either FIFO or task priority order. All tasks waiting on a message queue are returned an error code when the message queue is deleted.

### 14.3.4 Sending a Message

Messages can be sent to a queue with the `rtems_message_queue_send` and `rtems_message_queue_urgent` directives. These directives work identically when tasks are waiting to receive a message. A task is removed from the task waiting queue, unblocked, and the message is copied to a waiting task's message buffer.

When no tasks are waiting at the queue, `rtems_message_queue_send` places the message at the rear of the message queue, while `rtems_message_queue_urgent` places the message at the front of the queue. The message is copied to a message buffer from this message queue's buffer pool

and then placed in the message queue. Neither directive can successfully send a message to a message queue which has a full queue of pending messages.

### 14.3.5 Broadcasting a Message

The `rtems_message_queue_broadcast` directive sends the same message to every task waiting on the specified message queue as an atomic operation. The message is copied to each waiting task's message buffer and each task is unblocked. The number of tasks which were unblocked is returned to the caller.

### 14.3.6 Deleting a Message Queue

The `rtems_message_queue_delete` directive removes a message queue from the system and frees its control block as well as the memory associated with this message queue's message buffer pool. A message queue can be deleted by any local task that knows the message queue's ID. As a result of this directive, all tasks blocked waiting to receive a message from the message queue will be readied and returned a status code which indicates that the message queue was deleted. Any subsequent references to the message queue's name and ID are invalid. Any messages waiting at the message queue are also deleted and deallocated.



## 14.4 Directives

This section details the message manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 14.4.1 MESSAGE\_QUEUE\_CREATE - Create a queue

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_message_queue_create(
2     rtems_name      name,
3     uint32_t        count,
4     size_t          max_message_size,
5     rtems_attribute attribute_set,
6     rtems_id        *id
7 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	queue created successfully
RTEMS_INVALID_NAME	invalid queue name
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NUMBER	invalid message count
RTEMS_INVALID_SIZE	invalid message size
RTEMS_TOO_MANY	too many queues created
RTEMS_UNSATISFIED	unable to allocate message buffers
RTEMS_TOO_MANY	too many global objects

**DESCRIPTION:**

This directive creates a message queue which resides on the local node with the user-defined name specified in `name`. For control and maintenance of the queue, RTEMS allocates and initializes a QCB. Memory is allocated from the RTEMS Workspace for the specified count of messages, each of `max_message_size` bytes in length. The RTEMS-assigned queue id, returned in `id`, is used to access the message queue.

Specifying `RTEMS_PRIORITY` in `attribute_set` causes tasks waiting for a message to be serviced according to task priority. When `RTEMS_FIFO` is specified, waiting tasks are serviced in First In-First Out order.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The following message queue attribute constants are defined by RTEMS:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority
RTEMS_LOCAL	local message queue (default)
RTEMS_GLOBAL	global message queue

Message queues should not be made global unless remote tasks must interact with the created message queue. This is to avoid the system overhead incurred by the creation of a global message queue. When a global message queue is created, the message queue's name and id must be transmitted to every node in the system for insertion in the local copy of the global object table.

For GLOBAL message queues, the maximum message size is effectively limited to the longest message which the MPCI is capable of transmitting.

The total number of global objects, including message queues, is limited by the `maximum_global_objects` field in the configuration table.

## 14.4.2 MESSAGE\_QUEUE\_IDENT - Get ID of a queue

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_message_queue_ident(  
2     rtems_name name,  
3     uint32_t node,  
4     rtems_id *id  
5 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	queue identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	queue name not found
RTEMS_INVALID_NODE	invalid node id

### DESCRIPTION:

This directive obtains the queue id associated with the queue name specified in name. If the queue name is not unique, then the queue id will match one of the queues with that name. However, this queue id is not guaranteed to correspond to the desired queue. The queue id is used with other message related directives to access the message queue.

### NOTES:

This directive will not cause the running task to be preempted.

If node is RTEMS\_SEARCH\_ALL\_NODES, all nodes are searched with the local node being searched first. All other nodes are searched with the lowest numbered node searched first.

If node is a valid node number which does not represent the local node, then only the message queues exported by the designated node are searched.

This directive does not generate activity on remote nodes. It accesses only the local copy of the global object table.

### 14.4.3 MESSAGE\_QUEUE\_DELETE - Delete a queue

#### CALLING SEQUENCE:

```

1 rtems_status_code rtems_message_queue_delete(
2     rtems_id id
3 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	queue deleted successfully
RTEMS_INVALID_ID	invalid queue id
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot delete remote queue

#### DESCRIPTION:

This directive deletes the message queue specified by `id`. As a result of this directive, all tasks blocked waiting to receive a message from this queue will be readied and returned a status code which indicates that the message queue was deleted. If no tasks are waiting, but the queue contains messages, then RTEMS returns these message buffers back to the system message buffer pool. The QCB for this queue as well as the memory for the message buffers is reclaimed by RTEMS.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The calling task will be preempted if its preemption mode is enabled and one or more local tasks with a higher priority than the calling task are waiting on the deleted queue. The calling task will NOT be preempted if the tasks that are waiting are remote tasks.

The calling task does not have to be the task that created the queue, although the task and queue must reside on the same node.

When the queue is deleted, any messages in the queue are returned to the free message buffer pool. Any information stored in those messages is lost.

When a global message queue is deleted, the message queue id must be transmitted to every node in the system for deletion from the local copy of the global object table.

Proxies, used to represent remote tasks, are reclaimed when the message queue is deleted.

#### 14.4.4 MESSAGE\_QUEUE\_SEND - Put message at rear of a queue

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_message_queue_send(  
2     rtems_id    id,  
3     const void *buffer,  
4     size_t      size  
5 );
```

##### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	message sent successfully
RTEMS_INVALID_ID	invalid queue id
RTEMS_INVALID_SIZE	invalid message size
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_UNSATISFIED	out of message buffers
RTEMS_TOO_MANY	queue's limit has been reached

##### DESCRIPTION:

This directive sends the message buffer of size bytes in length to the queue specified by id. If a task is waiting at the queue, then the message is copied to the waiting task's buffer and the task is unblocked. If no tasks are waiting at the queue, then the message is copied to a message buffer which is obtained from this message queue's message buffer pool. The message buffer is then placed at the rear of the queue.

##### NOTES:

The calling task will be preempted if it has preemption enabled and a higher priority task is unblocked as the result of this directive.

Sending a message to a global message queue which does not reside on the local node will generate a request to the remote node to post the message on the specified message queue.

If the task to be unblocked resides on a different node from the message queue, then the message is forwarded to the appropriate node, the waiting task is unblocked, and the proxy used to represent the task is reclaimed.

## 14.4.5 MESSAGE\_QUEUE\_URGENT - Put message at front of a queue

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_message_queue_urgent(
2     rtems_id    id,
3     const void *buffer,
4     size_t      size
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	message sent successfully
RTEMS_INVALID_ID	invalid queue id
RTEMS_INVALID_SIZE	invalid message size
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_UNSATISFIED	out of message buffers
RTEMS_TOO_MANY	queue's limit has been reached

**DESCRIPTION:**

This directive sends the message buffer of size bytes in length to the queue specified by id. If a task is waiting on the queue, then the message is copied to the task's buffer and the task is unblocked. If no tasks are waiting on the queue, then the message is copied to a message buffer which is obtained from this message queue's message buffer pool. The message buffer is then placed at the front of the queue.

**NOTES:**

The calling task will be preempted if it has preemption enabled and a higher priority task is unblocked as the result of this directive.

Sending a message to a global message queue which does not reside on the local node will generate a request telling the remote node to post the message on the specified message queue.

If the task to be unblocked resides on a different node from the message queue, then the message is forwarded to the appropriate node, the waiting task is unblocked, and the proxy used to represent the task is reclaimed.

## 14.4.6 MESSAGE\_QUEUE\_BROADCAST - Broadcast N messages to a queue

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_message_queue_broadcast(
2   rtems_id      id,
3   const void    *buffer,
4   size_t        size,
5   uint32_t      *count
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	message broadcasted successfully
RTEMS_INVALID_ID	invalid queue id
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_INVALID_ADDRESS	count is NULL
RTEMS_INVALID_SIZE	invalid message size

**DESCRIPTION:**

This directive causes all tasks that are waiting at the queue specified by `id` to be unblocked and sent the message contained in `buffer`. Before a task is unblocked, the message buffer of `size` bytes in length is copied to that task's message buffer. The number of tasks that were unblocked is returned in `count`.

**NOTES:**

The calling task will be preempted if it has preemption enabled and a higher priority task is unblocked as the result of this directive.

The execution time of this directive is directly related to the number of tasks waiting on the message queue, although it is more efficient than the equivalent number of invocations of `rtems_message_queue_send`.

Broadcasting a message to a global message queue which does not reside on the local node will generate a request telling the remote node to broadcast the message to the specified message queue.

When a task is unblocked which resides on a different node from the message queue, a copy of the message is forwarded to the appropriate node, the waiting task is unblocked, and the proxy used to represent the task is reclaimed.



## 14.4.7 MESSAGE\_QUEUE\_RECEIVE - Receive message from a queue

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_message_queue_receive(
2   rtems_id        id,
3   void            *buffer,
4   size_t          *size,
5   rtems_option    option_set,
6   rtems_interval  timeout
7 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	message received successfully
RTEMS_INVALID_ID	invalid queue id
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_INVALID_ADDRESS	size is NULL
RTEMS_UNSATISFIED	queue is empty
RTEMS_TIMEOUT	timed out waiting for message
RTEMS_OBJECT_WAS_DELETED	queue deleted while waiting

**DESCRIPTION:**

This directive receives a message from the message queue specified in `id`. The `RTEMS_WAIT` and `RTEMS_NO_WAIT` options of the options parameter allow the calling task to specify whether to wait for a message to become available or return immediately. For either option, if there is at least one message in the queue, then it is copied to `buffer`, `size` is set to return the length of the message in bytes, and this directive returns immediately with a successful return code. The buffer has to be big enough to receive a message of the maximum length with respect to this message queue.

If the calling task chooses to return immediately and the queue is empty, then a status code indicating this condition is returned. If the calling task chooses to wait at the message queue and the queue is empty, then the calling task is placed on the message wait queue and blocked. If the queue was created with the `RTEMS_PRIORITY` option specified, then the calling task is inserted into the wait queue according to its priority. But, if the queue was created with the `RTEMS_FIFO` option specified, then the calling task is placed at the rear of the wait queue.

A task choosing to wait at the queue can optionally specify a timeout value in the `timeout` parameter. The timeout parameter specifies the maximum interval to wait before the calling task desires to be unblocked. If it is set to `RTEMS_NO_TIMEOUT`, then the calling task will wait forever.

**NOTES:**

The following message receive option constants are defined by RTEMS:

RTEMS_WAIT	task will wait for a message (default)
RTEMS_NO_WAIT	task should not wait

Receiving a message from a global message queue which does not reside on the local node will generate a request to the remote node to obtain a message from the specified message

queue. If no message is available and `RTEMS_WAIT` was specified, then the task must be blocked until a message is posted. A proxy is allocated on the remote node to represent the task until the message is posted.

A clock tick is required to support the timeout functionality of this directive.

### 14.4.8 MESSAGE\_QUEUE\_GET\_NUMBER\_PENDING - Get number of messages pending on a queue

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_message_queue_get_number_pending(  
2   rtems_id id,  
3   uint32_t *count  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	number of messages pending returned successfully
RTEMS_INVALID_ADDRESS	count is NULL
RTEMS_INVALID_ID	invalid queue id

#### DESCRIPTION:

This directive returns the number of messages pending on this message queue in count. If no messages are present on the queue, count is set to zero.

#### NOTES:

Getting the number of pending messages on a global message queue which does not reside on the local node will generate a request to the remote node to actually obtain the pending message count for the specified message queue.

### 14.4.9 MESSAGE\_QUEUE\_FLUSH - Flush all messages on a queue

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_message_queue_flush(  
2     rtems_id id,  
3     uint32_t *count  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	message queue flushed successfully
RTEMS_INVALID_ADDRESS	count is NULL
RTEMS_INVALID_ID	invalid queue id

#### DESCRIPTION:

This directive removes all pending messages from the specified queue id. The number of messages removed is returned in count. If no messages are present on the queue, count is set to zero.

#### NOTES:

Flushing all messages on a global message queue which does not reside on the local node will generate a request to the remote node to actually flush the specified message queue.

# EVENT MANAGER

## 15.1 Introduction

The event manager provides a high performance method of intertask communication and synchronization. The directives provided by the event manager are:

- *rtems\_event\_send* (page 259) - Send event set to a task
- *rtems\_event\_receive* (page 260) - Receive event condition

## 15.2 Background

### 15.2.1 Event Sets

An event flag is used by a task (or ISR) to inform another task of the occurrence of a significant situation. Thirty-two event flags are associated with each task. A collection of one or more event flags is referred to as an event set. The data type `rtems_event_set` is used to manage event sets.

The application developer should remember the following key characteristics of event operations when utilizing the event manager:

- Events provide a simple synchronization facility.
- Events are aimed at tasks.
- Tasks can wait on more than one event simultaneously.
- Events are independent of one another.
- Events do not hold or transport data.
- Events are not queued. In other words, if an event is sent more than once to a task before being received, the second and subsequent send operations to that same task have no effect.

An event set is posted when it is directed (or sent) to a task. A pending event is an event that has been posted but not received. An event condition is used to specify the event set which the task desires to receive and the algorithm which will be used to determine when the request is satisfied. An event condition is satisfied based upon one of two algorithms which are selected by the user. The `RTEMS_EVENT_ANY` algorithm states that an event condition is satisfied when at least a single requested event is posted. The `RTEMS_EVENT_ALL` algorithm states that an event condition is satisfied when every requested event is posted.

### 15.2.2 Building an Event Set or Condition

An event set or condition is built by a bitwise OR of the desired events. The set of valid events is `RTEMS_EVENT_0` through `RTEMS_EVENT_31`. If an event is not explicitly specified in the set or condition, then it is not present. Events are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each event appears exactly once in the event set list.

For example, when sending the event set consisting of `RTEMS_EVENT_6`, `RTEMS_EVENT_15`, and `RTEMS_EVENT_31`, the event parameter to the `rtems_event_send` directive should be `RTEMS_EVENT_6 | RTEMS_EVENT_15 | RTEMS_EVENT_31`.

### 15.2.3 Building an EVENT\_RECEIVE Option Set

In general, an option is built by a bitwise OR of the desired option components. The set of valid options for the `rtems_event_receive` directive are listed in the following table:

RTEMS_WAIT	task will wait for event (default)
RTEMS_NO_WAIT	task should not wait
RTEMS_EVENT_ALL	return after all events (default)
RTEMS_EVENT_ANY	return after any events

Option values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each option appears exactly once in the component list. An option listed as a default is not required to appear in the option list, although it is a good programming practice to specify default options. If all defaults are desired, the option `RTEMS_DEFAULT_OPTIONS` should be specified on this call.

This example demonstrates the option parameter needed to poll for all events in a particular event condition to arrive. The option parameter passed to the `rtems_event_receive` directive should be either `RTEMS_EVENT_ALL | RTEMS_NO_WAIT` or `RTEMS_NO_WAIT`. The option parameter can be set to `RTEMS_NO_WAIT` because `RTEMS_EVENT_ALL` is the default condition for `rtems_event_receive`.



## 15.3 Operations

### 15.3.1 Sending an Event Set

The `rtems_event_send` directive allows a task (or an ISR) to direct an event set to a target task. Based upon the state of the target task, one of the following situations applies:

- Target Task is Blocked Waiting for Events
  - If the waiting task's input event condition is satisfied, then the task is made ready for execution.
  - If the waiting task's input event condition is not satisfied, then the event set is posted but left pending and the task remains blocked.
- Target Task is Not Waiting for Events
  - The event set is posted and left pending.

### 15.3.2 Receiving an Event Set

The `rtems_event_receive` directive is used by tasks to accept a specific input event condition. The task also specifies whether the request is satisfied when all requested events are available or any single requested event is available. If the requested event condition is satisfied by pending events, then a successful return code and the satisfying event set are returned immediately. If the condition is not satisfied, then one of the following situations applies:

- By default, the calling task will wait forever for the event condition to be satisfied.
- Specifying the `RTEMS_NO_WAIT` option forces an immediate return with an error status code.
- Specifying a timeout limits the period the task will wait before returning with an error status code.

### 15.3.3 Determining the Pending Event Set

A task can determine the pending event set by calling the `rtems_event_receive` directive with a value of `RTEMS_PENDING_EVENTS` for the input event condition. The pending events are returned to the calling task but the event set is left unaltered.

### 15.3.4 Receiving all Pending Events

A task can receive all of the currently pending events by calling the `rtems_event_receive` directive with a value of `RTEMS_ALL_EVENTS` for the input event condition and `RTEMS_NO_WAIT | RTEMS_EVENT_ANY` for the option set. The pending events are returned to the calling task and the event set is cleared. If no events are pending then the `RTEMS_UNSATISFIED` status code will be returned.

## 15.4 Directives

This section details the event manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 15.4.1 EVENT\_SEND - Send event set to a task

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_event_send (  
2     rtems_id      id,  
3     rtems_event_set event_in  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	event set sent successfully
RTEMS_INVALID_ID	invalid task id

#### DESCRIPTION:

This directive sends an event set, `event_in`, to the task specified by `id`. If a blocked task's input event condition is satisfied by this directive, then it will be made ready. If its input event condition is not satisfied, then the events satisfied are updated and the events not satisfied are left pending. If the task specified by `id` is not blocked waiting for events, then the events sent are left pending.

#### NOTES:

Specifying `RTEMS_SELF` for `id` results in the event set being sent to the calling task.

Identical events sent to a task are not queued. In other words, the second, and subsequent, posting of an event to a task before it can perform an `rtems_event_receive` has no effect.

The calling task will be preempted if it has preemption enabled and a higher priority task is unblocked as the result of this directive.

Sending an event set to a global task which does not reside on the local node will generate a request telling the remote node to send the event set to the appropriate task.

## 15.4.2 EVENT\_RECEIVE - Receive event condition

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_event_receive (
2   rtems_event_set  event_in,
3   rtems_option     option_set,
4   rtems_interval  ticks,
5   rtems_event_set *event_out
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	event received successfully
RTEMS_UNSATISFIED	input event not satisfied (RTEMS_NO_WAIT)
RTEMS_INVALID_ADDRESS	event_out is NULL
RTEMS_TIMEOUT	timed out waiting for event

**DESCRIPTION:**

This directive attempts to receive the event condition specified in `event_in`. If `event_in` is set to `RTEMS_PENDING_EVENTS`, then the current pending events are returned in `event_out` and left pending. The `RTEMS_WAIT` and `RTEMS_NO_WAIT` options in the `option_set` parameter are used to specify whether or not the task is willing to wait for the event condition to be satisfied. `RTEMS_EVENT_ANY` and `RTEMS_EVENT_ALL` are used in the `option_set` parameter are used to specify whether a single event or the complete event set is necessary to satisfy the event condition. The `event_out` parameter is returned to the calling task with the value that corresponds to the events in `event_in` that were satisfied.

If pending events satisfy the event condition, then `event_out` is set to the satisfied events and the pending events in the event condition are cleared. If the event condition is not satisfied and `RTEMS_NO_WAIT` is specified, then `event_out` is set to the currently satisfied events. If the calling task chooses to wait, then it will block waiting for the event condition.

If the calling task must wait for the event condition to be satisfied, then the timeout parameter is used to specify the maximum interval to wait. If it is set to `RTEMS_NO_TIMEOUT`, then the calling task will wait forever.

**NOTES:**

This directive only affects the events specified in `event_in`. Any pending events that do not correspond to any of the events specified in `event_in` will be left pending.

The following event receive option constants are defined by RTEMS:

RTEMS_WAIT	task will wait for event (default)
RTEMS_NO_WAIT	task should not wait
RTEMS_EVENT_ALL	return after all events (default)
RTEMS_EVENT_ANY	return after any events

A clock tick is required to support the functionality of this directive.

# SIGNAL MANAGER

## 16.1 Introduction

The signal manager provides the capabilities required for asynchronous communication. The directives provided by the signal manager are:

- *rtems\_signal\_catch* (page 268) - Establish an ASR
- *rtems\_signal\_send* (page 269) - Send signal set to a task

## 16.2 Background

### 16.2.1 Signal Manager Definitions

The signal manager allows a task to optionally define an asynchronous signal routine (ASR). An ASR is to a task what an ISR is to an application's set of tasks. When the processor is interrupted, the execution of an application is also interrupted and an ISR is given control. Similarly, when a signal is sent to a task, that task's execution path will be "interrupted" by the ASR. Sending a signal to a task has no effect on the receiving task's current execution state.

A signal flag is used by a task (or ISR) to inform another task of the occurrence of a significant situation. Thirty-two signal flags are associated with each task. A collection of one or more signals is referred to as a signal set. The data type `rtems_signal_set` is used to manipulate signal sets.

A signal set is posted when it is directed (or sent) to a task. A pending signal is a signal that has been sent to a task with a valid ASR, but has not been processed by that task's ASR.

### 16.2.2 A Comparison of ASRs and ISRs

The format of an ASR is similar to that of an ISR with the following exceptions:

- ISRs are scheduled by the processor hardware. ASRs are scheduled by RTEMS.
- ISRs do not execute in the context of a task and may invoke only a subset of directives. ASRs execute in the context of a task and may execute any directive.
- When an ISR is invoked, it is passed the vector number as its argument. When an ASR is invoked, it is passed the signal set as its argument.
- An ASR has a task mode which can be different from that of the task. An ISR does not execute as a task and, as a result, does not have a task mode.

### 16.2.3 Building a Signal Set

A signal set is built by a bitwise OR of the desired signals. The set of valid signals is `RTEMS_SIGNAL_0` through `RTEMS_SIGNAL_31`. If a signal is not explicitly specified in the signal set, then it is not present. Signal values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each signal appears exactly once in the component list.

This example demonstrates the signal parameter used when sending the signal set consisting of `RTEMS_SIGNAL_6`, `RTEMS_SIGNAL_15`, and `RTEMS_SIGNAL_31`. The signal parameter provided to the `rtems_signal_send` directive should be `RTEMS_SIGNAL_6 | RTEMS_SIGNAL_15 | RTEMS_SIGNAL_31`.

### 16.2.4 Building an ASR Mode

In general, an ASR's mode is built by a bitwise OR of the desired mode components. The set of valid mode components is the same as those allowed with the `task_create` and `task_mode` directives. A complete list of mode options is provided in the following table:

<code>RTEMS_PREEMPT</code>	is masked by <code>RTEMS_PREEMPT_MASK</code> and enables preemption
<code>RTEMS_NO_PREEMPT</code>	is masked by <code>RTEMS_PREEMPT_MASK</code> and disables preemption
<code>RTEMS_NO_TIMESLICE</code>	is masked by <code>RTEMS_TIMESLICE_MASK</code> and disables timeslicing
<code>RTEMS_TIMESLICE</code>	is masked by <code>RTEMS_TIMESLICE_MASK</code> and enables timeslicing
<code>RTEMS_ASR</code>	is masked by <code>RTEMS_ASR_MASK</code> and enables ASR processing
<code>RTEMS_NO_ASR</code>	is masked by <code>RTEMS_ASR_MASK</code> and disables ASR processing
<code>RTEMS_INTERRUPT_LEVEL(0)</code>	is masked by <code>RTEMS_INTERRUPT_MASK</code> and enables all interrupts
<code>RTEMS_INTERRUPT_LEVEL(n)</code>	is masked by <code>RTEMS_INTERRUPT_MASK</code> and sets interrupts level <code>n</code>

Mode values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each mode appears exactly once in the component list. A mode component listed as a default is not required to appear in the mode list, although it is a good programming practice to specify default components. If all defaults are desired, the mode `DEFAULT_MODES` should be specified on this call.

This example demonstrates the mode parameter used with the `rtems_signal_catch` to establish an ASR which executes at interrupt level three and is non-preemptible. The mode should be set to `RTEMS_INTERRUPT_LEVEL(3) | RTEMS_NO_PREEMPT` to indicate the desired processor mode and interrupt level.



## 16.3 Operations

### 16.3.1 Establishing an ASR

The `rtems_signal_catch` directive establishes an ASR for the calling task. The address of the ASR and its execution mode are specified to this directive. The ASR's mode is distinct from the task's mode. For example, the task may allow preemption, while that task's ASR may have preemption disabled. Until a task calls `rtems_signal_catch` the first time, its ASR is invalid, and no signal sets can be sent to the task.

A task may invalidate its ASR and discard all pending signals by calling `rtems_signal_catch` with a value of `NULL` for the ASR's address. When a task's ASR is invalid, new signal sets sent to this task are discarded.

A task may disable ASR processing (`RTEMS_NO_ASR`) via the `task_mode` directive. When a task's ASR is disabled, the signals sent to it are left pending to be processed later when the ASR is enabled.

Any directive that can be called from a task can also be called from an ASR. A task is only allowed one active ASR. Thus, each call to `rtems_signal_catch` replaces the previous one.

Normally, signal processing is disabled for the ASR's execution mode, but if signal processing is enabled for the ASR, the ASR must be reentrant.

### 16.3.2 Sending a Signal Set

The `rtems_signal_send` directive allows both tasks and ISRs to send signals to a target task. The target task and a set of signals are specified to the `rtems_signal_send` directive. The sending of a signal to a task has no effect on the execution state of that task. If the task is not the currently running task, then the signals are left pending and processed by the task's ASR the next time the task is dispatched to run. The ASR is executed immediately before the task is dispatched. If the currently running task sends a signal to itself or is sent a signal from an ISR, its ASR is immediately dispatched to run provided signal processing is enabled.

If an ASR with signals enabled is preempted by another task or an ISR and a new signal set is sent, then a new copy of the ASR will be invoked, nesting the preempted ASR. Upon completion of processing the new signal set, control will return to the preempted ASR. In this situation, the ASR must be reentrant.

Like events, identical signals sent to a task are not queued. In other words, sending the same signal multiple times to a task (without any intermediate signal processing occurring for the task), has the same result as sending that signal to that task once.

### 16.3.3 Processing an ASR

Asynchronous signals were designed to provide the capability to generate software interrupts. The processing of software interrupts parallels that of hardware interrupts. As a result, the differences between the formats of ASRs and ISRs is limited to the meaning of the single argument passed to an ASR. The ASR should have the following calling sequence and adhere to C calling conventions:

```
1 rtems_asr user_routine(  
2     rtems_signal_set signals  
3 );
```

When the ASR returns to RTEMS the mode and execution path of the interrupted task (or ASR) is restored to the context prior to entering the ASR.

## 16.4 Directives

This section details the signal manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 16.4.1 SIGNAL\_CATCH - Establish an ASR

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_signal_catch(
2     rtems_asr_entry  asr_handler,
3     rtems_mode       mode
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	always successful
------------------	-------------------

**DESCRIPTION:**

This directive establishes an asynchronous signal routine (ASR) for the calling task. The `asr_handler` parameter specifies the entry point of the ASR. If `asr_handler` is `NULL`, the ASR for the calling task is invalidated and all pending signals are cleared. Any signals sent to a task with an invalid ASR are discarded. The `mode` parameter specifies the execution mode for the ASR. This execution mode supersedes the task's execution mode while the ASR is executing.

**NOTES:**

This directive will not cause the calling task to be preempted.

The following task mode constants are defined by RTEMS:

RTEMS_PREEMPT	is masked by RTEMS_PREEMPT_MASK and enables preemption
RTEMS_NO_PREEMPT	is masked by RTEMS_PREEMPT_MASK and disables preemption
RTEMS_NO_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and disables timeslicing
RTEMS_TIMESLICE	is masked by RTEMS_TIMESLICE_MASK and enables timeslicing
RTEMS_ASR	is masked by RTEMS_ASR_MASK and enables ASR processing
RTEMS_NO_ASR	is masked by RTEMS_ASR_MASK and disables ASR processing
RTEMS_INTERRUPT_LEVEL(0)	is masked by RTEMS_INTERRUPT_MASK and enables all interrupts
RTEMS_INTERRUPT_LEVEL(n)	is masked by RTEMS_INTERRUPT_MASK and sets interrupts level n

## 16.4.2 SIGNAL\_SEND - Send signal set to a task

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_signal_send(
2     rtems_id      id,
3     rtems_signal_set signal_set
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	signal sent successfully
RTEMS_INVALID_ID	task id invalid
RTEMS_INVALID_NUMBER	empty signal set
RTEMS_NOT_DEFINED	ASR invalid

**DESCRIPTION:**

This directive sends a signal set to the task specified in `id`. The `signal_set` parameter contains the signal set to be sent to the task.

If a caller sends a signal set to a task with an invalid ASR, then an error code is returned to the caller. If a caller sends a signal set to a task whose ASR is valid but disabled, then the signal set will be caught and left pending for the ASR to process when it is enabled. If a caller sends a signal set to a task with an ASR that is both valid and enabled, then the signal set is caught and the ASR will execute the next time the task is dispatched to run.

**NOTES:**

Sending a signal set to a task has no effect on that task's state. If a signal set is sent to a blocked task, then the task will remain blocked and the signals will be processed when the task becomes the running task.

Sending a signal set to a global task which does not reside on the local node will generate a request telling the remote node to send the signal set to the specified task.



# PARTITION MANAGER

## 17.1 Introduction

The partition manager provides facilities to dynamically allocate memory in fixed-size units. The directives provided by the partition manager are:

- *rtems\_partition\_create* (page 276) - Create a partition
- *rtems\_partition\_ident* (page 278) - Get ID of a partition
- *rtems\_partition\_delete* (page 279) - Delete a partition
- *rtems\_partition\_get\_buffer* (page 280) - Get buffer from a partition
- *rtems\_partition\_return\_buffer* (page 281) - Return buffer to a partition



## 17.2 Background

### 17.2.1 Partition Manager Definitions

A partition is a physically contiguous memory area divided into fixed-size buffers that can be dynamically allocated and deallocated.

Partitions are managed and maintained as a list of buffers. Buffers are obtained from the front of the partition's free buffer chain and returned to the rear of the same chain. When a buffer is on the free buffer chain, RTEMS uses two pointers of memory from each buffer as the free buffer chain. When a buffer is allocated, the entire buffer is available for application use. Therefore, modifying memory that is outside of an allocated buffer could destroy the free buffer chain or the contents of an adjacent allocated buffer.

### 17.2.2 Building a Partition Attribute Set

In general, an attribute set is built by a bitwise OR of the desired attribute components. The set of valid partition attributes is provided in the following table:

RTEMS_LOCAL	local partition (default)
RTEMS_GLOBAL	global partition

Attribute values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. An attribute listed as a default is not required to appear in the attribute list, although it is a good programming practice to specify default attributes. If all defaults are desired, the attribute `RTEMS_DEFAULT_ATTRIBUTES` should be specified on this call. The `attribute_set` parameter should be `RTEMS_GLOBAL` to indicate that the partition is to be known globally.

## 17.3 Operations

### 17.3.1 Creating a Partition

The `rtems_partition_create` directive creates a partition with a user-specified name. The partition's name, starting address, length and buffer size are all specified to the `rtems_partition_create` directive. RTEMS allocates a Partition Control Block (PTCB) from the PTCB free list. This data structure is used by RTEMS to manage the newly created partition. The number of buffers in the partition is calculated based upon the specified partition length and buffer size. If successful, the unique partition ID is returned to the calling task.

### 17.3.2 Obtaining Partition IDs

When a partition is created, RTEMS generates a unique partition ID and assigned it to the created partition until it is deleted. The partition ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_partition_create` directive, the partition ID is stored in a user provided location. Second, the partition ID may be obtained later using the `rtems_partition_ident` directive. The partition ID is used by other partition manager directives to access this partition.

### 17.3.3 Acquiring a Buffer

A buffer can be obtained by calling the `rtems_partition_get_buffer` directive. If a buffer is available, then it is returned immediately with a successful return code. Otherwise, an unsuccessful return code is returned immediately to the caller. Tasks cannot block to wait for a buffer to become available.

### 17.3.4 Releasing a Buffer

Buffers are returned to a partition's free buffer chain with the `rtems_partition_return_buffer` directive. This directive returns an error status code if the returned buffer was not previously allocated from this partition.

### 17.3.5 Deleting a Partition

The `rtems_partition_delete` directive allows a partition to be removed and returned to RTEMS. When a partition is deleted, the PTCB for that partition is returned to the PTCB free list. A partition with buffers still allocated cannot be deleted. Any task attempting to do so will be returned an error status code.

## 17.4 Directives

This section details the partition manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 17.4.1 PARTITION\_CREATE - Create a partition

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_partition_create(
2   rtems_name      name,
3   void            *starting_address,
4   uintptr_t       length,
5   size_t          buffer_size,
6   rtems_attribute attribute_set,
7   rtems_id        *id
8 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	partition created successfully
RTEMS_INVALID_NAME	invalid partition name
RTEMS_TOO_MANY	too many partitions created
RTEMS_INVALID_ADDRESS	starting_address is not on a pointer size boundary
RTEMS_INVALID_ADDRESS	starting_address is NULL
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_SIZE	length or buffer_size is 0
RTEMS_INVALID_SIZE	length is less than the buffer_size
RTEMS_INVALID_SIZE	buffer_size is not an integral multiple of the pointer size
RTEMS_INVALID_SIZE	buffer_size is less than two times the pointer size
RTEMS_TOO_MANY	too many global objects

**DESCRIPTION:**

This directive creates a partition of fixed size buffers from a physically contiguous memory space which starts at `starting_address` and is `length` bytes in size. Each allocated buffer is to be of `buffer_size` in bytes. The assigned partition id is returned in `id`. This partition id is used to access the partition with other partition related directives. For control and maintenance of the partition, RTEMS allocates a PTCB from the local PTCB free pool and initializes it.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The partition buffer area specified by the `starting_address` must be properly aligned. It must be possible to directly store target architecture pointers and the also the user data. For example, if the user data contains some long double or vector data types, the partition buffer area and the buffer size must take the alignment of these types into account which is usually larger than the pointer alignment. A cache line alignment may be also a factor.

The `buffer_size` parameter must be an integral multiple of the pointer size on the target architecture. Additionally, `buffer_size` must be large enough to hold two pointers on the target architecture. This is required for RTEMS to manage the buffers when they are free.

Memory from the partition is not used by RTEMS to store the Partition Control Block.

The following partition attribute constants are defined by RTEMS:

RTEMS_LOCAL	local partition (default)
RTEMS_GLOBAL	global partition

The PTCB for a global partition is allocated on the local node. The memory space used for the partition must reside in shared memory. Partitions should not be made global unless remote tasks must interact with the partition. This is to avoid the overhead incurred by the creation of a global partition. When a global partition is created, the partition's name and id must be transmitted to every node in the system for insertion in the local copy of the global object table.

The total number of global objects, including partitions, is limited by the `maximum_global_objects` field in the Configuration Table.

**EXAMPLE:**

```
1 #include <rtems.h>
2 #include <rtems/chain.h>
3
4 #include <assert.h>
5
6 typedef struct {
7     char less;
8     short more;
9 } item;
10
11 union {
12     item data;
13     rtems_chain_node node;
14 } items[ 13 ];
15
16 rtems_id create_partition(void)
17 {
18     rtems_id id;
19     rtems_status_code sc;
20
21     sc = rtems_partition_create(
22         rtems_build_name( 'P', 'A', 'R', 'T' ),
23         items,
24         sizeof( items ),
25         sizeof( items[ 0 ] ),
26         RTEMS_DEFAULT_ATTRIBUTES,
27         &id
28     );
29     assert(sc == RTEMS_SUCCESSFUL);
30
31     return id;
32 }
```

## 17.4.2 PARTITION\_IDENT - Get ID of a partition

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_partition_ident(  
2     rtems_name name,  
3     uint32_t node,  
4     rtems_id *id  
5 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	partition identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	partition name not found
RTEMS_INVALID_NODE	invalid node id

### DESCRIPTION:

This directive obtains the partition id associated with the partition name. If the partition name is not unique, then the partition id will match one of the partitions with that name. However, this partition id is not guaranteed to correspond to the desired partition. The partition id is used with other partition related directives to access the partition.

### NOTES:

This directive will not cause the running task to be preempted.

If node is RTEMS\_SEARCH\_ALL\_NODES, all nodes are searched with the local node being searched first. All other nodes are searched with the lowest numbered node searched first.

If node is a valid node number which does not represent the local node, then only the partitions exported by the designated node are searched.

This directive does not generate activity on remote nodes. It accesses only the local copy of the global object table.

### 17.4.3 PARTITION\_DELETE - Delete a partition

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_partition_delete(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	partition deleted successfully
RTEMS_INVALID_ID	invalid partition id
RTEMS_RESOURCE_IN_USE	buffers still in use
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	cannot delete remote partition

**DESCRIPTION:**

This directive deletes the partition specified by id. The partition cannot be deleted if any of its buffers are still allocated. The PTCB for the deleted partition is reclaimed by RTEMS.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The calling task does not have to be the task that created the partition. Any local task that knows the partition id can delete the partition.

When a global partition is deleted, the partition id must be transmitted to every node in the system for deletion from the local copy of the global object table.

The partition must reside on the local node, even if the partition was created with the RTEMS\_GLOBAL option.

#### 17.4.4 PARTITION\_GET\_BUFFER - Get buffer from a partition

##### CALLING SEQUENCE:

```
1 rtems_status_code rtems_partition_get_buffer(  
2     rtems_id id,  
3     void **buffer  
4 );
```

##### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	buffer obtained successfully
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_INVALID_ID	invalid partition id
RTEMS_UNSATISFIED	all buffers are allocated

##### DESCRIPTION:

This directive allows a buffer to be obtained from the partition specified in `id`. The address of the allocated buffer is returned in `buffer`.

##### NOTES:

This directive will not cause the running task to be preempted.

All buffers begin on a four byte boundary.

A task cannot wait on a buffer to become available.

Getting a buffer from a global partition which does not reside on the local node will generate a request telling the remote node to allocate a buffer from the specified partition.



### 17.4.5 PARTITION\_RETURN\_BUFFER - Return buffer to a partition

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_partition_return_buffer(  
2     rtems_id id,  
3     void *buffer  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	buffer returned successfully
RTEMS_INVALID_ADDRESS	buffer is NULL
RTEMS_INVALID_ID	invalid partition id
RTEMS_INVALID_ADDRESS	buffer address not in partition

#### DESCRIPTION:

This directive returns the buffer specified by `buffer` to the partition specified by `id`.

#### NOTES:

This directive will not cause the running task to be preempted.

Returning a buffer to a global partition which does not reside on the local node will generate a request telling the remote node to return the buffer to the specified partition.

Returning a buffer multiple times is an error. It will corrupt the internal state of the partition.



# REGION MANAGER

## 18.1 Introduction

The region manager provides facilities to dynamically allocate memory in variable sized units. The directives provided by the region manager are:

- *rtems\_region\_create* (page 290) - Create a region
- *rtems\_region\_ident* (page 292) - Get ID of a region
- *rtems\_region\_delete* (page 293) - Delete a region
- *rtems\_region\_extend* (page 294) - Add memory to a region
- *rtems\_region\_get\_segment* (page 295) - Get segment from a region
- *rtems\_region\_return\_segment* (page 297) - Return segment to a region
- *rtems\_region\_get\_segment\_size* (page 298) - Obtain size of a segment
- *rtems\_region\_resize\_segment* (page 299) - Change size of a segment
- *rtems\_region\_get\_information* (page 300) - Get region information
- *rtems\_region\_get\_free\_information* (page 301) - Get region free information

## 18.2 Background

### 18.2.1 Region Manager Definitions

A region makes up a physically contiguous memory space with user-defined boundaries from which variable-sized segments are dynamically allocated and deallocated. A segment is a variable size section of memory which is allocated in multiples of a user-defined page size. This page size is required to be a multiple of four greater than or equal to four. For example, if a request for a 350-byte segment is made in a region with 256-byte pages, then a 512-byte segment is allocated.

Regions are organized as doubly linked chains of variable sized memory blocks. Memory requests are allocated using a first-fit algorithm. If available, the requester receives the number of bytes requested (rounded up to the next page size). RTEMS requires some overhead from the region's memory for each segment that is allocated. Therefore, an application should only modify the memory of a segment that has been obtained from the region. The application should NOT modify the memory outside of any obtained segments and within the region's boundaries while the region is currently active in the system.

Upon return to the region, the free block is coalesced with its neighbors (if free) on both sides to produce the largest possible unused block.

### 18.2.2 Building an Attribute Set

In general, an attribute set is built by a bitwise OR of the desired attribute components. The set of valid region attributes is provided in the following table:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority

Attribute values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each attribute appears exactly once in the component list. An attribute listed as a default is not required to appear in the attribute list, although it is a good programming practice to specify default attributes. If all defaults are desired, the attribute RTEMS\_DEFAULT\_ATTRIBUTES should be specified on this call.

This example demonstrates the `attribute_set` parameter needed to create a region with the task priority waiting queue discipline. The `attribute_set` parameter to the `rtems_region_create` directive should be RTEMS\_PRIORITY.

### 18.2.3 Building an Option Set

In general, an option is built by a bitwise OR of the desired option components. The set of valid options for the `rtems_region_get_segment` directive are listed in the following table:

RTEMS_WAIT	task will wait for segment (default)
RTEMS_NO_WAIT	task should not wait

Option values are specifically designed to be mutually exclusive, therefore bitwise OR and addition operations are equivalent as long as each option appears exactly once in the component

list. An option listed as a default is not required to appear in the option list, although it is a good programming practice to specify default options. If all defaults are desired, the option `RTEMS_DEFAULT_OPTIONS` should be specified on this call.

This example demonstrates the option parameter needed to poll for a segment. The option parameter passed to the `rtems_region_get_segment` directive should be `RTEMS_NO_WAIT`.

## 18.3 Operations

### 18.3.1 Creating a Region

The `rtems_region_create` directive creates a region with the user-defined name. The user may select FIFO or task priority as the method for placing waiting tasks in the task wait queue. RTEMS allocates a Region Control Block (RNCB) from the RNCB free list to maintain the newly created region. RTEMS also generates a unique region ID which is returned to the calling task.

It is not possible to calculate the exact number of bytes available to the user since RTEMS requires overhead for each segment allocated. For example, a region with one segment that is the size of the entire region has more available bytes than a region with two segments that collectively are the size of the entire region. This is because the region with one segment requires only the overhead for one segment, while the other region requires the overhead for two segments.

Due to automatic coalescing, the number of segments in the region dynamically changes. Therefore, the total overhead required by RTEMS dynamically changes.

### 18.3.2 Obtaining Region IDs

When a region is created, RTEMS generates a unique region ID and assigns it to the created region until it is deleted. The region ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_region_create` directive, the region ID is stored in a user provided location. Second, the region ID may be obtained later using the `rtems_region_ident` directive. The region ID is used by other region manager directives to access this region.

### 18.3.3 Adding Memory to a Region

The `rtems_region_extend` directive may be used to add memory to an existing region. The caller specifies the size in bytes and starting address of the memory being added.

### 18.3.4 Acquiring a Segment

The `rtems_region_get_segment` directive attempts to acquire a segment from a specified region. If the region has enough available free memory, then a segment is returned successfully to the caller. When the segment cannot be allocated, one of the following situations applies:

- By default, the calling task will wait forever to acquire the segment.
- Specifying the `RTEMS_NO_WAIT` option forces an immediate return with an error status code.
- Specifying a timeout limits the interval the task will wait before returning with an error status code.

If the task waits for the segment, then it is placed in the region's task wait queue in either FIFO or task priority order. All tasks waiting on a region are returned an error when the message queue is deleted.

### 18.3.5 Releasing a Segment

When a segment is returned to a region by the `rtems_region_return_segment` directive, it is merged with its unallocated neighbors to form the largest possible segment. The first task on the wait queue is examined to determine if its segment request can now be satisfied. If so, it is given a segment and unblocked. This process is repeated until the first task's segment request cannot be satisfied.

### 18.3.6 Obtaining the Size of a Segment

The `rtems_region_get_segment_size` directive returns the size in bytes of the specified segment. The size returned includes any "extra" memory included in the segment because of rounding up to a page size boundary.

### 18.3.7 Changing the Size of a Segment

The `rtems_region_resize_segment` directive is used to change the size in bytes of the specified segment. The size may be increased or decreased. When increasing the size of a segment, it is possible that the request cannot be satisfied. This directive provides functionality similar to the `realloc()` function in the Standard C Library.

### 18.3.8 Deleting a Region

A region can be removed from the system and returned to RTEMS with the `rtems_region_delete` directive. When a region is deleted, its control block is returned to the RNCB free list. A region with segments still allocated is not allowed to be deleted. Any task attempting to do so will be returned an error. As a result of this directive, all tasks blocked waiting to obtain a segment from the region will be readied and returned a status code which indicates that the region was deleted.



## 18.4 Directives

This section details the region manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 18.4.1 REGION\_CREATE - Create a region

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_region_create(
2   rtems_name      name,
3   void            *starting_address,
4   uintptr_t       length,
5   uintptr_t       page_size,
6   rtems_attribute attribute_set,
7   rtems_id        *id
8 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	region created successfully
RTEMS_INVALID_NAME	invalid region name
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_ADDRESS	starting_address is NULL
RTEMS_TOO_MANY	too many regions created
RTEMS_INVALID_SIZE	invalid page size
RTEMS_INVALID_SIZE	the memory area defined by the starting address and the length parameters is too small

**DESCRIPTION:**

This directive creates a region from a contiguous memory area which starts at `starting_address` and is `length` bytes long. The memory area must be large enough to contain some internal region administration data. Segments allocated from the region will be a multiple of `page_size` bytes in length. The specified page size will be aligned to an architecture-specific minimum alignment if necessary.

The assigned region id is returned in `id`. This region id is used as an argument to other region related directives to access the region.

For control and maintenance of the region, RTEMS allocates and initializes an RNCB from the RNCB free pool. Thus memory from the region is not used to store the RNCB. However, some overhead within the region is required by RTEMS each time a segment is constructed in the region.

Specifying `RTEMS_PRIORITY` in `attribute_set` causes tasks waiting for a segment to be serviced according to task priority. Specifying `RTEMS_FIFO` in `attribute_set` or selecting `RTEMS_DEFAULT_ATTRIBUTES` will cause waiting tasks to be serviced in First In-First Out order.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

The following region attribute constants are defined by RTEMS:

RTEMS_FIFO	tasks wait by FIFO (default)
RTEMS_PRIORITY	tasks wait by priority

## 18.4.2 REGION\_IDENT - Get ID of a region

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_region_ident(  
2   rtems_name name,  
3   rtems_id *id  
4 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	region identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	region name not found

### DESCRIPTION:

This directive obtains the region id associated with the region name to be acquired. If the region name is not unique, then the region id will match one of the regions with that name. However, this region id is not guaranteed to correspond to the desired region. The region id is used to access this region in other region manager directives.

### NOTES:

This directive will not cause the running task to be preempted.

### 18.4.3 REGION\_DELETE - Delete a region

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_region_delete(  
2   rtems_id id  
3 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	region deleted successfully
RTEMS_INVALID_ID	invalid region id
RTEMS_RESOURCE_IN_USE	segments still in use

#### DESCRIPTION:

This directive deletes the region specified by id. The region cannot be deleted if any of its segments are still allocated. The RNCB for the deleted region is reclaimed by RTEMS.

#### NOTES:

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

The calling task does not have to be the task that created the region. Any local task that knows the region id can delete the region.

## 18.4.4 REGION\_EXTEND - Add memory to a region

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_region_extend(
2   rtems_id id,
3   void *starting_address,
4   uintptr_t length
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	region extended successfully
RTEMS_INVALID_ADDRESS	starting_address is NULL
RTEMS_INVALID_ID	invalid region id
RTEMS_INVALID_ADDRESS	invalid address of area to add

**DESCRIPTION:**

This directive adds the memory area which starts at `starting_address` for `length` bytes to the region specified by `id`.

There are no alignment requirements for the memory area. The memory area must be big enough to contain some maintenance blocks. It must not overlap parts of the current heap memory areas. Disconnected memory areas added to the heap will lead to used blocks which cover the gaps. Extending with an inappropriate memory area will corrupt the heap resulting in undefined behaviour.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

The calling task does not have to be the task that created the region. Any local task that knows the region identifier can extend the region.

## 18.4.5 REGION\_GET\_SEGMENT - Get segment from a region

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_region_get_segment(
2   rtems_id        id,
3   uintptr_t       size,
4   rtems_option    option_set,
5   rtems_interval  timeout,
6   void            **segment
7 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	segment obtained successfully
RTEMS_INVALID_ADDRESS	segment is NULL
RTEMS_INVALID_ID	invalid region id
RTEMS_INVALID_SIZE	request is for zero bytes or exceeds the size of maximum segment which is possible for this region
RTEMS_UNSATISFIED	segment of requested size not available
RTEMS_TIMEOUT	timed out waiting for segment
RTEMS_OBJECT_WAS_DELETED	region deleted while waiting

**DESCRIPTION:**

This directive obtains a variable size segment from the region specified by `id`. The address of the allocated segment is returned in `segment`. The `RTEMS_WAIT` and `RTEMS_NO_WAIT` components of the options parameter are used to specify whether the calling tasks wish to wait for a segment to become available or return immediately if no segment is available. For either option, if a sufficiently sized segment is available, then the segment is successfully acquired by returning immediately with the `RTEMS_SUCCESSFUL` status code.

If the calling task chooses to return immediately and a segment large enough is not available, then an error code indicating this fact is returned. If the calling task chooses to wait for the segment and a segment large enough is not available, then the calling task is placed on the region's segment wait queue and blocked. If the region was created with the `RTEMS_PRIORITY` option, then the calling task is inserted into the wait queue according to its priority. However, if the region was created with the `RTEMS_FIFO` option, then the calling task is placed at the rear of the wait queue.

The timeout parameter specifies the maximum interval that a task is willing to wait to obtain a segment. If timeout is set to `RTEMS_NO_TIMEOUT`, then the calling task will wait forever.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

The actual length of the allocated segment may be larger than the requested size because a segment size is always a multiple of the region's page size.

The following segment acquisition option constants are defined by RTEMS:

RTEMS_WAIT	task will wait for segment (default)
RTEMS_NO_WAIT	task should not wait

A clock tick is required to support the timeout functionality of this directive.



### 18.4.6 REGION\_RETURN\_SEGMENT - Return segment to a region

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_region_return_segment(  
2   rtems_id id,  
3   void *segment  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	segment returned successfully
RTEMS_INVALID_ADDRESS	segment is NULL
RTEMS_INVALID_ID	invalid region id
RTEMS_INVALID_ADDRESS	segment address not in region

#### DESCRIPTION:

This directive returns the segment specified by `segment` to the region specified by `id`. The returned segment is merged with its neighbors to form the largest possible segment. The first task on the wait queue is examined to determine if its segment request can now be satisfied. If so, it is given a segment and unblocked. This process is repeated until the first task's segment request cannot be satisfied.

#### NOTES:

This directive will cause the calling task to be preempted if one or more local tasks are waiting for a segment and the following conditions exist:

- a waiting task has a higher priority than the calling task
- the size of the segment required by the waiting task is less than or equal to the size of the segment returned.

### 18.4.7 REGION\_GET\_SEGMENT\_SIZE - Obtain size of a segment

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_region_get_segment_size(  
2   rtems_id id,  
3   void *segment,  
4   uintptr_t *size  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	segment obtained successfully
RTEMS_INVALID_ADDRESS	segment is NULL
RTEMS_INVALID_ADDRESS	size is NULL
RTEMS_INVALID_ID	invalid region id
RTEMS_INVALID_ADDRESS	segment address not in region

#### DESCRIPTION:

This directive obtains the size in bytes of the specified segment.

#### NOTES:

The actual length of the allocated segment may be larger than the requested size because a segment size is always a multiple of the region's page size.

## 18.4.8 REGION\_RESIZE\_SEGMENT - Change size of a segment

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_region_resize_segment(
2   rtems_id id,
3   void *segment,
4   uintptr_t new_size,
5   uintptr_t *old_size
6 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	segment obtained successfully
RTEMS_INVALID_ADDRESS	segment is NULL
RTEMS_INVALID_ADDRESS	old_size is NULL
RTEMS_INVALID_ID	invalid region id
RTEMS_INVALID_ADDRESS	segment address not in region
RTEMS_UNSATISFIED	unable to make segment larger

**DESCRIPTION:**

This directive is used to increase or decrease the size of a segment. When increasing the size of a segment, it is possible that there is not memory available contiguous to the segment. In this case, the request is unsatisfied.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

If an attempt to increase the size of a segment fails, then the application may want to allocate a new segment of the desired size, copy the contents of the original segment to the new, larger segment and then return the original segment.

### 18.4.9 REGION\_GET\_INFORMATION - Get region information

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_region_get_information(  
2   rtems_id      id,  
3   Heap_Information_block *the_info  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	information obtained successfully
RTEMS_INVALID_ADDRESS	the_info is NULL
RTEMS_INVALID_ID	invalid region id

#### DESCRIPTION:

This directive is used to obtain information about the used and free memory in the region specified by `id`. This is a snapshot at the time of the call. The information will be returned in the structure pointed to by `the_info`.

#### NOTES:

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

This is primarily intended as a mechanism to obtain a diagnostic information. This method forms an  $O(n)$  scan of the free and an  $O(n)$  scan of the used blocks in the region to calculate the information provided. Given that the execution time is driven by the number of used and free blocks, it can take a non-deterministic time to execute.

## 18.4.10 REGION\_GET\_FREE\_INFORMATION - Get region free information

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_region_get_free_information(
2   rtems_id          id,
3   Heap_Information_block *the_info
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	information obtained successfully
RTEMS_INVALID_ADDRESS	the_info is NULL
RTEMS_INVALID_ID	invalid region id

**DESCRIPTION:**

This directive is used to obtain information about the free memory in the region specified by `id`. This is a snapshot at the time of the call. The information will be returned in the structure pointed to by `the_info`.

**NOTES:**

This directive will obtain the allocator mutex and may cause the calling task to be preempted.

This uses the same structure to return information as the `rtems_region_get_information` directive but does not fill in the used information.

This is primarily intended as a mechanism to obtain a diagnostic information. This method forms an  $O(n)$  scan of the free in the region to calculate the information provided. Given that the execution time is driven by the number of used and free blocks, it can take a non-deterministic time to execute. Typically, there are many used blocks and a much smaller number of free blocks making a call to this directive less expensive than a call to `rtems_region_get_information`.



# DUAL-PORTED MEMORY MANAGER

## 19.1 Introduction

The dual-ported memory manager provides a mechanism for converting addresses between internal and external representations for multiple dual-ported memory areas (DPMA). The directives provided by the dual-ported memory manager are:

- *rtems\_port\_create* (page 308) - Create a port
- *rtems\_port\_ident* (page 309) - Get ID of a port
- *rtems\_port\_delete* (page 310) - Delete a port
- *rtems\_port\_external\_to\_internal* (page 311) - Convert external to internal address
- *rtems\_port\_internal\_to\_external* (page 312) - Convert internal to external address



## 19.2 Background

A dual-ported memory area (DPMA) is an contiguous block of RAM owned by a particular processor but which can be accessed by other processors in the system. The owner accesses the memory using internal addresses, while other processors must use external addresses. RTEMS defines a port as a particular mapping of internal and external addresses.

There are two system configurations in which dual-ported memory is commonly found. The first is tightly-coupled multiprocessor computer systems where the dual-ported memory is shared between all nodes and is used for inter-node communication. The second configuration is computer systems with intelligent peripheral controllers. These controllers typically utilize the DPMA for high-performance data transfers.

## 19.3 Operations

### 19.3.1 Creating a Port

The `rtems_port_create` directive creates a port into a DPMA with the user-defined name. The user specifies the association between internal and external representations for the port being created. RTEMS allocates a Dual-Ported Memory Control Block (DPCB) from the DPCB free list to maintain the newly created DPMA. RTEMS also generates a unique dual-ported memory port ID which is returned to the calling task. RTEMS does not initialize the dual-ported memory area or access any memory within it.

### 19.3.2 Obtaining Port IDs

When a port is created, RTEMS generates a unique port ID and assigns it to the created port until it is deleted. The port ID may be obtained by either of two methods. First, as the result of an invocation of the `rtems_port_create` directive, the task ID is stored in a user provided location. Second, the port ID may be obtained later using the `rtems_port_ident` directive. The port ID is used by other dual-ported memory manager directives to access this port.

### 19.3.3 Converting an Address

The `rtems_port_external_to_internal` directive is used to convert an address from external to internal representation for the specified port. The `rtems_port_internal_to_external` directive is used to convert an address from internal to external representation for the specified port. If an attempt is made to convert an address which lies outside the specified DPMA, then the address to be converted will be returned.

### 19.3.4 Deleting a DPMA Port

A port can be removed from the system and returned to RTEMS with the `rtems_port_delete` directive. When a port is deleted, its control block is returned to the DPCB free list.

## 19.4 Directives

This section details the dual-ported memory manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 19.4.1 PORT\_CREATE - Create a port

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_port_create(
2   rtems_name  name,
3   void        *internal_start,
4   void        *external_start,
5   uint32_t    length,
6   rtems_id    *id
7 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	port created successfully
RTEMS_INVALID_NAME	invalid port name
RTEMS_INVALID_ADDRESS	address not on four byte boundary
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_TOO_MANY	too many DP memory areas created

**DESCRIPTION:**

This directive creates a port which resides on the local node for the specified DPMA. The assigned port id is returned in id. This port id is used as an argument to other dual-ported memory manager directives to convert addresses within this DPMA.

For control and maintenance of the port, RTEMS allocates and initializes an DPCB from the DPCB free pool. Thus memory from the dual-ported memory area is not used to store the DPCB.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The internal\_address and external\_address parameters must be on a four byte boundary.

## 19.4.2 PORT\_IDENT - Get ID of a port

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_port_ident(  
2     rtems_name name,  
3     rtems_id  *id  
4 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	port identified successfully
RTEMS_INVALID_ADDRESS	id is NULL
RTEMS_INVALID_NAME	port name not found

### DESCRIPTION:

This directive obtains the port id associated with the specified name to be acquired. If the port name is not unique, then the port id will match one of the DPMAs with that name. However, this port id is not guaranteed to correspond to the desired DPMA. The port id is used to access this DPMA in other dual-ported memory area related directives.

### NOTES:

This directive will not cause the running task to be preempted.

### 19.4.3 PORT\_DELETE - Delete a port

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_port_delete(  
2   rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	port deleted successfully
RTEMS_INVALID_ID	invalid port id

**DESCRIPTION:**

This directive deletes the dual-ported memory area specified by id. The DPCB for the deleted dual-ported memory area is reclaimed by RTEMS.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

The calling task does not have to be the task that created the port. Any local task that knows the port id can delete the port.

### 19.4.4 PORT\_EXTERNAL\_TO\_INTERNAL - Convert external to internal address

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_port_external_to_internal(  
2   rtems_id id,  
3   void *external,  
4   void **internal  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_INVALID_ADDRESS	internal is NULL
RTEMS_SUCCESSFUL	successful conversion

#### DESCRIPTION:

This directive converts a dual-ported memory address from external to internal representation for the specified port. If the given external address is invalid for the specified port, then the internal address is set to the given external address.

#### NOTES:

This directive is callable from an ISR.

This directive will not cause the calling task to be preempted.

### 19.4.5 PORT\_INTERNAL\_TO\_EXTERNAL - Convert internal to external address

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_port_internal_to_external(  
2   rtems_id id,  
3   void *internal,  
4   void **external  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_INVALID_ADDRESS	external is NULL
RTEMS_SUCCESSFUL	successful conversion

#### DESCRIPTION:

This directive converts a dual-ported memory address from internal to external representation so that it can be passed to owner of the DPMA represented by the specified port. If the given internal address is an invalid dual-ported address, then the external address is set to the given internal address.

#### NOTES:

This directive is callable from an ISR.

This directive will not cause the calling task to be preempted.



# I/O MANAGER

## 20.1 Introduction

The input/output interface manager provides a well-defined mechanism for accessing device drivers and a structured methodology for organizing device drivers. The directives provided by the I/O manager are:

- *rtems\_io\_initialize* (page 322) - Initialize a device driver
- *rtems\_io\_register\_driver* (page 320) - Register a device driver
- *rtems\_io\_unregister\_driver* (page 321) - Unregister a device driver
- *rtems\_io\_register\_name* (page 323) - Register a device name
- *rtems\_io\_lookup\_name* (page 324) - Look up a device name
- *rtems\_io\_open* (page 325) - Open a device
- *rtems\_io\_close* (page 326) - Close a device
- *rtems\_io\_read* (page 327) - Read from a device
- *rtems\_io\_write* (page 328) - Write to a device
- *rtems\_io\_control* (page 329) - Special device services

## 20.2 Background

### 20.2.1 Device Driver Table

Each application utilizing the RTEMS I/O manager must specify the address of a Device Driver Table in its Configuration Table. This table contains each device driver's entry points that is to be initialised by RTEMS during initialization. Each device driver may contain the following entry points:

- Initialization
- Open
- Close
- Read
- Write
- Control

If the device driver does not support a particular entry point, then that entry in the Configuration Table should be NULL. RTEMS will return `RTEMS_SUCCESSFUL` as the executive's and zero (0) as the device driver's return code for these device driver entry points.

Applications can register and unregister drivers with the RTEMS I/O manager avoiding the need to have all drivers statically defined and linked into this table.

The `confdefs.h` entry `CONFIGURE_MAXIMUM_DRIVERS` configures the number of driver slots available to the application.

### 20.2.2 Major and Minor Device Numbers

Each call to the I/O manager must provide a device's major and minor numbers as arguments. The major number is the index of the requested driver's entry points in the Device Driver Table, and is used to select a specific device driver. The exact usage of the minor number is driver specific, but is commonly used to distinguish between a number of devices controlled by the same driver.

The data types `rtems_device_major_number` and `rtems_device_minor_number` are used to manipulate device major and minor numbers, respectively.

### 20.2.3 Device Names

The I/O Manager provides facilities to associate a name with a particular device. Directives are provided to register the name of a device and to look up the major/minor number pair associated with a device name.

### 20.2.4 Device Driver Environment

Application developers, as well as device driver developers, must be aware of the following regarding the RTEMS I/O Manager:

- A device driver routine executes in the context of the invoking task. Thus if the driver blocks, the invoking task blocks.
- The device driver is free to change the modes of the invoking task, although the driver should restore them to their original values.
- Device drivers may be invoked from ISRs.
- Only local device drivers are accessible through the I/O manager.
- A device driver routine may invoke all other RTEMS directives, including I/O directives, on both local and global objects.

Although the RTEMS I/O manager provides a framework for device drivers, it makes no assumptions regarding the construction or operation of a device driver.

### 20.2.5 Runtime Driver Registration

Board support package and application developers can select whether a device driver is statically entered into the default device table or registered at runtime.

Dynamic registration helps applications where:

- The BSP and kernel libraries are common to a range of applications for a specific target platform. An application may be built upon a common library with all drivers. The application selects and registers the drivers. Uniform driver name lookup protects the application.
- The type and range of drivers may vary as the application probes a bus during initialization.
- Support for hot swap bus system such as Compact PCI.
- Support for runtime loadable driver modules.

### 20.2.6 Device Driver Interface

When an application invokes an I/O manager directive, RTEMS determines which device driver entry point must be invoked. The information passed by the application to RTEMS is then passed to the correct device driver entry point. RTEMS will invoke each device driver entry point assuming it is compatible with the following prototype:

```
1 rtems_device_driver io_entry(  
2     rtems_device_major_number  major,  
3     rtems_device_minor_number  minor,  
4     void                       *argument_block  
5 );
```

The format and contents of the parameter block are device driver and entry point dependent.

It is recommended that a device driver avoid generating error codes which conflict with those used by application components. A common technique used to generate driver specific error codes is to make the most significant part of the status indicate a driver specific code.

### 20.2.7 Device Driver Initialization

RTEMS automatically initializes all device drivers when multitasking is initiated via the `rtems_initialize_executive` directive. RTEMS initializes the device drivers by invoking each device driver initialization entry point with the following parameters:

**major**

the major device number for this device driver.

**minor**

zero.

**argument\_block**

will point to the Configuration Table.

The returned status will be ignored by RTEMS. If the driver cannot successfully initialize the device, then it should invoke the `fatal_error_occurred` directive.

## 20.3 Operations

### 20.3.1 Register and Lookup Name

The `rtems_io_register` directive associates a name with the specified device (i.e. major/minor number pair). Device names are typically registered as part of the device driver initialization sequence. The `rtems_io_lookup` directive is used to determine the major/minor number pair associated with the specified device name. The use of these directives frees the application from being dependent on the arbitrary assignment of major numbers in a particular application. No device naming conventions are dictated by RTEMS.

### 20.3.2 Accessing an Device Driver

The I/O manager provides directives which enable the application program to utilize device drivers in a standard manner. There is a direct correlation between the RTEMS I/O manager directives `rtems_io_initialize`, `rtems_io_open`, `rtems_io_close`, `rtems_io_read`, `rtems_io_write`, and `rtems_io_control` and the underlying device driver entry points.

## 20.4 Directives

This section details the I/O manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 20.4.1 IO\_REGISTER\_DRIVER - Register a device driver

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_io_register_driver(
2   rtems_device_major_number  major,
3   rtems_driver_address_table *driver_table,
4   rtems_device_major_number  *registered_major
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	successfully registered
RTEMS_INVALID_ADDRESS	invalid registered major pointer
RTEMS_INVALID_ADDRESS	invalid driver table
RTEMS_INVALID_NUMBER	invalid major device number
RTEMS_TOO_MANY	no available major device table slot
RTEMS_RESOURCE_IN_USE	major device number entry in use

**DESCRIPTION:**

This directive attempts to add a new device driver to the Device Driver Table. The user can specify a specific major device number via the directive's major parameter, or let the registration routine find the next available major device number by specifying a major number of 0. The selected major device number is returned via the registered\_major directive parameter. The directive automatically allocation major device numbers from the highest value down.

This directive automatically invokes the IO\_INITIALIZE directive if the driver address table has an initialization and open entry.

The directive returns RTEMS\_TOO\_MANY if Device Driver Table is full, and RTEMS\_RESOURCE\_IN\_USE if a specific major device number is requested and it is already in use.

**NOTES:**

The Device Driver Table size is specified in the Configuration Table condiguration. This needs to be set to maximum size the application requires.



## 20.4.2 IO\_UNREGISTER\_DRIVER - Unregister a device driver

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_unregister_driver(  
2   rtems_device_major_number major  
3 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully registered
RTEMS_INVALID_NUMBER	invalid major device number

### DESCRIPTION:

This directive removes a device driver from the Device Driver Table.

### NOTES:

Currently no specific checks are made and the driver is not closed.

### 20.4.3 IO\_INITIALIZE - Initialize a device driver

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_initialize(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

#### DESCRIPTION:

This directive calls the device driver initialization routine specified in the Device Driver Table for this major number. This directive is automatically invoked for each device driver when multitasking is initiated via the `initialize_executive` directive.

A device driver initialization module is responsible for initializing all hardware and data structures associated with a device. If necessary, it can allocate memory to be used during other operations.

#### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being initialized.

### 20.4.4 IO\_REGISTER\_NAME - Register a device

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_register_name(  
2     const char          *name,  
3     rtems_device_major_number major,  
4     rtems_device_minor_number minor  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_TOO_MANY	too many devices registered

#### DESCRIPTION:

This directive associates name with the specified major/minor number pair.

#### NOTES:

This directive will not cause the calling task to be preempted.

### 20.4.5 IO\_LOOKUP\_NAME - Lookup a device

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_lookup_name(  
2     const char      *name,  
3     rtems_driver_name_t *device_info  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_UNSATISFIED	name not registered

#### DESCRIPTION:

This directive returns the major/minor number pair associated with the given device name in `device_info`.

#### NOTES:

This directive will not cause the calling task to be preempted.

### 20.4.6 IO\_OPEN - Open a device

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_open(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

#### DESCRIPTION:

This directive calls the device driver open routine specified in the Device Driver Table for this major number. The open entry point is commonly used by device drivers to provide exclusive access to a device.

#### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being invoked.

### 20.4.7 IO\_CLOSE - Close a device

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_close(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

#### DESCRIPTION:

This directive calls the device driver close routine specified in the Device Driver Table for this major number. The close entry point is commonly used by device drivers to relinquish exclusive access to a device.

#### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being invoked.

## 20.4.8 IO\_READ - Read from a device

### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_read(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

### DESCRIPTION:

This directive calls the device driver read routine specified in the Device Driver Table for this major number. Read operations typically require a buffer address as part of the argument parameter block. The contents of this buffer will be replaced with data from the device.

### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being invoked.

### 20.4.9 IO\_WRITE - Write to a device

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_write(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

#### DESCRIPTION:

This directive calls the device driver write routine specified in the Device Driver Table for this major number. Write operations typically require a buffer address as part of the argument parameter block. The contents of this buffer will be sent to the device.

#### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being invoked.



### 20.4.10 IO\_CONTROL - Special device services

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_io_control(  
2     rtems_device_major_number major,  
3     rtems_device_minor_number minor,  
4     void *argument  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	successfully initialized
RTEMS_INVALID_NUMBER	invalid major device number

#### DESCRIPTION:

This directive calls the device driver I/O control routine specified in the Device Driver Table for this major number. The exact functionality of the driver entry called by this directive is driver dependent. It should not be assumed that the control entries of two device drivers are compatible. For example, an RS-232 driver I/O control operation may change the baud rate of a serial line, while an I/O control operation for a floppy disk driver may cause a seek operation.

#### NOTES:

This directive may or may not cause the calling task to be preempted. This is dependent on the device driver being invoked.



# FATAL ERROR MANAGER

## 21.1 Introduction

The fatal error manager processes all fatal or irrecoverable errors and other sources of system termination (for example after `exit()`). Fatal errors are identified by the (fatal source, error code) pair. The directives provided by the fatal error manager are:

- *rtems\_fatal* (page 341) - Invoke the fatal error handler
- *rtems\_panic* (page 342) - Print a message and invoke the fatal error handler
- *rtems\_shutdown\_executive* (page 343) - Shutdown RTEMS
- *rtems\_exception\_frame\_print* (page 344) - Print the CPU exception frame
- *rtems\_fatal\_source\_text* (page 345) - Return the fatal source text
- *rtems\_internal\_error\_text* (page 346) - Return the error code text
- *rtems\_fatal\_error\_occurred* (page 347) - Invoke the fatal error handler (deprecated)

## 21.2 Background

### 21.2.1 Overview

The fatal error manager is called upon detection of an irrecoverable error condition by either RTEMS or the application software. Fatal errors are also used in case it is difficult or impossible to return an error condition by other means, e.g. a return value of a directive call. Fatal errors can be detected from various sources, for example

- the executive (RTEMS),
- support libraries,
- user system code, and
- user application code.

RTEMS automatically invokes the fatal error manager upon detection of an error it considers to be fatal. Similarly, the user should invoke the fatal error manager upon detection of a fatal error.

Each static or dynamic user extension set may include a fatal error handler. The fatal error handler in the static extension set can be used to provide access to debuggers and monitors which may be present on the target hardware. If any user-supplied fatal error handlers are installed, the fatal error manager will invoke them. Usually, the board support package provides a fatal error extension which resets the board. If no user handlers are configured or if all the user handler return control to the fatal error manager, then the RTEMS default fatal error handler is invoked. If the default fatal error handler is invoked, then the system state is marked as failed.

Although the precise behavior of the default fatal error handler is processor specific, in general, it will disable all maskable interrupts, place the error code in a known processor dependent place (generally either on the stack or in a register), and halt the processor. The precise actions of the RTEMS fatal error are discussed in the Default Fatal Error Processing chapter of the Applications Supplement document for a specific target processor.

### 21.2.2 Fatal Sources

The following fatal sources are defined for RTEMS via the `rtems_fatal_source` enumeration. Each symbolic name has the corresponding numeric fatal source in parenthesis.

#### **INTERNAL\_ERROR\_CORE (0)**

Errors of the core operating system. See *Internal Error Codes* (page 334).

#### **INTERNAL\_ERROR\_RTEMS\_API (1)**

Errors of the Classic API.

#### **INTERNAL\_ERROR\_POSIX\_API (2)**

Errors of the POSIX API.

#### **RTEMS\_FATAL\_SOURCE\_BDBUF (3)**

Fatal source for the block device cache. See `rtems_bdbuf_fatal_code`.

#### **RTEMS\_FATAL\_SOURCE\_APPLICATION (4)**

Fatal source for application-specific errors. The fatal code is application-specific.

**RTEMS\_FATAL\_SOURCE\_EXIT (5)**

Fatal source of `exit()`. The fatal code is the `exit()` status code.

**RTEMS\_FATAL\_SOURCE\_BSP (6)**

Fatal source for BSP errors. The fatal codes are defined in `<bsp/fatal.h>`. Examples are interrupt and exception initialization. See `bsp_fatal_code` and `bsp_fatal()`.

**RTEMS\_FATAL\_SOURCE\_ASSERT (7)**

Fatal source of `assert()`. The fatal code is the pointer value of the assert context. See `rtems_assert_context`.

**RTEMS\_FATAL\_SOURCE\_STACK\_CHECKER (8)**

Fatal source of the stack checker. The fatal code is the object name of the executing task.

**RTEMS\_FATAL\_SOURCE\_EXCEPTION (9)**

Fatal source of the exceptions. The fatal code is the pointer value of the exception frame pointer. See `rtems_exception_frame` and *EXCEPTION\_FRAME\_PRINT - Prints the exception frame* (page 344).

**RTEMS\_FATAL\_SOURCE\_SMP (10)**

Fatal source of SMP domain. See `SMP_Fatal_code`.

**RTEMS\_FATAL\_SOURCE\_PANIC (11)**

Fatal source of `rtems_panic()`, see *PANIC - Print a message and invoke the fatal error handler* (page 342).

**RTEMS\_FATAL\_SOURCE\_INVALID\_HEAP\_FREE (12)**

Fatal source for invalid C program heap frees via `free()`. The fatal code is the bad pointer.

**RTEMS\_FATAL\_SOURCE\_HEAP (13)**

Fatal source for heap errors. The fatal code is the address to a heap error context. See `Heap_Error_context`.

### 21.2.3 Internal Error Codes

The following error codes are defined for the `INTERNAL_ERROR_CORE` fatal source. Each symbolic name has the corresponding numeric error code in parenthesis.

**INTERNAL\_ERROR\_TOO\_LITTLE\_WORKSPACE (2)**

There is not enough memory for the workspace. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_WORKSPACE\_ALLOCATION (3)**

An allocation from the workspace failed. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_INTERRUPT\_STACK\_TOO\_SMALL (4)**

The configured interrupt stack size is too small. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_THREAD\_EXITTED (5)**

A non-POSIX thread entry function returned. This is an API usage error.

An example code to provoke this fatal error is:

```
1 rtems_task task( rtems_task_argument arg )
2 {
3     /* Classic API tasks must not return */
4 }
5
6 void create_bad_task( void )
7 {
8     rtems_status_code sc;
9     rtems_id          task_id;
10
11     sc = rtems_task_create(
12         rtems_build_name('T', 'A', 'S', 'K'),
13         1,
14         RTEMS_MINIMUM_STACK_SIZE,
15         RTEMS_DEFAULT_MODES,
16         RTEMS_DEFAULT_ATTRIBUTES,
17         &task_id
18     );
19     assert( sc == RTEMS_SUCCESSFUL );
20
21     sc = rtems_task_start( task_id, task, 0 );
22     assert( sc == RTEMS_SUCCESSFUL );
23 }
```

#### **INTERNAL\_ERROR\_INCONSISTENT\_MP\_INFORMATION (6)**

This fatal error can only occur on MPCFI configurations. The MPCFI nodes or global objects configuration is inconsistent. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_INVALID\_NODE (7)**

This fatal error can only occur on MPCFI configurations. The own MPCFI node number is invalid. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_NO\_MPCFI (8)**

This fatal error can only occur on MPCFI configurations. There is no MPCFI configuration table. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_BAD\_PACKET (9)**

This fatal error can only occur on MPCFI configurations. The MPCFI server thread received a bad packet.

#### **INTERNAL\_ERROR\_OUT\_OF\_PACKETS (10)**

This fatal error can only occur on MPCFI configurations. The MPCFI packet pool is empty. It is an application configuration error.

#### **INTERNAL\_ERROR\_OUT\_OF\_GLOBAL\_OBJECTS (11)**

This fatal error can only occur on MPCFI configurations. The MPCFI global objects pool is empty. It is an application configuration error.

#### **INTERNAL\_ERROR\_OUT\_OF\_PROXIES (12)**

This fatal error can only occur on MPCFI configurations. The MPCFI thread proxy pool is empty. It is an application configuration error.

#### **INTERNAL\_ERROR\_INVALID\_GLOBAL\_ID (13)**

This fatal error can only occur on MPCFI configurations. The system cannot find the global object for a specific object identifier. In case this happens, then this is probably an operating system bug.

**INTERNAL\_ERROR\_BAD\_STACK\_HOOK (14)**

The stack allocator hook or stack free hook is NULL. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_UNLIMITED\_AND\_MAXIMUM\_IS\_0 (19)**

An object class is configured to use the unlimited objects option, however, the count of objects for each extension is zero. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_NO\_MEMORY\_FOR\_HEAP (23)**

There is not enough memory for the C program heap. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_CPU\_ISR\_INSTALL\_VECTOR (24)**

The use of `_CPU_ISR_install_vector()` is illegal on this system.

**INTERNAL\_ERROR\_RESOURCE\_IN\_USE (25)**

This fatal error can only occur on debug configurations. It happens in case a thread which owns mutexes is deleted. Mutexes owned by a deleted thread are in an inconsistent state.

**INTERNAL\_ERROR\_RTEMS\_INIT\_TASK\_ENTRY\_IS\_NULL (26)**

An RTEMS initialization task entry function is NULL. This fatal error may occur during system initialization. It is an application configuration error.

**INTERNAL\_ERROR\_THREAD\_QUEUE\_DEADLOCK (28)**

A deadlock was detected during a thread queue enqueue operation.

**INTERNAL\_ERROR\_THREAD\_QUEUE\_ENQUEUE\_STICKY\_FROM\_BAD\_STATE (29)**

This fatal error can only happen in SMP configurations. It is not allowed to obtain MrsP semaphores in a context with thread dispatching disabled, for example interrupt context.

An example code to provoke this fatal error is:

```

1 rtems_timer_service_routine bad( rtems_id timer_id, void *arg )
2 {
3   rtems_id *sem_id;
4
5   sem_id = arg;
6
7   rtems_semaphore_obtain( *sem_id, RTEMS_WAIT, RTEMS_NO_TIMEOUT );
8   assert( 0 );
9 }
10
11 rtems_task fire_bad_timer( rtems_task_argument arg )
12 {
13   rtems_status_code sc;
14   rtems_id          sem_id;
15   rtems_id          timer_id;
16
17   sc = rtems_semaphore_create(
18     rtems_build_name('M', 'R', 'S', 'P'),
19     1,
20     RTEMS_MULTIPROCESSOR_RESOURCE_SHARING
21     | RTEMS_BINARY_SEMAPHORE,
22     1,
23     &sem_id
24   );
25   assert( sc == RTEMS_SUCCESSFUL );

```

(continues on next page)



(continued from previous page)

```

26
27  sc = rtems_timer_create(
28      rtems_build_name( 'E', 'V', 'I', 'L' ),
29      &timer_id
30  );
31  assert( sc == RTEMS_SUCCESSFUL );
32
33  sc = rtems_semaphore_obtain( sem_id, RTEMS_WAIT, RTEMS_NO_TIMEOUT );
34  assert( sc == RTEMS_SUCCESSFUL );
35
36  sc = rtems_timer_fire_after( timer_id, 1, bad, &sem_id );
37  assert( sc == RTEMS_SUCCESSFUL );
38
39  rtems_task_wake_after( 2 );
40  assert( 0 );
41 }

```

**INTERNAL\_ERROR\_BAD\_THREAD\_DISPATCH\_DISABLE\_LEVEL (30)**

It is illegal to call blocking operating system services with thread dispatching disabled, for example in interrupt context.

An example code to provoke this fatal error is:

```

1  void bad( rtems_id id, void *arg )
2  {
3      rtems_task_wake_after( RTEMS_YIELD_PROCESSOR );
4      assert( 0 );
5  }
6
7  void fire_bad_timer( void )
8  {
9      rtems_status_code sc;
10     rtems_id          id;
11
12     sc = rtems_timer_create(
13         rtems_build_name( 'E', 'V', 'I', 'L' ),
14         &id
15     );
16     assert( sc == RTEMS_SUCCESSFUL );
17
18     sc = rtems_timer_fire_after( id, 1, bad, NULL );
19     assert( sc == RTEMS_SUCCESSFUL );
20
21     rtems_task_wake_after( 2 );
22     assert( 0 );
23 }

```

**INTERNAL\_ERROR\_BAD\_THREAD\_DISPATCH\_ENVIRONMENT (31)**

In SMP configurations, it is a fatal error to call blocking operating system with interrupts disabled, since this prevents delivery of inter-processor interrupts. This could lead to executing threads which are not allowed to execute resulting in undefined system behaviour.

Some CPU ports, for example the ARM Cortex-M port, have a similar problem, since the interrupt state is not a part of the thread context.

This fatal error is detected in the operating system core function `_Thread_Do_dispatch()`

responsible to carry out a thread dispatch.

An example code to provoke this fatal error is:

```
1 void bad( void )
2 {
3   rtems_interrupt_level level;
4
5   rtems_interrupt_local_disable( level );
6   rtems_task_suspend( RTEMS_SELF );
7   rtems_interrupt_local_enable( level );
8 }
```

#### **INTERNAL\_ERROR\_RTEMS\_INIT\_TASK\_CREATE\_FAILED (32)**

Creation of an RTEMS initialization task failed. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_POSIX\_INIT\_THREAD\_CREATE\_FAILED (33)**

Creation of a POSIX initialization thread failed. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_LIBIO\_USER\_ENV\_KEY\_CREATE\_FAILED (34)**

Creation of the IO library user environment POSIX key failed. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_LIBIO\_SEM\_CREATE\_FAILED (35)**

Creation of the IO library semaphore failed. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_LIBIO\_STDOUT\_FD\_OPEN\_FAILED (36)**

Open of the standard output file descriptor failed or resulted in an unexpected file descriptor number. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_LIBIO\_STDERR\_FD\_OPEN\_FAILED (37)**

Open of the standard error file descriptor failed or resulted in an unexpected file descriptor number. This fatal error may occur during system initialization. It is an application configuration error.

#### **INTERNAL\_ERROR\_ILLEGAL\_USE\_OF\_FLOATING\_POINT\_UNIT (38)**

The floating point unit was used illegally, for example in interrupt context on some architectures.

#### **INTERNAL\_ERROR\_ARC4RANDOM\_GETENTROPY\_FAIL (39)**

A `getentropy()` system call failed in one of the [ARC4RANDOM\(3\)](#) functions. This fatal error can only be fixed with a different implementation of `getentropy()`.

#### **INTERNAL\_ERROR\_NO\_MEMORY\_FOR\_PER\_CPU\_DATA (40)**

This fatal error may happen during workspace initialization. There is not enough memory available to populate the per-CPU data areas, see [<rtems/score/percpudata.h>](#).

## 21.3 Operations

### 21.3.1 Announcing a Fatal Error

The `_Terminate()` internal error handler is invoked when the application or the executive itself determines that a fatal error has occurred or a final system state is reached (for example after `rtems_fatal()` or `exit()`).

The first action of the internal error handler is to call the fatal extension of the user extensions. For the initial extensions the following conditions are required

- a valid stack pointer and enough stack space,
- a valid code memory, and
- valid read-only data.

For the initial extensions the read-write data (including `.bss` segment) is not required on single processor configurations. In SMP configurations, however, the read-write data must be initialized since this function must determine the state of the other processors and request them to shut-down if necessary.

Non-initial extensions require in addition valid read-write data. The board support package (BSP) may install an initial extension that performs a system reset. In this case the non-initial extensions will be not called.

The fatal extensions are called with three parameters:

- the fatal source,
- a legacy parameter which is always false, and
- an error code with a fatal source dependent content.

Once all fatal extensions executed, the error information will be stored to `_Internal_errors_What_happened` and the system state is set to `SYSTEM_STATE_TERMINATED`.

The final step is to call the CPU port specific `_CPU_Fatal_halt()`.

## 21.4 Directives

This section details the fatal error manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 21.4.1 FATAL - Invoke the fatal error handler

**CALLING SEQUENCE:**

```
1 void rtems_fatal(  
2   rtems_fatal_source fatal_source,  
3   rtems_fatal_code   error_code  
4 ) RTEMS_NO_RETURN;
```

**DIRECTIVE STATUS CODES:**

NONE - This function will not return to the caller.

**DESCRIPTION:**

This directive terminates the system.

**NOTE:**

Registered `atexit()` or `on_exit()` handlers are not called. Use `exit()` in case these handlers should be invoked.

## 21.4.2 PANIC - Print a message and invoke the fatal error handler

### CALLING SEQUENCE:

```
1 void rtems_panic(  
2   const char *fmt,  
3   ...  
4 ) RTEMS_NO_RETURN RTEMS_PRINTF_LIKE( 1, 2 );
```

### DIRECTIVE STATUS CODES:

NONE - This function will not return to the caller.

### DESCRIPTION:

This directive prints a message via `printk()` specified by the format and optional parameters and then terminates the system with the `RTEMS_FATAL_SOURCE_PANIC` fatal source. The fatal code is set to the format string address.

### NOTE:

Registered `atexit()` or `on_exit()` handlers are not called. Use `exit()` in case these handlers should be invoked.

### 21.4.3 SHUTDOWN\_EXECUTIVE - Shutdown RTEMS

**CALLING SEQUENCE:**

```
1 void rtems_shutdown_executive(  
2     uint32_t result  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE - This function will not return to the caller.

**DESCRIPTION:**

This directive is called when the application wishes to shutdown RTEMS. The system is terminated with a fatal source of RTEMS\_FATAL\_SOURCE\_EXIT and the specified result code.

**NOTES:**

This directive *must* be the last RTEMS directive invoked by an application and it *does not return* to the caller.

This directive may be called any time.

#### 21.4.4 EXCEPTION\_FRAME\_PRINT - Prints the exception frame

**CALLING SEQUENCE:**

```
1 void rtems_exception_frame_print(  
2     const rtems_exception_frame *frame  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**Prints the exception frame via `printk()`.



### 21.4.5 FATAL\_SOURCE\_TEXT - Returns a text for a fatal source

**CALLING SEQUENCE:**

```
1 const char *rtems_fatal_source_text(  
2     rtems_fatal_source source  
3 );
```

**DIRECTIVE STATUS CODES:**

The fatal source text or “?” in case the passed fatal source is invalid.

**DESCRIPTION:**

Returns a text for a fatal source. The text for fatal source is the enumerator constant.

### 21.4.6 INTERNAL\_ERROR\_TEXT - Returns a text for an internal error code

**CALLING SEQUENCE:**

```
1 const char *rtems_internal_error_text(  
2     rtems_fatal_code error  
3 );
```

**DIRECTIVE STATUS CODES:**

The error code text or “?” in case the passed error code is invalid.

**DESCRIPTION:**

Returns a text for an internal error code. The text for each internal error code is the enumerator constant.

### 21.4.7 FATAL\_ERROR\_OCCURRED - Invoke the fatal error handler (deprecated)

#### CALLING SEQUENCE:

```
1 void rtems_fatal_error_occurred(  
2     uint32_t the_error  
3 ) RTEMS_NO_RETURN;
```

#### DIRECTIVE STATUS CODES:

NONE - This function will not return to the caller.

#### DESCRIPTION:

This directive processes fatal errors. If the FATAL error extension is defined in the configuration table, then the user-defined error extension is called. If configured and the provided FATAL error extension returns, then the RTEMS default error handler is invoked. This directive can be invoked by RTEMS or by the user's application code including initialization tasks, other tasks, and ISRs.

#### NOTES:

This directive is deprecated and should not be used in new code.

This directive supports local operations only.

Unless the user-defined error extension takes special actions such as restarting the calling task, this directive WILL NOT RETURN to the caller.

The user-defined extension for this directive may wish to initiate a global shutdown.



# BOARD SUPPORT PACKAGES

## 22.1 Introduction

A board support package (BSP) is a collection of user-provided facilities which interface RTEMS and an application with a specific hardware platform. These facilities may include hardware initialization, device drivers, user extensions, and a Multiprocessor Communications Interface (MPCI). However, a minimal BSP need only support processor reset and initialization and, if needed, a clock tick.

## 22.2 Reset and Initialization

An RTEMS based application is initiated or re-initiated when the processor is reset. This initialization code is responsible for preparing the target platform for the RTEMS application. Although the exact actions performed by the initialization code are highly processor and target dependent, the logical functionality of these actions are similar across a variety of processors and target platforms.

Normally, the BSP and some of the application initialization is intertwined in the RTEMS initialization sequence controlled by the shared function `boot_card()`.

The reset application initialization code is executed first when the processor is reset. All of the hardware must be initialized to a quiescent state by this software before initializing RTEMS. When in quiescent state, devices do not generate any interrupts or require any servicing by the application. Some of the hardware components may be initialized in this code as well as any application initialization that does not involve calls to RTEMS directives.

The processor's Interrupt Vector Table which will be used by the application may need to be set to the required value by the reset application initialization code. Because interrupts are enabled automatically by RTEMS as part of the context switch to the first task, the Interrupt Vector Table **MUST** be set before this directive is invoked to ensure correct interrupt vectoring. The processor's Interrupt Vector Table must be accessible by RTEMS as it will be modified by the when installing user Interrupt Service Routines (ISRs) On some CPUs, RTEMS installs it's own Interrupt Vector Table as part of initialization and thus these requirements are met automatically. The reset code which is executed before the call to any RTEMS initialization routines has the following requirements:

- Must not make any blocking RTEMS directive calls.
- If the processor supports multiple privilege levels, must leave the processor in the most privileged, or supervisory, state.
- Must allocate a stack of sufficient size to execute the initialization and shutdown of the system. This stack area will **NOT** be used by any task once the system is initialized. This stack is often reserved via the linker script or in the assembly language start up file.
- Must initialize the stack pointer for the initialization process to that allocated.
- Must initialize the processor's Interrupt Vector Table.
- Must disable all maskable interrupts.
- If the processor supports a separate interrupt stack, must allocate the interrupt stack and initialize the interrupt stack pointer.

At the end of the initialization sequence, RTEMS does not return to the BSP initialization code, but instead context switches to the highest priority task to begin application execution. This task is typically a User Initialization Task which is responsible for performing both local and global application initialization which is dependent on RTEMS facilities. It is also responsible for initializing any higher level RTEMS services the application uses such as networking and blocking device drivers.

### 22.2.1 Interrupt Stack Requirements

The worst-case stack usage by interrupt service routines must be taken into account when designing an application. If the processor supports interrupt nesting, the stack usage must include the deepest nest level. The worst-case stack usage must account for the following requirements:

- Processor's interrupt stack frame
- Processor's subroutine call stack frame
- RTEMS system calls
- Registers saved on stack
- Application subroutine calls

The size of the interrupt stack must be greater than or equal to the configured minimum stack size.

### 22.2.2 Processors with a Separate Interrupt Stack

Some processors support a separate stack for interrupts. When an interrupt is vectored and the interrupt is not nested, the processor will automatically switch from the current stack to the interrupt stack. The size of this stack is based solely on the worst-case stack usage by interrupt service routines.

The dedicated interrupt stack for the entire application on some architectures is supplied and initialized by the reset and initialization code of the user's Board Support Package. Whether allocated and initialized by the BSP or RTEMS, since all ISRs use this stack, the stack size must take into account the worst case stack usage by any combination of nested ISRs.

### 22.2.3 Processors Without a Separate Interrupt Stack

Some processors do not support a separate stack for interrupts. In this case, without special assistance every task's stack must include enough space to handle the task's worst-case stack usage as well as the worst-case interrupt stack usage. This is necessary because the worst-case interrupt nesting could occur while any task is executing.

On many processors without dedicated hardware managed interrupt stacks, RTEMS manages a dedicated interrupt stack in software. If this capability is supported on a CPU, then it is logically equivalent to the processor supporting a separate interrupt stack in hardware.



## 22.3 Device Drivers

Device drivers consist of control software for special peripheral devices and provide a logical interface for the application developer. The RTEMS I/O manager provides directives which allow applications to access these device drivers in a consistent fashion. A Board Support Package may include device drivers to access the hardware on the target platform. These devices typically include serial and parallel ports, counter/timer peripherals, real-time clocks, disk interfaces, and network controllers.

For more information on device drivers, refer to the I/O Manager chapter.

### 22.3.1 Clock Tick Device Driver

Most RTEMS applications will include a clock tick device driver which invokes a clock tick directive at regular intervals. The clock tick is necessary if the application is to utilize timeslicing, the clock manager, the timer manager, the rate monotonic manager, or the timeout option on blocking directives.

The clock tick is usually provided as an interrupt from a counter/timer or a real-time clock device. When a counter/timer is used to provide the clock tick, the device is typically programmed to operate in continuous mode. This mode selection causes the device to automatically reload the initial count and continue the countdown without programmer intervention. This reduces the overhead required to manipulate the counter/timer in the clock tick ISR and increases the accuracy of tick occurrences. The initial count can be based on the `microseconds_per_tick` field in the RTEMS Configuration Table. An alternate approach is to set the initial count for a fixed time period (such as one millisecond) and have the ISR invoke a clock tick directive on the configured `microseconds_per_tick` boundaries. Obviously, this can induce some error if the configured `microseconds_per_tick` is not evenly divisible by the chosen clock interrupt quantum.

It is important to note that the interval between clock ticks directly impacts the granularity of RTEMS timing operations. In addition, the frequency of clock ticks is an important factor in the overall level of system overhead. A high clock tick frequency results in less processor time being available for task execution due to the increased number of clock tick ISRs.

## 22.4 User Extensions

RTEMS allows the application developer to augment selected features by invoking user-supplied extension routines when the following system events occur:

- Task creation
- Task initiation
- Task reinitiation
- Task deletion
- Task context switch
- Post task context switch
- Task begin
- Task exits
- Fatal error detection

User extensions can be used to implement a wide variety of functions including execution profiling, non-standard coprocessor support, debug support, and error detection and recovery. For example, the context of a non-standard numeric coprocessor may be maintained via the user extensions. In this example, the task creation and deletion extensions are responsible for allocating and deallocating the context area, the task initiation and reinitiation extensions would be responsible for priming the context area, and the task context switch extension would save and restore the context of the device.

For more information on user extensions, refer to *User Extensions Manager* (page 357).

## 22.5 Multiprocessor Communications Interface (MPCI)

RTEMS requires that an MPCI layer be provided when a multiple node application is developed. This MPCI layer must provide an efficient and reliable communications mechanism between the multiple nodes. Tasks on different nodes communicate and synchronize with one another via the MPCI. Each MPCI layer must be tailored to support the architecture of the target platform.

For more information on the MPCI, refer to the Multiprocessing Manager chapter.

### 22.5.1 Tightly-Coupled Systems

A tightly-coupled system is a multiprocessor configuration in which the processors communicate solely via shared global memory. The MPCI can simply place the RTEMS packets in the shared memory space. The two primary considerations when designing an MPCI for a tightly-coupled system are data consistency and informing another node of a packet.

The data consistency problem may be solved using atomic “test and set” operations to provide a “lock” in the shared memory. It is important to minimize the length of time any particular processor locks a shared data structure.

The problem of informing another node of a packet can be addressed using one of two techniques. The first technique is to use an interprocessor interrupt capability to cause an interrupt on the receiving node. This technique requires that special support hardware be provided by either the processor itself or the target platform. The second technique is to have a node poll for arrival of packets. The drawback to this technique is the overhead associated with polling.

### 22.5.2 Loosely-Coupled Systems

A loosely-coupled system is a multiprocessor configuration in which the processors communicate via some type of communications link which is not shared global memory. The MPCI sends the RTEMS packets across the communications link to the destination node. The characteristics of the communications link vary widely and have a significant impact on the MPCI layer. For example, the bandwidth of the communications link has an obvious impact on the maximum MPCI throughput.

The characteristics of a shared network, such as Ethernet, lend themselves to supporting an MPCI layer. These networks provide both the point-to-point and broadcast capabilities which are expected by RTEMS.

### 22.5.3 Systems with Mixed Coupling

A mixed-coupling system is a multiprocessor configuration in which the processors communicate via both shared memory and communications links. A unique characteristic of mixed-coupling systems is that a node may not have access to all communication methods. There may be multiple shared memory areas and communication links. Therefore, one of the primary functions of the MPCI layer is to efficiently route RTEMS packets between nodes. This routing may be based on numerous algorithms. In addition, the router may provide alternate communications paths in the event of an overload or a partial failure.

#### 22.5.4 Heterogeneous Systems

Designing an MPCI layer for a heterogeneous system requires special considerations by the developer. RTEMS is designed to eliminate many of the problems associated with sharing data in a heterogeneous environment. The MPCI layer need only address the representation of thirty-two (32) bit unsigned quantities.

For more information on supporting a heterogeneous system, refer the Supporting Heterogeneous Environments in the Multiprocessing Manager chapter.

# USER EXTENSIONS MANAGER

## 23.1 Introduction

The user extensions manager allows the application developer to augment the executive by allowing them to supply extension routines which are invoked at critical system events. The directives provided by the user extensions manager are:

- *rtems\_extension\_create* (page 366) - Create an extension set
- *rtems\_extension\_ident* (page 367) - Get ID of an extension set
- *rtems\_extension\_delete* (page 368) - Delete an extension set

## 23.2 Background

User extensions (call-back functions) are invoked by the system when the following events occur

- thread creation,
- thread start,
- thread restart,
- thread switch,
- thread begin,
- thread exited (return from thread entry function),
- thread termination,
- thread deletion, and
- fatal error detection (system termination).

The user extensions have event-specific arguments, invocation orders and execution contexts. Extension sets can be installed at run-time via `rtems_extension_create()` (page 366) (dynamic extension sets) or at link-time via the application configuration option `CONFIGURE_INITIAL_EXTENSIONS` (page 380) (initial extension sets).

The execution context of user extensions varies. Some user extensions are invoked with ownership of the allocator mutex. The allocator mutex protects dynamic memory allocations and object creation/deletion. Some user extensions are invoked with thread dispatching disabled. The fatal error extension is invoked in an arbitrary context.

### 23.2.1 Extension Sets

User extensions are maintained as a set. All user extensions are optional and may be `NULL`. Together a set of these user extensions typically performs a specific functionality such as performance monitoring or debugger support. The extension set is defined via the following structure.

```
1 typedef struct {
2   rtems_task_create_extension   thread_create;
3   rtems_task_start_extension   thread_start;
4   rtems_task_restart_extension thread_restart;
5   rtems_task_delete_extension  thread_delete;
6   rtems_task_switch_extension  thread_switch;
7   rtems_task_begin_extension   thread_begin;
8   rtems_task_exitted_extension thread_exitted;
9   rtems_fatal_extension        fatal;
10  rtems_task_terminate_extension thread_terminate;
11 } rtems_extensions_table;
```

### 23.2.2 TCB Extension Area

There is no system-provided storage for the initial extension sets.

The task control block (TCB) contains a pointer for each dynamic extension set. The pointer is initialized to *NULL* during thread initialization before the thread create extension is invoked. The pointer may be used by the dynamic extension set to maintain thread-specific data.

The TCB extension is an array of pointers in the TCB. The index into the table can be obtained from the extension identifier returned when the extension object is created:

```
1 index = rtems_object_id_get_index( extension_id );
```

The number of pointers in the area is the same as the number of dynamic user extension sets configured. This allows an application to augment the TCB with user-defined information. For example, an application could implement task profiling by storing timing statistics in the TCB's extended memory area. When a task context switch is being executed, the thread switch extension could read a real-time clock to calculate how long the task being swapped out has run as well as timestamp the starting time for the task being swapped in.

If used, the extended memory area for the TCB should be allocated and the TCB extension pointer should be set at the time the task is created or started by either the thread create or thread start extension. The application is responsible for managing this extended memory area for the TCBs. The memory may be reinitialized by the thread restart extension and should be deallocated by the thread delete extension when the task is deleted. Since the TCB extension buffers would most likely be of a fixed size, the RTEMS partition manager could be used to manage the application's extended memory area. The application could create a partition of fixed size TCB extension buffers and use the partition manager's allocation and deallocation directives to obtain and release the extension buffers.

### 23.2.3 Order of Invocation

The user extensions are invoked in either *forward* or *reverse* order. In forward order, the user extensions of initial extension sets are invoked before the user extensions of the dynamic extension sets. The forward order of initial extension sets is defined by the initial extension sets table index. The forward order of dynamic extension sets is defined by the order in which the dynamic extension sets were created. The reverse order is defined accordingly. By invoking the user extensions in this order, extensions can be built upon one another. At the following system events, the user extensions are invoked in *forward* order

- thread creation,
- thread start,
- thread restart,
- thread switch,
- thread begin,
- thread exited (return from thread entry function), and
- fatal error detection.

At the following system events, the user extensions are invoked in *reverse* order:

- thread termination, and



- thread deletion.

At these system events, the user extensions are invoked in reverse order to insure that if an extension set is built upon another, the more complicated user extension is invoked before the user extension it is built upon. An example is use of the thread delete extension by the Standard C Library. Extension sets which are installed after the Standard C Library will operate correctly even if they utilize the C Library because the C Library's thread delete extension is invoked after that of the other thread delete extensions.

#### 23.2.4 Thread Create Extension

The thread create extension is invoked during thread creation, for example via `rtems_task_create()` (page 89) or `pthread_create()`. The thread create extension is defined as follows.

```
1 typedef bool ( *rtems_task_create_extension )(
2   rtems_tcb *executing,
3   rtems_tcb *created
4 );
```

The `executing` is a pointer to the TCB of the currently executing thread. The `created` is a pointer to the TCB of the created thread. The created thread is completely initialized with respect to the operating system.

The executing thread is the owner of the allocator mutex except during creation of the idle threads. Since the allocator mutex allows nesting the normal memory allocation routines can be used.

A thread create extension will frequently attempt to allocate resources. If this allocation fails, then the thread create extension must return `false` and the entire thread create operation will fail, otherwise it must return `true`.

The thread create extension is invoked in forward order with thread dispatching enabled (except during system initialization).

#### 23.2.5 Thread Start Extension

The thread start extension is invoked during a thread start, for example via `rtems_task_start()` (page 93) or `pthread_create()`. The thread start extension is defined as follows.

```
1 typedef void ( *rtems_task_start_extension )(
2   rtems_tcb *executing,
3   rtems_tcb *started
4 );
```

The `executing` is a pointer to the TCB of the currently executing thread. The `started` is a pointer to the TCB of the started thread. It is invoked after the environment of the started thread has been loaded and the started thread has been made ready. So, in SMP configurations, the thread may already run on another processor before the thread start extension is actually invoked. Thread switch and thread begin extensions may run before or in parallel with the thread start extension in SMP configurations.

The thread start extension is invoked in forward order with thread dispatching disabled.

### 23.2.6 Thread Restart Extension

The thread restart extension is invoked during a thread restart, for example via `rtems_task_restart()` (page 93). The thread restart extension is defined as follows.

```
1 typedef void ( *rtems_task_restart_extension )(
2     rtems_tcb *executing,
3     rtems_tcb *restarted
4 );
```

Both `executing` and `restarted` are pointers to the TCB of the currently executing thread. It is invoked in the context of the executing thread right before the execution context is reloaded. The thread stack reflects the previous execution context.

The thread restart extension is invoked in forward order with thread dispatching enabled (except during system initialization). The thread life is protected. Thread restart and delete requests issued by thread restart extensions lead to recursion. The POSIX cleanup handlers, POSIX key destructors and thread-local object destructors run in this context.

### 23.2.7 Thread Switch Extension

The thread switch extension is defined as follows.

```
1 typedef void ( *rtems_task_switch_extension )(
2     rtems_tcb *executing,
3     rtems_tcb *heir
4 );
```

The invocation conditions of the thread switch extension depend on whether RTEMS was configured for uniprocessor or SMP systems. A user must pay attention to the differences to correctly implement a thread switch extension.

In uniprocessor configurations, the thread switch extension is invoked before the context switch from the currently executing thread to the heir thread. The `executing` is a pointer to the TCB of the currently executing thread. The `heir` is a pointer to the TCB of the heir thread. The context switch initiated through the multitasking start is not covered by the thread switch extension.

In SMP configurations, the thread switch extension is invoked after the context switch to the new executing thread (previous heir thread). The `executing` is a pointer to the TCB of the previously executing thread. Despite the name, this is not the currently executing thread. The `heir` is a pointer to the TCB of the newly executing thread. This is the currently executing thread. The context switches initiated through the multitasking start are covered by the thread switch extension. The reason for the differences to uniprocessor configurations is that the context switch may update the heir thread of the processor, see *Thread Dispatch Details* (page 533). The thread switch extensions are invoked with disabled interrupts and with ownership of a per-processor SMP lock. Thread switch extensions may run in parallel on multiple processors. It is recommended to use thread-local or per-processor data structures for thread switch extensions. A global SMP lock should be avoided for performance reasons.

The thread switch extension is invoked in forward order with thread dispatching disabled.

### 23.2.8 Thread Begin Extension

The thread begin extension is invoked during a thread begin before the thread entry function is called. The thread begin extension is defined as follows.

```
1 typedef void ( *rtems_task_begin_extension )(
2     rtems_tcb *executing
3 );
```

The `executing` is a pointer to the TCB of the currently executing thread. The thread begin extension executes in a normal thread context and may allocate resources for the executing thread. In particular, it has access to thread-local storage of the executing thread.

The thread begin extension is invoked in forward order with thread dispatching enabled. The thread switch extension may be called multiple times for this thread before or during the thread begin extension is invoked.

### 23.2.9 Thread Exitted Extension

The thread exitted extension is invoked once the thread entry function returns. The thread exitted extension is defined as follows.

```
1 typedef void ( *rtems_task_exitted_extension )(
2     rtems_tcb *executing
3 );
```

The `executing` is a pointer to the TCB of the currently executing thread.

This extension is invoked in forward order with thread dispatching enabled.

### 23.2.10 Thread Termination Extension

The thread termination extension is invoked in case a termination request is recognized by the currently executing thread. Termination requests may result due to calls of `rtems_task_delete()` (page 95), `pthread_exit()`, or `pthread_cancel()`. The thread termination extension is defined as follows.

```
1 typedef void ( *rtems_task_terminate_extension )(
2     rtems_tcb *executing
3 );
```

The `executing` is a pointer to the TCB of the currently executing thread.

It is invoked in the context of the terminated thread right before the thread dispatch to the heir thread. The POSIX cleanup handlers, POSIX key destructors and thread-local object destructors run in this context. Depending on the order, the thread termination extension has access to thread-local storage and thread-specific data of POSIX keys.

The thread terminate extension is invoked in reverse order with thread dispatching enabled. The thread life is protected. Thread restart and delete requests issued by thread terminate extensions lead to recursion.

### 23.2.11 Thread Delete Extension

The thread delete extension is invoked in case a zombie thread is killed. A thread becomes a zombie thread after it terminated. The thread delete extension is defined as follows.

```
1 typedef void ( *rtcms_task_delete_extension )(
2   rtcms_tcb *executing,
3   rtcms_tcb *deleted
4 );
```

The `executing` is a pointer to the TCB of the currently executing thread. The `deleted` is a pointer to the TCB of the deleted thread. The `executing` and `deleted` pointers are never equal.

The `executing` thread is the owner of the allocator mutex. Since the allocator mutex allows nesting the normal memory allocation routines can be used.

The thread delete extension is invoked in reverse order with thread dispatching enabled.

Please note that a thread delete extension is not immediately invoked with a call to `rtcms_task_delete()` (page 95) or similar. The thread must first terminate and this may take some time. The thread delete extension is invoked by `rtcms_task_create()` (page 89) or similar as a result of a lazy garbage collection of zombie threads.

### 23.2.12 Fatal Error Extension

The fatal error extension is invoked during *system termination* (page 339). The fatal error extension is defined as follows.

```
1 typedef void( *rtcms_fatal_extension )(
2   rtcms_fatal_source source,
3   bool          always_set_to_false,
4   rtcms_fatal_code code
5 );
```

The `source` parameter is the fatal source indicating the subsystem the fatal condition originated in. The `always_set_to_false` parameter is always set to false and provided only for backward compatibility reasons. The `code` parameter is the fatal error code. This value must be interpreted with respect to the source.

The fatal error extension is invoked in forward order.

It is strongly advised to use initial extension sets to install a fatal error extension. Usually, the initial extension set of board support package provides a fatal error extension which resets the board. In this case, the dynamic fatal error extensions are not invoked.

## 23.3 Directives

This section details the user extension manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

## 23.3.1 EXTENSION\_CREATE - Create a extension set

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_extension_create(
2   rtems_name      name,
3   const rtems_extensions_table *table,
4   rtems_id        *id
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	extension set created successfully
RTEMS_INVALID_ADDRESS	table or id are NULL
RTEMS_INVALID_NAME	invalid extension set name
RTEMS_TOO_MANY	too many extension sets created

**DESCRIPTION:**

This directive creates an extension set object and initializes it using the specified extension set table. The assigned extension set identifier is returned in *id*. This identifier is used to access the extension set with other user extension manager directives. For control and maintenance of the extension set, RTEMS allocates an Extension Set Control Block (ESCB) from the local ESCB free pool and initializes it. The user-specified name is assigned to the ESCB and may be used to identify the extension set via *rtems\_extension\_ident()* (page 367). The extension set specified by *table* is copied to the ESCB.

**NOTES:**

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

### 23.3.2 EXTENSION\_IDENT - Get ID of a extension set

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_extension_ident(  
2   rtems_name name,  
3   rtems_id *id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	extension set identified successfully
RTEMS_INVALID_NAME	extension set name not found

#### DESCRIPTION:

This directive obtains the extension set identifier associated with the extension set name to be acquired and returns it in `id`. If the extension set name is not unique, then the extension set identifier will match one of the extension sets with that name. However, this extension set identifier is not guaranteed to correspond to the desired extension set. The extension set identifier is used to access this extension set in other extension set related directives.

#### NOTES:

This directive will not cause the running task to be preempted.

### 23.3.3 EXTENSION\_DELETE - Delete a extension set

#### CALLING SEQUENCE:

```
1 rtems_status_code rtems_extension_delete(  
2   rtems_id id  
3 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_SUCCESSFUL	extension set deleted successfully
RTEMS_INVALID_ID	invalid extension set id

#### DESCRIPTION:

This directive deletes the extension set specified by id. If the extension set is running, it is automatically canceled. The ESCB for the deleted extension set is reclaimed by RTEMS.

#### NOTES:

This directive may cause the calling task to be preempted due to an obtain and release of the object allocator mutex.

A extension set can be deleted by a task other than the task which created the extension set.



# CONFIGURING A SYSTEM

## 24.1 Introduction

RTEMS must be configured for an application. This configuration encompasses a variety of information including the length of each clock tick, the maximum number of each information RTEMS object that can be created, the application initialization tasks, the task scheduling algorithm to be used, and the device drivers in the application.

Although this information is contained in data structures that are used by RTEMS at system initialization time, the data structures themselves must not be generated by hand. RTEMS provides a set of macros system which provides a simple standard mechanism to automate the generation of these structures.

The RTEMS header file `<rtems/confdefs.h>` is at the core of the automatic generation of system configuration. It is based on the idea of setting macros which define configuration parameters of interest to the application and defaulting or calculating all others. This variety of macros can automatically produce all of the configuration data required for an RTEMS application.

As a general rule, application developers only specify values for the configuration parameters of interest to them. They define what resources or features they require. In most cases, when a parameter is not specified, it defaults to zero (0) instances, a standards compliant value, or disabled as appropriate. For example, by default there will be 256 task priority levels but this can be lowered by the application. This number of priority levels is required to be compliant with the RTEID/ORKID standards upon which the Classic API is based. There are similar cases where the default is selected to be compliant with the POSIX standard.

For each configuration parameter in the configuration tables, the macro corresponding to that field is discussed. The RTEMS Maintainers expect that all systems can be easily configured using the `<rtems/confdefs.h>` mechanism and that using this mechanism will avoid internal RTEMS configuration changes impacting applications.

## 24.2 Default Value Selection Philosophy

The user should be aware that the defaults are intentionally set as low as possible. By default, no application resources are configured. The `<rtems/confdefs.h>` file ensures that at least one application task or thread is configured and that at least one of the initialization task/thread tables is configured.

## 24.3 Sizing the RTEMS Workspace

The RTEMS Workspace is a user-specified block of memory reserved for use by RTEMS. The application should NOT modify this memory. This area consists primarily of the RTEMS data structures whose exact size depends upon the values specified in the Configuration Table. In addition, task stacks and floating point context areas are dynamically allocated from the RTEMS Workspace.

The `<rtems/confdefs.h>` mechanism calculates the size of the RTEMS Workspace automatically. It assumes that all tasks are floating point and that all will be allocated the minimum stack space. This calculation includes the amount of memory that will be allocated for internal use by RTEMS. The automatic calculation may underestimate the workspace size truly needed by the application, in which case one can use the `CONFIGURE_MEMORY_OVERHEAD` macro to add a value to the estimate. See [Specify Memory Overhead](#) for more details.

The memory area for the RTEMS Workspace is determined by the BSP. In case the RTEMS Workspace is too large for the available memory, then a fatal run-time error occurs and the system terminates.

The file `<rtems/confdefs.h>` will calculate the value of the `work_space_size` parameter of the Configuration Table. There are many parameters the application developer can specify to help `<rtems/confdefs.h>` in its calculations. Correctly specifying the application requirements via parameters such as `CONFIGURE_EXTRA_TASK_STACKS` and `CONFIGURE_MAXIMUM_TASKS` is critical for production software.

For each class of objects, the allocation can operate in one of two ways. The default way has an ceiling on the maximum number of object instances which can concurrently exist in the system. Memory for all instances of that object class is reserved at system initialization. The second way allocates memory for an initial number of objects and increases the current allocation by a fixed increment when required. Both ways allocate space from inside the RTEMS Workspace.

See [Unlimited Objects](#) (page 376) for more details about the second way, which allows for dynamic allocation of objects and therefore does not provide determinism. This mode is useful mostly for when the number of objects cannot be determined ahead of time or when porting software for which you do not know the object requirements.

The space needed for stacks and for RTEMS objects will vary from one version of RTEMS and from one target processor to another. Therefore it is safest to use `<rtems/confdefs.h>` and specify your application's requirements in terms of the numbers of objects and multiples of `RTEMS_MINIMUM_STACK_SIZE`, as far as is possible. The automatic estimates of space required will in general change when:

- a configuration parameter is changed,
- task or interrupt stack sizes change,
- the floating point attribute of a task changes,
- task floating point attribute is altered,
- RTEMS is upgraded, or
- the target processor is changed.

Failure to provide enough space in the RTEMS Workspace may result in fatal run-time errors terminating the system.

## 24.4 Potential Issues with RTEMS Workspace Size Estimation

The `<rtems/confdefs.h>` file estimates the amount of memory required for the RTEMS Workspace. This estimate is only as accurate as the information given to `<rtems/confdefs.h>` and may be either too high or too low for a variety of reasons. Some of the reasons that `<rtems/confdefs.h>` may reserve too much memory for RTEMS are:

- All tasks/threads are assumed to be floating point.

Conversely, there are many more reasons that the resource estimate could be too low:

- Task/thread stacks greater than minimum size must be accounted for explicitly by developer.
- Memory for messages is not included.
- Device driver requirements are not included.
- Network stack requirements are not included.
- Requirements for add-on libraries are not included.

In general, `<rtems/confdefs.h>` is very accurate when given enough information. However, it is quite easy to use a library and forget to account for its resources.

## 24.5 Configuration Example

In the following example, the configuration information for a system with a single message queue, four (4) tasks, and a timeslice of fifty (50) milliseconds is as follows:

```
1 #include <bsp.h>
2 #define CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER
3 #define CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER
4 #define CONFIGURE_MICROSECONDS_PER_TICK 1000 /* 1 millisecond */
5 #define CONFIGURE_TICKS_PER_TIMESLICE 50 /* 50 milliseconds */
6 #define CONFIGURE_RTEMS_INIT_TASKS_TABLE
7 #define CONFIGURE_MAXIMUM_TASKS 4
8 #define CONFIGURE_MAXIMUM_MESSAGE_QUEUES 1
9 #define CONFIGURE_MESSAGE_BUFFER_MEMORY \
10     CONFIGURE_MESSAGE_BUFFERS_FOR_QUEUE(20, sizeof(struct USER_MESSAGE))
11 #define CONFIGURE_INIT
12 #include <rtems/confdefs.h>
```

In this example, only a few configuration parameters are specified. The impact of these are as follows:

- The example specified `CONFIGURE_RTEMS_INIT_TASKS_TABLE` but did not specify any additional parameters. This results in a configuration of an application which will begin execution of a single initialization task named `Init` which is non-preemptible and at priority one (1).
- By specifying `CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER`, this application is configured to have a clock tick device driver. Without a clock tick device driver, RTEMS has no way to know that time is passing and will be unable to support delays and wall time. Further configuration details about time are provided. Per `CONFIGURE_MICROSECONDS_PER_TICK` and `CONFIGURE_TICKS_PER_TIMESLICE`, the user specified they wanted a clock tick to occur each millisecond, and that the length of a timeslice would be fifty (50) milliseconds.
- By specifying `CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER`, the application will include a console device driver. Although the console device driver may support a combination of multiple serial ports and display and keyboard combinations, it is only required to provide a single device named `/dev/console`. This device will be used for Standard Input, Output and Error I/O Streams. Thus when `CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER` is specified, implicitly three (3) file descriptors are reserved for the Standard I/O Streams and those file descriptors are associated with `/dev/console` during initialization. All console devices are expected to support the `POSIX*termios*` interface.
- The example above specifies via `CONFIGURE_MAXIMUM_TASKS` that the application requires a maximum of four (4) simultaneously existing Classic API tasks. Similarly, by specifying `CONFIGURE_MAXIMUM_MESSAGE_QUEUES`, there may be a maximum of only one (1) concurrently existent Classic API message queues.
- The most surprising configuration parameter in this example is the use of `CONFIGURE_MESSAGE_BUFFER_MEMORY`. Message buffer memory is allocated from the RTEMS Workspace and must be accounted for. In this example, the single message queue will have up to twenty (20) messages of type `struct USER_MESSAGE`.
- The `CONFIGURE_INIT` constant must be defined in order to make `<rtems/confdefs.h>` instantiate the configuration data structures. This can only be defined in one source file

per application that includes `<rtems/confdefs.h>` or the symbol table will be instantiated multiple times and linking errors produced.

This example illustrates that parameters have default values. Among other things, the application implicitly used the following defaults:

- All unspecified types of communications and synchronization objects in the Classic and POSIX Threads API have maximums of zero (0).
- The filesystem will be the default filesystem which is the In-Memory File System (IMFS).
- The application will have the default number of priority levels.
- The minimum task stack size will be that recommended by RTEMS for the target architecture.

## 24.6 Unlimited Objects

In real-time embedded systems the RAM is normally a limited, critical resource and dynamic allocation is avoided as much as possible to ensure predictable, deterministic execution times. For such cases, see *Sizing the RTEMS Workspace* (page 372) for an overview of how to tune the size of the workspace. Frequently when users are porting software to RTEMS the precise resource requirements of the software is unknown. In these situations users do not need to control the size of the workspace very tightly because they just want to get the new software to run; later they can tune the workspace size as needed.

The following object classes in the Classic API can be configured in unlimited mode:

- Barriers
- Message Queues
- Partitions
- Periods
- Ports
- Regions
- Semaphores
- Tasks
- Timers

Additionally, the following object classes from the POSIX API can be configured in unlimited mode:

- Keys – `pthread_key_create()`
- Key Value Pairs – `pthread_setspecific()`
- Message Queues – `mq_open()`
- Named Semaphores – `sem_open()`
- Shared Memory – `shm_open()`
- Threads – `pthread_create()`
- Timers – `timer_create()`

**Warning:** The following object classes can *not* be configured in unlimited mode:

- Drivers
- File Descriptors
- POSIX Queued Signals
- User Extensions

Due to the memory requirements of unlimited objects it is strongly recommended to use them only in combination with the unified work areas. See *Separate or Unified Work Areas* for more information on unified work areas.



The following example demonstrates how the two simple configuration defines for unlimited objects and unified works areas can replace many separate configuration defines for supported object classes:

```
1 #define CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER
2 #define CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER
3 #define CONFIGURE_UNIFIED_WORK_AREAS
4 #define CONFIGURE_UNLIMITED_OBJECTS
5 #define CONFIGURE_RTEMS_INIT_TASKS_TABLE
6 #define CONFIGURE_INIT
7 #include <rtems/confdefs.h>
```

Users are cautioned that using unlimited objects is not recommended for production software unless the dynamic growth is absolutely required. It is generally considered a safer embedded systems programming practice to know the system limits rather than experience an out of memory error at an arbitrary and largely unpredictable time in the field.

### 24.6.1 Unlimited Objects by Class

When the number of objects is not known ahead of time, RTEMS provides an auto-extending mode that can be enabled individually for each object type by using the macro `rtems_resource_unlimited`. This takes a value as a parameter, and is used to set the object maximum number field in an API Configuration table. The value is an allocation unit size. When RTEMS is required to grow the object table it is grown by this size. The kernel will return the object memory back to the RTEMS Workspace when an object is destroyed. The kernel will only return an allocated block of objects to the RTEMS Workspace if at least half the allocation size of free objects remain allocated. RTEMS always keeps one allocation block of objects allocated. Here is an example of using `rtems_resource_unlimited`:

```
1 #define CONFIGURE_MAXIMUM_TASKS rtems_resource_unlimited(5)
```

Object maximum specifications can be evaluated with the `rtems_resource_is_unlimited` and `rtems_resource_maximum_per_allocation` macros.

### 24.6.2 Unlimited Objects by Default

To ease the burden of developers who are porting new software RTEMS also provides the capability to make all object classes listed above operate in unlimited mode in a simple manner. The application developer is only responsible for enabling unlimited objects (`CONFIGURE_UNLIMITED_OBJECTS` (page 388)) and specifying the allocation size (`CONFIGURE_UNLIMITED_ALLOCATION_SIZE` (page 387)).

```
1 #define CONFIGURE_UNLIMITED_OBJECTS
2 #define CONFIGURE_UNLIMITED_ALLOCATION_SIZE 5
```

## 24.7 General System Configuration

This section describes general system configuration options.

### 24.7.1 CONFIGURE\_DIRTY\_MEMORY

**CONSTANT:**

CONFIGURE\_DIRTY\_MEMORY

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the memory areas used for the RTEMS Workspace and the C Program Heap are dirtied with a 0xCF byte pattern during system initialization.

**NOTES:**

Dirtying memory can add significantly to system initialization time. It may assist in finding code that incorrectly assumes the contents of free memory areas is cleared to zero during system initialization. In case *CONFIGURE\_ZERO\_WORKSPACE\_AUTOMATICALLY* (page 388) is also defined, then the memory is first dirtied and then zeroed.

See also *CONFIGURE\_MALLOC\_DIRTY* (page 381).

### 24.7.2 CONFIGURE\_DISABLE\_NEWLIB\_REENTRANCY

**CONSTANT:**

CONFIGURE\_DISABLE\_NEWLIB\_REENTRANCY

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Newlib reentrancy support per thread is disabled and a global reentrancy structure is used.

**NOTES:**

You can enable this option to reduce the size of the *TCB*. Use this option with care, since it can lead to race conditions and undefined system behaviour. For example, *errno* is no longer a thread-local variable if this option is enabled.

### 24.7.3 CONFIGURE\_EXECUTIVE\_RAM\_SIZE

**CONSTANT:**

CONFIGURE\_EXECUTIVE\_RAM\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

If this configuration option is undefined, then the RTEMS Workspace and task stack space size is calculated by `<rtems/confdefs.h>` based on the values configuration options.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to `UINTPTR_MAX`.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the RTEMS Workspace size in bytes.

**NOTES:**

This is an advanced configuration option. Use it only if you know exactly what you are doing.

### 24.7.4 CONFIGURE\_EXTRA\_TASK\_STACKS

**CONSTANT:**

CONFIGURE\_EXTRA\_TASK\_STACKS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the number of bytes the applications wishes to add to the task stack requirements calculated by `<rtems/confdefs.h>`.

**NOTES:**

This parameter is very important. If the application creates tasks with stacks larger than the minimum, then that memory is **not** accounted for by `<rtems/confdefs.h>`.

### 24.7.5 CONFIGURE\_INITIAL\_EXTENSIONS

**CONSTANT:**

CONFIGURE\_INITIAL\_EXTENSIONS

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is the empty list.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a list of initializers for structures of type `rtems_extensions_table`.

**DESCRIPTION:**

The value of this configuration option is used to initialize the table of initial user extensions.

**NOTES:**

The value of this configuration option is placed before the entries of *BSP\_INITIAL\_EXTENSION* (page 456) and after the entries of all other initial user extensions.

### 24.7.6 CONFIGURE\_INTERRUPT\_STACK\_SIZE

**CONSTANT:**

CONFIGURE\_INTERRUPT\_STACK\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is *BSP\_INTERRUPT\_STACK\_SIZE* (page 456) in case it is defined, otherwise the default value is *CPU\_STACK\_MINIMUM\_SIZE*.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to a BSP-specific and application-specific minimum value.
- It shall be small enough so that the interrupt stack area calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `size_t`.
- It shall be aligned according to *CPU\_INTERRUPT\_STACK\_ALIGNMENT*.

**DESCRIPTION:**

The value of this configuration option defines the size of an interrupt stack in bytes.

**NOTES:**

There is one interrupt stack available for each configured processor (*CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382)). The interrupt stack areas are statically allocated in a special linker section (`.rtemsstack.interrupt`). The placement of this linker section is BSP-specific.

Some BSPs use the interrupt stack as the initialization stack which is used to perform the sequential system initialization before the multithreading is started.

The interrupt stacks are covered by the *stack checker* (page 386). However, using a too small interrupt stack size may still result in undefined behaviour.

In releases before RTEMS 5.1 the default value was *CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE* (page 385) instead of *CPU\_STACK\_MINIMUM\_SIZE*.

### 24.7.7 CONFIGURE\_MALLOC\_DIRTY

**CONSTANT:**

CONFIGURE\_MALLOC\_DIRTY

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then each memory area returned by C Program Heap allocator functions such as *malloc()* is dirtied with a *0xCF* byte pattern before it is handed over to the application.

**NOTES:**

The dirtying performed by this option is carried out for each successful memory allocation from the C Program Heap in contrast to *CONFIGURE\_DIRTY\_MEMORY* (page 378) which dirties the memory only once during the system initialization.

### 24.7.8 CONFIGURE\_MAXIMUM\_FILE\_DESCRIPTOR

**CONSTANT:**

CONFIGURE\_MAXIMUM\_FILE\_DESCRIPTOR

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 3.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to *SIZE\_MAX*.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of file like objects that can be concurrently open.

**NOTES:**

The default value of three file descriptors allows RTEMS to support standard input, output, and error I/O streams on */dev/console*.

### 24.7.9 CONFIGURE\_MAXIMUM\_PROCESSORS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_PROCESSORS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 1.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to CPU\_MAXIMUM\_PROCESSORS.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of processors an application intends to use. The number of actually available processors depends on the hardware and may be less. It is recommended to use the smallest value suitable for the application in order to save memory. Each processor needs an IDLE task stack and interrupt stack for example.

**NOTES:**

If there are more processors available than configured, the rest will be ignored.

This configuration option is only evaluated in SMP configurations (e.g. RTEMS was built with the `--enable-smp` build configuration option). In all other configurations it has no effect.

### 24.7.10 CONFIGURE\_MAXIMUM\_THREAD\_NAME\_SIZE

**CONSTANT:**

CONFIGURE\_MAXIMUM\_THREAD\_NAME\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 16.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to SIZE\_MAX.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the maximum thread name size including the terminating NUL character.

**NOTES:**

The default value was chosen for Linux compatibility, see [PTHREAD\\_SETNAME\\_NP\(3\)](#).

The size of the thread control block is increased by the maximum thread name size.

This configuration option is available since RTEMS 5.1.

### 24.7.11 CONFIGURE\_MEMORY\_OVERHEAD

**CONSTANT:**

CONFIGURE\_MEMORY\_OVERHEAD

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the number of kilobytes the application wishes to add to the RTEMS Workspace size calculated by `<rtems/confdefs.h>`.

**NOTES:**

This configuration option should only be used when it is suspected that a bug in `<rtems/confdefs.h>` has resulted in an underestimation. Typically the memory allocation will be too low when an application does not account for all message queue buffers or task stacks, see *CONFIGURE\_MESSAGE\_BUFFER\_MEMORY* (page 383).

### 24.7.12 CONFIGURE\_MESSAGE\_BUFFER\_MEMORY

**CONSTANT:**

CONFIGURE\_MESSAGE\_BUFFER\_MEMORY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the number of bytes reserved for message queue buffers in the RTEMS Workspace.

**NOTES:**

The configuration options *CONFIGURE\_MAXIMUM\_MESSAGE\_QUEUES* (page 399) and *CONFIGURE\_MAXIMUM\_POSIX\_MESSAGE\_QUEUES* (page 411) define only how many message queues can be created by the application. The memory for the message buffers is configured by this option. For each message queue you have to reserve some memory for the message buffers. The size depends on the maximum number of pending messages and the maximum size of the messages of a message queue. Use the *CONFIGURE\_MESSAGE\_BUFFERS\_FOR\_QUEUE()* macro to specify the message buffer memory for each message queue and sum them up to define the value for *CONFIGURE\_MAXIMUM\_MESSAGE\_QUEUES*.

The interface for the *CONFIGURE\_MESSAGE\_BUFFERS\_FOR\_QUEUE()* help macro is as follows:

```
1 CONFIGURE_MESSAGE_BUFFERS_FOR_QUEUE( max_messages, max_msg_size )
```

Where *max\_messages* is the maximum number of pending messages and *max\_msg\_size* is the maximum size in bytes of the messages of the corresponding message queue. Both parameters shall be compile time constants. Not using this help macro (e.g. just using *max\_messages \* max\_msg\_size*) may result in an underestimate of the RTEMS Workspace size.

The following example illustrates how the *CONFIGURE\_MESSAGE\_BUFFERS\_FOR\_QUEUE()* help macro can be used to assist in calculating the message buffer memory required. In this example, there are two message queues used in this application. The first message queue has a maximum of 24 pending messages with the message structure defined by the type *one\_message\_type*. The other message queue has a maximum of 500 pending messages with the message structure defined by the type *other\_message\_type*.

```
1 #define CONFIGURE_MESSAGE_BUFFER_MEMORY ( \
2     CONFIGURE_MESSAGE_BUFFERS_FOR_QUEUE( \
3         24, \
4         sizeof( one_message_type ) \
5     ) \
6     + CONFIGURE_MESSAGE_BUFFERS_FOR_QUEUE( \
7         500, \
8         sizeof( other_message_type ) \
9     ) \
10 )
```

### 24.7.13 CONFIGURE\_MICROSECONDS\_PER\_TICK

**CONSTANT:**

*CONFIGURE\_MICROSECONDS\_PER\_TICK*

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 10000.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to a Clock Driver specific value.
- It shall be less than or equal to a Clock Driver specific value.
- The resulting clock ticks per second should be an integer.



**DESCRIPTION:**

The value of this configuration option defines the length of time in microseconds between clock ticks (clock tick quantum).

When the clock tick quantum value is too low, the system will spend so much time processing clock ticks that it does not have processing time available to perform application work. In this case, the system will become unresponsive.

The lowest practical time quantum varies widely based upon the speed of the target hardware and the architectural overhead associated with interrupts. In general terms, you do not want to configure it lower than is needed for the application.

The clock tick quantum should be selected such that it all blocking and delay times in the application are evenly divisible by it. Otherwise, rounding errors will be introduced which may negatively impact the application.

**NOTES:**

This configuration option has no impact if the Clock Driver is not configured, see *CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER* (page 390).

There may be Clock Driver specific limits on the resolution or maximum value of a clock tick quantum.

#### 24.7.14 CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE

**CONSTANT:**

CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is CPU\_STACK\_MINIMUM\_SIZE.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It shall be greater than or equal to a BSP-specific and application-specific minimum value.

**DESCRIPTION:**

The value of this configuration option defines the minimum stack size in bytes for every user task or thread in the system.

**NOTES:**

Adjusting this parameter should be done with caution. Examining the actual stack usage using the stack checker usage reporting facility is recommended (see also *CONFIGURE\_STACK\_CHECKER\_ENABLED* (page 386)).

This parameter can be used to lower the minimum from that recommended. This can be used in low memory systems to reduce memory consumption for stacks. However, this shall be done with caution as it could increase the possibility of a blown task stack.

This parameter can be used to increase the minimum from that recommended. This can be used in higher memory systems to reduce the risk of stack overflow without performing analysis on actual consumption.

By default, this configuration parameter defines also the minimum stack size of POSIX threads. This can be changed with the *CONFIGURE\_MINIMUM\_POSIX\_THREAD\_STACK\_SIZE* (page 415) configuration option.

In releases before RTEMS 5.1 the *CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE* was used to define the default value of *CONFIGURE\_INTERRUPT\_STACK\_SIZE* (page 380).

#### 24.7.15 CONFIGURE\_STACK\_CHECKER\_ENABLED

**CONSTANT:**

*CONFIGURE\_STACK\_CHECKER\_ENABLED*

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the stack checker is enabled.

**NOTES:**

The stack checker performs run-time stack bounds checking. This increases the time required to create tasks as well as adding overhead to each context switch.

In 4.9 and older, this configuration option was named *STACK\_CHECKER\_ON*.

#### 24.7.16 CONFIGURE\_TICKS\_PER\_TIMESLICE

**CONSTANT:**

*CONFIGURE\_TICKS\_PER\_TIMESLICE*

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 50.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to *UINT32\_MAX*.

**DESCRIPTION:**

The value of this configuration option defines the length of the timeslice quantum in ticks for each task.

**NOTES:**

This configuration option has no impact if the Clock Driver is not configured, see *CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER* (page 390).

### 24.7.17 CONFIGURE\_UNIFIED\_WORK\_AREAS

**CONSTANT:**

CONFIGURE\_UNIFIED\_WORK\_AREAS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then there will be separate memory pools for the RTEMS Workspace and C Program Heap.

**DESCRIPTION:**

In case this configuration option is defined, then the RTEMS Workspace and the C Program Heap will be one pool of memory.

**NOTES:**

Having separate pools does have some advantages in the event a task blows a stack or writes outside its memory area. However, in low memory systems the overhead of the two pools plus the potential for unused memory in either pool is very undesirable.

In high memory environments, this is desirable when you want to use the *Unlimited Objects* (page 376) option. You will be able to create objects until you run out of all available memory rather than just until you run out of RTEMS Workspace.

### 24.7.18 CONFIGURE\_UNLIMITED\_ALLOCATION\_SIZE

**CONSTANT:**

CONFIGURE\_UNLIMITED\_ALLOCATION\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 8.

**VALUE CONSTRAINTS:**

The value of this configuration option shall meet the constraints of all object classes to which it is applied.

**DESCRIPTION:**

If *CONFIGURE\_UNLIMITED\_OBJECTS* (page 388) is defined, then the value of this configuration option defines the default objects maximum of all object classes supporting *Unlimited Objects* (page 376) to `rtems_resource_unlimited(CONFIGURE_UNLIMITED_ALLOCATION_SIZE)`.

**NOTES:**

By allowing users to declare all resources as being unlimited the user can avoid identifying and limiting the resources used.

The object maximum of each class can be configured also individually using the `rtems_resource_unlimited()` macro.

### 24.7.19 CONFIGURE\_UNLIMITED\_OBJECTS

**CONSTANT:**

CONFIGURE\_UNLIMITED\_OBJECTS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then unlimited objects are used by default.

**NOTES:**

When using unlimited objects, it is common practice to also specify *CONFIGURE\_UNIFIED\_WORK\_AREAS* (page 387) so the system operates with a single pool of memory for both RTEMS Workspace and C Program Heap.

This option does not override an explicit configuration for a particular object class by the user.

See also *CONFIGURE\_UNLIMITED\_ALLOCATION\_SIZE* (page 387).

### 24.7.20 CONFIGURE\_VERBOSE\_SYSTEM\_INITIALIZATION

**CONSTANT:**

CONFIGURE\_VERBOSE\_SYSTEM\_INITIALIZATION

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the system initialization is verbose.

**NOTES:**

You may use this feature to debug system initialization issues. The `printk()` function is used to print the information.

### 24.7.21 CONFIGURE\_ZERO\_WORKSPACE\_AUTOMATICALLY

**CONSTANT:**

CONFIGURE\_ZERO\_WORKSPACE\_AUTOMATICALLY

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the memory areas used for the RTEMS Workspace and the C Program Heap are zeroed with a `0x00` byte pattern during system initialization.

**NOTES:**

Zeroing memory can add significantly to the system initialization time. It is not necessary for RTEMS but is often assumed by support libraries. In case *CONFIGURE\_DIRTY\_MEMORY* (page 378) is also defined, then the memory is first dirtied and then zeroed.

## 24.8 Device Driver Configuration

This section describes configuration options related to the device drivers. Note that network device drivers are not covered by the following options.

### 24.8.1 CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then a Clock Driver may be initialized during system initialization.

**DESCRIPTION:**

In case this configuration option is defined, then **no** Clock Driver is initialized during system initialization.

**NOTES:**

This configuration parameter is intended to prevent the common user error of using the Hello World example as the baseline for an application and leaving out a clock tick source.

The application shall define exactly one of the following configuration options

- *CONFIGURE\_APPLICATION\_NEEDS\_CLOCK\_DRIVER* (page 391),
- *CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER*, or
- *CONFIGURE\_APPLICATION\_NEEDS\_TIMER\_DRIVER* (page 395),

otherwise a compile time error in the configuration file will occur.

### 24.8.2 CONFIGURE\_APPLICATION\_EXTRA\_DRIVERS

**CONSTANT:**

CONFIGURE\_APPLICATION\_EXTRA\_DRIVERS

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is the empty list.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a list of initializers for structures of type *rtems\_driver\_address\_table*.

**DESCRIPTION:**

The value of this configuration option is used to initialize the Device Driver Table.

**NOTES:**

The value of this configuration option is placed after the entries of other device driver configuration options.

See *CONFIGURE\_APPLICATION\_PREREQUISITE\_DRIVERS* (page 397) for an alternative placement of application device driver initializers.

### 24.8.3 CONFIGURE\_APPLICATION\_NEEDS\_ATA\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_ATA\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the ATA Driver is initialized during system initialization.

**NOTES:**

Most BSPs do not include support for an ATA Driver.

If this option is defined and the BSP does not have this device driver, then the user will get a link time error for an undefined symbol.

### 24.8.4 CONFIGURE\_APPLICATION\_NEEDS\_CLOCK\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_CLOCK\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Clock Driver is initialized during system initialization.

**NOTES:**

The Clock Driver is responsible for providing a regular interrupt which invokes a clock tick directive.

The application shall define exactly one of the following configuration options

- *CONFIGURE\_APPLICATION\_NEEDS\_CLOCK\_DRIVER*,
- *CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER* (page 390), or
- *CONFIGURE\_APPLICATION\_NEEDS\_TIMER\_DRIVER* (page 395),

otherwise a compile time error in the configuration file will occur.

### 24.8.5 CONFIGURE\_APPLICATION\_NEEDS\_CONSOLE\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_CONSOLE\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Console Driver is initialized during system initialization.

**NOTES:**

The Console Driver is responsible for providing the `/dev/console` device file. This device is used to initialize the standard input, output, and error file descriptors.

BSPs should be constructed in a manner that allows `printk()` to work properly without the need for the Console Driver to be configured.

The

- `CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER` (page 392),
- `CONFIGURE_APPLICATION_NEEDS_SIMPLE_CONSOLE_DRIVER` (page 394), and
- `CONFIGURE_APPLICATION_NEEDS_SIMPLE_TASK_CONSOLE_DRIVER` (page 394)

configuration options are mutually exclusive.

### 24.8.6 CONFIGURE\_APPLICATION\_NEEDS\_FRAME\_BUFFER\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_FRAME\_BUFFER\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Frame Buffer Driver is initialized during system initialization.

**NOTES:**

Most BSPs do not include support for a Frame Buffer Driver. This is because many boards do not include the required hardware.

If this option is defined and the BSP does not have this device driver, then the user will get a link time error for an undefined symbol.



### 24.8.7 CONFIGURE\_APPLICATION\_NEEDS\_IDE\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_IDE\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the IDE Driver is initialized during system initialization.

**NOTES:**

Most BSPs do not include support for an IDE Driver.

If this option is defined and the BSP does not have this device driver, then the user will get a link time error for an undefined symbol.

### 24.8.8 CONFIGURE\_APPLICATION\_NEEDS\_NULL\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_NULL\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the /dev/null Driver is initialized during system initialization.

**NOTES:**

This device driver is supported by all BSPs.

### 24.8.9 CONFIGURE\_APPLICATION\_NEEDS\_RTC\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_RTC\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Real-Time Clock Driver is initialized during system initialization.

**NOTES:**

Most BSPs do not include support for a real-time clock (RTC). This is because many boards do not include the required hardware.

If this is defined and the BSP does not have this device driver, then the user will get a link time error for an undefined symbol.

### 24.8.10 CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_CONSOLE\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_CONSOLE\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Simple Console Driver is initialized during system initialization.

**NOTES:**

This device driver is responsible for providing the `/dev/console` device file. This device is used to initialize the standard input, output, and error file descriptors.

This device driver reads via `getchark()`.

This device driver writes via `rtems_putc()`.

The Termios framework is not used. There is no support to change device settings, e.g. baud, stop bits, parity, etc.

The

- *CONFIGURE\_APPLICATION\_NEEDS\_CONSOLE\_DRIVER* (page 392),
- *CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_CONSOLE\_DRIVER* (page 394), and
- *CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_TASK\_CONSOLE\_DRIVER* (page 394)

configuration options are mutually exclusive.

### 24.8.11 CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_TASK\_CONSOLE\_DRIVER

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_TASK\_CONSOLE\_DRIVER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Simple Task Console Driver is initialized during system initialization.

**NOTES:**

This device driver is responsible for providing the `/dev/console` device file. This device is used to initialize the standard input, output, and error file descriptors.

This device driver reads via `getchark()`.

This device driver writes into a write buffer. The count of characters written into the write buffer is returned. It might be less than the requested count, in case the write buffer is full. The write is non-blocking and may be called from interrupt context. A dedicated task reads from the write buffer and outputs the characters via `rtems_putc()`. This task runs with the least important priority. The write buffer size is 2047 characters and it is not configurable.

Use `fsync(STDOUT_FILENO)` or `fdatasync(STDOUT_FILENO)` to drain the write buffer.

The Termios framework is not used. There is no support to change device settings, e.g. baud, stop bits, parity, etc.

The

- `CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER` (page 392),
- `CONFIGURE_APPLICATION_NEEDS_SIMPLE_CONSOLE_DRIVER` (page 394), and
- `CONFIGURE_APPLICATION_NEEDS_SIMPLE_TASK_CONSOLE_DRIVER` (page 394)

configuration options are mutually exclusive.

#### 24.8.12 `CONFIGURE_APPLICATION_NEEDS_STUB_DRIVER`

**CONSTANT:**

`CONFIGURE_APPLICATION_NEEDS_STUB_DRIVER`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Stub Driver is initialized during system initialization.

**NOTES:**

This device driver simply provides entry points that return successful and is primarily a test fixture. It is supported by all BSPs.

#### 24.8.13 `CONFIGURE_APPLICATION_NEEDS_TIMER_DRIVER`

**CONSTANT:**

`CONFIGURE_APPLICATION_NEEDS_TIMER_DRIVER`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Benchmark Timer Driver is initialized during system initialization.

**NOTES:**

The Benchmark Timer Driver is intended for the benchmark tests of the RTEMS Testsuite. Applications should not use this driver.

The application shall define exactly one of the following configuration options

- `CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER` (page 391),
- `CONFIGURE_APPLICATION_DOES_NOT_NEED_CLOCK_DRIVER` (page 390), or
- `CONFIGURE_APPLICATION_NEEDS_TIMER_DRIVER`,

otherwise a compile time error will occur.

#### 24.8.14 `CONFIGURE_APPLICATION_NEEDS_WATCHDOG_DRIVER`

**CONSTANT:**

`CONFIGURE_APPLICATION_NEEDS_WATCHDOG_DRIVER`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Watchdog Driver is initialized during system initialization.

**NOTES:**

Most BSPs do not include support for a watchdog device driver. This is because many boards do not include the required hardware.

If this is defined and the BSP does not have this device driver, then the user will get a link time error for an undefined symbol.

#### 24.8.15 `CONFIGURE_APPLICATION_NEEDS_ZERO_DRIVER`

**CONSTANT:**

`CONFIGURE_APPLICATION_NEEDS_ZERO_DRIVER`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the `/dev/zero` Driver is initialized during system initialization.

**NOTES:**

This device driver is supported by all BSPs.

### 24.8.16 CONFIGURE\_APPLICATION\_PREREQUISITE\_DRIVERS

**CONSTANT:**

CONFIGURE\_APPLICATION\_PREREQUISITE\_DRIVERS

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is the empty list.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a list of initializers for structures of type `rtems_driver_address_table`.

**DESCRIPTION:**

The value of this configuration option is used to initialize the Device Driver Table.

**NOTES:**

The value of this configuration option is placed after the entries defined by *CONFIGURE\_BSP\_PREREQUISITE\_DRIVERS* (page 457) and before all other device driver configuration options.

See *CONFIGURE\_APPLICATION\_EXTRA\_DRIVERS* (page 390) for an alternative placement of application device driver initializers.

### 24.8.17 CONFIGURE\_ATA\_DRIVER\_TASK\_PRIORITY

**CONSTANT:**

CONFIGURE\_ATA\_DRIVER\_TASK\_PRIORITY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 140.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid Classic API task priority. The set of valid task priorities is scheduler-specific.

**DESCRIPTION:**

The value of this configuration option defines the ATA task priority.

**NOTES:**

This configuration option is only evaluated if the configuration option *CONFIGURE\_APPLICATION\_NEEDS\_ATA\_DRIVER* (page 391) is defined.

### 24.8.18 CONFIGURE\_MAXIMUM\_DRIVERS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_DRIVERS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

This is computed by default, and is set to the number of device drivers configured using the CONFIGURE\_APPLICATIONS\_NEEDS\_XXX\_DRIVER configuration options.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be less than or equal to SIZE\_MAX.
- It shall be greater than or equal than the number of statically configured device drivers.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the number of device drivers.

**NOTES:**

If the application will dynamically install device drivers, then this configuration parameter shall be larger than the number of statically configured device drivers. Drivers configured using the CONFIGURE\_APPLICATIONS\_NEEDS\_XXX\_DRIVER configuration options are statically installed.

## 24.9 Classic API Configuration

This section describes configuration options related to the Classic API.

### 24.9.1 CONFIGURE\_MAXIMUM\_BARRIERS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_BARRIERS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Barriers that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.2 CONFIGURE\_MAXIMUM\_MESSAGE\_QUEUES

**CONSTANT:**

CONFIGURE\_MAXIMUM\_MESSAGE\_QUEUES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Message Queues that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376). You have to account for the memory used to store the messages of each message queue, see *CONFIGURE\_MESSAGE\_BUFFER\_MEMORY* (page 383).

### 24.9.3 CONFIGURE\_MAXIMUM\_PARTITIONS

**CONSTANT:**

`CONFIGURE_MAXIMUM_PARTITIONS`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Partitions that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.4 CONFIGURE\_MAXIMUM\_PERIODS

**CONSTANT:**

`CONFIGURE_MAXIMUM_PERIODS`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.



**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Periods that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.5 CONFIGURE\_MAXIMUM\_PORTS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_PORTS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Ports that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.6 CONFIGURE\_MAXIMUM\_REGIONS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_REGIONS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Regions that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.7 CONFIGURE\_MAXIMUM\_SEMAPHORES

**CONSTANT:**

CONFIGURE\_MAXIMUM\_SEMAPHORES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Semaphore that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

In SMP configurations, the size of a Semaphore Control Block depends on the scheduler count (see *Configuration Step 3 - Scheduler Table* (page 452)). The semaphores using the *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30) need a ceiling priority per scheduler.

### 24.9.8 CONFIGURE\_MAXIMUM\_TASKS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_TASKS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Tasks that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

The calculations for the required memory in the RTEMS Workspace for tasks assume that each task has a minimum stack size and has floating point support enabled. The configuration parameter `CONFIGURE_EXTRA_TASK_STACKS` is used to specify task stack requirements ABOVE the minimum size required. See *Reserve Task/Thread Stack Memory Above Minimum* for more information about `CONFIGURE_EXTRA_TASK_STACKS`.

The maximum number of POSIX threads is specified by `CONFIGURE_MAXIMUM_POSIX_THREADS` (page 414).

A future enhancement to `<rtems/confdefs.h>` could be to eliminate the assumption that all tasks have floating point enabled. This would require the addition of a new configuration parameter to specify the number of tasks which enable floating point support.

### 24.9.9 CONFIGURE\_MAXIMUM\_TIMERS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_TIMERS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API Timers that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.9.10 CONFIGURE\_MAXIMUM\_USER\_EXTENSIONS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_USER\_EXTENSIONS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of Classic API User Extensions that can be concurrently active.

**NOTES:**

This object class cannot be configured in unlimited allocation mode.

## 24.10 Classic API Initialization Task Configuration

This section describes configuration options related to the Classic API initialization task.

### 24.10.1 CONFIGURE\_INIT\_TASK\_ARGUMENTS

**CONSTANT:**

CONFIGURE\_INIT\_TASK\_ARGUMENTS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid integer of type `rtems_task_argument`.

**DESCRIPTION:**

The value of this configuration option defines task argument of the Classic API initialization task.

**NOTES:**

None.

### 24.10.2 CONFIGURE\_INIT\_TASK\_ATTRIBUTES

**CONSTANT:**

CONFIGURE\_INIT\_TASK\_ATTRIBUTES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is `RTEMS_DEFAULT_ATTRIBUTES`.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid task attribute set.

**DESCRIPTION:**

The value of this configuration option defines the task attributes of the Classic API initialization task.

**NOTES:**

None.

### 24.10.3 CONFIGURE\_INIT\_TASK\_ENTRY\_POINT

**CONSTANT:**

CONFIGURE\_INIT\_TASK\_ENTRY\_POINT

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is Init.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void ( *entry_point )( rtems_task_argument )`.

**DESCRIPTION:**

The value of this configuration option initializes the entry point of the Classic API initialization task.

**NOTES:**

The application shall provide the function referenced by this configuration option.

### 24.10.4 CONFIGURE\_INIT\_TASK\_INITIAL\_MODES

**CONSTANT:**

CONFIGURE\_INIT\_TASK\_INITIAL\_MODES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

In SMP configurations, the default value is `RTEMS_DEFAULT_MODES`, otherwise the default value is `RTEMS_NO_PREEMPT`.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid task mode set.

**DESCRIPTION:**

The value of this configuration option defines the initial execution mode of the Classic API initialization task.

**NOTES:**

None.

### 24.10.5 CONFIGURE\_INIT\_TASK\_NAME

**CONSTANT:**

CONFIGURE\_INIT\_TASK\_NAME

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is `rtems_build_name( 'U', 'I', '1', ' ' )`.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid integer of type `rtems_name`.

**DESCRIPTION:**

The value of this configuration option defines the name of the Classic API initialization task.

**NOTES:**

Use `rtems_build_name()` to define the task name.

### 24.10.6 CONFIGURE\_INIT\_TASK\_PRIORITY

**CONSTANT:**

`CONFIGURE_INIT_TASK_PRIORITY`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 1.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid Classic API task priority. The set of valid task priorities is scheduler-specific.

**DESCRIPTION:**

The value of this configuration option defines the initial priority of the Classic API initialization task.

**NOTES:**

None.

### 24.10.7 CONFIGURE\_INIT\_TASK\_STACK\_SIZE

**CONSTANT:**

`CONFIGURE_INIT_TASK_STACK_SIZE`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385).
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the task stack size of the Classic API initialization task.

**NOTES:**

None.



### 24.10.8 CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE

**CONSTANT:**

CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then exactly one Classic API initialization task is configured.

**NOTES:**

The application shall define exactly one of the following configuration options

- *CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE*,
- *CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE* (page 417), or
- *CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION* (page 441)

otherwise a compile time error in the configuration file will occur.

## 24.11 POSIX API Configuration

This section describes configuration options related to the POSIX API. Most POSIX API objects are available by default since RTEMS 5.1. The queued signals and timers are only available if RTEMS was built with the `--enable-posix` build configuration option.

### 24.11.1 CONFIGURE\_MAXIMUM\_POSIX\_KEYS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_KEYS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Keys that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.11.2 CONFIGURE\_MAXIMUM\_POSIX\_KEY\_VALUE\_PAIRS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_KEY\_VALUE\_PAIRS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is `CONFIGURE_MAXIMUM_POSIX_KEYS` (page 410) \* `CONFIGURE_MAXIMUM_TASKS` (page 403) + `CONFIGURE_MAXIMUM_POSIX_THREADS` (page 414).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.

- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of key value pairs used by POSIX API Keys that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

A key value pair is created by `pthread_setspecific()` if the value is not NULL, otherwise it is deleted.

### 24.11.3 CONFIGURE\_MAXIMUM\_POSIX\_MESSAGE\_QUEUES

**CONSTANT:**

`CONFIGURE_MAXIMUM_POSIX_MESSAGE_QUEUES`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Message Queues that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376). You have to account for the memory used to store the messages of each message queue, see *CONFIGURE\_MESSAGE\_BUFFER\_MEMORY* (page 383).

#### 24.11.4 CONFIGURE\_MAXIMUM\_POSIX\_QUEUED\_SIGNALS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_QUEUED\_SIGNALS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It shall be zero if the POSIX API is not enabled (e.g. RTEMS was built without the `--enable-posix` build configuration option). Otherwise a compile time error in the configuration file will occur.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Queued Signals that can be concurrently active.

**NOTES:**

Unlimited objects are not available for queued signals.

Queued signals are only available if RTEMS was built with the `--enable-posix` build configuration option.

#### 24.11.5 CONFIGURE\_MAXIMUM\_POSIX\_SEMAPHORES

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_SEMAPHORES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Named Semaphores that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

Named semaphores are created with `sem_open()`. Semaphores initialized with `sem_init()` are not affected by this configuration option since the storage space for these semaphores is user-provided.

### 24.11.6 CONFIGURE\_MAXIMUM\_POSIX\_SHMS

**CONSTANT:**

`CONFIGURE_MAXIMUM_POSIX_SHMS`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the RTEMS Workspace size calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Shared Memory objects that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

### 24.11.7 CONFIGURE\_MAXIMUM\_POSIX\_THREADS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_THREADS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Threads that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

This calculations for the required memory in the RTEMS Workspace for threads assume that each thread has a minimum stack size and has floating point support enabled. The configuration option `CONFIGURE_EXTRA_TASK_STACKS` (page 379) is used to specify thread stack requirements **above** the minimum size required. See Reserve Task/Thread Stack Memory Above Minimum for more information about `CONFIGURE_EXTRA_TASK_STACKS`.

The maximum number of Classic API Tasks is specified by `CONFIGURE_MAXIMUM_TASKS` (page 403).

All POSIX threads have floating point enabled.

### 24.11.8 CONFIGURE\_MAXIMUM\_POSIX\_TIMERS

**CONSTANT:**

CONFIGURE\_MAXIMUM\_POSIX\_TIMERS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.

- It shall be less than or equal to 65535.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It may be defined through `rtems_resource_unlimited()` the enable unlimited objects for this object class, if the value passed to `rtems_resource_unlimited()` satisfies all other constraints of this configuration option.
- It shall be zero if the POSIX API is not enabled (e.g. RTEMS was built without the `--enable-posix` build configuration option). Otherwise a compile time error in the configuration file will occur.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of POSIX API Timers that can be concurrently active.

**NOTES:**

This object class can be configured in unlimited allocation mode, see *Unlimited Objects* (page 376).

Timers are only available if RTEMS was built with the `--enable-posix` build configuration option.

### 24.11.9 CONFIGURE\_MINIMUM\_POSIX\_THREAD\_STACK\_SIZE

**CONSTANT:**

`CONFIGURE_MINIMUM_POSIX_THREAD_STACK_SIZE`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is two times the value of `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.
- It shall be greater than or equal to a BSP-specific and application-specific minimum value.

**DESCRIPTION:**

The value of this configuration option defines the minimum stack size in bytes for every POSIX thread in the system.

**NOTES:**

None.

## 24.12 POSIX Initialization Thread Configuration

This section describes configuration options related to the POSIX initialization thread.

### 24.12.1 CONFIGURE\_POSIX\_INIT\_THREAD\_ENTRY\_POINT

**CONSTANT:**

CONFIGURE\_POSIX\_INIT\_THREAD\_ENTRY\_POINT

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is `POSIX_Init`.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void *( *entry_point )( void * )`.

**DESCRIPTION:**

The value of this configuration option initializes the entry point of the POSIX API initialization thread.

**NOTES:**

The application shall provide the function referenced by this configuration option.

### 24.12.2 CONFIGURE\_POSIX\_INIT\_THREAD\_STACK\_SIZE

**CONSTANT:**

CONFIGURE\_POSIX\_INIT\_THREAD\_STACK\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is `CONFIGURE_MINIMUM_POSIX_THREAD_STACK_SIZE` (page 415).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385).
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the thread stack size of the POSIX API initialization thread.

**NOTES:**

None.



### 24.12.3 CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE

**CONSTANT:**

CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then exactly one POSIX initialization thread is configured.

**NOTES:**

The application shall define exactly one of the following configuration options

- *CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE* (page 409),
- *CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE*, or
- *CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION* (page 441)

otherwise a compile time error in the configuration file will occur.

## 24.13 Event Recording Configuration

This section describes configuration options related to the event recording.

### 24.13.1 CONFIGURE\_RECORD\_EXTENSIONS\_ENABLED

**CONSTANT:**

CONFIGURE\_RECORD\_EXTENSIONS\_ENABLED

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case

- this configuration option is defined
- and *CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS* (page 419) is properly defined,

then the event record extensions are enabled.

**NOTES:**

The record extensions capture thread create, start, restart, delete, switch, begin, exited and terminate events.

### 24.13.2 CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64

**CONSTANT:**

CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case

- this configuration option is defined
- and *CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS* (page 419) is properly defined,
- and *CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64\_ZLIB* (page 419) is undefined,

then the event records are dumped in Base64 encoding in a fatal error extension (see *Announcing a Fatal Error* (page 339)).

**NOTES:**

This extension can be used to produce crash dumps.

### 24.13.3 CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64\_ZLIB

**CONSTANT:**

CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64\_ZLIB

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case

- this configuration option is defined
- and *CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS* (page 419) is properly defined,

then the event records are compressed by zlib and dumped in Base64 encoding in a fatal error extension (see *Announcing a Fatal Error* (page 339)).

**NOTES:**

The zlib compression needs about 512KiB of RAM. This extension can be used to produce crash dumps.

### 24.13.4 CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS

**CONSTANT:**

CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 16.
- It shall be less than or equal to *SIZE\_MAX*.
- It shall be a power of two.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the event record item count per processor.

**NOTES:**

The event record buffers are statically allocated for each configured processor (*CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382)). If the value of this configuration option is zero, then nothing is allocated.

## 24.14 Filesystem Configuration

This section describes configuration options related to filesystems. By default, the In-Memory Filesystem (IMFS) is used as the base filesystem (also known as root filesystem). In order to save some memory for your application, you can disable the filesystem support with the `CONFIGURE_APPLICATION_DISABLE_FILESYSTEM` (page 420) configuration option. Alternatively, you can strip down the features of the base filesystem with the `CONFIGURE_USE_MINIIMFS_AS_BASE_FILESYSTEM` (page 430) and `CONFIGURE_USE_DEVFS_AS_BASE_FILESYSTEM` (page 429) configuration options. These three configuration options are mutually exclusive. They are intended for an advanced application configuration.

Features of the IMFS can be disabled and enabled with the following configuration options:

- `CONFIGURE_IMFS_DISABLE_CHMOD` (page 424)
- `CONFIGURE_IMFS_DISABLE_CHOWN` (page 424)
- `CONFIGURE_IMFS_DISABLE_LINK` (page 424)
- `CONFIGURE_IMFS_DISABLE_MKNOD` (page 425)
- `CONFIGURE_IMFS_DISABLE_MKNOD_FILE` (page 425)
- `CONFIGURE_IMFS_DISABLE_MOUNT` (page 426)
- `CONFIGURE_IMFS_DISABLE_READDIR` (page 426)
- `CONFIGURE_IMFS_DISABLE_READLINK` (page 426)
- `CONFIGURE_IMFS_DISABLE_RENAME` (page 427)
- `CONFIGURE_IMFS_DISABLE_RMNOD` (page 427)
- `CONFIGURE_IMFS_DISABLE_SYMLINK` (page 427)
- `CONFIGURE_IMFS_DISABLE_UNMOUNT` (page 428)
- `CONFIGURE_IMFS_DISABLE_UTIME` (page 428)
- `CONFIGURE_IMFS_ENABLE_MKFIFO` (page 428)

### 24.14.1 CONFIGURE\_APPLICATION\_DISABLE\_FILESYSTEM

**CONSTANT:**

`CONFIGURE_APPLICATION_DISABLE_FILESYSTEM`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then a base filesystem and the configured filesystems are initialized during system initialization.

**DESCRIPTION:**

In case this configuration option is defined, then **no** base filesystem is initialized during system initialization and **no** filesystems are configured.

**NOTES:**

Filesystems shall be initialized to support file descriptor based device drivers and basic input/output functions such as `printf()`. Filesystems can be disabled to reduce the memory footprint of an application.

**24.14.2 CONFIGURE\_FILESYSTEM\_ALL****CONSTANT:**

`CONFIGURE_FILESYSTEM_ALL`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the following configuration options will be defined as well

- `CONFIGURE_FILESYSTEM_DOSFS` (page 421),
- `CONFIGURE_FILESYSTEM_FTPFS` (page 422),
- `CONFIGURE_FILESYSTEM_IMFS` (page 422),
- `CONFIGURE_FILESYSTEM_JFFS2` (page 422),
- `CONFIGURE_FILESYSTEM_NFS` (page 423),
- `CONFIGURE_FILESYSTEM_RFS` (page 423), and
- `CONFIGURE_FILESYSTEM_TFTPFS` (page 423).

**NOTES:**

None.

**24.14.3 CONFIGURE\_FILESYSTEM\_DOSFS****CONSTANT:**

`CONFIGURE_FILESYSTEM_DOSFS`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the DOS (FAT) filesystem is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

This filesystem requires a Block Device Cache configuration, see `CONFIGURE_APPLICATION_NEEDS_LIBBLOCK` (page 432).

#### 24.14.4 CONFIGURE\_FILESYSTEM\_FTPFS

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_FTPFS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the FTP filesystem (FTP client) is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

None.

#### 24.14.5 CONFIGURE\_FILESYSTEM\_IMFS

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_IMFS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the In-Memory Filesystem (IMFS) is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

Applications will rarely need this configuration option. This configuration option is intended for test programs. You do not need to define this configuration option for the base filesystem (also known as root filesystem).

#### 24.14.6 CONFIGURE\_FILESYSTEM\_JFFS2

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_JFFS2

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the JFFS2 filesystem is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

None.

### 24.14.7 CONFIGURE\_FILESYSTEM\_NFS

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_NFS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Network Filesystem (NFS) client is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

None.

### 24.14.8 CONFIGURE\_FILESYSTEM\_RFS

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_RFS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the RTEMS Filesystem (RFS) is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

This filesystem requires a Block Device Cache configuration, see *CONFIGURE\_APPLICATION\_NEEDS\_LIBBLOCK* (page 432).

### 24.14.9 CONFIGURE\_FILESYSTEM\_TFTPFS

**CONSTANT:**

CONFIGURE\_FILESYSTEM\_TFTPFS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the TFTP filesystem (TFTP client) is registered, so that instances of this filesystem can be mounted by the application.

**NOTES:**

None.

#### 24.14.10 CONFIGURE\_IMFS\_DISABLE\_CHMOD

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_CHMOD

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports changing the mode of files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support changing the mode of files (no support for `chmod()`).

**NOTES:**

None.

#### 24.14.11 CONFIGURE\_IMFS\_DISABLE\_CHOWN

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_CHOWN

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports changing the ownership of files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support changing the ownership of files (no support for `chown()`).

**NOTES:**

None.

#### 24.14.12 CONFIGURE\_IMFS\_DISABLE\_LINK

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_LINK

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports hard links.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support hard links (no support for `link()`).

**NOTES:**

None.



### 24.14.13 CONFIGURE\_IMFS\_DISABLE\_MKNOD

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_MKNOD

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports making files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support making files (no support for `mknod()`).

**NOTES:**

None.

### 24.14.14 CONFIGURE\_IMFS\_DISABLE\_MKNOD\_DEVICE

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_MKNOD\_DEVICE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports making device files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support making device files.

**NOTES:**

None.

### 24.14.15 CONFIGURE\_IMFS\_DISABLE\_MKNOD\_FILE

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_MKNOD\_FILE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports making regular files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support making regular files.

**NOTES:**

None.

#### 24.14.16 CONFIGURE\_IMFS\_DISABLE\_MOUNT

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_MOUNT

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports mounting other filesystems.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support mounting other filesystems (no support for `mount()`).

**NOTES:**

None.

#### 24.14.17 CONFIGURE\_IMFS\_DISABLE\_READDIR

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_READDIR

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports reading directories.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support reading directories (no support for `readdir()`). It is still possible to open files in a directory.

**NOTES:**

None.

#### 24.14.18 CONFIGURE\_IMFS\_DISABLE\_READLINK

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_READLINK

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports reading symbolic links.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support reading symbolic links (no support for `readlink()`).

**NOTES:**

None.

#### 24.14.19 CONFIGURE\_IMFS\_DISABLE\_RENAME

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_RENAME

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports renaming files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support renaming files (no support for `rename()`).

**NOTES:**

None.

#### 24.14.20 CONFIGURE\_IMFS\_DISABLE\_RMNOD

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_RMNOD

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports removing files.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support removing files (no support for `rmnod()`).

**NOTES:**

None.

#### 24.14.21 CONFIGURE\_IMFS\_DISABLE\_SYMLINK

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_SYMLINK

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports creating symbolic links.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support creating symbolic links (no support for `symlink()`).

**NOTES:**

None.

### 24.14.22 CONFIGURE\_IMFS\_DISABLE\_UNMOUNT

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_UNMOUNT

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports unmounting other filesystems.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support unmounting other filesystems (no support for `umount()`).

**NOTES:**

None.

### 24.14.23 CONFIGURE\_IMFS\_DISABLE\_UTIME

**CONSTANT:**

CONFIGURE\_IMFS\_DISABLE\_UTIME

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS supports changing file times.

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS does not support changing file times (no support for `utime()`).

**NOTES:**

None.

### 24.14.24 CONFIGURE\_IMFS\_ENABLE\_MKFIFO

**CONSTANT:**

CONFIGURE\_IMFS\_ENABLE\_MKFIFO

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the root IMFS does not support making FIFOs (no support for `mkfifo()`).

**DESCRIPTION:**

In case this configuration option is defined, then the root IMFS supports making FIFOs.

**NOTES:**

None.

### 24.14.25 CONFIGURE\_IMFS\_MEMFILE\_BYTES\_PER\_BLOCK

**CONSTANT:**

CONFIGURE\_IMFS\_MEMFILE\_BYTES\_PER\_BLOCK

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 128.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be an element of {16, 32, 64, 128, 256, 512}.

**DESCRIPTION:**

The value of this configuration option defines the block size for in-memory files managed by the IMFS.

**NOTES:**

The configured block size has two impacts. The first is the average amount of unused memory in the last block of each file. For example, when the block size is 512, on average one-half of the last block of each file will remain unused and the memory is wasted. In contrast, when the block size is 16, the average unused memory per file is only 8 bytes. However, it requires more allocations for the same size file and thus more overhead per block for the dynamic memory management.

Second, the block size has an impact on the maximum size file that can be stored in the IMFS. With smaller block size, the maximum file size is correspondingly smaller. The following shows the maximum file size possible based on the configured block size:

- when the block size is 16 bytes, the maximum file size is 1,328 bytes.
- when the block size is 32 bytes, the maximum file size is 18,656 bytes.
- when the block size is 64 bytes, the maximum file size is 279,488 bytes.
- when the block size is 128 bytes, the maximum file size is 4,329,344 bytes.
- when the block size is 256 bytes, the maximum file size is 68,173,568 bytes.
- when the block size is 512 bytes, the maximum file size is 1,082,195,456 bytes.

### 24.14.26 CONFIGURE\_USE\_DEVFS\_AS\_BASE\_FILESYSTEM

**CONSTANT:**

CONFIGURE\_USE\_DEVFS\_AS\_BASE\_FILESYSTEM

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then an IMFS with a reduced feature set will be the base filesystem (also known as root filesystem).

**NOTES:**

In case this configuration option is defined, then the following configuration options will be defined as well

- *CONFIGURE\_IMFS\_DISABLE\_CHMOD* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_CHOWN* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_LINK* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_MKNOD\_FILE* (page 425),
- *CONFIGURE\_IMFS\_DISABLE\_MOUNT* (page 426),
- *CONFIGURE\_IMFS\_DISABLE\_READDIR* (page 426),
- *CONFIGURE\_IMFS\_DISABLE\_READLINK* (page 426),
- *CONFIGURE\_IMFS\_DISABLE\_RENAME* (page 427),
- *CONFIGURE\_IMFS\_DISABLE\_RMNOD* (page 427),
- *CONFIGURE\_IMFS\_DISABLE\_SYMLINK* (page 427),
- *CONFIGURE\_IMFS\_DISABLE\_UTIME* (page 428), and
- *CONFIGURE\_IMFS\_DISABLE\_UNMOUNT* (page 428).

In addition, a simplified path evaluation is enabled. It allows only a look up of absolute paths.

This configuration of the IMFS is basically a device-only filesystem. It is comparable in functionality to the pseudo-filesystem name space provided before RTEMS release 4.5.0.

#### 24.14.27 *CONFIGURE\_USE\_MINIIMFS\_AS\_BASE\_FILESYSTEM*

**CONSTANT:**

*CONFIGURE\_USE\_MINIIMFS\_AS\_BASE\_FILESYSTEM*

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then an IMFS with a reduced feature set will be the base filesystem (also known as root filesystem).

**NOTES:**

In case this configuration option is defined, then the following configuration options will be defined as well

- *CONFIGURE\_IMFS\_DISABLE\_CHMOD* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_CHOWN* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_LINK* (page 424),
- *CONFIGURE\_IMFS\_DISABLE\_READLINK* (page 426),
- *CONFIGURE\_IMFS\_DISABLE\_RENAME* (page 427),
- *CONFIGURE\_IMFS\_DISABLE\_SYMLINK* (page 427),

- *CONFIGURE\_IMFS\_DISABLE\_UTIME* (page 428), and
- *CONFIGURE\_IMFS\_DISABLE\_UNMOUNT* (page 428).

## 24.15 Block Device Cache Configuration

This section describes configuration options related to the Block Device Cache (bdbuf).

### 24.15.1 CONFIGURE\_APPLICATION\_NEEDS\_LIBBLOCK

**CONSTANT:**

CONFIGURE\_APPLICATION\_NEEDS\_LIBBLOCK

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the Block Device Cache is initialized during system initialization.

**NOTES:**

Each option of the Block Device Cache (bdbuf) configuration can be explicitly set by the user with the configuration options below. The Block Device Cache is used for example by the RFS and DOSFS filesystems.

### 24.15.2 CONFIGURE\_BDBUF\_BUFFER\_MAX\_SIZE

**CONSTANT:**

CONFIGURE\_BDBUF\_BUFFER\_MAX\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 4096.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be an integral multiple of *CONFIGURE\_BDBUF\_BUFFER\_MIN\_SIZE* (page 433).

**DESCRIPTION:**

The value of this configuration option defines the maximum size of a buffer in bytes.

**NOTES:**

None.



### 24.15.3 CONFIGURE\_BDBUF\_BUFFER\_MIN\_SIZE

**CONSTANT:**

CONFIGURE\_BDBUF\_BUFFER\_MIN\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 512.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the minimum size of a buffer in bytes.

**NOTES:**

None.

### 24.15.4 CONFIGURE\_BDBUF\_CACHE\_MEMORY\_SIZE

**CONSTANT:**

CONFIGURE\_BDBUF\_CACHE\_MEMORY\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 32768.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to SIZE\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the size of the cache memory in bytes.

**NOTES:**

None.

### 24.15.5 CONFIGURE\_BDBUF\_MAX\_READ\_AHEAD\_BLOCKS

**CONSTANT:**

CONFIGURE\_BDBUF\_MAX\_READ\_AHEAD\_BLOCKS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the maximum blocks per read-ahead request.

**NOTES:**

A value of 0 disables the read-ahead task (default). The read-ahead task will issue speculative read transfers if a sequential access pattern is detected. This can improve the performance on some systems.

### 24.15.6 CONFIGURE\_BDBUF\_MAX\_WRITE\_BLOCKS

**CONSTANT:**

CONFIGURE\_BDBUF\_MAX\_WRITE\_BLOCKS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 16.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the maximum blocks per write request.

**NOTES:**

None.

### 24.15.7 CONFIGURE\_BDBUF\_READ\_AHEAD\_TASK\_PRIORITY

**CONSTANT:**

CONFIGURE\_BDBUF\_READ\_AHEAD\_TASK\_PRIORITY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 15.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid Classic API task priority. The set of valid task priorities is scheduler-specific.

**DESCRIPTION:**

The value of this configuration option defines the read-ahead task priority.

**NOTES:**

None.

### 24.15.8 CONFIGURE\_BDBUF\_TASK\_STACK\_SIZE

**CONSTANT:**

CONFIGURE\_BDBUF\_TASK\_STACK\_SIZE

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is RTEMS\_MINIMUM\_STACK\_SIZE.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to *CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE* (page 385).
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.
- It shall be small enough so that the task stack space calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `uintptr_t`.

**DESCRIPTION:**

The value of this configuration option defines the task stack size of the Block Device Cache tasks in bytes.

**NOTES:**

None.

### 24.15.9 CONFIGURE\_SWAPOUT\_BLOCK\_HOLD

**CONSTANT:**

CONFIGURE\_SWAPOUT\_BLOCK\_HOLD

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 1000.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to `UINT32_MAX`.

**DESCRIPTION:**

The value of this configuration option defines the swapout task maximum block hold time in milliseconds.

**NOTES:**

None.

### 24.15.10 CONFIGURE\_SWAPOUT\_SWAP\_PERIOD

**CONSTANT:**

CONFIGURE\_SWAPOUT\_SWAP\_PERIOD

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 250.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the swapout task swap period in milliseconds.

**NOTES:**

None.

### 24.15.11 CONFIGURE\_SWAPOUT\_TASK\_PRIORITY

**CONSTANT:**

CONFIGURE\_SWAPOUT\_TASK\_PRIORITY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 15.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid Classic API task priority. The set of valid task priorities is scheduler-specific.

**DESCRIPTION:**

The value of this configuration option defines the swapout task priority.

**NOTES:**

None.

### 24.15.12 CONFIGURE\_SWAPOUT\_WORKER\_TASK\_PRIORITY

**CONSTANT:**

CONFIGURE\_SWAPOUT\_WORKER\_TASK\_PRIORITY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 15.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid Classic API task priority. The set of valid task priorities is scheduler-specific.

**DESCRIPTION:**

The value of this configuration option defines the swapout worker task priority.

**NOTES:**

None.

### 24.15.13 CONFIGURE\_SWAPOUT\_WORKER\_TASKS

**CONSTANT:**

CONFIGURE\_SWAPOUT\_WORKER\_TASKS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the swapout worker task count.

**NOTES:**

None.

## 24.16 Task Stack Allocator Configuration

This section describes configuration options related to the task stack allocator. RTEMS allows the application or BSP to define its own allocation and deallocation methods for task stacks. This can be used to place task stacks in special areas of memory or to utilize a Memory Management Unit so that stack overflows are detected in hardware.

### 24.16.1 CONFIGURE\_TASK\_STACK\_ALLOCATOR

**CONSTANT:**

CONFIGURE\_TASK\_STACK\_ALLOCATOR

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is `_Workspace_Allocate`, which indicates that task stacks will be allocated from the RTEMS Workspace.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void *( *allocate )( size_t )`.

**DESCRIPTION:**

The value of this configuration option initializes the stack allocator allocate handler.

**NOTES:**

A correctly configured system shall configure the following to be consistent:

- `CONFIGURE_TASK_STACK_ALLOCATOR_INIT` (page 438)
- `CONFIGURE_TASK_STACK_ALLOCATOR`
- `CONFIGURE_TASK_STACK_DEALLOCATOR` (page 439)

### 24.16.2 CONFIGURE\_TASK\_STACK\_ALLOCATOR\_INIT

**CONSTANT:**

CONFIGURE\_TASK\_STACK\_ALLOCATOR\_INIT

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is `NULL`.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void ( *initialize )( size_t )` or to `NULL`.

**DESCRIPTION:**

The value of this configuration option initializes the stack allocator initialization handler.

**NOTES:**

A correctly configured system shall configure the following to be consistent:

- *CONFIGURE\_TASK\_STACK\_ALLOCATOR\_INIT*
- *CONFIGURE\_TASK\_STACK\_ALLOCATOR* (page 438)
- *CONFIGURE\_TASK\_STACK\_DEALLOCATOR* (page 439)

### 24.16.3 CONFIGURE\_TASK\_STACK\_DEALLOCATOR

**CONSTANT:**

*CONFIGURE\_TASK\_STACK\_DEALLOCATOR*

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is *\_Workspace\_Free*, which indicates that task stacks will be allocated from the RTEMS Workspace.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void ( *deallocate )( void * )`.

**DESCRIPTION:**

The value of this configuration option initializes the stack allocator deallocate handler.

**NOTES:**

A correctly configured system shall configure the following to be consistent:

- *CONFIGURE\_TASK\_STACK\_ALLOCATOR\_INIT* (page 438)
- *CONFIGURE\_TASK\_STACK\_ALLOCATOR* (page 438)
- *CONFIGURE\_TASK\_STACK\_DEALLOCATOR*

### 24.16.4 CONFIGURE\_TASK\_STACK\_FROM\_ALLOCATOR

**CONSTANT:**

*CONFIGURE\_TASK\_STACK\_FROM\_ALLOCATOR*

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is a macro which supports the system heap allocator.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a macro which accepts exactly one parameter and returns an unsigned integer. The parameter will be an allocation size and the macro shall return this size plus the overhead of the allocator to manage an allocation request for this size.

**DESCRIPTION:**

The value of this configuration option is used to calculate the task stack space size.

**NOTES:**

This configuration option may be used if a custom task stack allocator is configured, see *CONFIGURE\_TASK\_STACK\_ALLOCATOR* (page 438).

### 24.16.5 CONFIGURE\_TASK\_STACK\_ALLOCATOR\_AVOIDS\_WORK\_SPACE

**CONSTANT:**

CONFIGURE\_TASK\_STACK\_ALLOCATOR\_AVOIDS\_WORK\_SPACE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the system is informed that the task stack allocator does not use the RTEMS Workspace.

**NOTES:**

This configuration option may be used if a custom task stack allocator is configured, see *CONFIGURE\_TASK\_STACK\_ALLOCATOR* (page 438).



## 24.17 Idle Task Configuration

This section describes configuration options related to the idle tasks.

### 24.17.1 CONFIGURE\_IDLE\_TASK\_BODY

**CONSTANT:**

CONFIGURE\_IDLE\_TASK\_BODY

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

If *BSP\_IDLE\_TASK\_BODY* (page 455) is defined, then this will be the default value, otherwise the default value is *\_CPU\_Thread\_Idle\_body*.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void *( *idle_body )( uintptr_t )`.

**DESCRIPTION:**

The value of this configuration option initializes the IDLE thread body.

**NOTES:**

IDLE threads shall not block. A blocking IDLE thread results in undefined system behaviour because the scheduler assume that at least one ready thread exists.

IDLE threads can be used to initialize the application, see configuration option *CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION* (page 441).

### 24.17.2 CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION

**CONSTANT:**

CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the user is assumed to provide one or more initialization tasks.

**DESCRIPTION:**

This configuration option is defined to indicate that the user has configured **no** user initialization tasks or threads and that the user provided IDLE task will perform application initialization and then transform itself into an IDLE task.

**NOTES:**

If you use this option be careful, the user IDLE task **cannot** block at all during the initialization sequence. Further, once application initialization is complete, it shall make itself preemptible and enter an idle body loop.

The IDLE task shall run at the lowest priority of all tasks in the system.

If this configuration option is defined, then it is mandatory to configure a user IDLE task with the *CONFIGURE\_IDLE\_TASK\_BODY* (page 441) configuration option, otherwise a compile time error in the configuration file will occur.

The application shall define exactly one of the following configuration options

- *CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE* (page 409),
- *CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE* (page 417), or
- *CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION*

otherwise a compile time error in the configuration file will occur.

### 24.17.3 CONFIGURE\_IDLE\_TASK\_STACK\_SIZE

**CONSTANT:**

*CONFIGURE\_IDLE\_TASK\_STACK\_SIZE*

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is *CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE* (page 385).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to a BSP-specific and application-specific minimum value.
- It shall be small enough so that the IDLE task stack area calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `size_t`.

**DESCRIPTION:**

The value of this configuration option defines the task stack size for an IDLE task.

**NOTES:**

In SMP configurations, there is one IDLE task per configured processor, see *CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382).

## 24.18 General Scheduler Configuration

This section describes configuration options related to selecting a scheduling algorithm for an application. A scheduler configuration is optional and only necessary in very specific circumstances. A normal application configuration does not need any of the configuration options described in this section.

By default, the *Deterministic Priority Scheduler* (page 44) algorithm is used in uniprocessor configurations. In case SMP is enabled and the configured maximum processors (*CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382)) is greater than one, then the *Earliest Deadline First (EDF) SMP Scheduler* (page 46) is selected as the default scheduler algorithm.

For the *schedulers built into RTEMS* (page 41), the configuration is straightforward. All that is required is to define the configuration option which specifies which scheduler you want for in your application.

The pluggable scheduler interface also enables the user to provide their own scheduling algorithm. If you choose to do this, you must define multiple configuration option.

### 24.18.1 CONFIGURE\_CBS\_MAXIMUM\_SERVERS

**CONSTANT:**

CONFIGURE\_CBS\_MAXIMUM\_SERVERS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is *CONFIGURE\_MAXIMUM\_TASKS* (page 403).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to *SIZE\_MAX*.
- It shall be less than or equal to a BSP-specific and application-specific value which depends on the size of the memory available to the application.

**DESCRIPTION:**

The value of this configuration option defines the maximum number Constant Bandwidth Servers that can be concurrently active.

**NOTES:**

This configuration option is only evaluated if the configuration option *CONFIGURE\_SCHEDULER\_CBS* (page 445) is defined.

## 24.18.2 CONFIGURE\_MAXIMUM\_PRIORITY

**CONSTANT:**

CONFIGURE\_MAXIMUM\_PRIORITY

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 255.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be an element of {3, 7, 31, 63, 127, 255}.

**DESCRIPTION:**

For the following schedulers

- *Deterministic Priority Scheduler* (page 44), which is the default in uniprocessor configurations and can be configured through the *CONFIGURE\_SCHEDULER\_PRIORITY* (page 447) configuration option,
- *Deterministic Priority SMP Scheduler* (page 46) which can be configured through the *CONFIGURE\_SCHEDULER\_PRIORITY\_SMP* (page 448) configuration option, and
- *Arbitrary Processor Affinity Priority SMP Scheduler* (page 46) which can be configured through the *CONFIGURE\_SCHEDULER\_PRIORITY\_AFFINITY\_SMP* (page 447) configuration option

this configuration option specifies the maximum numeric priority of any task for these schedulers and one less than the number of priority levels for these schedulers. For all other schedulers provided by RTEMS, this configuration option has no effect.

**NOTES:**

The numerically greatest priority is the logically lowest priority in the system and will thus be used by the IDLE task.

Priority zero is reserved for internal use by RTEMS and is not available to applications.

Reducing the number of priorities through this configuration option reduces the amount of memory allocated by the schedulers listed above. These schedulers use a chain control structure per priority and this structure consists of three pointers. On a 32-bit architecture, the allocated memory is 12 bytes \* (CONFIGURE\_MAXIMUM\_PRIORITY + 1), e.g. 3072 bytes for 256 priority levels (default), 48 bytes for 4 priority levels (CONFIGURE\_MAXIMUM\_PRIORITY == 3).

The default value is 255, because RTEMS shall support 256 priority levels to be compliant with various standards. These priorities range from 0 to 255.

## 24.18.3 CONFIGURE\_SCHEDULER\_ASSIGNMENTS

**CONSTANT:**

CONFIGURE\_SCHEDULER\_ASSIGNMENTS

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value of this configuration option is computed so that the default scheduler is assigned to each configured processor (up to 32).

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be a list of the following macros:
  - RTEMS\_SCHEDULER\_ASSIGN( processor\_index, attributes )
  - RTEMS\_SCHEDULER\_ASSIGN\_NO\_SCHEDULER
- It shall be a list of exactly *CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382) elements.

**DESCRIPTION:**

The value of this configuration option is used to initialize the initial scheduler to processor assignments.

**NOTES:**

This configuration option is only evaluated in SMP configurations.

This is an advanced configuration option, see *Clustered Scheduler Configuration* (page 451).

#### 24.18.4 CONFIGURE\_SCHEDULER\_CBS

**CONSTANT:**

CONFIGURE\_SCHEDULER\_CBS

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Constant Bandwidth Server (CBS) Scheduler* (page 45) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for exactly one processor.

#### 24.18.5 CONFIGURE\_SCHEDULER\_EDF

**CONSTANT:**

CONFIGURE\_SCHEDULER\_EDF

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Earliest Deadline First (EDF) Scheduler* (page 44) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for exactly one processor.

### 24.18.6 CONFIGURE\_SCHEDULER\_EDF\_SMP

**CONSTANT:**

CONFIGURE\_SCHEDULER\_EDF\_SMP

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Earliest Deadline First (EDF) SMP Scheduler* (page 46) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

This scheduler algorithm is only available when RTEMS is built with SMP support enabled.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for up to 32 processors.

This scheduler algorithm is the default in SMP configurations if *CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382) is greater than one.

### 24.18.7 CONFIGURE\_SCHEDULER\_NAME

**CONSTANT:**

CONFIGURE\_SCHEDULER\_NAME

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is

- "MEDF" for the *EDF SMP Scheduler* (page 46),
- "MPA " for the *Arbitrary Processor Affinity Priority SMP Scheduler* (page 46),
- "MPD " for the *Deterministic Priority SMP Scheduler* (page 46),
- "MPS " for the *Simple Priority SMP Scheduler* (page 46),
- "UCBS" for the *Uniprocessor CBS Scheduler* (page 45),
- "UEDF" for the *Uniprocessor EDF Scheduler* (page 44),
- "UPD " for the *Uniprocessor Deterministic Priority Scheduler* (page 44), and

- "UPS " for the *Uniprocessor Simple Priority Scheduler* (page 44).

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a valid integer of type `rtems_name`.

**DESCRIPTION:**

The value of this configuration option defines the name of the default scheduler.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

Schedulers can be identified via `c:func:rtems_scheduler_ident`.

Use `rtems_build_name()` to define the scheduler name.

### 24.18.8 CONFIGURE\_SCHEDULER\_PRIORITY

**CONSTANT:**

`CONFIGURE_SCHEDULER_PRIORITY`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Deterministic Priority Scheduler* (page 44) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for exactly one processor.

This scheduler algorithm is the default when `CONFIGURE_MAXIMUM_PROCESSORS` (page 382) is exactly one.

The memory allocated for this scheduler depends on the `CONFIGURE_MAXIMUM_PRIORITY` (page 444) configuration option.

### 24.18.9 CONFIGURE\_SCHEDULER\_PRIORITY\_AFFINITY\_SMP

**CONSTANT:**

`CONFIGURE_SCHEDULER_PRIORITY_AFFINITY_SMP`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Arbitrary Processor Affinity SMP Scheduler* (page 46) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

This scheduler algorithm is only available when RTEMS is built with SMP support enabled.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for up to 32 processors.

The memory allocated for this scheduler depends on the *CONFIGURE\_MAXIMUM\_PRIORITY* (page 444) configuration option.

#### 24.18.10 CONFIGURE\_SCHEDULER\_PRIORITY\_SMP

**CONSTANT:**

CONFIGURE\_SCHEDULER\_PRIORITY\_SMP

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Deterministic Priority SMP Scheduler* (page 46) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

This scheduler algorithm is only available when RTEMS is built with SMP support enabled.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for up to 32 processors.

The memory allocated for this scheduler depends on the *CONFIGURE\_MAXIMUM\_PRIORITY* (page 444) configuration option.

#### 24.18.11 CONFIGURE\_SCHEDULER\_SIMPLE

**CONSTANT:**

CONFIGURE\_SCHEDULER\_SIMPLE

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Simple Priority Scheduler* (page 44) algorithm is made available to the application.



**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for exactly one processor.

## 24.18.12 CONFIGURE\_SCHEDULER\_SIMPLE\_SMP

**CONSTANT:**

CONFIGURE\_SCHEDULER\_SIMPLE\_SMP

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then *Simple Priority SMP Scheduler* (page 46) algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

This scheduler algorithm is only available when RTEMS is built with SMP support enabled.

In case no explicit *clustered scheduler configuration* (page 451) is present, then it is used as the scheduler for up to 32 processors.

## 24.18.13 CONFIGURE\_SCHEDULER\_STRONG\_APA

**CONSTANT:**

CONFIGURE\_SCHEDULER\_STRONG\_APA

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then Strong APA algorithm is made available to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

This scheduler algorithm is only available when RTEMS is built with SMP support enabled.

This scheduler algorithm is not correctly implemented. Do not use it.

#### 24.18.14 CONFIGURE\_SCHEDULER\_USER

**CONSTANT:**

CONFIGURE\_SCHEDULER\_USER

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the user shall provide a scheduler algorithm to the application.

**NOTES:**

This scheduler configuration option is an advanced configuration option. Think twice before you use it.

RTEMS allows the application to provide its own task/thread scheduling algorithm. In order to do this, one shall define CONFIGURE\_SCHEDULER\_USER to indicate the application provides its own scheduling algorithm. If CONFIGURE\_SCHEDULER\_USER is defined then the following additional macros shall be defined:

- CONFIGURE\_SCHEDULER shall be defined to a static definition of the scheduler data structures of the user scheduler.
- CONFIGURE\_SCHEDULER\_TABLE\_ENTRIES shall be defined to a scheduler table entry initializer for the user scheduler.
- CONFIGURE\_SCHEDULER\_USER\_PER\_THREAD shall be defined to the type of the per-thread information of the user scheduler.

At this time, the mechanics and requirements for writing a new scheduler are evolving and not fully documented. It is recommended that you look at the existing Deterministic Priority Scheduler in `cpukit/score/src/schedulerpriority*.c` for guidance. For guidance on the configuration macros, please examine `cpukit/sapi/include/confdefs.h` for how these are defined for the Deterministic Priority Scheduler.

## 24.19 Clustered Scheduler Configuration

This section describes configuration options related to clustered scheduling. A clustered scheduler configuration is optional. It is an advanced configuration area and only necessary in specific circumstances.

Clustered scheduling helps to control the worst-case latencies in a multiprocessor system (SMP). The goal is to reduce the amount of shared state in the system and thus prevention of lock contention. Modern multiprocessor systems tend to have several layers of data and instruction caches. With clustered scheduling it is possible to honour the cache topology of a system and thus avoid expensive cache synchronization traffic.

We have clustered scheduling in case the set of processors of a system is partitioned into non-empty pairwise-disjoint subsets. These subsets are called clusters. Clusters with a cardinality of one are partitions. Each cluster is owned by exactly one scheduler.

In order to use clustered scheduling the application designer has to answer two questions.

1. How is the set of processors partitioned into clusters?
2. Which scheduler algorithm is used for which cluster?

The schedulers are statically configured.

### 24.19.1 Configuration Step 1 - Scheduler Algorithms

Firstly, the application must select which scheduling algorithms are available with the following defines

- `CONFIGURE_SCHEDULER_EDF_SMP` (page 446),
- `CONFIGURE_SCHEDULER_PRIORITY_AFFINITY_SMP` (page 447),
- `CONFIGURE_SCHEDULER_PRIORITY_SMP` (page 448), and
- `CONFIGURE_SCHEDULER_SIMPLE_SMP` (page 449).

This is necessary to calculate the per-thread overhead introduced by the scheduler algorithms. After these definitions the configuration file must `#include <rtems/scheduler.h>` to have access to scheduler-specific configuration macros.

It is possible to make more than one scheduler algorithm available to the application. For example a *Simple Priority SMP Scheduler* (page 46) could be used in a partition for low latency tasks in addition to an *EDF SMP Scheduler* (page 46) for a general-purpose cluster. Since the per-thread overhead depends on the scheduler algorithm only the scheduler algorithms used by the application should be configured.

### 24.19.2 Configuration Step 2 - Schedulers

Each scheduler needs some data structures. Use the following macros to create the scheduler data structures for a particular scheduler identified in the configuration by name.

- `RTEMS_SCHEDULER_EDF_SMP(name)`,
- `RTEMS_SCHEDULER_PRIORITY_AFFINITY_SMP(name, prio_count)`,
- `RTEMS_SCHEDULER_PRIORITY_SMP(name, prio_count)`, and
- `RTEMS_SCHEDULER_SIMPLE_SMP(name)`.

The name parameter is used as part of a designator for scheduler-specific data structures, so the usual C/C++ designator rules apply. This name is not the scheduler object name. Additional parameters are scheduler-specific.

### 24.19.3 Configuration Step 3 - Scheduler Table

The schedulers are registered in the system via the scheduler table. To populate the scheduler table define `CONFIGURE_SCHEDULER_TABLE_ENTRIES` to a list of the following scheduler table entry initializers

- `RTEMS_SCHEDULER_TABLE_EDF_SMP(name, obj_name)`,
- `RTEMS_SCHEDULER_TABLE_PRIORITY_AFFINITY_SMP(name, obj_name)`,
- `RTEMS_SCHEDULER_TABLE_PRIORITY_SMP(name, obj_name)`, and
- `RTEMS_SCHEDULER_TABLE_SIMPLE_SMP(name, obj_name)`.

The name parameter must correspond to the parameter defining the scheduler data structures of configuration step 2. The `obj_name` determines the scheduler object name and can be used in `rtems_scheduler_ident()` (page 54) to get the scheduler object identifier. The scheduler index is defined by the index of the scheduler table. It is a configuration error to add a scheduler multiple times to the scheduler table.

### 24.19.4 Configuration Step 4 - Processor to Scheduler Assignment

The last step is to define which processor uses which scheduler. For this purpose a scheduler assignment table must be defined. The entry count of this table must be equal to the configured maximum processors (`CONFIGURE_MAXIMUM_PROCESSORS` (page 382)). A processor assignment to a scheduler can be optional or mandatory. The boot processor must have a scheduler assigned. In case the system needs more mandatory processors than available then a fatal run-time error will occur. To specify the scheduler assignments define `CONFIGURE_SCHEDULER_ASSIGNMENTS` to a list of

- `RTEMS_SCHEDULER_ASSIGN(scheduler_index, attr)` and
- `RTEMS_SCHEDULER_ASSIGN_NO_SCHEDULER`

macros. The `scheduler_index` parameter must be a valid index into the scheduler table defined by configuration step 3. The `attr` parameter defines the scheduler assignment attributes. By default, a scheduler assignment to a processor is optional. For the scheduler assignment attribute use one of the mutually exclusive variants

- `RTEMS_SCHEDULER_ASSIGN_DEFAULT`,

- RTEMS\_SCHEDULER\_ASSIGN\_PROCESSOR\_MANDATORY, and
- RTEMS\_SCHEDULER\_ASSIGN\_PROCESSOR\_OPTIONAL.

It is possible to add/remove processors to/from schedulers at run-time, see *rtems\_scheduler\_add\_processor()* (page 63) and *rtems\_scheduler\_remove\_processor()* (page 64).

### 24.19.5 Configuration Example

The following example shows a scheduler configuration for a hypothetical product using two chip variants. One variant has four processors which is used for the normal product line and another provides eight processors for the high-performance product line. The first processor performs hard-real time control of actuators and sensors. The second processor is not used by RTEMS at all and runs a Linux instance to provide a graphical user interface. The additional processors are used for a worker thread pool to perform data processing operations.

The processors managed by RTEMS use two Deterministic Priority SMP schedulers capable of dealing with 256 priority levels. The scheduler with index zero has the name "IO ". The scheduler with index one has the name "WORK". The scheduler assignments of the first, third and fourth processor are mandatory, so the system must have at least four processors, otherwise a fatal run-time error will occur during system startup. The processor assignments for the fifth up to the eighth processor are optional so that the same application can be used for the normal and high-performance product lines. The second processor has no scheduler assigned and runs Linux. A hypervisor will ensure that the two systems cannot interfere in an undesirable way.

```

1 #define CONFIGURE_MAXIMUM_PROCESSORS 8
2 #define CONFIGURE_MAXIMUM_PRIORITY 255
3
4 /* Configuration Step 1 - Scheduler Algorithms */
5 #define CONFIGURE_SCHEDULER_PRIORITY_SMP
6 #include <rtems/scheduler.h>
7
8 /* Configuration Step 2 - Schedulers */
9 RTEMS_SCHEDULER_PRIORITY_SMP(io, CONFIGURE_MAXIMUM_PRIORITY + 1);
10 RTEMS_SCHEDULER_PRIORITY_SMP(work, CONFIGURE_MAXIMUM_PRIORITY + 1);
11
12 /* Configuration Step 3 - Scheduler Table */
13 #define CONFIGURE_SCHEDULER_TABLE_ENTRIES \
14   RTEMS_SCHEDULER_TABLE_PRIORITY_SMP( \
15     io, \
16     rtems_build_name('I', 'O', ' ', ' ') \
17   ), \
18   RTEMS_SCHEDULER_TABLE_PRIORITY_SMP( \
19     work, \
20     rtems_build_name('W', 'O', 'R', 'K') \
21   )
22
23 /* Configuration Step 4 - Processor to Scheduler Assignment */
24 #define CONFIGURE_SCHEDULER_ASSIGNMENTS \
25   RTEMS_SCHEDULER_ASSIGN(0, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_MANDATORY), \
26   RTEMS_SCHEDULER_ASSIGN_NO_SCHEDULER, \
27   RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_MANDATORY), \
28   RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_MANDATORY), \
29   RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_OPTIONAL), \
30   RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_OPTIONAL), \

```

(continues on next page)

(continued from previous page)

```
31 RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_OPTIONAL), \  
32 RTEMS_SCHEDULER_ASSIGN(1, RTEMS_SCHEDULER_ASSIGN_PROCESSOR_OPTIONAL)
```

### 24.19.6 Configuration Errors

In case one of the scheduler indices in `CONFIGURE_SCHEDULER_ASSIGNMENTS` is invalid a link-time error will occur with an undefined reference to `RTEMS_SCHEDULER_INVALID_INDEX`.

Some fatal errors may occur in case of scheduler configuration inconsistencies or a lack of processors on the system. The fatal source is `RTEMS_FATAL_SOURCE_SMP`.

- `SMP_FATAL_BOOT_PROCESSOR_NOT_ASSIGNED_TO_SCHEDULER` - the boot processor must have a scheduler assigned.
- `SMP_FATAL_MANDATORY_PROCESSOR_NOT_PRESENT` - there exists a mandatory processor beyond the range of physically or virtually available processors. The processor demand must be reduced for this system.
- `SMP_FATAL_START_OF_MANDATORY_PROCESSOR_FAILED` - the start of a mandatory processor failed during system initialization. The system may not have this processor at all or it could be a problem with a boot loader for example. Check the `CONFIGURE_SCHEDULER_ASSIGNMENTS` definition.
- `SMP_FATAL_MULTITASKING_START_ON_UNASSIGNED_PROCESSOR` - it is not allowed to start multitasking on a processor with no scheduler assigned.

## 24.20 BSP Related Configuration Options

This section describes configuration options related to the BSP. Some configuration options may have a BSP-specific setting which is defined by `<bsp.h>`. The BSP-specific settings can be disabled by the `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) configuration option.

### 24.20.1 BSP\_IDLE\_TASK\_BODY

**CONSTANT:**

`BSP_IDLE_TASK_BODY`

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is BSP-specific.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be defined to a valid function pointer of the type `void *( *idle_body )( uintptr_t )`.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) is undefined,

then the value of this configuration option defines the default value of `CONFIGURE_IDLE_TASK_BODY` (page 441).

**NOTES:**

As it has knowledge of the specific CPU model, system controller logic, and peripheral buses, a BSP-specific IDLE task may be capable of turning components off to save power during extended periods of no task activity.

### 24.20.2 BSP\_IDLE\_TASK\_STACK\_SIZE

**CONSTANT:**

`BSP_IDLE_TASK_STACK_SIZE`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is BSP-specific.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to a BSP-specific and application-specific minimum value.
- It shall be small enough so that the IDLE task stack area calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `size_t`.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) is undefined,

then the value of this configuration option defines the default value of `CONFIGURE_IDLE_TASK_SIZE`.

**NOTES:**

None.

### 24.20.3 BSP\_INITIAL\_EXTENSION

**CONSTANT:**

`BSP_INITIAL_EXTENSION`

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is BSP-specific.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a list of initializers for structures of type `rtems_extensions_table`.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) is undefined,

then the value of this configuration option is used to initialize the table of initial user extensions.

**NOTES:**

The value of this configuration option is placed after the entries of all other initial user extensions.

### 24.20.4 BSP\_INTERRUPT\_STACK\_SIZE

**CONSTANT:**

`BSP_INTERRUPT_STACK_SIZE`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is BSP-specific.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to a BSP-specific and application-specific minimum value.
- It shall be small enough so that the interrupt stack area calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `size_t`.



- It shall be aligned according to `CPU_INTERRUPT_STACK_ALIGNMENT`.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) is undefined,

then the value of this configuration option defines the default value of `CONFIGURE_INTERRUPT_STACK_SIZE` (page 380).

**NOTES:**

None.

### 24.20.5 CONFIGURE\_BSP\_PREREQUISITE\_DRIVERS

**CONSTANT:**

`CONFIGURE_BSP_PREREQUISITE_DRIVERS`

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is BSP-specific.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a list of initializers for structures of type `rtcms_extensions_table`.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and `CONFIGURE_DISABLE_BSP_SETTINGS` (page 457) is undefined,

then the value of this configuration option is used to initialize the table of initial user extensions.

**NOTES:**

The value of this configuration option is placed before the entries of all other initial user extensions (including `CONFIGURE_APPLICATION_PREREQUISITE_DRIVERS` (page 397)).

### 24.20.6 CONFIGURE\_DISABLE\_BSP\_SETTINGS

**CONSTANT:**

`CONFIGURE_DISABLE_BSP_SETTINGS`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

In case this configuration option is defined, then the following BSP related configuration options are undefined:

- *BSP\_IDLE\_TASK\_BODY* (page 455)
- *BSP\_IDLE\_TASK\_STACK\_SIZE* (page 455)
- *BSP\_INITIAL\_EXTENSION* (page 456)
- *BSP\_INTERRUPT\_STACK\_SIZE* (page 456)
- *CONFIGURE\_BSP\_PREREQUISITE\_DRIVERS* (page 457)
- *CONFIGURE\_MALLOC\_BSP\_SUPPORTS\_SBRK* (page 458)

**NOTES:**

None.

### 24.20.7 CONFIGURE\_MALLOC\_BSP\_SUPPORTS\_SBRK

**CONSTANT:**

CONFIGURE\_MALLOC\_BSP\_SUPPORTS\_SBRK

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the described feature is not enabled.

**DESCRIPTION:**

If

- this configuration option is defined by the BSP
- and *CONFIGURE\_DISABLE\_BSP\_SETTINGS* (page 457) is undefined,

then not all memory is made available to the C Program Heap immediately at system initialization time. When `malloc()` or other standard memory allocation functions are unable to allocate memory, they will call the BSP supplied `sbrk()` function to obtain more memory.

**NOTES:**

This option should not be defined by the application. Only the BSP knows how it allocates memory to the C Program Heap.

## 24.21 Multiprocessing Configuration

This section describes multiprocessing related configuration options. The options are only used if RTEMS was built with the `--enable-multiprocessing` build configuration option. Additionally, this class of configuration options are only applicable if the configuration option `CONFIGURE_MP_APPLICATION` (page 459) is defined. The multiprocessing (MPCI) support must not be confused with the SMP support.

### 24.21.1 CONFIGURE\_MP\_APPLICATION

**CONSTANT:**

`CONFIGURE_MP_APPLICATION`

**OPTION TYPE:**

This configuration option is a boolean feature define.

**DEFAULT CONFIGURATION:**

If this configuration option is undefined, then the multiprocessing services are not initialized.

**DESCRIPTION:**

This configuration option is defined to indicate that the application intends to be part of a multiprocessing configuration. Additional configuration options are assumed to be provided.

**NOTES:**

This configuration option shall be undefined if the multiprocessing support is not enabled (e.g. RTEMS was built without the `--enable-multiprocessing` build configuration option). Otherwise a compile time error in the configuration file will occur.

### 24.21.2 CONFIGURE\_EXTRA\_MPCI\_RECEIVE\_SERVER\_STACK

**CONSTANT:**

`CONFIGURE_EXTRA_MPCI_RECEIVE_SERVER_STACK`

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 0.

**VALUE CONSTRAINTS:**

The value of this configuration option shall satisfy all of the following constraints:

- It shall be greater than or equal to 0.
- It shall be less than or equal to `UINT32_MAX`.
- It shall be small enough so that the MPCI receive server stack area calculation carried out by `<rtems/confdefs.h>` does not overflow an integer of type `size_t`.

**DESCRIPTION:**

The value of this configuration option defines the number of bytes the applications wishes to add to the MPCI task stack on top of `CONFIGURE_MINIMUM_TASK_STACK_SIZE` (page 385).

**NOTES:**

This configuration option is only evaluated if `CONFIGURE_MP_APPLICATION` (page 459) is defined.

### 24.21.3 CONFIGURE\_MP\_MAXIMUM\_GLOBAL\_OBJECTS

**CONSTANT:**

CONFIGURE\_MP\_MAXIMUM\_GLOBAL\_OBJECTS

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 32.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of concurrently active global objects in a multiprocessor system.

**NOTES:**

This value corresponds to the total number of objects which can be created with the RTEMS\_GLOBAL attribute.

This configuration option is only evaluated if *CONFIGURE\_MP\_APPLICATION* (page 459) is defined.

### 24.21.4 CONFIGURE\_MP\_MAXIMUM\_NODES

**CONSTANT:**

CONFIGURE\_MP\_MAXIMUM\_NODES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 2.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of nodes in a multiprocessor system.

**NOTES:**

This configuration option is only evaluated if *CONFIGURE\_MP\_APPLICATION* (page 459) is defined.

### 24.21.5 CONFIGURE\_MP\_MAXIMUM\_PROXIES

**CONSTANT:**

CONFIGURE\_MP\_MAXIMUM\_PROXIES

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is 32.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the maximum number of concurrently active thread/task proxies on this node in a multiprocessor system.

**NOTES:**

Since a proxy is used to represent a remote task/thread which is blocking on this node. This configuration parameter reflects the maximum number of remote tasks/threads which can be blocked on objects on this node, see *Proxies* (page 511).

This configuration option is only evaluated if *CONFIGURE\_MP\_APPLICATION* (page 459) is defined.

### 24.21.6 CONFIGURE\_MP\_MPCI\_TABLE\_POINTER

**CONSTANT:**

CONFIGURE\_MP\_MPCI\_TABLE\_POINTER

**OPTION TYPE:**

This configuration option is an initializer define.

**DEFAULT VALUE:**

The default value is &MPCI\_table.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be a pointer to *rtems\_mpci\_table*.

**DESCRIPTION:**

The value of this configuration option initializes the MPCl Configuration Table.

**NOTES:**

RTEMS provides a Shared Memory MPCl Device Driver which can be used on any Multiprocessor System assuming the BSP provides the proper set of supporting methods.

This configuration option is only evaluated if *CONFIGURE\_MP\_APPLICATION* (page 459) is defined.

### 24.21.7 CONFIGURE\_MP\_NODE\_NUMBER

**CONSTANT:**

CONFIGURE\_MP\_NODE\_NUMBER

**OPTION TYPE:**

This configuration option is an integer define.

**DEFAULT VALUE:**

The default value is NODE\_NUMBER.

**VALUE CONSTRAINTS:**

The value of this configuration option shall be greater than or equal to 0 and less than or equal to UINT32\_MAX.

**DESCRIPTION:**

The value of this configuration option defines the node number of this node in a multiprocessor system.

**NOTES:**

In the RTEMS Multiprocessing Test Suite, the node number is derived from the Makefile variable NODE\_NUMBER. The same code is compiled with the NODE\_NUMBER set to different values. The test programs behave differently based upon their node number.

This configuration option is only evaluated if *CONFIGURE\_MP\_APPLICATION* (page 459) is defined.

## 24.22 PCI Library Configuration

This section defines the system configuration parameters supported by `rtems/confdefs.h` related to configuring the PCI Library for RTEMS.

The PCI Library startup behaviour can be configured in four different ways depending on how `CONFIGURE_PCI_CONFIG_LIB` is defined:

### **PCI\_LIB\_AUTO**

Used to enable the PCI auto configuration software. PCI will be automatically probed, PCI buses enumerated, all devices and bridges will be initialized using Plug & Play software routines. The PCI device tree will be populated based on the PCI devices found in the system, PCI devices will be configured by allocating address region resources automatically in PCI space according to the BSP or host bridge driver set up.

### **PCI\_LIB\_READ**

Used to enable the PCI read configuration software. The current PCI configuration is read to create the RAM representation (the PCI device tree) of the PCI devices present. PCI devices are assumed to already have been initialized and PCI buses enumerated, it is therefore required that a BIOS or a boot loader has set up configuration space prior to booting into RTEMS.

### **PCI\_LIB\_STATIC**

Used to enable the PCI static configuration software. The user provides a PCI tree with information how all PCI devices are to be configured at compile time by linking in a custom `struct pci_bus pci_hb tree`. The static PCI library will not probe PCI for devices, instead it will assume that all devices defined by the user are present, it will enumerate the PCI buses and configure all PCI devices in static configuration accordingly. Since probe and allocation software is not needed the startup is faster, has smaller footprint and does not require dynamic memory allocation.

### **PCI\_LIB\_PERIPHERAL**

Used to enable the PCI peripheral configuration. It is similar to `PCI_LIB_STATIC`, but it will never write the configuration to the PCI devices since PCI peripherals are not allowed to access PCI configuration space.

Note that selecting `PCI_LIB_STATIC` or `PCI_LIB_PERIPHERAL` but not defining `pci_hb` will result in link errors. Note also that in these modes Plug & Play is not performed.

## 24.23 Ada Configuration

The GNU Ada runtime library (libgnarl) uses threads, mutexes, condition variables, and signals from the pthreads API. It uses also thread-local storage for the Ada Task Control Block (ATCB). From these resources only the threads need to be accounted for in the configuration. You should include the Ada tasks in your setting of the *CONFIGURE\_MAXIMUM\_POSIX\_THREADS* (page 414) configuration option.



## 24.24 Obsolete Configuration Options

### 24.24.1 CONFIGURE\_BDBUF\_BUFFER\_COUNT

This configuration option was introduced in RTEMS 4.7.0 and is obsolete since RTEMS 4.10.0.

### 24.24.2 CONFIGURE\_BDBUF\_BUFFER\_SIZE

This configuration option was introduced in RTEMS 4.7.0 and is obsolete since RTEMS 4.10.0.

### 24.24.3 CONFIGURE\_DISABLE\_CLASSIC\_API\_NOTEPADS

This configuration option was introduced in RTEMS 4.9.0 and is obsolete since RTEMS 5.1.

### 24.24.4 CONFIGURE\_ENABLE\_GO

This configuration option is obsolete since RTEMS 5.1.

### 24.24.5 CONFIGURE\_GNAT\_RTEMS

This configuration option was present in all RTEMS versions since 1997 and is obsolete since RTEMS 5.1. See also *Ada Configuration* (page 464).

### 24.24.6 CONFIGURE\_HAS\_OWN\_CONFIGURATION\_TABLE

This configuration option is obsolete since RTEMS 5.1.

### 24.24.7 CONFIGURE\_HAS\_OWN\_BDBUF\_TABLE

This configuration option was introduced in RTEMS 4.7.0 and is obsolete since RTEMS 4.10.0.

### 24.24.8 CONFIGURE\_HAS\_OWN\_DEVICE\_DRIVER\_TABLE

This configuration option was present in all RTEMS versions since at least 1995 and is obsolete since RTEMS 5.1.

### 24.24.9 CONFIGURE\_HAS\_OWN\_INIT\_TASK\_TABLE

This configuration option was present in all RTEMS versions since at least 1995 and is obsolete since RTEMS 5.1. If you used this configuration option or you think that there should be a way to configure more than one Classic API initialization task, then please ask on the [Users Mailing List](#).

#### 24.24.10 CONFIGURE\_HAS\_OWN\_MOUNT\_TABLE

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.11 CONFIGURE\_HAS\_OWN\_MULTIPROCESSING\_TABLE

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.12 CONFIGURE\_LIBIO\_MAXIMUM\_FILE\_DESCRIPTOR

This configuration option was present in all RTEMS versions since 1998 and is obsolete since RTEMS 5.1. See also *CONFIGURE\_MAXIMUM\_FILE\_DESCRIPTOR* (page 381).

#### 24.24.13 CONFIGURE\_MAXIMUM\_ADA\_TASKS

This configuration option was present in all RTEMS versions since 1997 and is obsolete since RTEMS 5.1. See also *Ada Configuration* (page 464).

#### 24.24.14 CONFIGURE\_MAXIMUM\_DEVICES

This configuration option was present in all RTEMS versions since at least 1995 and is obsolete since RTEMS 5.1.

#### 24.24.15 CONFIGURE\_MAXIMUM\_FAKE\_ADA\_TASKS

This configuration option was present in all RTEMS versions since 1997 and is obsolete since RTEMS 5.1. See also *Ada Configuration* (page 464).

#### 24.24.16 CONFIGURE\_MAXIMUM\_GO\_CHANNELS

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.17 CONFIGURE\_MAXIMUM\_GOROUTINES

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.18 CONFIGURE\_MAXIMUM\_MRSP\_SEMAPHORES

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.19 CONFIGURE\_NUMBER\_OF\_TERMIOS\_PORTS

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.20 CONFIGURE\_MAXIMUM\_POSIX\_BARRIERS

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.21 CONFIGURE\_MAXIMUM\_POSIX\_CONDITION\_VARIABLES

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.22 CONFIGURE\_MAXIMUM\_POSIX\_MESSAGE\_QUEUE\_DESCRIPTOR

This configuration option was introduced in RTEMS 4.10.0 and is obsolete since RTEMS 5.1.

#### 24.24.23 CONFIGURE\_MAXIMUM\_POSIX\_MUTEXES

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.24 CONFIGURE\_MAXIMUM\_POSIX\_RWLOCKS

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.25 CONFIGURE\_MAXIMUM\_POSIX\_SPINLOCKS

This configuration option is obsolete since RTEMS 5.1.

#### 24.24.26 CONFIGURE\_POSIX\_HAS\_OWN\_INIT\_THREAD\_TABLE

This configuration option was present in all RTEMS versions since at least 1995 and is obsolete since RTEMS 5.1. If you used this configuration option or you think that there should be a way to configure more than one POSIX initialization thread, then please ask on the [Users Mailing List](#).

#### 24.24.27 CONFIGURE\_SMP\_APPLICATION

This configuration option was introduced in RTEMS 4.11.0 and is obsolete since RTEMS 5.1.

#### 24.24.28 `CONFIGURE_SMP_MAXIMUM_PROCESSORS`

This configuration option was introduced in RTEMS 4.11.0 and is obsolete since RTEMS 5.1. See also `CONFIGURE_MAXIMUM_PROCESSORS` (page 382).

#### 24.24.29 `CONFIGURE_TERMIO_DISABLED`

This configuration option is obsolete since RTEMS 5.1.

# SELF-CONTAINED OBJECTS

## 25.1 Introduction

One of the original design goals of RTEMS was the support for heterogeneous computing based on message passing. This was realized by synchronization objects with an architecture-independent identifier provided by the system during object creation (a 32-bit unsigned integer used as a bitfield) and a user-defined four character name. This approach in the so called Classic API has some weaknesses:

- Dynamic memory (the workspace) is used to allocate object pools. This requires a complex configuration with heavy use of the C pre-processor. The unlimited objects support optionally expands and shrinks the object pool. Dynamic memory is strongly discouraged by some coding standards, e.g. MISRA C:2012 [BBB+13].
- Objects are created via function calls which return an object identifier. The object operations use this identifier and map it internally to an object representation.
- The object identifier is only known at run-time. This hinders compiler optimizations and static analysis.
- The objects reside in a table, e.g. they are subject to false sharing of cache lines [Dre07].
- The object operations use a rich set of options and attributes. For each object operation these parameters must be evaluated and validated at run-time to figure out what to do exactly for this operation.

For applications that use fine grained locking the mapping of the identifier to the object representation and the parameter evaluation are a significant overhead that may degrade the performance dramatically. An example is the [new network stack \(libbsd\)](#) which uses hundreds of locks in a basic setup. Another example is the OpenMP support (libgomp).

To overcome these issues new self-contained synchronization objects are available since RTEMS 4.11. Self-contained synchronization objects encapsulate all their state in exactly one data structure. The user must provide the storage space for this structure and nothing more. The user is responsible for the object life-cycle. Initialization and destruction of self-contained synchronization objects cannot fail provided all function parameters are valid. In particular, a not enough memory error cannot happen. It is possible to statically initialize self-contained synchronization objects. This allows an efficient use of static analysis tools.

Several header files define self-contained synchronization objects. The Newlib `<sys/lock.h>` header file provides

- mutexes,
- recursive mutexes,
- condition variables,
- counting semaphores,
- binary semaphores, and
- Futex synchronization [FRK02].

They are used internally in Newlib (e.g. for FILE objects), for the C++11 threads and the OpenMP support (libgomp). The Newlib provided self-contained synchronization objects focus on performance. There are no error checks to catch software errors, e.g. invalid parameters. The application configuration is significantly simplified, since it is no longer necessary to

account for lock objects used by Newlib and GCC. The Newlib defined self-contained synchronization objects can be statically initialized and reside in the `.bss` section. Destruction is a no-operation.

The header file `<pthread.h>` provides

- POSIX barriers (`pthread_barrier_t`),
- POSIX condition variables (`pthread_cond_t`),
- POSIX mutexes (`pthread_mutex_t`),
- POSIX reader/writer locks (`pthread_rwlock_t`), and
- POSIX spinlocks (`pthread_spinlock_t`)

as self-contained synchronization objects. The POSIX synchronization objects are used for example by the Ada run-time support. The header file `<semaphore.h>` provides self-contained

- POSIX unnamed semaphores (`sem_t` initialized via `sem_init()`).

## 25.2 RTEMS Thread API

To give RTEMS users access to self-contained synchronization objects an API is necessary. One option would be to simply use the POSIX threads API (pthreads), C11 threads or C++11 threads. However, these standard APIs lack for example binary semaphores which are important for task/interrupt synchronization. The timed operations use in general time values specified by seconds and nanoseconds. Setting up the time values in seconds (`time_t` has 64 bits) and nanoseconds is burdened with a high overhead compared to time values in clock ticks for relative timeouts. The POSIX API mutexes can be configured for various protocols and options, this adds a run-time overhead. There are a variety of error conditions. This is a problem in combination with some coding standards, e.g. MISRA C:2012. APIs used by Linux (e.g. [<linux/mutex.h>](#)) or the FreeBSD kernel (e.g. [MUTEX\(9\)](#)) are better suited as a template for high-performance synchronization objects. The goal of the *RTEMS Thread API* is to offer the highest performance with the lowest space-overhead on RTEMS. It should be suitable for device drivers.



## 25.3 Mutual Exclusion

The `rtems_mutex` and `rtems_recursive_mutex` objects provide mutual-exclusion synchronization using the *Priority Inheritance Protocol* (page 30) in uniprocessor configurations or the *O(m) Independence-Preserving Protocol (OMIP)* (page 30) in SMP configurations. Recursive locking should be used with care [Wil12]. The storage space for these object must be provided by the user. There are no defined comparison or assignment operators for these type. Only the object itself may be used for performing synchronization. The result of referring to copies of the object in calls to

- `rtems_mutex_lock()`,
- `rtems_recursive_mutex_lock()`,
- `rtems_mutex_unlock()`,
- `rtems_recursive_mutex_unlock()`,
- `rtems_mutex_set_name()`,
- `rtems_recursive_mutex_set_name()`,
- `rtems_mutex_get_name()`,
- `rtems_recursive_mutex_get_name()`,
- `rtems_mutex_destroy()`, and
- `rtems_recursive_mutex_destroy()`

is undefined. Objects of the type `rtems_mutex` must be initialized via

- `RTEMS_MUTEX_INITIALIZER()`, or
- `rtems_mutex_init()`.

They must be destroyed via

- `rtems_mutex_destroy()`.

Objects of the type `rtems_recursive_mutex` must be initialized via

- `RTEMS_RECURSIVE_MUTEX_INITIALIZER()`, or
- `rtems_recursive_mutex_init()`.

They must be destroyed via

- `rtems_recursive_mutex_destroy()`.

### 25.3.1 Static mutex initialization

**CALLING SEQUENCE:**

```
1 rtems_mutex mutex = RTEMS_MUTEX_INITIALIZER(  
2   name  
3 );  
4  
5 rtems_recursive_mutex mutex = RTEMS_RECURSIVE_MUTEX_INITIALIZER(  
6   name  
7 );
```

**DESCRIPTION:**

An initializer for static initialization. It is equivalent to a call to `rtems_mutex_init()` or `rtems_recursive_mutex_init()` respectively.

**NOTES:**

Global mutexes with a name of `NULL` may reside in the `.bss` section.

### 25.3.2 Run-time mutex initialization

**CALLING SEQUENCE:**

```
1 void rtems_mutex_init(  
2   rtems_mutex *mutex,  
3   const char *name  
4 );  
5  
6 void rtems_recursive_mutex_init(  
7   rtems_recursive_mutex *mutex,  
8   const char *name  
9 );
```

**DESCRIPTION:**

Initializes the mutex with the specified name.

**NOTES:**

The name must be persistent throughout the life-time of the mutex. A name of NULL is valid. The mutex is unlocked after initialization.

### 25.3.3 Lock the mutex

**CALLING SEQUENCE:**

```
1 void rtems_mutex_lock(  
2   rtems_mutex *mutex  
3 );  
4  
5 void rtems_recursive_mutex_lock(  
6   rtems_recursive_mutex *mutex  
7 );
```

**DESCRIPTION:**

Locks the mutex.

**NOTES:**

This function must be called from thread context with interrupts enabled. In case the mutex is currently locked by another thread, then the thread is blocked until it becomes the mutex owner. Threads wait in priority order.

A recursive lock happens in case the mutex owner tries to lock the mutex again. The result of recursively locking a mutex depends on the mutex variant. For a normal (non-recursive) mutex (`rtems_mutex`) the result is unpredictable. It could block the owner indefinitely or lead to a fatal deadlock error. A recursive mutex (`rtems_recursive_mutex`) can be locked recursively by the mutex owner.

Each mutex lock operation must have a corresponding unlock operation.

### 25.3.4 Unlock the mutex

**CALLING SEQUENCE:**

```
1 void rtems_mutex_unlock(  
2   rtems_mutex *mutex  
3 );  
4  
5 void rtems_recursive_mutex_unlock(  
6   rtems_recursive_mutex *mutex  
7 );
```

**DESCRIPTION:**

Unlocks the mutex.

**NOTES:**

This function must be called from thread context with interrupts enabled. In case the currently executing thread is not the owner of the mutex, then the result is unpredictable.

Exactly the outer-most unlock will make a recursive mutex available to other threads.

### 25.3.5 Set mutex name

#### CALLING SEQUENCE:

```
1 void rtems_mutex_set_name(  
2   rtems_mutex *mutex,  
3   const char *name  
4 );  
5  
6 void rtems_recursive_mutex_set_name(  
7   rtems_recursive_mutex *mutex,  
8   const char *name  
9 );
```

#### DESCRIPTION:

Sets the mutex name to name.

#### NOTES:

The name must be persistent throughout the life-time of the mutex. A name of NULL is valid.

### 25.3.6 Get mutex name

**CALLING SEQUENCE:**

```
1 const char *rtems_mutex_get_name(  
2     const rtems_mutex *mutex  
3 );  
4  
5 const char *rtems_recursive_mutex_get_name(  
6     const rtems_recursive_mutex *mutex  
7 );
```

**DESCRIPTION:**

Returns the mutex name.

**NOTES:**

The name may be NULL.

### 25.3.7 Mutex destruction

**CALLING SEQUENCE:**

```
1 void rtems_mutex_destroy(  
2     rtems_mutex *mutex  
3 );  
4  
5 void rtems_recursive_mutex_destroy(  
6     rtems_recursive_mutex *mutex  
7 );
```

**DESCRIPTION:**

Destroys the mutex.

**NOTES:**

In case the mutex is locked or still in use, then the result is unpredictable.

## 25.4 Condition Variables

The `rtems_condition_variable` object provides a condition variable synchronization object. The storage space for this object must be provided by the user. There are no defined comparison or assignment operators for this type. Only the object itself may be used for performing synchronization. The result of referring to copies of the object in calls to

- `rtems_condition_variable_wait()`,
- `rtems_condition_variable_signal()`,
- `rtems_condition_variable_broadcast()`,
- `rtems_condition_variable_set_name()`,
- `rtems_condition_variable_get_name()`, and
- `rtems_condition_variable_destroy()`

is undefined. Objects of this type must be initialized via

- `RTEMS_CONDITION_VARIABLE_INITIALIZER()`, or
- `rtems_condition_variable_init()`.

They must be destroyed via

- `rtems_condition_variable_destroy()`.



### 25.4.1 Static condition variable initialization

**CALLING SEQUENCE:**

```
1 rtems_condition_variable condition_variable = RTEMS_CONDITION_VARIABLE_INITIALIZER(  
2   name  
3 );
```

**DESCRIPTION:**

An initializer for static initialization. It is equivalent to a call to `rtems_condition_variable_init()`.

**NOTES:**

Global condition variables with a name of NULL may reside in the `.bss` section.

## 25.4.2 Run-time condition variable initialization

### CALLING SEQUENCE:

```
1 void rtems_condition_variable_init(  
2   rtems_condition_variable *condition_variable,  
3   const char               *name  
4 );
```

### DESCRIPTION:

Initializes the `condition_variable` with the specified name.

### NOTES:

The name must be persistent throughout the life-time of the condition variable. A name of `NULL` is valid.

### 25.4.3 Wait for condition signal

**CALLING SEQUENCE:**

```
1 void rtems_condition_variable_wait(  
2   rtems_condition_variable *condition_variable,  
3   rtems_mutex             *mutex  
4 );
```

**DESCRIPTION:**

Atomically waits for a condition signal and unlocks the mutex. Once the condition is signalled to the thread it wakes up and locks the mutex again.

**NOTES:**

This function must be called from thread context with interrupts enabled. Threads wait in priority order.

#### 25.4.4 Signals a condition change

**CALLING SEQUENCE:**

```
1 void rtems_condition_variable_signal(  
2   rtems_condition_variable *condition_variable  
3 );
```

**DESCRIPTION:**

Signals a condition change to the highest priority waiting thread. If no threads wait currently on this condition variable, then nothing happens.

### 25.4.5 Broadcasts a condition change

**CALLING SEQUENCE:**

```
1 void rtems_condition_variable_broadcast(  
2   rtems_condition_variable *condition_variable  
3 );
```

**DESCRIPTION:**

Signals a condition change to all waiting thread. If no threads wait currently on this condition variable, then nothing happens.

### 25.4.6 Set condition variable name

**CALLING SEQUENCE:**

```
1 void rtems_condition_variable_set_name(  
2   rtems_condition_variable *condition_variable,  
3   const char               *name  
4 );
```

**DESCRIPTION:**

Sets the `condition_variable` name to `name`.

**NOTES:**

The name must be persistent throughout the life-time of the condition variable. A name of `NULL` is valid.

### 25.4.7 Get condition variable name

**CALLING SEQUENCE:**

```
1 const char *rtems_condition_variable_get_name(  
2   const rtems_condition_variable *condition_variable  
3 );
```

**DESCRIPTION:**

Returns the condition\_variable name.

**NOTES:**

The name may be NULL.

### 25.4.8 Condition variable destruction

**CALLING SEQUENCE:**

```
1 void rtems_condition_variable_destroy(  
2   rtems_condition_variable *condition_variable  
3 );
```

**DESCRIPTION:**

Destroys the condition\_variable.

**NOTES:**

In case the condition variable still in use, then the result is unpredictable.

## 25.5 Counting Semaphores

The `rtems_counting_semaphore` object provides a counting semaphore synchronization object. The storage space for this object must be provided by the user. There are no defined comparison or assignment operators for this type. Only the object itself may be used for performing synchronization. The result of referring to copies of the object in calls to

- `rtems_counting_semaphore_wait()`,
- `rtems_counting_semaphore_post()`,
- `rtems_counting_semaphore_set_name()`,
- `rtems_counting_semaphore_get_name()`, and
- `rtems_counting_semaphore_destroy()`

is undefined. Objects of this type must be initialized via

- `RTEMS_COUNTING_SEMAPHORE_INITIALIZER()`, or
- `rtems_counting_semaphore_init()`.

They must be destroyed via

- `rtems_counting_semaphore_destroy()`.



### 25.5.1 Static counting semaphore initialization

**CALLING SEQUENCE:**

```
1 rtems_counting_semaphore counting_semaphore = RTEMS_COUNTING_SEMAPHORE_INITIALIZER(  
2   name,  
3   value  
4 );
```

**DESCRIPTION:**

An initializer for static initialization. It is equivalent to a call to `rtems_counting_semaphore_init()`.

**NOTES:**

Global counting semaphores with a name of `NULL` may reside in the `.bss` section.

## 25.5.2 Run-time counting semaphore initialization

### CALLING SEQUENCE:

```
1 void rtems_counting_semaphore_init(  
2   rtems_counting_semaphore *counting_semaphore,  
3   const char               *name,  
4   unsigned int              value  
5 );
```

### DESCRIPTION:

Initializes the `counting_semaphore` with the specified name and value. The initial value is set to value.

### NOTES:

The name must be persistent throughout the life-time of the counting semaphore. A name of NULL is valid.

### 25.5.3 Wait for a counting semaphore

**CALLING SEQUENCE:**

```
1 void rtems_counting_semaphore_wait(  
2   rtems_counting_semaphore *counting_semaphore  
3 );
```

**DESCRIPTION:**

Waits for the `counting_semaphore`. In case the current semaphore value is positive, then the value is decremented and the function returns immediately, otherwise the thread is blocked waiting for a semaphore post.

**NOTES:**

This function must be called from thread context with interrupts enabled. Threads wait in priority order.

## 25.5.4 Post a counting semaphore

### CALLING SEQUENCE:

```
1 void rtems_counting_semaphore_post(  
2   rtems_counting_semaphore *counting_semaphore  
3 );
```

### DESCRIPTION:

Posts the `counting_semaphore`. In case at least one thread is waiting on the counting semaphore, then the highest priority thread is woken up, otherwise the current value is incremented.

### NOTES:

This function may be called from interrupt context. In case it is called from thread context, then interrupts must be enabled.

### 25.5.5 Set counting semaphore name

**CALLING SEQUENCE:**

```
1 void rtems_counting_semaphore_set_name(  
2   rtems_counting_semaphore *counting_semaphore,  
3   const char               *name  
4 );
```

**DESCRIPTION:**

Sets the `counting_semaphore` name to `name`.

**NOTES:**

The name must be persistent throughout the life-time of the counting semaphore. A name of `NULL` is valid.

### 25.5.6 Get counting semaphore name

**CALLING SEQUENCE:**

```
1 const char *rtems_counting_semaphore_get_name(  
2   const rtems_counting_semaphore *counting_semaphore  
3 );
```

**DESCRIPTION:**

Returns the counting\_semaphore name.

**NOTES:**

The name may be NULL.

### 25.5.7 Counting semaphore destruction

**CALLING SEQUENCE:**

```
1 void rtems_counting_semaphore_destroy(  
2   rtems_counting_semaphore *counting_semaphore  
3 );
```

**DESCRIPTION:**

Destroys the counting\_semaphore.

**NOTES:**

In case the counting semaphore still in use, then the result is unpredictable.

## 25.6 Binary Semaphores

The `rtems_binary_semaphore` object provides a binary semaphore synchronization object. The storage space for this object must be provided by the user. There are no defined comparison or assignment operators for this type. Only the object itself may be used for performing synchronization. The result of referring to copies of the object in calls to

- `rtems_binary_semaphore_wait()`,
- `rtems_binary_semaphore_wait_timed_ticks()`,
- `rtems_binary_semaphore_try_wait()`,
- `rtems_binary_semaphore_post()`,
- `rtems_binary_semaphore_set_name()`,
- `rtems_binary_semaphore_get_name()`, and
- `rtems_binary_semaphore_destroy()`

is undefined. Objects of this type must be initialized via

- `RTEMS_BINARY_SEMAPHORE_INITIALIZER()`, or
- `rtems_binary_semaphore_init()`.

They must be destroyed via

- `rtems_binary_semaphore_destroy()`.

### 25.6.1 Static binary semaphore initialization

**CALLING SEQUENCE:**

```
1 rtems_binary_semaphore binary_semaphore = RTEMS_BINARY_SEMAPHORE_INITIALIZER(  
2   name  
3 );
```

**DESCRIPTION:**

An initializer for static initialization. It is equivalent to a call to `rtems_binary_semaphore_init()`.

**NOTES:**

Global binary semaphores with a name of `NULL` may reside in the `.bss` section.



## 25.6.2 Run-time binary semaphore initialization

### CALLING SEQUENCE:

```
1 void rtems_binary_semaphore_init(  
2   rtems_binary_semaphore *binary_semaphore,  
3   const char             *name  
4 );
```

### DESCRIPTION:

Initializes the `binary_semaphore` with the specified name. The initial value is set to zero.

### NOTES:

The name must be persistent throughout the life-time of the binary semaphore. A name of `NULL` is valid.

### 25.6.3 Wait for a binary semaphore

**CALLING SEQUENCE:**

```
1 void rtems_binary_semaphore_wait(  
2   rtems_binary_semaphore *binary_semaphore  
3 );
```

**DESCRIPTION:**

Waits for the `binary_semaphore`. In case the current semaphore value is one, then the value is set to zero and the function returns immediately, otherwise the thread is blocked waiting for a semaphore post.

**NOTES:**

This function must be called from thread context with interrupts enabled. Threads wait in priority order.

### 25.6.4 Wait for a binary semaphore with timeout in ticks

#### CALLING SEQUENCE:

```
1 int rtems_binary_semaphore_wait_timed_ticks(  
2   rtems_binary_semaphore *binary_semaphore,  
3   uint32_t                ticks  
4 );
```

#### DIRECTIVE STATUS CODES:

0	The semaphore wait was successful.
ETIMEDOUT	The semaphore wait timed out.

#### DESCRIPTION:

Waits for the `binary_semaphore` with a timeout in ticks. In case the current semaphore value is one, then the value is set to zero and the function returns immediately with a return value of 0, otherwise the thread is blocked waiting for a semaphore post. The time waiting for a semaphore post is limited by ticks. A ticks value of zero specifies an infinite timeout.

#### NOTES:

This function must be called from thread context with interrupts enabled. Threads wait in priority order.

### 25.6.5 Tries to wait for a binary semaphore

#### CALLING SEQUENCE:

```
1 int rtems_binary_semaphore_try_wait(  
2   rtems_binary_semaphore *binary_semaphore  
3 );
```

#### DIRECTIVE STATUS CODES:

0	The semaphore wait was successful.
EAGAIN	The semaphore wait failed.

#### DESCRIPTION:

Tries to wait for the `binary_semaphore`. In case the current semaphore value is one, then the value is set to zero and the function returns immediately with a return value of 0, otherwise it returns immediately with a return value of EAGAIN.

#### NOTES:

This function may be called from interrupt context. In case it is called from thread context, then interrupts must be enabled.

### 25.6.6 Post a binary semaphore

**CALLING SEQUENCE:**

```
1 void rtems_binary_semaphore_post(  
2   rtems_binary_semaphore *binary_semaphore  
3 );
```

**DESCRIPTION:**

Posts the `binary_semaphore`. In case at least one thread is waiting on the binary semaphore, then the highest priority thread is woken up, otherwise the current value is set to one.

**NOTES:**

This function may be called from interrupt context. In case it is called from thread context, then interrupts must be enabled.

### 25.6.7 Set binary semaphore name

**CALLING SEQUENCE:**

```
1 void rtems_binary_semaphore_set_name(  
2   rtems_binary_semaphore *binary_semaphore,  
3   const char             *name  
4 );
```

**DESCRIPTION:**

Sets the `binary_semaphore` name to `name`.

**NOTES:**

The name must be persistent throughout the life-time of the binary semaphore. A name of `NULL` is valid.

### 25.6.8 Get binary semaphore name

**CALLING SEQUENCE:**

```
1 const char *rtems_binary_semaphore_get_name(  
2   const rtems_binary_semaphore *binary_semaphore  
3 );
```

**DESCRIPTION:**

Returns the binary\_semaphore name.

**NOTES:**

The name may be NULL.

### 25.6.9 Binary semaphore destruction

**CALLING SEQUENCE:**

```
1 void rtems_binary_semaphore_destroy(  
2   rtems_binary_semaphore *binary_semaphore  
3 );
```

**DESCRIPTION:**

Destroys the binary\_semaphore.

**NOTES:**

In case the binary semaphore still in use, then the result is unpredictable.

## 25.7 Threads

**Warning:** The self-contained threads support is work in progress. In contrast to the synchronization objects the self-contained thread support is not just an API glue layer to already existing implementations.

The `rtems_thread` object provides a thread of execution.

### CALLING SEQUENCE:

```
1 RTEMS_THREAD_INITIALIZER(  
2   name,  
3   thread_size,  
4   priority,  
5   flags,  
6   entry,  
7   arg  
8 );  
9  
10 void rtems_thread_start(  
11   rtems_thread *thread,  
12   const char   *name,  
13   size_t       thread_size,  
14   uint32_t     priority,  
15   uint32_t     flags,  
16   void         ( *entry )( void * ),  
17   void         *arg  
18 );  
19  
20 void rtems_thread_restart(  
21   rtems_thread *thread,  
22   void         *arg  
23 ) RTEMS_NO_RETURN;  
24  
25 void rtems_thread_event_send(  
26   rtems_thread *thread,  
27   uint32_t     events  
28 );  
29  
30 uint32_t rtems_thread_event_poll(  
31   rtems_thread *thread,  
32   uint32_t     events_of_interest  
33 );  
34  
35 uint32_t rtems_thread_event_wait_all(  
36   rtems_thread *thread,  
37   uint32_t     events_of_interest  
38 );  
39  
40 uint32_t rtems_thread_event_wait_any(  
41   rtems_thread *thread,  
42   uint32_t     events_of_interest  
43 );
```

(continues on next page)



(continued from previous page)

```
44
45 void rtems_thread_destroy(
46   rtems_thread *thread
47 );
48
49 void rtems_thread_destroy_self(
50   void
51 ) RTEMS_NO_RETURN;
```



# MULTIPROCESSING MANAGER

## 26.1 Introduction

In multiprocessor real-time systems, new requirements, such as sharing data and global resources between processors, are introduced. This requires an efficient and reliable communications vehicle which allows all processors to communicate with each other as necessary. In addition, the ramifications of multiple processors affect each and every characteristic of a real-time system, almost always making them more complicated.

RTEMS addresses these issues by providing simple and flexible real-time multiprocessing capabilities. The executive easily lends itself to both tightly-coupled and loosely-coupled configurations of the target system hardware. In addition, RTEMS supports systems composed of both homogeneous and heterogeneous mixtures of processors and target boards.

A major design goal of the RTEMS executive was to transcend the physical boundaries of the target hardware configuration. This goal is achieved by presenting the application software with a logical view of the target system where the boundaries between processor nodes are transparent. As a result, the application developer may designate objects such as tasks, queues, events, signals, semaphores, and memory blocks as global objects. These global objects may then be accessed by any task regardless of the physical location of the object and the accessing task. RTEMS automatically determines that the object being accessed resides on another processor and performs the actions required to access the desired object. Simply stated, RTEMS allows the entire system, both hardware and software, to be viewed logically as a single system.

The directives provided by the Manager are:

- *rtems\_multiprocessing\_announce* (page 518) - A multiprocessing communications packet has arrived

## 26.2 Background

RTEMS makes no assumptions regarding the connection media or topology of a multiprocessor system. The tasks which compose a particular application can be spread among as many processors as needed to satisfy the application's timing requirements. The application tasks can interact using a subset of the RTEMS directives as if they were on the same processor. These directives allow application tasks to exchange data, communicate, and synchronize regardless of which processor they reside upon.

The RTEMS multiprocessor execution model is multiple instruction streams with multiple data streams (MIMD). This execution model has each of the processors executing code independent of the other processors. Because of this parallelism, the application designer can more easily guarantee deterministic behavior.

By supporting heterogeneous environments, RTEMS allows the systems designer to select the most efficient processor for each subsystem of the application. Configuring RTEMS for a heterogeneous environment is no more difficult than for a homogeneous one. In keeping with RTEMS philosophy of providing transparent physical node boundaries, the minimal heterogeneous processing required is isolated in the MPCFI layer.

### 26.2.1 Nodes

A processor in a RTEMS system is referred to as a node. Each node is assigned a unique non-zero node number by the application designer. RTEMS assumes that node numbers are assigned consecutively from one to the `maximum_nodes` configuration parameter. The node number, node, and the maximum number of nodes, `maximum_nodes`, in a system are found in the Multiprocessor Configuration Table. The `maximum_nodes` field and the number of global objects, `maximum_global_objects`, is required to be the same on all nodes in a system.

The node number is used by RTEMS to identify each node when performing remote operations. Thus, the Multiprocessor Communications Interface Layer (MPCFI) must be able to route messages based on the node number.

### 26.2.2 Global Objects

All RTEMS objects which are created with the `GLOBAL` attribute will be known on all other nodes. Global objects can be referenced from any node in the system, although certain directive specific restrictions (e.g. one cannot delete a remote object) may apply. A task does not have to be global to perform operations involving remote objects. The maximum number of global objects in the system is user configurable and can be found in the `maximum_global_objects` field in the Multiprocessor Configuration Table. The distribution of tasks to processors is performed during the application design phase. Dynamic task relocation is not supported by RTEMS.

### 26.2.3 Global Object Table

RTEMS maintains two tables containing object information on every node in a multiprocessor system: a local object table and a global object table. The local object table on each node is unique and contains information for all objects created on this node whether those objects are local or global. The global object table contains information regarding all global objects in the system and, consequently, is the same on every node.

Since each node must maintain an identical copy of the global object table, the maximum number of entries in each copy of the table must be the same. The maximum number of entries in each copy is determined by the `maximum_global_objects` parameter in the Multiprocessor Configuration Table. This parameter, as well as the `maximum_nodes` parameter, is required to be the same on all nodes. To maintain consistency among the table copies, every node in the system must be informed of the creation or deletion of a global object.

### 26.2.4 Remote Operations

When an application performs an operation on a remote global object, RTEMS must generate a Remote Request (RQ) message and send it to the appropriate node. After completing the requested operation, the remote node will build a Remote Response (RR) message and send it to the originating node. Messages generated as a side-effect of a directive (such as deleting a global task) are known as Remote Processes (RP) and do not require the receiving node to respond.

Other than taking slightly longer to execute directives on remote objects, the application is unaware of the location of the objects it acts upon. The exact amount of overhead required for a remote operation is dependent on the media connecting the nodes and, to a lesser degree, on the efficiency of the user-provided MPCFI routines.

The following shows the typical transaction sequence during a remote application:

1. The application issues a directive accessing a remote global object.
2. RTEMS determines the node on which the object resides.
3. RTEMS calls the user-provided MPCFI routine `GET_PACKET` to obtain a packet in which to build a RQ message.
4. After building a message packet, RTEMS calls the user-provided MPCFI routine `SEND_PACKET` to transmit the packet to the node on which the object resides (referred to as the destination node).
5. The calling task is blocked until the RR message arrives, and control of the processor is transferred to another task.
6. The MPCFI layer on the destination node senses the arrival of a packet (commonly in an ISR), and calls the `rtems_multiprocessing_announce` directive. This directive readies the Multiprocessing Server.
7. The Multiprocessing Server calls the user-provided MPCFI routine `RECEIVE_PACKET`, performs the requested operation, builds an RR message, and returns it to the originating node.
8. The MPCFI layer on the originating node senses the arrival of a packet (typically via an interrupt), and calls the RTEMS `rtems_multiprocessing_announce` directive. This directive readies the Multiprocessing Server.

9. The Multiprocessing Server calls the user-provided MPCFI routine `RECEIVE_PACKET`, readies the original requesting task, and blocks until another packet arrives. Control is transferred to the original task which then completes processing of the directive.

If an uncorrectable error occurs in the user-provided MPCFI layer, the fatal error handler should be invoked. RTEMS assumes the reliable transmission and reception of messages by the MPCFI and makes no attempt to detect or correct errors.

### 26.2.5 Proxies

A proxy is an RTEMS data structure which resides on a remote node and is used to represent a task which must block as part of a remote operation. This action can occur as part of the `rtems_semaphore_obtain` and `rtems_message_queue_receive` directives. If the object were local, the task's control block would be available for modification to indicate it was blocking on a message queue or semaphore. However, the task's control block resides only on the same node as the task. As a result, the remote node must allocate a proxy to represent the task until it can be readied.

The maximum number of proxies is defined in the Multiprocessor Configuration Table. Each node in a multiprocessor system may require a different number of proxies to be configured. The distribution of proxy control blocks is application dependent and is different from the distribution of tasks.

### 26.2.6 Multiprocessor Configuration Table

The Multiprocessor Configuration Table contains information needed by RTEMS when used in a multiprocessor system. This table is discussed in detail in the section Multiprocessor Configuration Table of the Configuring a System chapter.

## 26.3 Multiprocessor Communications Interface Layer

The Multiprocessor Communications Interface Layer (MPCI) is a set of user-provided procedures which enable the nodes in a multiprocessor system to communicate with one another. These routines are invoked by RTEMS at various times in the preparation and processing of remote requests. Interrupts are enabled when an MPCI procedure is invoked. It is assumed that if the execution mode and/or interrupt level are altered by the MPCI layer, that they will be restored prior to returning to RTEMS.

The MPCI layer is responsible for managing a pool of buffers called packets and for sending these packets between system nodes. Packet buffers contain the messages sent between the nodes. Typically, the MPCI layer will encapsulate the packet within an envelope which contains the information needed by the MPCI layer. The number of packets available is dependent on the MPCI layer implementation.

The entry points to the routines in the user's MPCI layer should be placed in the Multiprocessor Communications Interface Table. The user must provide entry points for each of the following table entries in a multiprocessor system:

initialization	initialize the MPCI
get_packet	obtain a packet buffer
return_packet	return a packet buffer
send_packet	send a packet to another node
receive_packet	called to get an arrived packet

A packet is sent by RTEMS in each of the following situations:

- an RQ is generated on an originating node;
- an RR is generated on a destination node;
- a global object is created;
- a global object is deleted;
- a local task blocked on a remote object is deleted;
- during system initialization to check for system consistency.

If the target hardware supports it, the arrival of a packet at a node may generate an interrupt. Otherwise, the real-time clock ISR can check for the arrival of a packet. In any case, the `rtems_multiprocessing_announce` directive must be called to announce the arrival of a packet. After exiting the ISR, control will be passed to the Multiprocessing Server to process the packet. The Multiprocessing Server will call the `get_packet` entry to obtain a packet buffer and the `receive_entry` entry to copy the message into the buffer obtained.



### 26.3.1 INITIALIZATION

The INITIALIZATION component of the user-provided MPCPI layer is called as part of the `rtems_initialize_executive` directive to initialize the MPCPI layer and associated hardware. It is invoked immediately after all of the device drivers have been initialized. This component should adhere to the following prototype:

```
1 rtems_mpci_entry user_mpci_initialization( void );
```

Operations on global objects cannot be performed until this component is invoked. The INITIALIZATION component is invoked only once in the life of any system. If the MPCPI layer cannot be successfully initialized, the fatal error manager should be invoked by this routine.

One of the primary functions of the MPCPI layer is to provide the executive with packet buffers. The INITIALIZATION routine must create and initialize a pool of packet buffers. There must be enough packet buffers so RTEMS can obtain one whenever needed.

### 26.3.2 GET\_PACKET

The GET\_PACKET component of the user-provided MPCPI layer is called when RTEMS must obtain a packet buffer to send or broadcast a message. This component should adhere to the following prototype:

```
1 rtems_mpci_entry user_mpci_get_packet(  
2     rtems_packet_prefix **packet  
3 );
```

where `packet` is the address of a pointer to a packet. This routine always succeeds and, upon return, `packet` will contain the address of a packet. If for any reason, a packet cannot be successfully obtained, then the fatal error manager should be invoked.

RTEMS has been optimized to avoid the need for obtaining a packet each time a message is sent or broadcast. For example, RTEMS sends response messages (RR) back to the originator in the same packet in which the request message (RQ) arrived.

### 26.3.3 RETURN\_PACKET

The RETURN\_PACKET component of the user-provided MPCPI layer is called when RTEMS needs to release a packet to the free packet buffer pool. This component should adhere to the following prototype:

```
1 rtems_mpci_entry user_mpci_return_packet(  
2     rtems_packet_prefix *packet  
3 );
```


where `packet` is the address of a packet. If the packet cannot be successfully returned, the fatal error manager should be invoked.



(continued from previous page)



Conversely, processors which place the most significant byte at the smallest address are classified as big endian processors. Big endian byte-ordering is shown below:

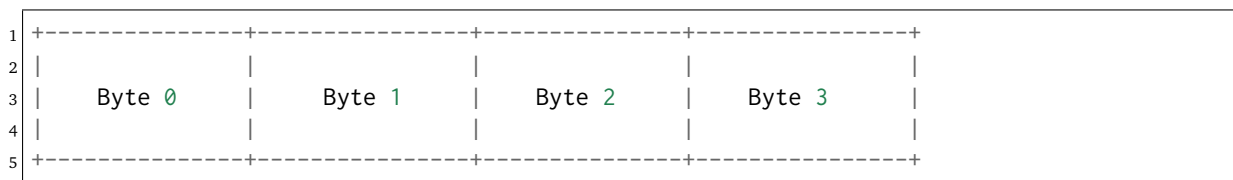

Unfortunately, sharing a data structure between big endian and little endian processors requires translation into a common endian format. An application designer typically chooses the common endian format to minimize conversion overhead.

Another issue in the design of shared data structures is the alignment of data structure elements. Alignment is both processor and compiler implementation dependent. For example, some processors allow data elements to begin on any address boundary, while others impose restrictions. Common restrictions are that data elements must begin on either an even address or on a long word boundary. Violation of these restrictions may cause an exception or impose a performance penalty.

Other issues which commonly impact the design of shared data structures include the representation of floating point numbers, bit fields, decimal data, and character strings. In addition, the representation method for negative integers could be one's or two's complement. These factors combine to increase the complexity of designing and manipulating data structures shared between processors.

RTEMS addressed these issues in the design of the packets used to communicate between nodes. The RTEMS packet format is designed to allow the MPCFI layer to perform all necessary conversion without burdening the developer with the details of the RTEMS packet format. As a result, the MPCFI layer must be aware of the following:

- All packets must begin on a four byte boundary.
- Packets are composed of both RTEMS and application data. All RTEMS data is treated as 32-bit unsigned quantities and is in the first `to_convert` 32-bit quantities of the packet. The `to_convert` field is part of the `rtems_packet_prefix` portion of the packet.
- The RTEMS data component of the packet must be in native endian format. Endian conversion may be performed by either the sending or receiving MPCFI layer.
- RTEMS makes no assumptions regarding the application data component of the packet.

## 26.4 Operations

### 26.4.1 Announcing a Packet

The `rtems_multiprocessing_announce` directive is called by the MPCIE layer to inform RTEMS that a packet has arrived from another node. This directive can be called from an interrupt service routine or from within a polling routine.

## 26.5 Directives

This section details the additional directives required to support RTEMS in a multiprocessor configuration. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 26.5.1 MULTIPROCESSING\_ANNOUNCE - Announce the arrival of a packet

**CALLING SEQUENCE:**

```
1 void rtems_multiprocessing_announce( void );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This directive informs RTEMS that a multiprocessing communications packet has arrived from another node. This directive is called by the user-provided MPC1, and is only used in multi-processor configurations.

**NOTES:**

This directive is typically called from an ISR.

This directive will almost certainly cause the calling task to be preempted.

This directive does not generate activity on remote nodes.

# SYMMETRIC MULTIPROCESSING (SMP)

## 27.1 Introduction

The Symmetric Multiprocessing (SMP) support of the RTEMS is available on

- ARMv7-A,
- PowerPC,
- RISC-V, and
- SPARC.

**Warning:** The SMP support is only available if RTEMS was built with the `--enable-smp` build configuration option.

RTEMS is supposed to be a real-time operating system. What does this mean in the context of SMP? The RTEMS interpretation of real-time on SMP is the support for *Clustered Scheduling* (page 523) with priority based schedulers and adequate locking protocols. One aim is to enable a schedulability analysis under the sporadic task model [Bra11] [BW13].



## 27.2 Background

### 27.2.1 Application Configuration

By default, the maximum processor count is set to one in the application configuration. To enable SMP, the application configuration option `CONFIGURE_MAXIMUM_PROCESSORS` (page 382) must be defined to a value greater than one. It is recommended to use the smallest value suitable for the application in order to save memory. Each processor needs an idle thread and interrupt stack for example.

The default scheduler for SMP applications supports up to 32 processors and is a global fixed priority scheduler, see also *Clustered Scheduler Configuration* (page 451).

The following compile-time test can be used to check if the SMP support is available or not.

```
1 #include <rtems.h>
2
3 #ifdef RTEMS_SMP
4 #warning "SMP support is enabled"
5 #else
6 #warning "SMP support is disabled"
7 #endif
```

### 27.2.2 Examples

For example applications see [testsuites/smptests](#).

### 27.2.3 Uniprocessor versus SMP Parallelism

Uniprocessor systems have long been used in embedded systems. In this hardware model, there are some system execution characteristics which have long been taken for granted:

- one task executes at a time
- hardware events result in interrupts

There is no true parallelism. Even when interrupts appear to occur at the same time, they are processed in largely a serial fashion. This is true even when the interrupt service routines are allowed to nest. From a tasking viewpoint, it is the responsibility of the real-time operating system to simulate parallelism by switching between tasks. These task switches occur in response to hardware interrupt events and explicit application events such as blocking for a resource or delaying.

With symmetric multiprocessing, the presence of multiple processors allows for true concurrency and provides for cost-effective performance improvements. Uniprocessors tend to increase performance by increasing clock speed and complexity. This tends to lead to hot, power hungry microprocessors which are poorly suited for many embedded applications.

The true concurrency is in sharp contrast to the single task and interrupt model of uniprocessor systems. This results in a fundamental change to uniprocessor system characteristics listed above. Developers are faced with a different set of characteristics which, in turn, break some existing assumptions and result in new challenges. In an SMP system with N processors, these are the new execution characteristics.

- N tasks execute in parallel
- hardware events result in interrupts

There is true parallelism with a task executing on each processor and the possibility of interrupts occurring on each processor. Thus in contrast to their being one task and one interrupt to consider on a uniprocessor, there are N tasks and potentially N simultaneous interrupts to consider on an SMP system.

This increase in hardware complexity and presence of true parallelism results in the application developer needing to be even more cautious about mutual exclusion and shared data access than in a uniprocessor embedded system. Race conditions that never or rarely happened when an application executed on a uniprocessor system, become much more likely due to multiple threads executing in parallel. On a uniprocessor system, these race conditions would only happen when a task switch occurred at just the wrong moment. Now there are N-1 tasks executing in parallel all the time and this results in many more opportunities for small windows in critical sections to be hit.

#### 27.2.4 Task Affinity

RTEMS provides services to manipulate the affinity of a task. Affinity is used to specify the subset of processors in an SMP system on which a particular task can execute.

By default, tasks have an affinity which allows them to execute on any available processor.

Task affinity is a possible feature to be supported by SMP-aware schedulers. However, only a subset of the available schedulers support affinity. Although the behavior is scheduler specific, if the scheduler does not support affinity, it is likely to ignore all attempts to set affinity.

The scheduler with support for arbitrary processor affinities uses a proof of concept implementation. See <https://devel.rtems.org/ticket/2510>.

#### 27.2.5 Task Migration

With more than one processor in the system tasks can migrate from one processor to another. There are four reasons why tasks migrate in RTEMS.

- The scheduler changes explicitly via `rtems_task_set_scheduler()` (page 106) or similar directives.
- The task processor affinity changes explicitly via `rtems_task_set_affinity()` (page 109) or similar directives.
- The task resumes execution after a blocking operation. On a priority based scheduler it will evict the lowest priority task currently assigned to a processor in the processor set managed by the scheduler instance.
- The task moves temporarily to another scheduler instance due to locking protocols like the *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30) or the *O(m) Independence-Preserving Protocol (OMIP)* (page 30).

Task migration should be avoided so that the working set of a task can stay on the most local cache level.

### 27.2.6 Clustered Scheduling

The scheduler is responsible to assign processors to some of the threads which are ready to execute. Trouble starts if more ready threads than processors exist at the same time. There are various rules how the processor assignment can be performed attempting to fulfill additional constraints or yield some overall system properties. As a matter of fact it is impossible to meet all requirements at the same time. The way a scheduler works distinguishes real-time operating systems from general purpose operating systems.

We have clustered scheduling in case the set of processors of a system is partitioned into non-empty pairwise-disjoint subsets of processors. These subsets are called clusters. Clusters with a cardinality of one are partitions. Each cluster is owned by exactly one scheduler instance. In case the cluster size equals the processor count, it is called global scheduling.

Modern SMP systems have multi-layer caches. An operating system which neglects cache constraints in the scheduler will not yield good performance. Real-time operating systems usually provide priority (fixed or job-level) based schedulers so that each of the highest priority threads is assigned to a processor. Priority based schedulers have difficulties in providing cache locality for threads and may suffer from excessive thread migrations [Bra11] [CMV14]. Schedulers that use local run queues and some sort of load-balancing to improve the cache utilization may not fulfill global constraints [GCB13] and are more difficult to implement than one would normally expect [LLF+16].

Clustered scheduling was implemented for RTEMS SMP to best use the cache topology of a system and to keep the worst-case latencies under control. The low-level SMP locks use FIFO ordering. So, the worst-case run-time of operations increases with each processor involved. The scheduler configuration is quite flexible and done at link-time, see *Clustered Scheduler Configuration* (page 451). It is possible to re-assign processors to schedulers during run-time via `rtems_scheduler_add_processor()` (page 63) and `rtems_scheduler_remove_processor()` (page 64). The schedulers are implemented in an object-oriented fashion.

The problem is to provide synchronization primitives for inter-cluster synchronization (more than one cluster is involved in the synchronization process). In RTEMS there are currently some means available

- events,
- message queues,
- mutexes using the *O(m) Independence-Preserving Protocol (OMIP)* (page 30),
- mutexes using the *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30), and
- binary and counting semaphores.

The clustered scheduling approach enables separation of functions with real-time requirements and functions that profit from fairness and high throughput provided the scheduler instances are fully decoupled and adequate inter-cluster synchronization primitives are used.

To set the scheduler of a task see `rtems_scheduler_ident()` (page 54) and `rtems_task_set_scheduler()` (page 106).

### 27.2.7 OpenMP

OpenMP support for RTEMS is available via the GCC provided libgomp. There is libgomp support for RTEMS in the POSIX configuration of libgomp since GCC 4.9 (requires a Newlib snapshot after 2015-03-12). In GCC 6.1 or later (requires a Newlib snapshot after 2015-07-30 for <sys/lock.h> provided self-contained synchronization objects) there is a specialized libgomp configuration for RTEMS which offers a significantly better performance compared to the POSIX configuration of libgomp. In addition application configurable thread pools for each scheduler instance are available in GCC 6.1 or later.

The run-time configuration of libgomp is done via environment variables documented in the [libgomp manual](#). The environment variables are evaluated in a constructor function which executes in the context of the first initialization task before the actual initialization task function is called (just like a global C++ constructor). To set application specific values, a higher priority constructor function must be used to set up the environment variables.

```

1 #include <stdlib.h>
2 void __attribute__((constructor(1000))) config_libgomp( void )
3 {
4     setenv( "OMP_DISPLAY_ENV", "VERBOSE", 1 );
5     setenv( "GOMP_SPINCOUNT", "30000", 1 );
6     setenv( "GOMP_RTEMS_THREAD_POOLS", "1$2@SCHD", 1 );
7 }

```

The environment variable GOMP\_RTEMS\_THREAD\_POOLS is RTEMS-specific. It determines the thread pools for each scheduler instance. The format for GOMP\_RTEMS\_THREAD\_POOLS is a list of optional <thread-pool-count>[<priority>]@<scheduler-name> configurations separated by : where:

- <thread-pool-count> is the thread pool count for this scheduler instance.
- <priority> is an optional priority for the worker threads of a thread pool according to pthread\_setschedparam. In case a priority value is omitted, then a worker thread will inherit the priority of the OpenMP master thread that created it. The priority of the worker thread is not changed by libgomp after creation, even if a new OpenMP master thread using the worker has a different priority.
- @<scheduler-name> is the scheduler instance name according to the RTEMS application configuration.

In case no thread pool configuration is specified for a scheduler instance, then each OpenMP master thread of this scheduler instance will use its own dynamically allocated thread pool. To limit the worker thread count of the thread pools, each OpenMP master thread must call `omp_set_num_threads`.

Lets suppose we have three scheduler instances IO, WRK0, and WRK1 with GOMP\_RTEMS\_THREAD\_POOLS set to "1@WRK0:3\$4@WRK1". Then there are no thread pool restrictions for scheduler instance IO. In the scheduler instance WRK0 there is one thread pool available. Since no priority is specified for this scheduler instance, the worker thread inherits the priority of the OpenMP master thread that created it. In the scheduler instance WRK1 there are three thread pools available and their worker threads run at priority four.

### 27.2.8 Atomic Operations

There is no public RTEMS API for atomic operations. It is recommended to use the standard C `<stdatomic.h>` or C++ `<atomic>` APIs in applications.

## 27.3 Application Issues

Most operating system services provided by the uniprocessor RTEMS are available in SMP configurations as well. However, applications designed for an uniprocessor environment may need some changes to correctly run in an SMP configuration.

As discussed earlier, SMP systems have opportunities for true parallelism which was not possible on uniprocessor systems. Consequently, multiple techniques that provided adequate critical sections on uniprocessor systems are unsafe on SMP systems. In this section, some of these unsafe techniques will be discussed.

In general, applications must use proper operating system provided mutual exclusion mechanisms to ensure correct behavior.

### 27.3.1 Task variables

Task variables are ordinary global variables with a dedicated value for each thread. During a context switch from the executing thread to the heir thread, the value of each task variable is saved to the thread control block of the executing thread and restored from the thread control block of the heir thread. This is inherently broken if more than one executing thread exists. Alternatives to task variables are POSIX keys and *TLS*. All use cases of task variables in the RTEMS code base were replaced with alternatives. The task variable API has been removed in RTEMS 5.1.

### 27.3.2 Highest Priority Thread Never Walks Alone

On a uniprocessor system, it is safe to assume that when the highest priority task in an application executes, it will execute without being preempted until it voluntarily blocks. Interrupts may occur while it is executing, but there will be no context switch to another task unless the highest priority task voluntarily initiates it.

Given the assumption that no other tasks will have their execution interleaved with the highest priority task, it is possible for this task to be constructed such that it does not need to acquire a mutex for protected access to shared data.

In an SMP system, it cannot be assumed there will never be a single task executing. It should be assumed that every processor is executing another application task. Further, those tasks will be ones which would not have been executed in a uniprocessor configuration and should be assumed to have data synchronization conflicts with what was formerly the highest priority task which executed without conflict.

### 27.3.3 Disabling of Thread Preemption

A thread which disables preemption prevents that a higher priority thread gets hold of its processor involuntarily. In uniprocessor configurations, this can be used to ensure mutual exclusion at thread level. In SMP configurations, however, more than one executing thread may exist. Thus, it is impossible to ensure mutual exclusion using this mechanism. In order to prevent that applications using preemption for this purpose, would show inappropriate behaviour, this feature is disabled in SMP configurations and its use would cause run-time errors.

### 27.3.4 Disabling of Interrupts

A low overhead means that ensures mutual exclusion in uniprocessor configurations is the disabling of interrupts around a critical section. This is commonly used in device driver code. In SMP configurations, however, disabling the interrupts on one processor has no effect on other processors. So, this is insufficient to ensure system-wide mutual exclusion. The macros

- `rtems_interrupt_disable()` (page 128),
- `rtems_interrupt_enable()` (page 129), and
- `rtems_interrupt_flash()` (page 130).

are disabled in SMP configurations and its use will cause compile-time warnings and link-time errors. In the unlikely case that interrupts must be disabled on the current processor, the

- `rtems_interrupt_local_disable()` (page 131), and
- `rtems_interrupt_local_enable()` (page 133).

macros are now available in all configurations.

Since disabling of interrupts is insufficient to ensure system-wide mutual exclusion on SMP a new low-level synchronization primitive was added – interrupt locks. The interrupt locks are a simple API layer on top of the SMP locks used for low-level synchronization in the operating system core. Currently, they are implemented as a ticket lock. In uniprocessor configurations, they degenerate to simple interrupt disable/enable sequences by means of the C pre-processor. It is disallowed to acquire a single interrupt lock in a nested way. This will result in an infinite loop with interrupts disabled. While converting legacy code to interrupt locks, care must be taken to avoid this situation to happen.

```

1 #include <rtems.h>
2
3 void legacy_code_with_interrupt_disable_enable( void )
4 {
5     rtems_interrupt_level level;
6
7     rtems_interrupt_disable( level );
8     /* Critical section */
9     rtems_interrupt_enable( level );
10 }
11
12 RTEMS_INTERRUPT_LOCK_DEFINE( static, lock, "Name" )
13
14 void smp_ready_code_with_interrupt_lock( void )
15 {
16     rtems_interrupt_lock_context lock_context;
17
18     rtems_interrupt_lock_acquire( &lock, &lock_context );
19     /* Critical section */
20     rtems_interrupt_lock_release( &lock, &lock_context );
21 }

```

An alternative to the RTEMS-specific interrupt locks are POSIX spinlocks. The `pthread_spinlock_t` is defined as a self-contained object, e.g. the user must provide the storage for this synchronization object.

```
1 #include <assert.h>
2 #include <pthread.h>
3
4 pthread_spinlock_t lock;
5
6 void smp_ready_code_with_posix_spinlock( void )
7 {
8     int error;
9
10    error = pthread_spin_lock( &lock );
11    assert( error == 0 );
12    /* Critical section */
13    error = pthread_spin_unlock( &lock );
14    assert( error == 0 );
15 }
```

In contrast to POSIX spinlock implementation on Linux or FreeBSD, it is not allowed to call blocking operating system services inside the critical section. A recursive lock attempt is a severe usage error resulting in an infinite loop with interrupts disabled. Nesting of different locks is allowed. The user must ensure that no deadlock can occur. As a non-portable feature the locks are zero-initialized, e.g. statically initialized global locks reside in the `.bss` section and there is no need to call `pthread_spin_init()`.

### 27.3.5 Interrupt Service Routines Execute in Parallel With Threads

On a machine with more than one processor, interrupt service routines (this includes timer service routines installed via `rtems_timer_fire_after()` (page 174)) and threads can execute in parallel. Interrupt service routines must take this into account and use proper locking mechanisms to protect critical sections from interference by threads (interrupt locks or POSIX spinlocks). This likely requires code modifications in legacy device drivers.

### 27.3.6 Timers Do Not Stop Immediately

Timer service routines run in the context of the clock interrupt. On uniprocessor configurations, it is sufficient to disable interrupts and remove a timer from the set of active timers to stop it. In SMP configurations, however, the timer service routine may already run and wait on an SMP lock owned by the thread which is about to stop the timer. This opens the door to subtle synchronization issues. During destruction of objects, special care must be taken to ensure that timer service routines cannot access (partly or fully) destroyed objects.

### 27.3.7 False Sharing of Cache Lines Due to Objects Table

The Classic API and most POSIX API objects are indirectly accessed via an object identifier. The user-level functions validate the object identifier and map it to the actual object structure which resides in a global objects table for each object class. So, unrelated objects are packed together in a table. This may result in false sharing of cache lines. The effect of false sharing of cache lines can be observed with the **TMFINE 1** test program on a suitable platform, e.g. QorIQ T4240. High-performance SMP applications need full control of the object storage [Dre07]. Therefore, self-contained synchronization objects are now available for RTEMS.



## 27.4 Implementation Details

This section covers some implementation details of the RTEMS SMP support.


### 27.4.1 Low-Level Synchronization


All low-level synchronization primitives are implemented using *C11* atomic operations, so no target-specific hand-written assembler code is necessary. Four synchronization primitives are currently available

- ticket locks (mutual exclusion),
- *MCS* locks (mutual exclusion),
- barriers, implemented as a sense barrier, and
- sequence locks [Boe12].

A vital requirement for low-level mutual exclusion is *FIFO* fairness since we are interested in a predictable system and not maximum throughput. With this requirement, there are only few options to resolve this problem. For reasons of simplicity, the ticket lock algorithm was chosen to implement the SMP locks. However, the API is capable to support *MCS* locks, which may be interesting in the future for systems with a processor count in the range of 32 or more, e.g. *NUMA*, many-core systems.

The test program **SMPLOCK 1** can be used to gather performance and fairness data for several scenarios. The SMP lock performance and fairness measured on the QorIQ T4240 follows as an example. This chip contains three L2 caches. Each L2 cache is shared by eight processors.

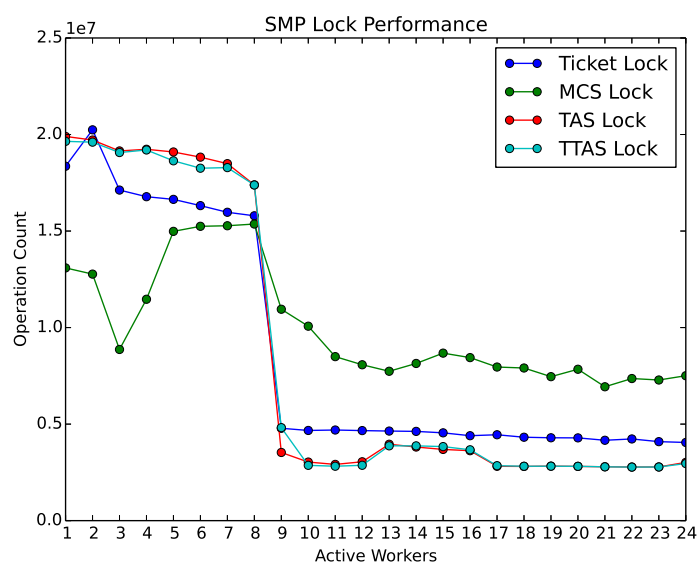

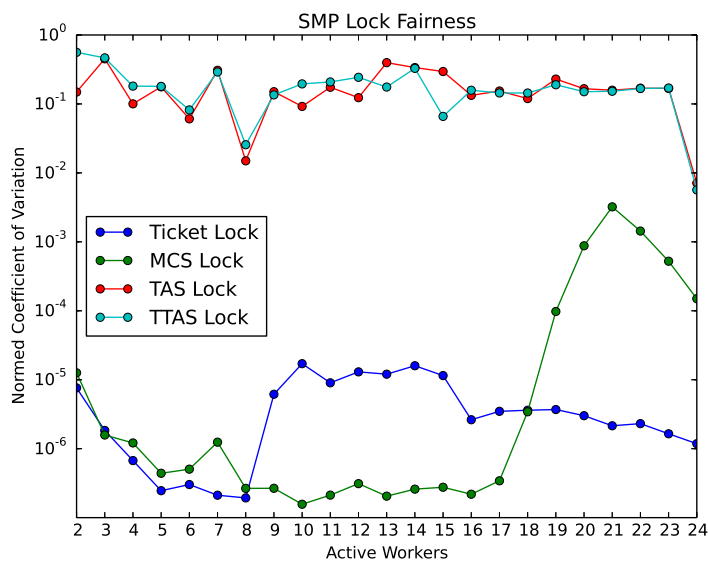

## 27.4.2 Internal Locking

In SMP configurations, the operating system uses non-recursive SMP locks for low-level mutual exclusion. The locking domains are roughly

- a particular data structure,
- the thread queue operations,
- the thread state changes, and
- the scheduler operations.

For a good average-case performance it is vital that every high-level synchronization object, e.g. mutex, has its own SMP lock. In the average-case, only this SMP lock should be involved to carry out a specific operation, e.g. obtain/release a mutex. In general, the high-level synchronization objects have a thread queue embedded and use its SMP lock.

In case a thread must block on a thread queue, then things get complicated. The executing thread first acquires the SMP lock of the thread queue and then figures out that it needs to block. The procedure to block the thread on this particular thread queue involves state changes of the thread itself and for this thread-specific SMP locks must be used.

In order to determine if a thread is blocked on a thread queue or not thread-specific SMP locks must be used. A thread priority change must propagate this to the thread queue (possibly recursively). Care must be taken to not have a lock order reversal between thread queue and thread-specific SMP locks.

Each scheduler instance has its own SMP lock. For the scheduler helping protocol multiple scheduler instances may be in charge of a thread. It is not possible to acquire two scheduler instance SMP locks at the same time, otherwise deadlocks would happen. A thread-specific SMP lock is used to synchronize the thread data shared by different scheduler instances.

The thread state SMP lock protects various things, e.g. the thread state, join operations, signals, post-switch actions, the home scheduler instance, etc.

### 27.4.3 Profiling

To identify the bottlenecks in the system, support for profiling of low-level synchronization is optionally available. The profiling support is a BSP build time configuration option (`--enable-profiling`) and is implemented with an acceptable overhead, even for production systems. A low-overhead counter for short time intervals must be provided by the hardware.

Profiling reports are generated in XML for most test programs of the RTEMS testsuite (more than 500 test programs). This gives a good sample set for statistics. For example the maximum thread dispatch disable time, the maximum interrupt latency or lock contention can be determined.

```

1 <ProfilingReport name="SMPMIGRATION 1">
2   <PerCPUProfilingReport processorIndex="0">
3     <MaxThreadDispatchDisabledTime unit="ns">36636</MaxThreadDispatchDisabledTime>
4     <MeanThreadDispatchDisabledTime unit="ns">5065</MeanThreadDispatchDisabledTime>
5     <TotalThreadDispatchDisabledTime unit="ns">3846635988
6       </TotalThreadDispatchDisabledTime>
7     <ThreadDispatchDisabledCount>759395</ThreadDispatchDisabledCount>
8     <MaxInterruptDelay unit="ns">8772</MaxInterruptDelay>
9     <MaxInterruptTime unit="ns">13668</MaxInterruptTime>
10    <MeanInterruptTime unit="ns">6221</MeanInterruptTime>
11    <TotalInterruptTime unit="ns">6757072</TotalInterruptTime>
12    <InterruptCount>1086</InterruptCount>
13  </PerCPUProfilingReport>
14  <PerCPUProfilingReport processorIndex="1">
15    <MaxThreadDispatchDisabledTime unit="ns">39408</MaxThreadDispatchDisabledTime>
16    <MeanThreadDispatchDisabledTime unit="ns">5060</MeanThreadDispatchDisabledTime>
17    <TotalThreadDispatchDisabledTime unit="ns">3842749508
18      </TotalThreadDispatchDisabledTime>
19    <ThreadDispatchDisabledCount>759391</ThreadDispatchDisabledCount>
20    <MaxInterruptDelay unit="ns">8412</MaxInterruptDelay>
21    <MaxInterruptTime unit="ns">15868</MaxInterruptTime>
22    <MeanInterruptTime unit="ns">3525</MeanInterruptTime>
23    <TotalInterruptTime unit="ns">3814476</TotalInterruptTime>
24    <InterruptCount>1082</InterruptCount>
25  </PerCPUProfilingReport>
26  <!-- more reports omitted --->
27  <SMPLockProfilingReport name="Scheduler">
28    <MaxAcquireTime unit="ns">7092</MaxAcquireTime>
29    <MaxSectionTime unit="ns">10984</MaxSectionTime>
30    <MeanAcquireTime unit="ns">2320</MeanAcquireTime>
31    <MeanSectionTime unit="ns">199</MeanSectionTime>
32    <TotalAcquireTime unit="ns">3523939244</TotalAcquireTime>
33    <TotalSectionTime unit="ns">302545596</TotalSectionTime>
34    <UsageCount>1518758</UsageCount>
35    <ContentionCount initialQueueLength="0">759399</ContentionCount>
36    <ContentionCount initialQueueLength="1">759359</ContentionCount>
37    <ContentionCount initialQueueLength="2">0</ContentionCount>
38    <ContentionCount initialQueueLength="3">0</ContentionCount>
39  </SMPLockProfilingReport>
40 </ProfilingReport>

```

### 27.4.4 Scheduler Helping Protocol

The scheduler provides a helping protocol to support locking protocols like the *O(m) Independence-Preserving Protocol (OMIP)* (page 30) or the *Multiprocessor Resource Sharing Protocol (MrsP)* (page 30). Each thread has a scheduler node for each scheduler instance in the system which are located in its *TCB*. A thread has exactly one home scheduler instance which is set during thread creation. The home scheduler instance can be changed with *rtems\_task\_set\_scheduler()* (page 106). Due to the locking protocols a thread may gain access to scheduler nodes of other scheduler instances. This allows the thread to temporarily migrate to another scheduler instance in case of preemption.

The scheduler infrastructure is based on an object-oriented design. The scheduler operations for a thread are defined as virtual functions. For the scheduler helping protocol the following operations must be implemented by an SMP-aware scheduler

- ask a scheduler node for help,
- reconsider the help request of a scheduler node,
- withdraw a scheduler node.

All currently available SMP-aware schedulers use a framework which is customized via inline functions. This eases the implementation of scheduler variants. Up to now, only priority-based schedulers are implemented.

In case a thread is allowed to use more than one scheduler node it will ask these nodes for help

- in case of preemption, or
- an unblock did not schedule the thread, or
- a yield was successful.

The actual ask for help scheduler operations are carried out as a side-effect of the thread dispatch procedure. Once a need for help is recognized, a help request is registered in one of the processors related to the thread and a thread dispatch is issued. This indirection leads to a better decoupling of scheduler instances. Unrelated processors are not burdened with extra work for threads which participate in resource sharing. Each ask for help operation indicates if it could help or not. The procedure stops after the first successful ask for help. Unsuccessful ask for help operations will register this need in the scheduler context.

After a thread dispatch the reconsider help request operation is used to clean up stale help registrations in the scheduler contexts.

The withdraw operation takes away scheduler nodes once the thread is no longer allowed to use them, e.g. it released a mutex. The availability of scheduler nodes for a thread is controlled by the thread queues.

### 27.4.5 Thread Dispatch Details

This section gives background information to developers interested in the interrupt latencies introduced by thread dispatching. A thread dispatch consists of all work which must be done to stop the currently executing thread on a processor and hand over this processor to an heir thread.

In SMP systems, scheduling decisions on one processor must be propagated to other processors through inter-processor interrupts. A thread dispatch which must be carried out on another processor does not happen instantaneously. Thus, several thread dispatch requests might be in the air and it is possible that some of them may be out of date before the corresponding processor has time to deal with them. The thread dispatch mechanism uses three per-processor variables,

- the executing thread,
- the heir thread, and
- a boolean flag indicating if a thread dispatch is necessary or not.

Updates of the heir thread are done via a normal store operation. The thread dispatch necessary indicator of another processor is set as a side-effect of an inter-processor interrupt. So, this change notification works without the use of locks. The thread context is protected by a *TTAS* lock embedded in the context to ensure that it is used on at most one processor at a time. Normally, only thread-specific or per-processor locks are used during a thread dispatch. This implementation turned out to be quite efficient and no lock contention was observed in the testsuite. The heavy-weight thread dispatch sequence is only entered in case the thread dispatch indicator is set.

The context-switch is performed with interrupts enabled. During the transition from the executing to the heir thread neither the stack of the executing nor the heir thread must be used during interrupt processing. For this purpose a temporary per-processor stack is set up which may be used by the interrupt prologue before the stack is switched to the interrupt stack.

### 27.4.6 Per-Processor Data

RTEMS provides two means for per-processor data:

1. Per-processor data which is used by RTEMS itself is contained in the *Per\_CPU\_Control* structure. The application configuration via `<rtems/confdefs.h>` creates a table of these structures (*\_Per\_CPU\_Information[]*). The table is dimensioned according to the count of configured processors (*CONFIGURE\_MAXIMUM\_PROCESSORS* (page 382)).
2. For low level support libraries an API for statically allocated per-processor data is available via `<rtems/score/percpudata.h>`. This API is not intended for general application use. Please ask on the development mailing list in case you want to use it.

### 27.4.7 Thread Pinning

Thread pinning ensures that a thread is only dispatched to the processor on which it is pinned. It may be used to access per-processor data structures in critical sections with enabled thread dispatching, e.g. a pinned thread is allowed to block. The `_Thread_Pin()` operation will pin the executing thread to its current processor. A thread may be pinned recursively, the last unpin request via `_Thread_Unpin()` revokes the pinning.

Thread pinning should be used only for short critical sections and not all the time. Thread pinning is a very low overhead operation in case the thread is not preempted during the pinning. A preemption will result in scheduler operations to ensure that the thread executes only on its pinned processor. Thread pinning must be used with care, since it prevents help through the locking protocols. This makes the *OMIP* (page 30) and *MrsP* (page 30) locking protocols ineffective if pinned threads are involved.

The thread pinning is not intended for general application use. Please ask on the development mailing list in case you want to use it.

---

CHAPTER

**TWENTYEIGHT**

---

**PCI LIBRARY**

## 28.1 Introduction

The Peripheral Component Interconnect (PCI) bus is a very common computer bus architecture that is found in almost every PC today. The PCI bus is normally located at the motherboard where some PCI devices are soldered directly onto the PCB and expansion slots allows the user to add custom devices easily. There is a wide range of PCI hardware available implementing all sorts of interfaces and functions.

This section describes the PCI Library available in RTEMS used to access the PCI bus in a portable way across computer architectures supported by RTEMS.

The PCI Library aims to be compatible with PCI 2.3 with a couple of limitations, for example there is no support for hot-plugging, 64-bit memory space and carbus bridges.

In order to support different architectures and with small foot-print embedded systems in mind the PCI Library offers four different configuration options listed below. It is selected during compile time by defining the appropriate macros in `confdefs.h`. It is also possible to enable `PCI_LIB_NONE` (No Configuration) which can be used for debugging PCI access functions.

- Auto Configuration (Plug & Play)
- Read Configuration (read BIOS or boot loader configuration)
- Static Configuration (write user defined configuration)
- Peripheral Configuration (no access to `cfg-space`)



## 28.2 Background

The PCI bus is constructed in a way where on-board devices and devices in expansion slots can be automatically found (probed) and configured using Plug & Play completely implemented in software. The bus is set up once during boot up. The Plug & Play information can be read and written from PCI configuration space. A PCI device is identified in configuration space by a unique bus, slot and function number. Each PCI slot can have up to 8 functions and interface to another PCI sub-bus by implementing a PCI-to-PCI bridge according to the PCI Bridge Architecture specification.

Using the unique [bus:slot:func] any device can be configured regardless of how PCI is currently set up as long as all PCI buses are enumerated correctly. The enumeration is done during probing, all bridges are given a bus number in order for the bridges to respond to accesses from both directions. The PCI library can assign address ranges to which a PCI device should respond using Plug & Play technique or a static user defined configuration. After the configuration has been performed the PCI device drivers can find devices by the read-only PCI Class type, Vendor ID and Device ID information found in configuration space for each device.

In some systems there is a boot loader or BIOS which have already configured all PCI devices, but on embedded targets it is quite common that there is no BIOS or boot loader, thus RTEMS must configure the PCI bus. Only the PCI host may do configuration space access, the host driver or BSP is responsible to translate the [bus:slot:func] into a valid PCI configuration space access.

If the target is not a host, but a peripheral, configuration space can not be accessed, the peripheral is set up by the host during start up. In complex embedded PCI systems the peripheral may need to access other PCI boards than the host. In such systems a custom (static) configuration of both the host and peripheral may be a convenient solution.

The PCI bus defines four interrupt signals INTA#..INTD#. The interrupt signals must be mapped into a system interrupt/vector, it is up to the BSP or host driver to know the mapping, however the BIOS or boot loader may use the 8-bit read/write "Interrupt Line" register to pass the knowledge along to the OS.

The PCI standard defines and recommends that the backplane route the interrupt lines in a systematic way, however in standard there is no such requirement. The PCI Auto Configuration Library implements the recommended way of routing which is very common but it is also supported to some extent to override the interrupt routing from the BSP or Host Bridge driver using the configuration structure.

### 28.2.1 Software Components

The PCI library is located in cpukit/libpci, it consists of different parts:

- PCI Host bridge driver interface
- Configuration routines
- Access (Configuration, I/O and Memory space) routines
- Interrupt routines (implemented by BSP)
- Print routines
- Static/peripheral configuration creation

- PCI shell command

### 28.2.2 PCI Configuration

During start up the PCI bus must be configured in order for host and peripherals to access one another using Memory or I/O accesses and that interrupts are properly handled. Three different spaces are defined and mapped separately:

1. I/O space (IO)
2. non-prefetchable Memory space (MEMIO)
3. prefetchable Memory space (MEM)

Regions of the same type (I/O or Memory) may not overlap which is guaranteed by the software. MEM regions may be mapped into MEMIO regions, but MEMIO regions can not be mapped into MEM, for that could lead to prefetching of registers. The interrupt pin which a board is driving can be read out from PCI configuration space, however it is up to software to know how interrupt signals are routed between PCI-to-PCI bridges and how PCI INT[A..D]# pins are mapped to system IRQ. In systems where previous software (boot loader or BIOS) has already set up this the configuration is overwritten or simply read out.

In order to support different configuration methods the following configuration libraries are selectable by the user:

- Auto Configuration (run Plug & Play software)
- Read Configuration (relies on a boot loader or BIOS)
- Static Configuration (write user defined setup, no Plug & Play)
- Peripheral Configuration (user defined setup, no access to configuration space)

A host driver can be made to support all three configuration methods, or any combination. It may be defined by the BSP which approach is used.

The configuration software is called from the PCI driver (`pci_config_init()`).

Regardless of configuration method a PCI device tree is created in RAM during initialization, the tree can be accessed to find devices and resources without accessing configuration space later on. The user is responsible to create the device tree at compile time when using the static/peripheral method.

#### 28.2.2.1 RTEMS Configuration selection

The active configuration method can be selected at compile time in the same way as other project parameters by including `rtems/confdefs.h` and setting

- `CONFIGURE_INIT`
- `RTEMS_PCI_CONFIG_LIB`
- `CONFIGURE_PCI_LIB = PCI_LIB_(AUTO,STATIC,READ,PERIPHERAL)`

See the RTEMS configuration section how to setup the PCI library.

### 28.2.2.2 Auto Configuration

The auto configuration software enumerates PCI buses and initializes all PCI devices found using Plug & Play. The auto configuration software requires that a configuration setup has been registered by the driver or BSP in order to setup the I/O and Memory regions at the correct address ranges. PCI interrupt pins can optionally be routed over PCI-to-PCI bridges and mapped to a system interrupt number. BAR resources are sorted by size and required alignment, unused “dead” space may be created when PCI bridges are present due to the PCI bridge window size does not equal the alignment. To cope with that resources are reordered to fit smaller BARs into the dead space to minimize the PCI space required. If a BAR or ROM register can not be allocated a PCI address region (due to too few resources available) the register will be given the value of `pci_invalid_address` which defaults to 0.

The auto configuration routines support:

- PCI 2.3
- Little and big endian PCI bus
- one I/O 16 or 32-bit range (IO)
- memory space (MEMIO)
- prefetchable memory space (MEM), if not present MEM will be mapped into MEMIO
- multiple PCI buses - PCI-to-PCI bridges
- standard BARs, PCI-to-PCI bridge BARs, ROM BARs
- Interrupt routing over bridges
- Interrupt pin to system interrupt mapping

Not supported:

- hot-pluggable devices
- Cardbus bridges
- 64-bit memory space
- 16-bit and 32-bit I/O address ranges at the same time

In PCI 2.3 there may exist I/O BARs that must be located at the low 64kBytes address range, in order to support this the host driver or BSP must make sure that I/O addresses region is within this region.

### 28.2.2.3 Read Configuration

When a BIOS or boot loader already has setup the PCI bus the configuration can be read directly from the PCI resource registers and buses are already enumerated, this is a much simpler approach than configuring PCI ourselves. The PCI device tree is automatically created based on the current configuration and devices present. After initialization is done there is no difference between the auto or read configuration approaches.

#### 28.2.2.4 Static Configuration

To support custom configurations and small-footprint PCI systems, the user may provide the PCI device tree which contains the current configuration. The PCI buses are enumerated and all resources are written to PCI devices during initialization. When this approach is selected PCI boards must be located at the same slots every time and devices can not be removed or added, Plug & Play is not performed. Boards of the same type may of course be exchanged.

The user can create a configuration by calling `pci_cfg_print()` on a running system that has had PCI setup by the auto or read configuration routines, it can be called from the PCI shell command. The user must provide the PCI device tree named `pci_hb`.

#### 28.2.2.5 Peripheral Configuration

On systems where a peripheral PCI device needs to access other PCI devices than the host the peripheral configuration approach may be handy. Most PCI devices answers on the PCI host's requests and start DMA accesses into the Hosts memory, however in some complex systems PCI devices may want to access other devices on the same bus or at another PCI bus.

A PCI peripheral is not allowed to do PCI configuration cycles, which means that it must either rely on the host to give it the addresses it needs, or that the addresses are predefined.

This configuration approach is very similar to the static option, however the configuration is never written to PCI bus, instead it is only used for drivers to find PCI devices and resources using the same PCI API as for the host

### 28.2.3 PCI Access

The PCI access routines are low-level routines provided for drivers, configuration software, etc. in order to access different regions in a way not dependent upon the host driver, BSP or platform.

- PCI configuration space
- PCI I/O space
- Registers over PCI memory space
- Translate PCI address into CPU accessible address and vice versa

By using the access routines drivers can be made portable over different architectures. The access routines take the architecture endianness into consideration and let the host driver or BSP implement I/O space and configuration space access.

Some non-standard hardware may also define the PCI bus big-endian, for example the LEON2 AT697 PCI host bridge and some LEON3 systems may be configured that way. It is up to the BSP to set the appropriate PCI endianness on compile time (`BSP_PCI_BIG_ENDIAN`) in order for inline macros to be correctly defined. Another possibility is to use the function pointers defined by the access layer to implement drivers that support “run-time endianness detection”.

### 28.2.3.1 Configuration space

Configuration space is accessed using the routines listed below. The `pci_dev_t` type is used to specify a specific PCI bus, device and function. It is up to the host driver or BSP to create a valid access to the requested PCI slot. Requests made to slots that are not supported by hardware should result in `PCISTS_MSTABRT` and/or data must be ignored (writes) or `0xFFFFFFFF` is always returned (reads).

```

1 /* Configuration Space Access Read Routines */
2 extern int pci_cfg_r8(pci_dev_t dev, int ofs, uint8_t *data);
3 extern int pci_cfg_r16(pci_dev_t dev, int ofs, uint16_t *data);
4 extern int pci_cfg_r32(pci_dev_t dev, int ofs, uint32_t *data);
5
6 /* Configuration Space Access Write Routines */
7 extern int pci_cfg_w8(pci_dev_t dev, int ofs, uint8_t data);
8 extern int pci_cfg_w16(pci_dev_t dev, int ofs, uint16_t data);
9 extern int pci_cfg_w32(pci_dev_t dev, int ofs, uint32_t data);

```

### 28.2.3.2 I/O space

The BSP or driver provide special routines in order to access I/O space. Some architectures have a special instruction accessing I/O space, others have it mapped into a “PCI I/O window” in the standard address space accessed by the CPU. The window size may vary and must be taken into consideration by the host driver. The below routines must be used to access I/O space. The address given to the functions is not the PCI I/O addresses, the caller must have translated PCI I/O addresses (available in the PCI BARs) into a BSP or host driver custom address, see *Access functions* (page 542) for how addresses are translated.

```

1 /* Read a register over PCI I/O Space */
2 extern uint8_t pci_io_r8(uint32_t adr);
3 extern uint16_t pci_io_r16(uint32_t adr);
4 extern uint32_t pci_io_r32(uint32_t adr);
5
6 /* Write a register over PCI I/O Space */
7 extern void pci_io_w8(uint32_t adr, uint8_t data);
8 extern void pci_io_w16(uint32_t adr, uint16_t data);
9 extern void pci_io_w32(uint32_t adr, uint32_t data);

```

### 28.2.3.3 Registers over Memory space

PCI host bridge hardware normally swap data accesses into the endianness of the host architecture in order to lower the load of the CPU, peripherals can do DMA without swapping. However, the host controller can not separate a standard memory access from a memory access to a register, registers may be mapped into memory space. This leads to register content being swapped, which must be swapped back. The below routines makes it possible to access registers over PCI memory space in a portable way on different architectures, the BSP or architecture must provide necessary functions in order to implement this.

```

1 static inline uint16_t pci_ld_le16(volatile uint16_t *addr);
2 static inline void pci_st_le16(volatile uint16_t *addr, uint16_t val);
3 static inline uint32_t pci_ld_le32(volatile uint32_t *addr);

```

(continues on next page)

(continued from previous page)

```

4 static inline void pci_st_le32(volatile uint32_t *addr, uint32_t val);
5 static inline uint16_t pci_ld_be16(volatile uint16_t *addr);
6 static inline void pci_st_be16(volatile uint16_t *addr, uint16_t val);
7 static inline uint32_t pci_ld_be32(volatile uint32_t *addr);
8 static inline void pci_st_be32(volatile uint32_t *addr, uint32_t val);

```

In order to support non-standard big-endian PCI bus the above `pci_*` functions is required, `pci_ld_le16 != ld_le16` on big endian PCI buses.

#### 28.2.3.4 Access functions

The PCI Access Library can provide device drivers with function pointers executing the above Configuration, I/O and Memory space accesses. The functions have the same arguments and return values as the above functions.

The `pci_access_func()` function defined below can be used to get a function pointer of a specific access type.

```

1 /* Get Read/Write function for accessing a register over PCI Memory Space
2  * (non-inline functions).
3  *
4  * Arguments
5  * wr          0(Read), 1(Write)
6  * size       1(Byte), 2(Word), 4(Double Word)
7  * func       Where function pointer will be stored
8  * endian     PCI_LITTLE_ENDIAN or PCI_BIG_ENDIAN
9  * type       1(I/O), 3(REG over MEM), 4(CFG)
10 *
11 * Return
12 * 0          Found function
13 * others    No such function defined by host driver or BSP
14 */
15 int pci_access_func(int wr, int size, void **func, int endian, int type);

```

PCI device drivers may be written to support run-time detection of endianness, this is mosly for debugging or for development systems. When the product is finally deployed macros switch to using the inline functions instead which have been configured for the correct endianness.

#### 28.2.3.5 PCI address translation

When PCI addresses, both I/O and memory space, is not mapped 1:1 address translation before access is needed. If drivers read the PCI resources directly using configuration space routines or in the device tree, the addresses given are PCI addresses. The below functions can be used to translate PCI addresses into CPU accessible addresses or vice versa, translation may be different for different PCI spaces/regions.

```

1 /* Translate PCI address into CPU accessible address */
2 static inline int pci_pci2cpu(uint32_t *address, int type);
3
4 /* Translate CPU accessible address into PCI address (for DMA) */
5 static inline int pci_cpu2pci(uint32_t *address, int type);

```

### 28.2.4 PCI Interrupt

The PCI specification defines four different interrupt lines INTA#..INTD#, the interrupts are low level sensitive which make it possible to support multiple interrupt sources on the same interrupt line. Since the lines are level sensitive the interrupt sources must be acknowledged before clearing the interrupt controller, or the interrupt controller must be masked. The BSP must provide a routine for clearing/acknowledging the interrupt controller, it is up to the interrupt service routine to acknowledge the interrupt source.

The PCI Library relies on the BSP for implementing shared interrupt handling through the BSP\_PCI\_shared\_interrupt\_\* functions/macros, they must be defined when including bsp.h.

PCI device drivers may use the pci\_interrupt\_\* routines in order to call the BSP specific functions in a platform independent way. The PCI interrupt interface has been made similar to the RTEMS IRQ extension so that a BSP can use the standard RTEMS interrupt functions directly.

### 28.2.5 PCI Shell command

The RTEMS shell has a PCI command 'pci' which makes it possible to read/write configuration space, print the current PCI configuration and print out a configuration C-file for the static or peripheral library.





# STACK BOUNDS CHECKER

## 29.1 Introduction

The stack bounds checker is an RTEMS support component that determines if a task has overrun its run-time stack. The routines provided by the stack bounds checker manager are:

- *rtems\_stack\_checker\_is\_blow*n (page 550) - Has the Current Task Blown its Stack
- *rtems\_stack\_checker\_report\_usage* (page 550) - Report Task Stack Usage

## 29.2 Background

### 29.2.1 Task Stack

Each task in a system has a fixed size stack associated with it. This stack is allocated when the task is created. As the task executes, the stack is used to contain parameters, return addresses, saved registers, and local variables. The amount of stack space required by a task is dependent on the exact set of routines used. The peak stack usage reflects the worst case of subroutine pushing information on the stack. For example, if a subroutine allocates a local buffer of 1024 bytes, then this data must be accounted for in the stack of every task that invokes that routine.

Recursive routines make calculating peak stack usage difficult, if not impossible. Each call to the recursive routine consumes  $n$  bytes of stack space. If the routine recursives 1000 times, then  $1000 * n$  bytes of stack space are required.

### 29.2.2 Execution

The stack bounds checker operates as a set of task extensions. At task creation time, the task's stack is filled with a pattern to indicate the stack is unused. As the task executes, it will overwrite this pattern in memory. At each task switch, the stack bounds checker's task switch extension is executed. This extension checks that:

- the last  $n$  bytes of the task's stack have not been overwritten. If this pattern has been damaged, it indicates that at some point since this task was context switch to the CPU, it has used too much stack space.
- the current stack pointer of the task is not within the address range allocated for use as the task's stack.

If either of these conditions is detected, then a blown stack error is reported using the `printk` routine.

The number of bytes checked for an overwrite is processor family dependent. The minimum stack frame per subroutine call varies widely between processor families. On CISC families like the Motorola MC68xxx and Intel ix86, all that is needed is a return address. On more complex RISC processors, the minimum stack frame per subroutine call may include space to save a significant number of registers.

Another processor dependent feature that must be taken into account by the stack bounds checker is the direction that the stack grows. On some processor families, the stack grows up or to higher addresses as the task executes. On other families, it grows down to lower addresses. The stack bounds checker implementation uses the stack description definitions provided by every RTEMS port to get for this information.

## 29.3 Operations

### 29.3.1 Initializing the Stack Bounds Checker

The stack checker is initialized automatically when its task create extension runs for the first time.

The application must include the stack bounds checker extension set in its set of Initial Extensions. This set of extensions is defined as `STACK_CHECKER_EXTENSION`. If using `<rtems/confdefs.h>` for Configuration Table generation, then all that is necessary is to define the macro `CONFIGURE_STACK_CHECKER_ENABLED` before including `<rtems/confdefs.h>` as shown below:

```
1 #define CONFIGURE_STACK_CHECKER_ENABLED
2 ...
3 #include <rtems/confdefs.h>
```

### 29.3.2 Checking for Blown Task Stack

The application may check whether the stack pointer of currently executing task is within proper bounds at any time by calling the `rtems_stack_checker_is_blowed` method. This method return `FALSE` if the task is operating within its stack bounds and has not damaged its pattern area.

### 29.3.3 Reporting Task Stack Usage

The application may dynamically report the stack usage for every task in the system by calling the `rtems_stack_checker_report_usage` routine. This routine prints a table with the peak usage and stack size of every task in the system. The following is an example of the report generated:

ID	NAME	LOW	HIGH	AVAILABLE	USED
0x04010001	IDLE	0x003e8a60	0x003e9667	2952	200
0x08010002	TA1	0x003e5750	0x003e7b57	9096	1168
0x08010003	TA2	0x003e31c8	0x003e55cf	9096	1168
0x08010004	TA3	0x003e0c40	0x003e3047	9096	1104
0xffffffff	INTR	0x003ecfc0	0x003effbf	12160	128

Notice the last line. The task id is `0xffffffff` and its name is `INTR`. This is not actually a task, it is the interrupt stack.

### 29.3.4 When a Task Overflows the Stack

When the stack bounds checker determines that a stack overflow has occurred, it will attempt to print a message using `printk` identifying the task and then shut the system down. If the stack overflow has caused corruption, then it is possible that the message cannot be printed.

The following is an example of the output generated:

```
1 BLOWN STACK!!! Offending task(0x3eb360): id=0x08010002; name=0x54413120
2 stack covers range 0x003e5750 - 0x003e7b57 (9224 bytes)
3 Damaged pattern begins at 0x003e5758 and is 128 bytes long
```

The above includes the task id and a pointer to the task control block as well as enough information so one can look at the task's stack and see what was happening.

## 29.4 Routines

This section details the stack bounds checker's routines. A subsection is dedicated to each of routines and describes the calling sequence, related constants, usage, and status codes.

### 29.4.1 STACK\_CHECKER\_IS\_BLOWN - Has Current Task Blown Its Stack

#### CALLING SEQUENCE:

```
1 bool rtems_stack_checker_is_blowed( void );
```

#### STATUS CODES:

TRUE	Stack is operating within its stack limits
FALSE	Current stack pointer is outside allocated area

#### DESCRIPTION:

This method is used to determine if the current stack pointer of the currently executing task is within bounds.

#### NOTES:

This method checks the current stack pointer against the high and low addresses of the stack memory allocated when the task was created and it looks for damage to the high water mark pattern for the worst case usage of the task being called.

### 29.4.2 STACK\_CHECKER\_REPORT\_USAGE - Report Task Stack Usage

#### CALLING SEQUENCE:

```
1 void rtems_stack_checker_report_usage( void );
```

#### STATUS CODES:

NONE

#### DESCRIPTION:

This routine prints a table with the peak stack usage and stack space allocation of every task in the system.

#### NOTES:

NONE

# CPU USAGE STATISTICS

## 30.1 Introduction

The CPU usage statistics manager is an RTEMS support component that provides a convenient way to manipulate the CPU usage information associated with each task. The routines provided by the CPU usage statistics manager are:

- *rtems\_cpu\_usage\_report* (page 557) - Report CPU Usage Statistics
- *rtems\_cpu\_usage\_reset* (page 558) - Reset CPU Usage Statistics



## 30.2 Background

When analyzing and debugging real-time applications, it is important to be able to know how much CPU time each task in the system consumes. This support component provides a mechanism to easily obtain this information with little burden placed on the target.

The raw data is gathered as part of performing a context switch. RTEMS keeps track of how many clock ticks have occurred which the task being switched out has been executing. If the task has been running less than 1 clock tick, then for the purposes of the statistics, it is assumed to have executed 1 clock tick. This results in some inaccuracy but the alternative is for the task to have appeared to execute 0 clock ticks.

RTEMS versions newer than the 4.7 release series, support the ability to obtain timestamps with nanosecond granularity if the BSP provides support. It is a desirable enhancement to change the way the usage data is gathered to take advantage of this recently added capability. Please consider sponsoring the core RTEMS development team to add this capability.

## 30.3 Operations

### 30.3.1 Report CPU Usage Statistics

The application may dynamically report the CPU usage for every task in the system by calling the `rtems_cpu_usage_report` routine. This routine prints a table with the following information per task:

- task id
- task name
- number of clock ticks executed
- percentage of time consumed by this task

The following is an example of the report generated:

```

1 +-----+
2 |CPU USAGE BY THREAD                                     |
3 +-----+-----+-----+-----+
4 |ID          | NAME          | SECONDS    | PERCENT    |
5 +-----+-----+-----+-----+
6 |0x04010001 | IDLE         |            | 0.000     |
7 +-----+-----+-----+-----+
8 |0x08010002 | TA1         | 1203       | 0.748     |
9 +-----+-----+-----+-----+
10|0x08010003 | TA2         | 203        | 0.126     |
11+-----+-----+-----+-----+
12|0x08010004 | TA3         | 202        | 0.126     |
13+-----+-----+-----+-----+
14|TICKS SINCE LAST SYSTEM RESET:                       | 1600 |
15|TOTAL UNITS:                                         | 1608 |
16+-----+-----+-----+-----+

```

Notice that the TOTAL UNITS is greater than the ticks per reset. This is an artifact of the way in which RTEMS keeps track of CPU usage. When a task is context switched into the CPU, the number of clock ticks it has executed is incremented. While the task is executing, this number is incremented on each clock tick. Otherwise, if a task begins and completes execution between successive clock ticks, there would be no way to tell that it executed at all.

Another thing to keep in mind when looking at idle time, is that many systems - especially during debug - have a task providing some type of debug interface. It is usually fine to think of the total idle time as being the sum of the IDLE task and a debug task that will not be included in a production build of an application.

### 30.3.2 Reset CPU Usage Statistics

Invoking the `rtems_cpu_usage_reset` routine resets the CPU usage statistics for all tasks in the system.

## 30.4 Directives

This section details the CPU usage statistics manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 30.4.1 `cpu_usage_report` - Report CPU Usage Statistics

**CALLING SEQUENCE:**

```
1 void rtems_cpu_usage_report( void );
```

**STATUS CODES:**

NONE

**DESCRIPTION:**

This routine prints out a table detailing the CPU usage statistics for all tasks in the system.

**NOTES:**

The table is printed using the `printk` routine.

### 30.4.2 `cpu_usage_reset` - Reset CPU Usage Statistics

**CALLING SEQUENCE:**

```
1 void rtems_cpu_usage_reset( void );
```

**STATUS CODES:**

NONE

**DESCRIPTION:**

This routine re-initializes the CPU usage statistics for all tasks in the system to their initial state. The initial state is that a task has not executed and thus has consumed no CPU time. default state which is when zero period executions have occurred.

**NOTES:**

NONE

# OBJECT SERVICES

## 31.1 Introduction

RTEMS provides a collection of services to assist in the management and usage of the objects created and utilized via other managers. These services assist in the manipulation of RTEMS objects independent of the API used to create them. The object related services provided by RTEMS are:

- `build_id`
- `rtems_build_name` (page 565) - build object name from characters
- `rtems_object_get_classic_name` (page 566) - lookup name from Id
- `rtems_object_get_name` (page 567) - obtain object name as string
- `rtems_object_set_name` (page 568) - set object name
- `rtems_object_id_get_api` (page 569) - obtain API from Id
- `rtems_object_id_get_class` (page 570) - obtain class from Id
- `rtems_object_id_get_node` (page 571) - obtain node from Id
- `rtems_object_id_get_index` (page 572) - obtain index from Id
- `rtems_build_id` (page 573) - build object id from components
- `rtems_object_id_api_minimum` (page 574) - obtain minimum API value
- `rtems_object_id_api_maximum` (page 575) - obtain maximum API value
- `rtems_object_id_api_minimum_class` (page 578) - obtain minimum class value
- `rtems_object_id_api_maximum_class` (page 579) - obtain maximum class value
- `rtems_object_get_api_name` (page 580) - obtain API name
- `rtems_object_get_api_class_name` (page 581) - obtain class name
- `rtems_object_get_class_information` (page 582) - obtain class information
- `rtems_object_get_local_node` (page 583) - obtain local node



## 31.2 Background

### 31.2.1 APIs

RTEMS implements multiple APIs including an Internal API, the Classic API, and the POSIX API. These APIs share the common foundation of SuperCore objects and thus share object management code. This includes a common scheme for object Ids and for managing object names whether those names be in the thirty-two bit form used by the Classic API or C strings.

The object Id contains a field indicating the API that an object instance is associated with. This field holds a numerically small non-zero integer.

### 31.2.2 Object Classes

Each API consists of a collection of managers. Each manager is responsible for instances of a particular object class. Classic API Tasks and POSIX Mutexes example classes.

The object Id contains a field indicating the class that an object instance is associated with. This field holds a numerically small non-zero integer. In all APIs, a class value of one is reserved for tasks or threads.

### 31.2.3 Object Names

Every RTEMS object which has an Id may also have a name associated with it. Depending on the API, names may be either thirty-two bit integers as in the Classic API or strings as in the POSIX API.

Some objects have Ids but do not have a defined way to associate a name with them. For example, POSIX threads have Ids but per POSIX do not have names. In RTEMS, objects not defined to have thirty-two bit names may have string names assigned to them via the `rtems_object_set_name` service. The original impetus in providing this service was so the normally anonymous POSIX threads could have a user defined name in CPU Usage Reports.

## 31.3 Operations

### 31.3.1 Decomposing and Recomposing an Object Id

Services are provided to decompose an object Id into its subordinate components. The following services are used to do this:

- `rtems_object_id_get_api`
- `rtems_object_id_get_class`
- `rtems_object_id_get_node`
- `rtems_object_id_get_index`

The following C language example illustrates the decomposition of an Id and printing the values.

```
1 void printObjectId(rtems_id id)
2 {
3     printf(
4         "API=%d Class=%" PRIu32 " Node=%" PRIu32 " Index=%" PRIu16 "\n",
5         rtems_object_id_get_api(id),
6         rtems_object_id_get_class(id),
7         rtems_object_id_get_node(id),
8         rtems_object_id_get_index(id)
9     );
10 }
```

This prints the components of the Ids as integers.

It is also possible to construct an arbitrary Id using the `rtems_build_id` service. The following C language example illustrates how to construct the “next Id.”

```
1 rtems_id nextObjectId(rtems_id id)
2 {
3     return rtems_build_id(
4         rtems_object_id_get_api(id),
5         rtems_object_id_get_class(id),
6         rtems_object_id_get_node(id),
7         rtems_object_id_get_index(id) + 1
8     );
9 }
```

Note that this Id may not be valid in this system or associated with an allocated object.

### 31.3.2 Printing an Object Id

RTEMS also provides services to associate the API and Class portions of an Object Id with strings. This allows the application developer to provide more information about an object in diagnostic messages.

In the following C language example, an Id is decomposed into its constituent parts and “pretty-printed.”

```
1 void prettyPrintObjectId(rtems_id id)
2 {
3     int tmpAPI;
4     uint32_t tmpClass;
5
6     tmpAPI = rtems_object_id_get_api(id),
7     tmpClass = rtems_object_id_get_class(id),
8
9     printf(
10         "API=%s Class=%s Node=%" PRIu32 " Index=%" PRIu16 "\n",
11         rtems_object_get_api_name(tmpAPI),
12         rtems_object_get_api_class_name(tmpAPI, tmpClass),
13         rtems_object_id_get_node(id),
14         rtems_object_id_get_index(id)
15     );
16 }
```

## 31.4 Directives

### 31.4.1 BUILD\_NAME - Build object name from characters

**CALLING SEQUENCE:**

```
1 rtems_name rtems_build_name(  
2     uint8_t c1,  
3     uint8_t c2,  
4     uint8_t c3,  
5     uint8_t c4  
6 );
```

**DIRECTIVE STATUS CODES:**

Returns a name constructed from the four characters.

**DESCRIPTION:**

This service takes the four characters provided as arguments and constructs a thirty-two bit object name with c1 in the most significant byte and c4 in the least significant byte.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.2 OBJECT\_GET\_CLASSIC\_NAME - Lookup name from id

**CALLING SEQUENCE:**

```
1 rtems_status_code rtems_object_get_classic_name(  
2   rtems_id      id,  
3   rtems_name   *name  
4 );
```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	name looked up successfully
RTEMS_INVALID_ADDRESS	invalid name pointer
RTEMS_INVALID_ID	invalid object id

**DESCRIPTION:**

This service looks up the name for the object id specified and, if found, places the result in \*name.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.3 OBJECT\_GET\_NAME - Obtain object name as string

#### CALLING SEQUENCE:

```
1 char* rtems_object_get_name(  
2     rtems_id      id,  
3     size_t        length,  
4     char          *name  
5 );
```

#### DIRECTIVE STATUS CODES:

Returns a pointer to the name if successful or NULL otherwise.

#### DESCRIPTION:

This service looks up the name of the object specified by `id` and places it in the memory pointed to by `name`. Every attempt is made to return name as a printable string even if the object has the Classic API thirty-two bit style name.

#### NOTES:

This directive is strictly local and does not impact task scheduling.

## 31.4.4 OBJECT\_SET\_NAME - Set object name

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_object_set_name(
2   rtems_id      id,
3   const char    *name
4 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	name looked up successfully
RTEMS_INVALID_ADDRESS	invalid name pointer
RTEMS_INVALID_ID	invalid object id

**DESCRIPTION:**

This service sets the name of `id` to that specified by the string located at `name`.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

If the object specified by `id` is of a class that has a string name, this method will free the existing name to the RTEMS Workspace and allocate enough memory from the RTEMS Workspace to make a copy of the string located at `name`.

If the object specified by `id` is of a class that has a thirty-two bit integer style name, then the first four characters in `*name` will be used to construct the name. `name` to the RTEMS Workspace and allocate enough memory from the RTEMS Workspace to make a copy of the string



### 31.4.5 OBJECT\_ID\_GET\_API - Obtain API from Id

**CALLING SEQUENCE:**

```
1 int rtems_object_id_get_api(  
2     rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

Returns the API portion of the object Id.

**DESCRIPTION:**

This directive returns the API portion of the provided object id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

This directive does NOT validate the id provided.

### 31.4.6 OBJECT\_ID\_GET\_CLASS - Obtain Class from Id

**CALLING SEQUENCE:**

```
1 uint32_t rtems_object_id_get_class(  
2     rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

Returns the class portion of the object Id.

**DESCRIPTION:**

This directive returns the class portion of the provided object id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

This directive does NOT validate the id provided.

### 31.4.7 OBJECT\_ID\_GET\_NODE - Obtain Node from Id

**CALLING SEQUENCE:**

```
1 uint32_t rtems_object_id_get_node(  
2     rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

Returns the node portion of the object Id.

**DESCRIPTION:**

This directive returns the node portion of the provided object id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

This directive does NOT validate the id provided.

### 31.4.8 OBJECT\_ID\_GET\_INDEX - Obtain Index from Id

**CALLING SEQUENCE:**

```
1 uint16_t rtems_object_id_get_index(  
2     rtems_id id  
3 );
```

**DIRECTIVE STATUS CODES:**

Returns the index portion of the object Id.

**DESCRIPTION:**

This directive returns the index portion of the provided object id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

This directive does NOT validate the id provided.

### 31.4.9 BUILD\_ID - Build Object Id From Components

**CALLING SEQUENCE:**

```
1 rtems_id rtems_build_id(  
2     int the_api,  
3     int the_class,  
4     int the_node,  
5     int the_index  
6 );
```

**DIRECTIVE STATUS CODES:**

Returns an object Id constructed from the provided arguments.

**DESCRIPTION:**

This service constructs an object Id from the provided the\_api, the\_class, the\_node, and the\_index.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

This directive does NOT validate the arguments provided or the Object id returned.

### 31.4.10 OBJECT\_ID\_API\_MINIMUM - Obtain Minimum API Value

**CALLING SEQUENCE:**

```
1 int rtems_object_id_api_minimum(void);
```

**DIRECTIVE STATUS CODES:**

Returns the minimum valid for the API portion of an object Id.

**DESCRIPTION:**

This service returns the minimum valid for the API portion of an object Id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.11 OBJECT\_ID\_API\_MAXIMUM - Obtain Maximum API Value

**CALLING SEQUENCE:**

```
1 int rtems_object_id_api_maximum(void);
```

**DIRECTIVE STATUS CODES:**

Returns the maximum valid for the API portion of an object Id.

**DESCRIPTION:**

This service returns the maximum valid for the API portion of an object Id.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.12 OBJECT\_API\_MINIMUM\_CLASS - Obtain Minimum Class Value

**CALLING SEQUENCE:**

```
1 int rtems_object_api_minimum_class(  
2     int api  
3 );
```

**DIRECTIVE STATUS CODES:**

If api is not valid, -1 is returned.

If successful, this service returns the minimum valid for the class portion of an object Id for the specified api.

**DESCRIPTION:**

This service returns the minimum valid for the class portion of an object Id for the specified api.

**NOTES:**

This directive is strictly local and does not impact task scheduling.



### 31.4.13 OBJECT\_API\_MAXIMUM\_CLASS - Obtain Maximum Class Value

**CALLING SEQUENCE:**

```
1 int rtems_object_api_maximum_class(  
2     int api  
3 );
```

**DIRECTIVE STATUS CODES:**

If api is not valid, -1 is returned.

If successful, this service returns the maximum valid for the class portion of an object Id for the specified api.

**DESCRIPTION:**

This service returns the maximum valid for the class portion of an object Id for the specified api.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.14 OBJECT\_ID\_API\_MINIMUM\_CLASS - Obtain Minimum Class Value for an API

**CALLING SEQUENCE:**

```
1 int rtems_object_get_id_api_minimum_class(  
2     int api  
3 );
```

**DIRECTIVE STATUS CODES:**

If api is not valid, -1 is returned.

If successful, this service returns the index corresponding to the first object class of the specified api.

**DESCRIPTION:**

This service returns the index for the first object class associated with the specified api.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.15 OBJECT\_ID\_API\_MAXIMUM\_CLASS - Obtain Maximum Class Value for an API

**CALLING SEQUENCE:**

```
1 int rtems_object_get_api_maximum_class(  
2     int api  
3 );
```

**DIRECTIVE STATUS CODES:**

If api is not valid, -1 is returned.

If successful, this service returns the index corresponding to the last object class of the specified api.

**DESCRIPTION:**

This service returns the index for the last object class associated with the specified api.

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.16 OBJECT\_GET\_API\_NAME - Obtain API Name

#### CALLING SEQUENCE:

```
1 const char* rtems_object_get_api_name(  
2     int api  
3 );
```

#### DIRECTIVE STATUS CODES:

If api is not valid, the string "BAD API" is returned.

If successful, this service returns a pointer to a string containing the name of the specified api.

#### DESCRIPTION:

This service returns the name of the specified api.

#### NOTES:

This directive is strictly local and does not impact task scheduling.

The string returned is from constant space. Do not modify or free it.

### 31.4.17 OBJECT\_GET\_API\_CLASS\_NAME - Obtain Class Name

#### CALLING SEQUENCE:

```
1 const char *rtems_object_get_api_class_name(  
2     int the_api,  
3     int the_class  
4 );
```

#### DIRECTIVE STATUS CODES:

If the\_api is not valid, the string "BAD API" is returned.

If the\_class is not valid, the string "BAD CLASS" is returned.

If successful, this service returns a pointer to a string containing the name of the specified the\_api / the\_class pair.

#### DESCRIPTION:

This service returns the name of the object class indicated by the specified the\_api and the\_class.

#### NOTES:

This directive is strictly local and does not impact task scheduling.

The string returned is from constant space. Do not modify or free it.

## 31.4.18 OBJECT\_GET\_CLASS\_INFORMATION - Obtain Class Information

**CALLING SEQUENCE:**

```

1 rtems_status_code rtems_object_get_class_information(
2     int the_api,
3     int the_class,
4     rtems_object_api_class_information *info
5 );

```

**DIRECTIVE STATUS CODES:**

RTEMS_SUCCESSFUL	information obtained successfully
RTEMS_INVALID_ADDRESS	info is NULL
RTEMS_INVALID_NUMBER	invalid api or the_class

If successful, the structure located at `info` will be filled in with information about the specified `api` / `the_class` pairing.

**DESCRIPTION:**

This service returns information about the object class indicated by the specified `api` and `the_class`. This structure is defined as follows:

```

1 typedef struct {
2     rtems_id minimum_id;
3     rtems_id maximum_id;
4     int maximum;
5     bool auto_extend;
6     int unallocated;
7 } rtems_object_api_class_information;

```

**NOTES:**

This directive is strictly local and does not impact task scheduling.

### 31.4.19 OBJECT\_GET\_LOCAL\_NODE - Obtain Local Node

**CALLING SEQUENCE:**

```
1 uint16_t rtems_object_get_local_node( void );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This service returns the local MPCIE node.

**NOTES:**

This directive is strictly local and does not impact task scheduling.





---

CHAPTER

**THIRTYTWO**

---

**CHAINS**

## 32.1 Introduction

The Chains API is an interface to the Super Core (score) chain implementation. The Super Core uses chains for all list type functions. This includes wait queues and task queues. The Chains API provided by RTEMS is:

- *rtems\_chain\_initialize* (page 591) - initialize the chain with nodes
- *rtems\_chain\_initialize\_empty* (page 592) - initialize the chain as empty
- *rtems\_chain\_is\_null\_node* (page 593) - Is the node NULL ?
- *rtems\_chain\_head* (page 594) - Return the chain's head
- *rtems\_chain\_tail* (page 595) - Return the chain's tail
- *rtems\_chain\_are\_nodes\_equal* (page 596) - Are the node's equal ?
- *rtems\_chain\_is\_empty* (page 597) - Is the chain empty ?
- *rtems\_chain\_is\_first* (page 598) - Is the Node the first in the chain ?
- *rtems\_chain\_is\_last* (page 599) - Is the Node the last in the chain ?
- *rtems\_chain\_has\_only\_one\_node* (page 600) - Does the node have one node ?
- *rtems\_chain\_node\_count\_unprotected* (page 601) - Returns the node count of the chain (unprotected)
- *rtems\_chain\_is\_head* (page 602) - Is the node the head ?
- *rtems\_chain\_is\_tail* (page 603) - Is the node the tail ?
- *rtems\_chain\_extract* (page 604) - Extract the node from the chain
- *rtems\_chain\_extract\_unprotected* (page 605) - Extract the node from the chain (unprotected)
- *rtems\_chain\_get* (page 606) - Return the first node on the chain
- *rtems\_chain\_get\_unprotected* (page 607) - Return the first node on the chain (unprotected)
- *rtems\_chain\_insert* (page 608) - Insert the node into the chain
- *rtems\_chain\_insert\_unprotected* (page 609) - Insert the node into the chain (unprotected)
- *rtems\_chain\_append* (page 610) - Append the node to chain
- *rtems\_chain\_append\_unprotected* (page 611) - Append the node to chain (unprotected)
- *rtems\_chain\_prepend* (page 612) - Prepend the node to the end of the chain
- *rtems\_chain\_prepend\_unprotected* (page 613) - Prepend the node to chain (unprotected)

## 32.2 Background

The Chains API maps to the Super Core Chains API. Chains are implemented as a double linked list of nodes anchored to a control node. The list starts at the control node and is terminated at the control node. A node has previous and next pointers. Being a double linked list nodes can be inserted and removed without the need to traverse the chain.

Chains have a small memory footprint and can be used in interrupt service routines and are thread safe in a multi-threaded environment. The directives list which operations disable interrupts.

Chains are very useful in Board Support packages and applications.

### 32.2.1 Nodes

A chain is made up from nodes that originate from a chain control object. A node is of type `rtems_chain_node`. The node is designed to be part of a user data structure and a cast is used to move from the node address to the user data structure address. For example:

```

1 typedef struct foo
2 {
3     rtems_chain_node node;
4     int bar;
5 } foo;

```

creates a type `foo` that can be placed on a chain. To get the `foo` structure from the list you perform the following:

```

1 foo* get_foo(rtems_chain_control* control)
2 {
3     return (foo*) rtems_chain_get(control);
4 }

```

The node is placed at the start of the user's structure to allow the node address on the chain to be easily cast to the user's structure address.

### 32.2.2 Controls

A chain is anchored with a control object. Chain control provide the user with access to the nodes on the chain. The control is head of the node.

```

1 [Control]
2 first ----->
3 permanent_null <----- [NODE]
4 last ----->

```

The implementation does not require special checks for manipulating the first and last nodes on the chain. To accomplish this the `rtems_chain_control` structure is treated as two overlapping `rtems_chain_node` structures. The permanent head of the chain overlays a node structure on the first and permanent\_null fields. The permanent\_tail of the chain overlays a node structure on the permanent\_null and last elements of the structure.

## 32.3 Operations

### 32.3.1 Multi-threading

Chains are designed to be used in a multi-threading environment. The directives list which operations mask interrupts. Chains supports tasks and interrupt service routines appending and extracting nodes with out the need for extra locks. Chains how-ever cannot insure the integrity of a chain for all operations. This is the responsibility of the user. For example an interrupt service routine extracting nodes while a task is iterating over the chain can have unpredictable results.

### 32.3.2 Creating a Chain

To create a chain you need to declare a chain control then add nodes to the control. Consider a user structure and chain control:

```

1 typedef struct foo
2 {
3     rtems_chain_node node;
4     char*          data;
5 } foo;
6 rtems_chain_control chain;

```

Add nodes with the following code:

```

1 rtems_chain_initialize_empty (&chain);
2
3 for (i = 0; i < count; i++)
4 {
5     foo* bar = malloc (sizeof (foo));
6     if (!bar)
7         return -1;
8     bar->data = malloc (size);
9     rtems_chain_append (&chain, &bar->node);
10 }

```

The chain is initialized and the nodes allocated and appended to the chain. This is an example of a pool of buffers.

### 32.3.3 Iterating a Chain

Iterating a chain is a common function. The example shows how to iterate the buffer pool chain created in the last section to find buffers starting with a specific string. If the buffer is located it is extracted from the chain and placed on another chain:

```

1 void foobar (const char*      match,
2             rtems_chain_control* chain,
3             rtems_chain_control* out)
4 {
5     rtems_chain_node* node;
6     foo*              bar;
7

```

(continues on next page)

(continued from previous page)

```
8  rtems_chain_initialize_empty (out);
9
10 node = rtems_chain_head (chain);
11 while (!rtems_chain_is_tail (chain, node))
12 {
13     bar = (foo*) node;
14     rtems_chain_node* next_node = node->next;
15     if (strcmp (match, bar->data) == 0)
16     {
17         rtems_chain_extract (node);
18         rtems_chain_append (out, node);
19     }
20     node = next_node;
21 }
22 }
```

## 32.4 Directives

The section details the Chains directives.

### 32.4.1 Initialize Chain With Nodes

**CALLING SEQUENCE:**

```
1 void rtems_chain_initialize(  
2   rtems_chain_control *the_chain,  
3   void                *starting_address,  
4   size_t              number_nodes,  
5   size_t              node_size  
6 )
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This function takes in a pointer to a chain control and initializes it to contain a set of chain nodes. The chain will contain `number_nodes` chain nodes from the memory pointed to by `start_address`. Each node is assumed to be `node_size` bytes.

**NOTES:**

This call will discard any nodes on the chain.

This call does NOT initialize any user data on each node.

### 32.4.2 Initialize Empty

**CALLING SEQUENCE:**

```
1 void rtems_chain_initialize_empty(  
2   rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This function take in a pointer to a chain control and initializes it to empty.

**NOTES:**

This call will discard any nodes on the chain.



### 32.4.3 Is Null Node ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_null_node(  
2     const rtems_chain_node *the_node  
3 );
```

**RETURNS:**

Returns true if the node pointer is NULL and false if the node is not NULL.

**DESCRIPTION:**

Tests the node to see if it is a NULL returning true if a null.

### 32.4.4 Head

**CALLING SEQUENCE:**

```
1 rtems_chain_node *rtems_chain_head(  
2   rtems_chain_control *the_chain  
3 )
```

**RETURNS:**

Returns the permanent head node of the chain.

**DESCRIPTION:**

This function returns a pointer to the first node on the chain.

### 32.4.5 Tail

**CALLING SEQUENCE:**

```
1 rtems_chain_node *rtems_chain_tail(  
2   rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

Returns the permanent tail node of the chain.

**DESCRIPTION:**

This function returns a pointer to the last node on the chain.

### 32.4.6 Are Two Nodes Equal ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_are_nodes_equal(  
2     const rtems_chain_node *left,  
3     const rtems_chain_node *right  
4 );
```

**RETURNS:**

This function returns true if the left node and the right node are equal, and false otherwise.

**DESCRIPTION:**

This function returns true if the left node and the right node are equal, and false otherwise.

### 32.4.7 Is the Chain Empty

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_empty(  
2     rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

This function returns true if there are no nodes on the chain and false otherwise.

**DESCRIPTION:**

This function returns true if there are no nodes on the chain and false otherwise.

### 32.4.8 Is this the First Node on the Chain ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_first(  
2     const rtems_chain_node *the_node  
3 );
```

**RETURNS:**

This function returns true if the node is the first node on a chain and false otherwise.

**DESCRIPTION:**

This function returns true if the node is the first node on a chain and false otherwise.

### 32.4.9 Is this the Last Node on the Chain ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_last(  
2     const rtems_chain_node *the_node  
3 );
```

**RETURNS:**

This function returns true if the node is the last node on a chain and false otherwise.

**DESCRIPTION:**

This function returns true if the node is the last node on a chain and false otherwise.

### 32.4.10 Does this Chain have only One Node ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_has_only_one_node(  
2     const rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

This function returns true if there is only one node on the chain and false otherwise.

**DESCRIPTION:**

This function returns true if there is only one node on the chain and false otherwise.



### 32.4.11 Returns the node count of the chain (unprotected)

**CALLING SEQUENCE:**

```
1 size_t rtems_chain_node_count_unprotected(  
2     const rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

This function returns the node count of the chain.

**DESCRIPTION:**

This function returns the node count of the chain.

### 32.4.12 Is this Node the Chain Head ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_head(  
2     rtems_chain_control *the_chain,  
3     rtems_const chain_node *the_node  
4 );
```

**RETURNS:**

This function returns true if the node is the head of the chain and false otherwise.

**DESCRIPTION:**

This function returns true if the node is the head of the chain and false otherwise.

### 32.4.13 Is this Node the Chain Tail ?

**CALLING SEQUENCE:**

```
1 bool rtems_chain_is_tail(  
2     rtems_chain_control *the_chain,  
3     const rtems_chain_node *the_node  
4 )
```

**RETURNS:**

This function returns true if the node is the tail of the chain and false otherwise.

**DESCRIPTION:**

This function returns true if the node is the tail of the chain and false otherwise.

### 32.4.14 Extract a Node

**CALLING SEQUENCE:**

```
1 void rtems_chain_extract(  
2     rtems_chain_node *the_node  
3 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine extracts the node from the chain on which it resides.

**NOTES:**

Interrupts are disabled while extracting the node to ensure the atomicity of the operation.

Use `rtems_chain_extract_unprotected` to avoid disabling of interrupts.

### 32.4.15 Extract a Node (unprotected)

**CALLING SEQUENCE:**

```
1 void rtems_chain_extract_unprotected(  
2   rtems_chain_node *the_node  
3 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine extracts the node from the chain on which it resides.

**NOTES:**

The function does nothing to ensure the atomicity of the operation.

### 32.4.16 Get the First Node

**CALLING SEQUENCE:**

```
1 rtems_chain_node *rtems_chain_get(  
2   rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

Returns a pointer a node. If a node was removed, then a pointer to that node is returned. If the chain was empty, then NULL is returned.

**DESCRIPTION:**

This function removes the first node from the chain and returns a pointer to that node. If the chain is empty, then NULL is returned.

**NOTES:**

Interrupts are disabled while obtaining the node to ensure the atomicity of the operation.

Use `rtems_chain_get_unprotected()` to avoid disabling of interrupts.

### 32.4.17 Get the First Node (unprotected)

**CALLING SEQUENCE:**

```
1 rtems_chain_node *rtems_chain_get_unprotected(  
2   rtems_chain_control *the_chain  
3 );
```

**RETURNS:**

A pointer to the former first node is returned.

**DESCRIPTION:**

Removes the first node from the chain and returns a pointer to it. In case the chain was empty, then the results are unpredictable.

**NOTES:**

The function does nothing to ensure the atomicity of the operation.

### 32.4.18 Insert a Node

**CALLING SEQUENCE:**

```
1 void rtems_chain_insert(  
2     rtems_chain_node *after_node,  
3     rtems_chain_node *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine inserts a node on a chain immediately following the specified node.

**NOTES:**

Interrupts are disabled during the insert to ensure the atomicity of the operation.

Use `rtems_chain_insert_unprotected()` to avoid disabling of interrupts.



### 32.4.19 Insert a Node (unprotected)

**CALLING SEQUENCE:**

```
1 void rtems_chain_insert_unprotected(  
2     rtems_chain_node *after_node,  
3     rtems_chain_node *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine inserts a node on a chain immediately following the specified node.

**NOTES:**

The function does nothing to ensure the atomicity of the operation.

### 32.4.20 Append a Node

**CALLING SEQUENCE:**

```
1 void rtems_chain_append(  
2     rtems_chain_control *the_chain,  
3     rtems_chain_node   *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine appends a node to the end of a chain.

**NOTES:**

Interrupts are disabled during the append to ensure the atomicity of the operation.

Use `rtems_chain_append_unprotected` to avoid disabling of interrupts.

### 32.4.21 Append a Node (unprotected)

**CALLING SEQUENCE:**

```
1 void rtems_chain_append_unprotected(  
2     rtems_chain_control *the_chain,  
3     rtems_chain_node   *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine appends a node to the end of a chain.

**NOTES:**

The function does nothing to ensure the atomicity of the operation.

### 32.4.22 Prepend a Node

**CALLING SEQUENCE:**

```
1 void rtems_chain_prepend(  
2     rtems_chain_control *the_chain,  
3     rtems_chain_node   *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine prepends a node to the front of the chain.

**NOTES:**

Interrupts are disabled during the prepend to ensure the atomicity of the operation.

Use `rtems_chain_prepend_unprotected` to avoid disabling of interrupts.

### 32.4.23 Prepend a Node (unprotected)

**CALLING SEQUENCE:**

```
1 void rtems_chain_prepend_unprotected(  
2     rtems_chain_control *the_chain,  
3     rtems_chain_node   *the_node  
4 );
```

**RETURNS:**

Returns nothing.

**DESCRIPTION:**

This routine prepends a node to the front of the chain.

**NOTES:**

The function does nothing to ensure the atomicity of the operation.



**RED-BLACK TREES**

## 33.1 Introduction

The Red-Black Tree API is an interface to the SuperCore (score) rbtree implementation. Within RTEMS, red-black trees are used when a binary search tree is needed, including dynamic priority thread queues and non-contiguous heap memory. The Red-Black Tree API provided by RTEMS is:

- `rtems_rtems_rbtree_node` - Red-Black Tree node embedded in another struct
- `rtems_rtems_rbtree_control` - Red-Black Tree control node for an entire tree
- `rtems_rtems_rbtree_initialize` - initialize the red-black tree with nodes
- `rtems_rtems_rbtree_initialize_empty` - initialize the red-black tree as empty
- `rtems_rtems_rbtree_set_off_tree` - Clear a node's links
- `rtems_rtems_rbtree_root` - Return the red-black tree's root node
- `rtems_rtems_rbtree_min` - Return the red-black tree's minimum node
- `rtems_rtems_rbtree_max` - Return the red-black tree's maximum node
- `rtems_rtems_rbtree_left` - Return a node's left child node
- `rtems_rtems_rbtree_right` - Return a node's right child node
- `rtems_rtems_rbtree_parent` - Return a node's parent node
- `rtems_rtems_rbtree_are_nodes_equal` - Are the node's equal ?
- `rtems_rtems_rbtree_is_empty` - Is the red-black tree empty ?
- `rtems_rtems_rbtree_is_min` - Is the Node the minimum in the red-black tree ?
- `rtems_rtems_rbtree_is_max` - Is the Node the maximum in the red-black tree ?
- `rtems_rtems_rbtree_is_root` - Is the Node the root of the red-black tree ?
- `rtems_rtems_rbtree_find` - Find the node with a matching key in the red-black tree
- `rtems_rtems_rbtree_predecessor` - Return the in-order predecessor of a node.
- `rtems_rtems_rbtree_successor` - Return the in-order successor of a node.
- `rtems_rtems_rbtree_extract` - Remove the node from the red-black tree
- `rtems_rtems_rbtree_get_min` - Remove the minimum node from the red-black tree
- `rtems_rtems_rbtree_get_max` - Remove the maximum node from the red-black tree
- `rtems_rtems_rbtree_peek_min` - Returns the minimum node from the red-black tree
- `rtems_rtems_rbtree_peek_max` - Returns the maximum node from the red-black tree
- `rtems_rtems_rbtree_insert` - Add the node to the red-black tree



## 33.2 Background

The Red-Black Trees API is a thin layer above the SuperCore Red-Black Trees implementation. A Red-Black Tree is defined by a control node with pointers to the root, minimum, and maximum nodes in the tree. Each node in the tree consists of a parent pointer, two children pointers, and a color attribute. A tree is parameterized as either unique, meaning identical keys are rejected, or not, in which case duplicate keys are allowed.

Users must provide a comparison functor that gets passed to functions that need to compare nodes. In addition, no internal synchronization is offered within the red-black tree implementation, thus users must ensure at most one thread accesses a red-black tree instance at a time.

### 33.2.1 Nodes

A red-black tree is made up from nodes that originate from a red-black tree control object. A node is of type `rtems_rtems_rbtree_node`. The node is designed to be part of a user data structure. To obtain the encapsulating structure users can use the `RTEMS_CONTAINER_OF` macro. The node can be placed anywhere within the user's structure and the macro will calculate the structure's address from the node's address.

### 33.2.2 Controls

A red-black tree is rooted with a control object. Red-Black Tree control provide the user with access to the nodes on the red-black tree. The implementation does not require special checks for manipulating the root of the red-black tree. To accomplish this the `rtems_rtems_rbtree_control` structure is treated as a `rtems_rtems_rbtree_node` structure with a NULL parent and left child pointing to the root.

### 33.3 Operations

Examples for using the red-black trees can be found in the `testsuites/sptests/sprbtree01/init.c` file.

## 33.4 Directives

### 33.4.1 Documentation for the Red-Black Tree Directives

Source documentation for the Red-Black Tree API can be found in the generated Doxygen output for `cpukit/sapi`.



# TIMESPEC HELPERS

## 34.1 Introduction

The Timespec helpers manager provides directives to assist in manipulating instances of the POSIX `struct timespec` structure.

The directives provided by the `timespec` helpers manager are:

- `rtems_timespec_set` (page 626) - Set `timespec`'s value
- `rtems_timespec_zero` (page 627) - Zero `timespec`'s value
- `rtems_timespec_is_valid` (page 628) - Check if `timespec` is valid
- `rtems_timespec_add_to` (page 629) - Add two `timespec`s
- `rtems_timespec_subtract` (page 630) - Subtract two `timespec`s
- `rtems_timespec_divide` (page 631) - Divide two `timespec`s
- `rtems_timespec_divide_by_integer` (page 632) - Divide `timespec` by integer
- `rtems_timespec_less_than` (page 633) - Less than operator
- `rtems_timespec_greater_than` (page 634) - Greater than operator
- `rtems_timespec_equal_to` (page 635) - Check if two `timespec`s are equal
- `rtems_timespec_get_seconds` (page 636) - Obtain seconds portion of `timespec`
- `rtems_timespec_get_nanoseconds` (page 637) - Obtain nanoseconds portion of `timespec`
- `rtems_timespec_to_ticks` (page 638) - Convert `timespec` to number of ticks
- `rtems_timespec_from_ticks` (page 639) - Convert ticks to `timespec`

## 34.2 Background

### 34.2.1 Time Storage Conventions

Time can be stored in many ways. One of them is the `struct timespec` format which is a structure that consists of the fields `tv_sec` to represent seconds and `tv_nsec` to represent nanoseconds. The `struct timeval` structure is similar and consists of seconds (stored in `tv_sec`) and microseconds (stored in `tv_usec`). Either `struct timespec` or `struct timeval` can be used to represent elapsed time, time of executing some operations, or time of day.

## 34.3 Operations

### 34.3.1 Set and Obtain Timespec Value

A user may write a specific time by passing the desired seconds and nanoseconds values and the destination struct `timespec` using the `rtems_timespec_set` directive.

The `rtems_timespec_zero` directive is used to zero the seconds and nanoseconds portions of a struct `timespec` instance.

Users may obtain the seconds or nanoseconds portions of a struct `timespec` instance with the `rtems_timespec_get_seconds` or `rtems_timespec_get_nanoseconds` methods, respectively.

### 34.3.2 Timespec Math

A user can perform multiple operations on struct `timespec` instances. The helpers in this manager assist in adding, subtracting, and performing division on struct `timespec` instances.

- Adding two struct `timespec` can be done using the `rtems_timespec_add_to` directive. This directive is used mainly to calculate total amount of time consumed by multiple operations.
- The `rtems_timespec_subtract` is used to subtract two struct `timespecs` instances and determine the elapsed time between those two points in time.
- The `rtems_timespec_divide` is used to use to divide one struct `timespec` instance by another. This calculates the percentage with a precision to three decimal points.
- The `rtems_timespec_divide_by_integer` is used to divide a struct `timespec` instance by an integer. It is commonly used in benchmark calculations to dividing duration by the number of iterations performed.

### 34.3.3 Comparing struct timespec Instances

A user can compare two struct `timespec` instances using the `rtems_timespec_less_than`, `rtems_timespec_greater_than` or `rtems_timespec_equal_to` routines.

### 34.3.4 Conversions and Validity Check

Conversion to and from clock ticks may be performed by using the `rtems_timespec_to_ticks` and `rtems_timespec_from_ticks` directives.

User can also check validity of timespec with `rtems_timespec_is_valid` routine.



## 34.4 Directives

This section details the Timespec Helpers manager's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 34.4.1 TIMESPEC\_SET - Set struct timespec Instance

#### CALLING SEQUENCE:

```
1 void rtems_timespec_set(  
2     struct timespec *time,  
3     time_t          seconds,  
4     uint32_t        nanoseconds  
5 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This directive sets the struct `timespec` *time* to the desired seconds and nanoseconds values.

#### NOTES:

This method does NOT check if nanoseconds is less than the maximum number of nanoseconds in a second.

### 34.4.2 TIMESPEC\_ZERO - Zero struct timespec Instance

**CALLING SEQUENCE:**

```
1 void rtems_timespec_zero(  
2     struct timespec *time  
3 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This routine sets the contents of the struct timespec instance time to zero.

**NOTES:**

NONE

### 34.4.3 TIMESPEC\_IS\_VALID - Check validity of a struct timespec instance

#### CALLING SEQUENCE:

```
1 bool rtems_timespec_is_valid(  
2     const struct timespec *time  
3 );
```

#### DIRECTIVE STATUS CODES:

This method returns true if the instance is valid, and false otherwise.

#### DESCRIPTION:

This routine check validity of a struct timespec instance. It checks if the nanoseconds portion of the struct timespec instance is in allowed range (less than the maximum number of nanoseconds per second).

#### NOTES:

NONE

### 34.4.4 TIMESPEC\_ADD\_TO - Add Two struct timespec Instances

**CALLING SEQUENCE:**

```
1 uint32_t rtems_timespec_add_to(  
2     struct timespec *time,  
3     const struct timespec *add  
4 );
```

**DIRECTIVE STATUS CODES:**

The method returns the number of seconds `time` increased by.

**DESCRIPTION:**

This routine adds two `struct timespec` instances. The second argument is added to the first. The parameter `time` is the base time to which the `add` parameter is added.

**NOTES:**

NONE

### 34.4.5 TIMESPEC\_SUBTRACT - Subtract Two struct timespec Instances

#### CALLING SEQUENCE:

```
1 void rtems_timespec_subtract(  
2     const struct timespec *start,  
3     const struct timespec *end,  
4     struct timespec      *result  
5 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This routine subtracts `start` from `end` and saves the difference in `result`. The primary use of this directive is to calculate elapsed time.

#### NOTES:

It is possible to subtract when `end` is less than `start` and it produce negative result. When doing this you should be careful and remember that only the seconds portion of a struct timespec instance is signed, which means that nanoseconds portion is always increasing. Due to that when your timespec has `seconds = -1` and `nanoseconds = 500,000,000` it means that result is -0.5 second, NOT the expected -1.5!

### 34.4.6 TIMESPEC\_DIVIDE - Divide Two struct timespec Instances

#### CALLING SEQUENCE:

```
1 void rtems_timespec_divide(  
2     const struct timespec *lhs,  
3     const struct timespec *rhs,  
4     uint32_t               *ival_percentage,  
5     uint32_t               *fval_percentage  
6 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This routine divides the struct `timespec` instance `lhs` by the struct `timespec` instance `rhs`. The result is returned in the `ival_percentage` and `fval_percentage`, representing the integer and fractional results of the division respectively.

The `ival_percentage` is integer value of calculated percentage and `fval_percentage` is fractional part of calculated percentage.

#### NOTES:

The intended use is calculating percentages to three decimal points.

When dividing by zero, this routine return both `ival_percentage` and `fval_percentage` equal zero.

The division is performed using exclusively integer operations.

### 34.4.7 TIMESPEC\_DIVIDE\_BY\_INTEGER - Divide a struct timespec Instance by an Integer

#### CALLING SEQUENCE:

```
1 int rtems_timespec_divide_by_integer(  
2     const struct timespec *time,  
3     uint32_t             iterations,  
4     struct timespec      *result  
5 );
```

#### DIRECTIVE STATUS CODES:

NONE

#### DESCRIPTION:

This routine divides the struct timespec instance time by the integer value iterations. The result is saved in result.

#### NOTES:

The expected use is to assist in benchmark calculations where you typically divide a duration (time) by a number of iterations what gives average time.



### 34.4.8 TIMESPEC\_LESS\_THAN - Less than operator

#### CALLING SEQUENCE:

```
1 bool rtems_timespec_less_than(  
2     const struct timespec *lhs,  
3     const struct timespec *rhs  
4 );
```

#### DIRECTIVE STATUS CODES:

This method returns struct true if lhs is less than rhs and struct false otherwise.

#### DESCRIPTION:

This method is the less than operator for struct timespec instances. The first parameter is the left hand side and the second is the right hand side of the comparison.

#### NOTES:

NONE

### 34.4.9 TIMESPEC\_GREATER\_THAN - Greater than operator

**CALLING SEQUENCE:**

```
1 bool rtems_timespec_greater_than(  
2     const struct timespec *_lhs,  
3     const struct timespec *_rhs  
4 );
```

**DIRECTIVE STATUS CODES:**

This method returns struct true if lhs is greater than rhs and struct false otherwise.

**DESCRIPTION:**

This method is greater than operator for struct timespec instances.

**NOTES:**

NONE

### 34.4.10 TIMESPEC\_EQUAL\_TO - Check equality of timespecs

**CALLING SEQUENCE:**

```
1 bool rtems_timespec_equal_to(  
2     const struct timespec *lhs,  
3     const struct timespec *rhs  
4 );
```

**DIRECTIVE STATUS CODES:**

This method returns struct true if lhs is equal to rhs and struct false otherwise.

**DESCRIPTION:**

This method is equality operator for struct timespec instances.

**NOTES:**

NONE

### 34.4.11 TIMESPEC\_GET\_SECONDS - Get Seconds Portion of struct timespec Instance

**CALLING SEQUENCE:**

```
1 time_t rtems_timespec_get_seconds(  
2     struct timespec *time  
3 );
```

**DIRECTIVE STATUS CODES:**

This method returns the seconds portion of the specified struct timespec instance.

**DESCRIPTION:**

This method returns the seconds portion of the specified struct timespec instance time.

**NOTES:**

NONE

### 34.4.12 TIMESPEC\_GET\_NANOSECONDS - Get Nanoseconds Portion of the struct timespec Instance

**CALLING SEQUENCE:**

```
1 uint32_t rtems_timespec_get_nanoseconds(  
2     struct timespec *_time  
3 );
```

**DIRECTIVE STATUS CODES:**

This method returns the nanoseconds portion of the specified struct timespec instance.

**DESCRIPTION:**

This method returns the nanoseconds portion of the specified timespec which is pointed by \_time.

**NOTES:**

NONE

### 34.4.13 TIMESPEC\_TO\_TICKS - Convert struct timespec Instance to Ticks

**CALLING SEQUENCE:**

```
1 uint32_t rtems_timespec_to_ticks(  
2     const struct timespec *time  
3 );
```

**DIRECTIVE STATUS CODES:**

This directive returns the number of ticks computed.

**DESCRIPTION:**

This directive converts the time timespec to the corresponding number of clock ticks.

**NOTES:**

NONE

### 34.4.14 TIMESPEC\_FROM\_TICKS - Convert Ticks to struct timespec Representation

**CALLING SEQUENCE:**

```
1 void rtems_timespec_from_ticks(  
2     uint32_t      ticks,  
3     struct timespec *time  
4 );
```

**DIRECTIVE STATUS CODES:**

NONE

**DESCRIPTION:**

This routine converts the ticks to the corresponding struct timespec representation and stores it in time.

**NOTES:**

NONE





# CONSTANT BANDWIDTH SERVER SCHEDULER API

## 35.1 Introduction

Unlike simple schedulers, the Constant Bandwidth Server (CBS) requires a special API for tasks to indicate their scheduling parameters. The directives provided by the CBS API are:

- *rtems\_cbs\_initialize* (page 648) - Initialize the CBS library
- *rtems\_cbs\_cleanup* (page 649) - Cleanup the CBS library
- *rtems\_cbs\_create\_server* (page 650) - Create a new bandwidth server
- *rtems\_cbs\_attach\_thread* (page 651) - Attach a thread to server
- *rtems\_cbs\_detach\_thread* (page 652) - Detach a thread from server
- *rtems\_cbs\_destroy\_server* (page 653) - Destroy a bandwidth server
- *rtems\_cbs\_get\_server\_id* (page 654) - Get an ID of a server
- *rtems\_cbs\_get\_parameters* (page 655) - Get scheduling parameters of a server
- *rtems\_cbs\_set\_parameters* (page 656) - Set scheduling parameters of a server
- *rtems\_cbs\_get\_execution\_time* (page 657) - Get elapsed execution time
- *rtems\_cbs\_get\_remaining\_budget* (page 658) - Get remaining execution time
- *rtems\_cbs\_get\_approved\_budget* (page 659) - Get scheduler approved execution time

## 35.2 Background

### 35.2.1 Constant Bandwidth Server Definitions

The Constant Bandwidth Server API enables tasks to communicate with the scheduler and indicate its scheduling parameters. The scheduler has to be set up first (by defining `CONFIGURE_SCHEDULER_CBS` macro).

The difference to a plain EDF is the presence of servers. It is a budget aware extension of the EDF scheduler, therefore, tasks attached to servers behave in a similar way as with EDF unless they exceed their budget.

The intention of servers is reservation of a certain computation time (budget) of the processor for all subsequent periods. The structure `rtems_cbs_parameters` determines the behavior of a server. It contains `deadline` which is equal to `period`, and `budget` which is the time the server is allowed to spend on CPU per each period. The ratio between those two parameters yields the maximum percentage of the CPU the server can use (bandwidth). Moreover, thanks to this limitation the overall utilization of CPU is under control, and the sum of bandwidths of all servers in the system yields the overall reserved portion of processor. The rest is still available for ordinary tasks that are not attached to any server.

In order to make the server effective to the executing tasks, tasks have to be attached to the servers. The `rtems_cbs_server_id` is a type denoting an id of a server and `rtems_id` a type for id of tasks. .. index:: CBS periodic tasks

### 35.2.2 Handling Periodic Tasks

Each task's execution begins with a default background priority (see the chapter Scheduling Concepts to understand the concept of priorities in EDF). Once you decide the tasks should start periodic execution, you have two possibilities. Either you use only the Rate Monotonic manager which takes care of periodic behavior, or you declare `deadline` and `budget` using the CBS API in which case these properties are constant for all subsequent periods, unless you change them using the CBS API again. Task now only has to indicate and end of each period using `rtems_rate_monotonic_period`. .. index:: CBS overrun handler

### 35.2.3 Registering a Callback Function

In case tasks attached to servers are not aware of their execution time and happen to exceed it, the scheduler does not guarantee execution any more and pulls the priority of the task to background, which would possibly lead to immediate preemption (if there is at least one ready task with a higher priority). However, the task is not blocked but a callback function is invoked. The callback function (`rtems_cbs_budget_overrun`) might be optionally registered upon a server creation (`rtems_cbs_create_server`).

This enables the user to define what should happen in case of budget overrun. There is obviously no space for huge operations because the priority is down and not real time any more, however, you still can at least in release resources for other tasks, restart the task or log an error information. Since the routine is called directly from kernel, use `printk()` instead of `printf()`.

The calling convention of the callback function is:

```
1 void overrun_handler(  
2     rtems_cbs_server_id server_id  
3 );
```

### 35.2.4 Limitations

When using this scheduler you have to keep in mind several things:

- `it_limitations`
- In the current implementation it is possible to attach only a single task to each server.
- If you have a task attached to a server and you voluntarily block it in the beginning of its execution, its priority will be probably pulled to background upon unblock, thus not guaranteed deadline any more. This is because you are effectively raising computation time of the task. When unblocking, you should be always sure that the ratio between remaining computation time and remaining deadline is not higher than the utilization you have agreed with the scheduler.

## 35.3 Operations

### 35.3.1 Setting up a server

The directive `rtems_cbs_create_server` is used to create a new server that is characterized by `rtems_cbs_parameters`. You also might want to register the `rtems_cbs_budget_overrun` callback routine. After this step tasks can be attached to the server. The directive `rtems_cbs_set_parameters` can change the scheduling parameters to avoid destroying and creating a new server again.

### 35.3.2 Attaching Task to a Server

If a task is attached to a server using `rtems_cbs_attach_thread`, the task's computation time per period is limited by the server and the deadline (period) of task is equal to deadline of the server which means if you conclude a period using `rate_monotonic_period`, the length of next period is always determined by the server's property.

The task has a guaranteed bandwidth given by the server but should not exceed it, otherwise the priority is pulled to background until the start of next period and the `rtems_cbs_budget_overrun` callback function is invoked.

When attaching a task to server, the preemptability flag of the task is raised, otherwise it would not be possible to control the execution of the task.

### 35.3.3 Detaching Task from a Server

The directive `rtems_cbs_detach_thread` is just an inverse operation to the previous one, the task continues its execution with the initial priority.

Preemptability of the task is restored to the initial value.

### 35.3.4 Examples

The following example presents a simple common use of the API.

You can see the initialization and cleanup call here, if there are multiple tasks in the system, it is obvious that the initialization should be called before creating the task.

Notice also that in this case we decided to register an overrun handler, instead of which there could be `NULL`. This handler just prints a message to terminal, what else may be done here depends on a specific application.

During the periodic execution, remaining budget should be watched to avoid overrun.

```
1 void overrun_handler (  
2     rtems_cbs_server_id server_id  
3 )  
4 {  
5     printk( "Budget overrun, fixing the task\n" );  
6     return;  
7 }  
8
```

(continues on next page)

(continued from previous page)

```
9 rtems_task Tasks_Periodic(  
10     rtems_task_argument argument  
11 )  
12 {  
13     rtems_id          rmid;  
14     rtems_cbs_server_id server_id;  
15     rtems_cbs_parameters params;  
16  
17     params.deadline = 10;  
18     params.budget = 4;  
19  
20     rtems_cbs_initialize();  
21     rtems_cbs_create_server( &params, &overrun_handler, &server_id );  
22     rtems_cbs_attach_thread( server_id, RTEMS_SELF );  
23     rtems_rate_monotonic_create( argument, &rmid );  
24  
25     while ( 1 ) {  
26         if (rtems_rate_monotonic_period(rmid, params.deadline) == RTEMS_TIMEOUT)  
27             break;  
28         /* Perform some periodic action */  
29     }  
30  
31     rtems_rate_monotonic_delete( rmid );  
32     rtems_cbs_cleanup();  
33     exit( 1 );  
34 }
```

## 35.4 Directives

This section details the Constant Bandwidth Server's directives. A subsection is dedicated to each of this manager's directives and describes the calling sequence, related constants, usage, and status codes.

### 35.4.1 CBS\_INITIALIZE - Initialize the CBS library

#### CALLING SEQUENCE:

```
1 int rtems_cbs_initialize( void );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful initialization
RTEMS_CBS_ERROR_NO_MEMORY	not enough memory for data

#### DESCRIPTION:

This routine initializes the library in terms of allocating necessary memory for the servers. In case not enough memory is available in the system, RTEMS\_CBS\_ERROR\_NO\_MEMORY is returned, otherwise RTEMS\_CBS\_OK.

#### NOTES:

Additional memory per each server is allocated upon invocation of `rtems_cbs_create_server`.

Tasks in the system are not influenced, they still keep executing with their initial parameters.



### 35.4.2 CBS\_CLEANUP - Cleanup the CBS library

**CALLING SEQUENCE:**

```
1 int rtems_cbs_cleanup( void );
```

**DIRECTIVE STATUS CODES:**

RTEMS_CBS_OK	always successful
--------------	-------------------

**DESCRIPTION:**

This routine detaches all tasks from their servers, destroys all servers and returns memory back to the system.

**NOTES:**

All tasks continue executing with their initial priorities.

### 35.4.3 CBS\_CREATE\_SERVER - Create a new bandwidth server

#### CALLING SEQUENCE:

```

1 int rtems_cbs_create_server (
2     rtems_cbs_parameters *params,
3     rtems_cbs_budget_overrun budget_overrun_callback,
4     rtems_cbs_server_id *server_id
5 );

```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successfully created
RTEMS_CBS_ERROR_NO_MEMORY	not enough memory for data
RTEMS_CBS_ERROR_FULL	maximum servers exceeded
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument

#### DESCRIPTION:

This routine prepares an instance of a constant bandwidth server. The input parameter `rtems_cbs_parameters` specifies scheduling parameters of the server (period and budget). If these are not valid, `RTEMS_CBS_ERROR_INVALID_PARAMETER` is returned. The `budget_overrun_callback` is an optional callback function, which is invoked in case the server's budget within one period is exceeded. Output parameter `server_id` becomes an id of the newly created server. If there is not enough memory, the `RTEMS_CBS_ERROR_NO_MEMORY` is returned. If the maximum server count in the system is exceeded, `RTEMS_CBS_ERROR_FULL` is returned.

#### NOTES:

No task execution is being influenced so far.

### 35.4.4 CBS\_ATTACH\_THREAD - Attach a thread to server

#### CALLING SEQUENCE:

```
1 int rtems_cbs_attach_thread (  
2     rtems_cbs_server_id server_id,  
3     rtems_id           task_id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successfully attached
RTEMS_CBS_ERROR_FULL	server maximum tasks exceeded
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

Attaches a task (`task_id`) to a server (`server_id`). The server has to be previously created. Now, the task starts to be scheduled according to the server parameters and not using initial priority. This implementation allows only one task per server, if the user tries to bind another task to the same server, `RTEMS_CBS_ERROR_FULL` is returned.

#### NOTES:

Tasks attached to servers become preemptible.

### 35.4.5 CBS\_DETACH\_THREAD - Detach a thread from server

#### CALLING SEQUENCE:

```
1 int rtems_cbs_detach_thread (  
2     rtems_cbs_server_id server_id,  
3     rtems_id           task_id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successfully detached
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive detaches a thread from server. The task continues its execution with initial priority.

#### NOTES:

The server can be reused for any other task.

### 35.4.6 CBS\_DESTROY\_SERVER - Destroy a bandwidth server

#### CALLING SEQUENCE:

```
1 int rtems_cbs_destroy_server (  
2     rtems_cbs_server_id server_id  
3 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successfully destroyed
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive destroys a server. If any task was attached to the server, the task is detached and continues its execution according to EDF rules with initial properties.

#### NOTES:

This again enables one more task to be created.

### 35.4.7 CBS\_GET\_SERVER\_ID - Get an ID of a server

#### CALLING SEQUENCE:

```
1 int rtems_cbs_get_server_id (  
2     rtems_id          task_id,  
3     rtems_cbs_server_id *server_id  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive returns an id of server belonging to a given task.

### 35.4.8 CBS\_GET\_PARAMETERS - Get scheduling parameters of a server

#### CALLING SEQUENCE:

```
1 rtems_cbs_get_parameters (  
2   rtems_cbs_server_id  server_id,  
3   rtems_cbs_parameters *params  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive returns a structure with current scheduling parameters of a given server (period and execution time).

#### NOTES:

It makes no difference if any task is assigned or not.

### 35.4.9 CBS\_SET\_PARAMETERS - Set scheduling parameters

#### CALLING SEQUENCE:

```
1 int rtems_cbs_set_parameters (  
2     rtems_cbs_server_id server_id,  
3     rtems_cbs_parameters *params  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive sets new scheduling parameters to the server. This operation can be performed regardless of whether a task is assigned or not. If a task is assigned, the parameters become effective immediately, therefore it is recommended to apply the change between two subsequent periods.

#### NOTES:

There is an upper limit on both period and budget equal to  $(2^{31})-1$  ticks.



### 35.4.10 CBS\_GET\_EXECUTION\_TIME - Get elapsed execution time

#### CALLING SEQUENCE:

```
1 int rtems_cbs_get_execution_time (  
2     rtems_cbs_server_id  server_id,  
3     time_t               *exec_time,  
4     time_t               *abs_time  
5 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This routine returns consumed execution time (`exec_time`) of a server during the current period.

#### NOTES:

Absolute time (`abs_time`) not supported now.

### 35.4.11 CBS\_GET\_REMAINING\_BUDGET - Get remaining execution time

#### CALLING SEQUENCE:

```
1 int rtems_cbs_get_remaining_budget (  
2     rtems_cbs_server_id server_id,  
3     time_t               *remaining_budget  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive returns remaining execution time of a given server for current period.

#### NOTES:

If the execution time approaches zero, the assigned task should finish computations of the current period.

### 35.4.12 CBS\_GET\_APPROVED\_BUDGET - Get scheduler approved execution time

#### CALLING SEQUENCE:

```
1 int rtems_cbs_get_approved_budget (  
2     rtems_cbs_server_id server_id,  
3     time_t               *appr_budget  
4 );
```

#### DIRECTIVE STATUS CODES:

RTEMS_CBS_OK	successful
RTEMS_CBS_ERROR_INVALID_PARAMETER	invalid input argument
RTEMS_CBS_ERROR_NOSERVER	server is not valid

#### DESCRIPTION:

This directive returns server's approved budget for subsequent periods.



# ADA SUPPORT

## 36.1 Introduction

RTEMS has long had support for the Ada programming language by supporting the GNU Ada Compiler (GNAT). There are two primary components to this support:

- Ada Programming Language Support
- Classic API Ada Bindings

## 36.2 Ada Programming Language Support

The Ada programming natively supports multi-threaded programming with its own tasking and concurrency model. Native Ada multi-threaded applications should work using GNAT/RTEMS with no changes.

The application developer will have to account for the specific requirements of the GNAT Run-Time when configuring RTEMS. There are example Ada programs with RTEMS configuration and startup sequences.

## 36.3 Classic API Ada Bindings

An Ada language binding exists for a subset of the RTEMS Classic API. In the early 1990's, there were C and Ada implementations of RTEMS which were functionally equivalent. The source structure was as similar as possible. In fact, the top level `c/` directory at one point had a sibling `ada/`. The current Ada language bindings and test code was derived from that Ada implementation.

The Ada binding specifically excludes some methods which are either not safe or not intended for use from Ada programs. However, methods are generally only added to this binding when a user makes a requests. Thus some methods that could be supported are not. If in doubt, ask about a methods and contribute bindings.

The bindings are located in the `c/src/ada` directory of the RTEMS source tree. The tests are in `c/src/ada-tests`. The bindings following a simple pattern to map the C Classic API calls into Ada subprograms. The following rules are used:

- All RTEMS interfaces are in the RTEMS Ada package. The `rtems_` and `RTEMS_` prefixes in the C version of the Classic API thus correspond to "RTEMS." in Ada symbol nomenclature. For example, `rtems_task_create()` in C is `RTEMS.Task_Create()` in Ada.
- Classic API directives tend to return an `rtems_status_code`. Some directives also have an output parameter such as an object id on a create operation. Ada subprograms are either pure functions with only a single return value or subprograms. For consistency, the returned status code is always the last parameter of the Ada calling sequence.

Caution should be exercised when writing programs which mix Ada tasks, Classic API tasks, and POSIX API threads. Ada tasks use a priority numbering scheme defined by the Ada programming language. Each Ada task is implemented in GNAT/RTEMS as a single POSIX thread. Thus Ada task priorities must be mapped onto POSIX thread priorities. Complicating matters, Classic API tasks and POSIX API threads use different numbering schemes for priority. Low numbers are high priority in the Classic API while indicating low priority in the POSIX threads API. Experience writing mixed threading model programs teaches that creating a table of the priorities used in the application with the value in all tasking models used is helpful.

The GNAT run-time uses a priority ceiling mutex to protect its data structures. The priority ceiling value is one priority more important than the most important Ada task priority (in POSIX API terms). Do not invoke any services implemented in Ada from a thread or task which is of greater priority. This will result in a priority ceiling violation error and lead to a failure in the Ada run-time.

Exercise extreme caution when considering writing code in Ada which will execute in the context of an interrupt handler. Hardware interrupts are processed outside the context of any thread in RTEMS and this can lead to violating assumptions in the GNAT run-time. Specifically a priority ceiling mutex should never be used from an ISR and it is difficult to predict when the Ada compiler or run-time will use a mutex.

RTEMS has two capabilities which can assist in avoiding this problem. The Classic API Timer Manager allows the creation of Timer Service Routines which execute in the context of a task rather than the clock tick Interrupt Service Routine. Similarly, there is support for Interrupt Tasks which is a mechanism to defer the processing of the event from the hardware interrupt level to a thread.



**LINKER SETS**

## 37.1 Introduction

Linker sets are a flexible means to create arrays of items out of a set of object files at link-time. For example its possible to define an item *I* of type *T* in object file *A* and an item *J* of type *T* in object file *B* to be a member of a linker set *S*. The linker will then collect these two items *I* and *J* and place them in consecutive memory locations, so that they can be accessed like a normal array defined in one object file. The size of a linker set is defined by its begin and end markers. A linker set may be empty. It should only contain items of the same type.

The following macros are provided to create, populate and use linker sets.

- *RTEMS\_LINKER\_SET\_BEGIN* (page 670) - Designator of the linker set begin marker
- *RTEMS\_LINKER\_SET\_END* (page 671) - Designator of the linker set end marker
- *RTEMS\_LINKER\_SET\_SIZE* (page 672) - The linker set size in characters
- *RTEMS\_LINKER\_SET\_ITEM\_COUNT* (page 673) - The linker set item count
- *RTEMS\_LINKER\_SET\_IS\_EMPTY* (page 674) - Is the linker set empty?
- *RTEMS\_LINKER\_SET\_FOREACH* (page 675) - Iterate through the linker set items
- *RTEMS\_LINKER\_ROSET\_DECLARE* (page 676) - Declares a read-only linker set
- *RTEMS\_LINKER\_ROSET* (page 677) - Defines a read-only linker set
- *RTEMS\_LINKER\_ROSET\_ITEM\_DECLARE* (page 678) - Declares a read-only linker set item
- *RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED\_DECLARE* (page 679) - Declares an ordered read-only linker set item
- *RTEMS\_LINKER\_ROSET\_ITEM\_REFERENCE* (page 680) - References a read-only linker set item
- *RTEMS\_LINKER\_ROSET\_ITEM* (page 681) - Defines a read-only linker set item
- *RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED* (page 682) - Defines an ordered read-only linker set item
- *RTEMS\_LINKER\_ROSET\_CONTENT* (page 683) - Marks a declaration as a read-only linker set content
- *RTEMS\_LINKER\_RWSET\_DECLARE* (page 684) - Declares a read-write linker set
- *RTEMS\_LINKER\_RWSET* (page 685) - Defines a read-write linker set
- *RTEMS\_LINKER\_RWSET\_ITEM\_DECLARE* (page 686) - Declares a read-write linker set item
- *RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED\_DECLARE* (page 687) - Declares an ordered read-write linker set item
- *RTEMS\_LINKER\_RWSET\_ITEM\_REFERENCE* (page 688) - References a read-write linker set item
- *RTEMS\_LINKER\_RWSET\_ITEM* (page 689) - Defines a read-write linker set item
- *RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED* (page 690) - Defines an ordered read-write linker set item

- *RTEMS\_LINKER\_RWSET\_CONTENT* (page 691) - Marks a declaration as a read-write linker set content

## 37.2 Background

Linker sets are used not only in RTEMS, but also for example in Linux, in FreeBSD, for the GNU C constructor extension and for global C++ constructors. They provide a space efficient and flexible means to initialize modules. A linker set consists of

- dedicated input sections for the linker (e.g. `.ctors` and `.ctors.*` in the case of global constructors),
- a begin marker (e.g. provided by `crtbegin.o`, and
- an end marker (e.g. provided by `ctrend.o`).

A module may place a certain data item into the dedicated input section. The linker will collect all such data items in this section and creates a begin and end marker. The initialization code can then use the begin and end markers to find all the collected data items (e.g. pointers to initialization functions).

In the linker command file of the GNU linker we need the following output section descriptions.

```
1 /* To be placed in a read-only memory region */
2 .rtemsroset : {
3     KEEP (*(SORT(.rtemsroset.*)))
4 }
5 /* To be placed in a read-write memory region */
6 .rtemsrwset : {
7     KEEP (*(SORT(.rtemsrwset.*)))
8 }
```

The `KEEP()` ensures that a garbage collection by the linker will not discard the content of this section. This would normally be the case since the linker set items are not referenced directly. The `SORT()` directive sorts the input sections lexicographically. Please note the lexicographical order of the `.begin`, `.content` and `.end` section name parts in the RTEMS linker sets macros which ensures that the position of the begin and end markers are right.

So, what is the benefit of using linker sets to initialize modules? It can be used to initialize and include only those RTEMS managers and other components which are used by the application. For example, in case an application uses message queues, it must call `rtems_message_queue_create()`. In the module implementing this function, we can place a linker set item and register the message queue handler constructor. Otherwise, in case the application does not use message queues, there will be no reference to the `rtems_message_queue_create()` function and the constructor is not registered, thus nothing of the message queue handler will be in the final executable.

For an example see test program `sptests/splinkersets01`.

## 37.3 Directives

### 37.3.1 RTEMS\_LINKER\_SET\_BEGIN - Designator of the linker set begin marker

#### CALLING SEQUENCE:

```
1 type *begin = RTEMS_LINKER_SET_BEGIN( set );
```

#### DESCRIPTION:

This macro generates the designator of the begin marker of the linker set identified by *set*. The item at the begin marker address is the first member of the linker set if it exists, e.g. the linker set is not empty. A linker set is empty, if and only if the begin and end markers have the same address.

The *set* parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set.

#### NOTE:

The compiler may try to be smart. In general it will not work to assign linker set begin and end addresses to pointer variables and treat them like ordinary pointers. The compiler may exploit the fact that actually two distinct objects are involved and use this to optimize. To avoid trouble use *RTEMS\_LINKER\_SET\_SIZE - The linker set size in characters* (page 672), *RTEMS\_LINKER\_SET\_ITEM\_COUNT - The linker set item count* (page 673), *RTEMS\_LINKER\_SET\_IS\_EMPTY - Is the linker set empty?* (page 674) and *RTEMS\_LINKER\_SET\_FOREACH - Iterate through the linker set items* (page 675).

### 37.3.2 RTEMS\_LINKER\_SET\_END - Designator of the linker set end marker

**CALLING SEQUENCE:**

```
1 type *end = RTEMS_LINKER_SET_END( set );
```

**DESCRIPTION:**

This macro generates the designator of the end marker of the linker set identified by `set`. The item at the end marker address is not a member of the linker set. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set.

### 37.3.3 RTEMS\_LINKER\_SET\_SIZE - The linker set size in characters

#### CALLING SEQUENCE:

```
1 size_t size = RTEMS_LINKER_SET_SIZE( set );
```

#### DESCRIPTION:

This macro returns the size of the linker set identified by `set` in characters. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set.



### 37.3.4 RTEMS\_LINKER\_SET\_ITEM\_COUNT - The linker set item count

#### CALLING SEQUENCE:

```
1 size_t item_count = RTEMS_LINKER_SET_ITEM_COUNT( set );
```

#### DESCRIPTION:

This macro returns the item count of the linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set.

### 37.3.5 RTEMS\_LINKER\_SET\_IS\_EMPTY - Is the linker set empty?

#### CALLING SEQUENCE:

```
1 bool is_empty = RTEMS_LINKER_SET_IS_EMPTY( set );
```

#### DESCRIPTION:

This macro returns true if the linker set identified by `set` is empty, otherwise returns false. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set.

## 37.3.6 RTEMS\_LINKER\_SET\_FOREACH - Iterate through the linker set items

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_RWSET( myset, int );
2
3 int count( void )
4 {
5     int *item;
6     int n;
7
8     n = 0;
9     RTEMS_LINKER_SET_FOREACH( myset, item ) {
10         n += *item;
11     }
12
13     return n;
14 }
```

**DESCRIPTION:**

This macro generates a for loop statement which iterates through each item of a linker set identified by set. The set parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The item parameter must be a pointer to an item of the linker set. It iterates through all items of the linker set from begin to end.

### 37.3.7 RTEMS\_LINKER\_ROSET\_DECLARE - Declares a read-only linker set

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_ROSET_DECLARE( set, type );
```

**DESCRIPTION:**

This macro generates declarations for the begin and end markers of a read-only linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set.

### 37.3.8 RTEMS\_LINKER\_ROSET - Defines a read-only linker set

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_ROSET( set, type );
```

**DESCRIPTION:**

This macro generates definitions for the begin and end markers of a read-only linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set.

### 37.3.9 RTEMS\_LINKER\_ROSET\_ITEM\_DECLARE - Declares a read-only linker set item

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_ROSET_ITEM_DECLARE( set, type, item );
```

**DESCRIPTION:**

This macro generates a declaration of an item contained in the read-only linker set identified by *set*. For a description of the *set*, *type*, and *item* parameters see *RTEMS\_LINKER\_ROSET\_ITEM - Defines a read-only linker set item* (page 681).

### 37.3.10 RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED\_DECLARE - Declares an ordered read-only linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_ROSET_ITEM_ORDERED_DECLARE( set, type, item, order );
```

#### DESCRIPTION:

This macro generates a declaration of an ordered item contained in the read-only linker set identified by `set`. For a description of the `set`, `type`, `item`, and `order` parameters see *RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED - Defines an ordered read-only linker set item* (page 682).

### 37.3.11 RTEMS\_LINKER\_ROSET\_ITEM\_REFERENCE - References a read-only linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_ROSET_ITEM_REFERENCE( set, type, item );
```

#### DESCRIPTION:

This macro generates a reference to an item contained in the read-only linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set.



### 37.3.12 RTEMS\_LINKER\_ROSET\_ITEM - Defines a read-only linker set item

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_ROSET_ITEM( set, type, item );
```

**DESCRIPTION:**

This macro generates a definition of an item contained in the read-only linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set.

### 37.3.13 RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED - Defines an ordered read-only linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_ROSET_ITEM_ORDERED( set, type, item, order );
```

#### DESCRIPTION:

This macro generates a definition of an ordered item contained in the read-only linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The `type` must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set. The `order` parameter must be a valid linker input section name part on which macro expansion is performed. The items are lexicographically ordered according to the `order` parameter within a linker set. Ordered items are placed before unordered items in the linker set.

#### NOTES:

To be resilient to typos in the `order` parameter, it is recommended to use the following construct in macros defining items for a particular linker set (see `enum` in `XYZ_ITEM()`).

```
1 #include <rtems/linkersets.h>
2
3 typedef struct {
4     int foo;
5 } xyz_item;
6
7 /* The XYZ-order defines */
8 #define XYZ_ORDER_FIRST 0x00001000
9 #define XYZ_ORDER_AND_SO_ON 0x00002000
10
11 /* Defines an ordered XYZ-item */
12 #define XYZ_ITEM( item, order ) \
13     enum { xyz_##item = order }; \
14     RTEMS_LINKER_ROSET_ITEM_ORDERED( \
15     xyz, const xyz_item *, item, order \
16     ) = { &item }
17
18 /* Example item */
19 static const xyz_item some_item = { 123 };
20 XYZ_ITEM( some_item, XYZ_ORDER_FIRST );
```

### 37.3.14 RTEMS\_LINKER\_ROSET\_CONTENT - Marks a declaration as a read-only linker set content

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_ROSET_CONTENT( set, decl );
```

#### DESCRIPTION:

This macro marks a declaration as a read-only linker set content. The linker set is identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `decl` parameter must be an arbitrary variable declaration.

### 37.3.15 RTEMS\_LINKER\_RWSET\_DECLARE - Declares a read-write linker set

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_RWSET_DECLARE( set, type );
```

**DESCRIPTION:**

This macro generates declarations for the begin and end markers of a read-write linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set.

### 37.3.16 RTEMS\_LINKER\_RWSET - Defines a read-write linker set

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET( set, type );
```

#### DESCRIPTION:

This macro generates definitions for the begin and end markers of a read-write linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set.

### 37.3.17 RTEMS\_LINKER\_RWSET\_ITEM\_DECLARE - Declares a read-write linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET_ITEM_DECLARE( set, type, item );
```

#### DESCRIPTION:

This macro generates a declaration of an item contained in the read-write linker set identified by `set`. For a description of the `set`, `type`, and `item` parameters see *RTEMS\_LINKER\_RWSET\_ITEM - Defines a read-write linker set item* (page 689).

### 37.3.18 RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED\_DECLARE - Declares an ordered read-write linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET_ITEM_ORDERED_DECLARE( set, type, item, order );
```

#### DESCRIPTION:

This macro generates a declaration of an ordered item contained in the read-write linker set identified by `set`. For a description of the `set`, `type`, `item`, and `order` parameters see *RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED - Defines an ordered read-write linker set item* (page 690).

### 37.3.19 RTEMS\_LINKER\_RWSET\_ITEM\_REFERENCE - References a read-write linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET_ITEM_REFERENCE( set, type, item );
```

#### DESCRIPTION:

This macro generates a reference to an item contained in the read-write linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The `type` must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set.



### 37.3.20 RTEMS\_LINKER\_RWSET\_ITEM - Defines a read-write linker set item

**CALLING SEQUENCE:**

```
1 RTEMS_LINKER_RWSET_ITEM( set, type, item );
```

**DESCRIPTION:**

This macro generates a definition of an item contained in the read-write linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The type must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set.

### 37.3.21 RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED - Defines an ordered read-write linker set item

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET_ITEM_ORDERED( set, type, item, order );
```

#### DESCRIPTION:

This macro generates a definition of an ordered item contained in the read-write linker set identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `type` parameter defines the type of the linker set items. The `type` must be the same for all macro invocations of a particular linker set. The `item` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies an item in the linker set. The `order` parameter must be a valid linker input section name part on which macro expansion is performed. The items are lexicographically ordered according to the `order` parameter within a linker set. Ordered items are placed before unordered items in the linker set.

#### NOTES:

To be resilient to typos in the `order` parameter, it is recommended to use the following construct in macros defining items for a particular linker set (see `enum` in `XYZ_ITEM()`).

```
1 #include <rtems/linkersets.h>
2
3 typedef struct {
4     int foo;
5 } xyz_item;
6
7 /* The XYZ-order defines */
8 #define XYZ_ORDER_FIRST 0x00001000
9 #define XYZ_ORDER_AND_SO_ON 0x00002000
10
11 /* Defines an ordered XYZ-item */
12 #define XYZ_ITEM( item, order ) \
13     enum { xyz_##item = order }; \
14     RTEMS_LINKER_RWSET_ITEM_ORDERED( \
15     xyz, const xyz_item *, item, order \
16     ) = { &item }
17
18 /* Example item */
19 static const xyz_item some_item = { 123 };
20 XYZ_ITEM( some_item, XYZ_ORDER_FIRST );
```

### 37.3.22 RTEMS\_LINKER\_RWSET\_CONTENT - Marks a declaration as a read-write linker set content

#### CALLING SEQUENCE:

```
1 RTEMS_LINKER_RWSET_CONTENT( set, decl );
```

#### DESCRIPTION:

This macro marks a declaration as a read-write linker set content. The linker set is identified by `set`. The `set` parameter itself must be a valid C designator on which no macro expansion is performed. It uniquely identifies the linker set. The `decl` parameter must be an arbitrary variable declaration.



# DIRECTIVE STATUS CODES

## 38.1 Introduction

The directive status code directives are:

- *rtems\_status\_text* (page 696) - Return the name for the status code

## 38.2 Directives

The directives are:

RTEMS_SUCCESSFUL	successful completion
RTEMS_TASK_EXITTED	returned from a task
RTEMS_MP_NOT_CONFIGURED	multiprocessing not configured
RTEMS_INVALID_NAME	invalid object name
RTEMS_INVALID_ID	invalid object id
RTEMS_TOO_MANY	too many
RTEMS_TIMEOUT	timed out waiting
RTEMS_OBJECT_WAS_DELETED	object was deleted while waiting
RTEMS_INVALID_SIZE	invalid specified size
RTEMS_INVALID_ADDRESS	invalid address specified
RTEMS_INVALID_NUMBER	number was invalid
RTEMS_NOT_DEFINED	item not initialized
RTEMS_RESOURCE_IN_USE	resources outstanding
RTEMS_UNSATISFIED	request not satisfied
RTEMS_INCORRECT_STATE	task is in wrong state
RTEMS_ALREADY_SUSPENDED	task already in state
RTEMS_ILLEGAL_ON_SELF	illegal for calling task
RTEMS_ILLEGAL_ON_REMOTE_OBJECT	illegal for remote object
RTEMS_CALLED_FROM_ISR	invalid environment
RTEMS_INVALID_PRIORITY	invalid task priority
RTEMS_INVALID_CLOCK	invalid time buffer
RTEMS_INVALID_NODE	invalid node id
RTEMS_NOT_CONFIGURED	directive not configured
RTEMS_NOT_OWNER_OF_RESOURCE	not owner of resource
RTEMS_NOT_IMPLEMENTED	directive not implemented or feature not available in configuration
RTEMS_INTERNAL_ERROR	RTEMS inconsistency detected
RTEMS_NO_MEMORY	could not get enough memory
RTEMS_IO_ERROR	driver I/O error
RTEMS_INTERRUPTED	returned by driver to indicate interrupted operation

### 38.2.1 STATUS\_TEXT - Returns the enumeration name for a status code

**CALLING SEQUENCE:**

```
1 const char *rtems_status_text(  
2     rtems_status_code code  
3 );
```

**DIRECTIVE STATUS CODES**

The status code enumeration name or “?” in case the status code is invalid.

**DESCRIPTION:**

Returns the enumeration name for the specified status code.



## EXAMPLE APPLICATION

```
1 /*
2 * This file contains an example of a simple RTEMS
3 * application. It instantiates the RTEMS Configuration
4 * Information using confdef.h and contains two tasks:
5 * a user initialization task and a simple task.
6 */
7
8 #include <rtems.h>
9
10 rtems_task user_application(rtems_task_argument argument);
11
12 rtems_task init_task(
13     rtems_task_argument ignored
14 )
15 {
16     rtems_id      tid;
17     rtems_status_code status;
18     rtems_name    name;
19
20     name = rtems_build_name( 'A', 'P', 'P', '1' );
21
22     status = rtems_task_create(
23         name, 1, RTEMS_MINIMUM_STACK_SIZE,
24         RTEMS_NO_PREEMPT, RTEMS_FLOATING_POINT, &tid
25     );
26     if ( status != RTEMS_SUCCESSFUL ) {
27         printf( "rtems_task_create failed with status of %d.\n", status );
28         exit( 1 );
29     }
30
31     status = rtems_task_start( tid, user_application, 0 );
32     if ( status != RTEMS_SUCCESSFUL ) {
33         printf( "rtems_task_start failed with status of %d.\n", status );
34         exit( 1 );
35     }
36
37     status = rtems_task_delete( SELF );    /* should not return */
38
39     printf( "rtems_task_delete returned with status of %d.\n", status );
40     exit( 1 );
41 }
42
```

(continues on next page)

(continued from previous page)

```
43 rtems_task user_application(rtems_task_argument argument)
44 {
45     /* application specific initialization goes here */
46     while ( 1 ) { /* infinite loop */
47         /* APPLICATION CODE GOES HERE
48          *
49          * This code will typically include at least one
50          * directive which causes the calling task to
51          * give up the processor.
52          */
53     }
54 }
55
56 /* The Console Driver supplies Standard I/O. */
57 #define CONFIGURE_APPLICATION_NEEDS_CONSOLE_DRIVER
58 /* The Clock Driver supplies the clock tick. */
59 #define CONFIGURE_APPLICATION_NEEDS_CLOCK_DRIVER
60 #define CONFIGURE_MAXIMUM_TASKS 2
61 #define CONFIGURE_INIT_TASK_NAME rtems_build_name( 'E', 'X', 'A', 'M' )
62 #define CONFIGURE_RTEMS_INIT_TASKS_TABLE
63 #define CONFIGURE_INIT
64 #include <rtems/confdefs.h>
```

## GLOSSARY

### **ABI**

This term is an acronym for Application Binary Interface.

### **active**

A term used to describe an object which has been created by an application.

### **aperiodic task**

A task which must execute only at irregular intervals and has only a soft deadline.

### **API**

This term is an acronym for Application Programming Interface.

### **application**

In this document, software which makes use of RTEMS.

### **ASR**

This term is an acronym for *Asynchronous Signal Routine*.

### **assembler language**

The assembler language is a programming language which can be translated very easily into machine code and data. For this project assembler languages are restricted to languages accepted by the *GNU* assembler program for the target architectures.

### **asynchronous**

Not related in order or timing to other occurrences in the system.

### **Asynchronous Signal Routine**

Similar to a hardware interrupt except that it is associated with a task and is run in the context of a task. The directives provided by the signal manager are used to service signals.

### **atomic operations**

Atomic operations are defined in terms of *C11*.

### **awakened**

A term used to describe a task that has been unblocked and may be scheduled to the CPU.

### **big endian**

A data representation scheme in which the bytes composing a numeric value are arranged such that the most significant byte is at the lowest address.

### **bit-mapped**

A data encoding scheme in which each bit in a variable is used to represent something different. This makes for compact data representation.

**block**

A physically contiguous area of memory.

**blocked task**

The task state entered by a task which has been previously started and cannot continue execution until the reason for waiting has been satisfied. Blocked tasks are not an element of the set of ready tasks of a scheduler instance.

**Board Support Package**

A collection of device initialization and control routines specific to a particular type of board or collection of boards.

**broadcast**

To simultaneously send a message to a logical set of destinations.

**BSP**

This term is an acronym for *Board Support Package*.

**buffer**

A fixed length block of memory allocated from a partition.

**C language**

The C language for this project is defined in terms of *C11*.

**C++11**

The standard ISO/IEC 14882:2011.

**C11**

The standard ISO/IEC 9899:2011.

**calling convention**

The processor and compiler dependent rules which define the mechanism used to invoke subroutines in a high-level language. These rules define the passing of arguments, the call and return mechanism, and the register set which must be preserved.

**CCB**

This term is an acronym for Change Control Board.

**Central Processing Unit**

This term is equivalent to the terms processor and microprocessor.

**chain**

A data structure which allows for efficient dynamic addition and removal of elements. It differs from an array in that it is not limited to a predefined size.

**cluster**

We have clustered scheduling in case the set of processors of a system is partitioned into non-empty pairwise disjoint subsets. These subsets are called clusters. Clusters with a cardinality of one are partitions. Each cluster is owned by exactly one scheduler instance.

**coalesce**

The process of merging adjacent holes into a single larger hole. Sometimes this process is referred to as garbage collection.

**Configuration Table**

A table which contains information used to tailor RTEMS for a particular application.

**context**

All of the processor registers and operating system data structures associated with a task.

**context switch**

Alternate term for task switch. Taking control of the processor from one task and transferring it to another task.

**control block**

A data structure used by the executive to define and control an object.

**core**

When used in this manual, this term refers to the internal executive utility functions. In the interest of application portability, the core of the executive should not be used directly by applications.

**CPU**

This term is an acronym for *Central Processing Unit*.

**critical section**

A section of code which must be executed indivisibly.

**CRT**

This term is an acronym for Cathode Ray Tube. Normally used in reference to the man-machine interface.

**deadline**

A fixed time limit by which a task must have completed a set of actions. Beyond this point, the results are of reduced value and may even be considered useless or harmful.

**device**

A peripheral used by the application that requires special operation software. See also device driver.

**device driver**

Control software for special peripheral devices used by the application.

**Device Driver Table**

A table which contains the entry points for each of the configured device drivers.

**directives**

RTEMS' provided routines that provide support mechanisms for real-time applications.

**dispatch**

The act of loading a task's context onto the CPU and transferring control of the CPU to that task.

**Doorstop**

**Doorstop** is a requirements management tool.

**dormant**

The state entered by a task after it is created and before it has been started.

**dual-ported**

A term used to describe memory which can be accessed at two different addresses.

**EARS**

This term is an acronym for Easy Approach to Requirements Syntax.

**ELF**

This term is an acronym for **Executable and Linkable Format**.

**embedded**

An application that is delivered as a hidden part of a larger system. For example, the software in a fuel-injection control system is an embedded application found in many late-model automobiles.

**entry point**

The address at which a function or task begins to execute. In C, the entry point of a function is the function's name.

**envelope**

A buffer provided by the MPCI layer to RTEMS which is used to pass messages between nodes in a multiprocessor system. It typically contains routing information needed by the MPCI. The contents of an envelope are referred to as a packet.

**error code**

This term has the same meaning as *status code*.

**events**

A method for task communication and synchronization. The directives provided by the event manager are used to service events.

**exception**

A synonym for interrupt.

**executing task**

The task state entered by a task after it has been given control of the processor. In SMP configurations, a task may be registered as executing on more than one processor for short time frames during task migration. Blocked tasks can be executing until they issue a thread dispatch.

**executive**

In this document, this term is used to referred to RTEMS. Commonly, an executive is a small real-time operating system used in embedded systems.

**exported**

An object known by all nodes in a multiprocessor system. An object created with the GLOBAL attribute will be exported.

**external address**

The address used to access dual-ported memory by all the nodes in a system which do not own the memory.

**FIFO**

This term is an acronym for *First In First Out*.

**First In First Out**

A discipline for manipulating entries in a data structure.

**floating point coprocessor**

A component used in computer systems to enhance performance in mathematically intensive situations. It is typically viewed as a logical extension of the primary processor.

**freed**

A resource that has been released by the application to RTEMS.

**GCC**

This term is an acronym for [GNU Compiler Collection](#).

**global**

An object that has been created with the GLOBAL attribute and exported to all nodes in a multiprocessor system.

**GNAT**

GNAT is the GNU compiler for Ada, integrated into the GCC.

**GNU**

This term is an acronym for GNU's Not Unix.

**handler**

The equivalent of a manager, except that it is internal to RTEMS and forms part of the core. A handler is a collection of routines which provide a related set of functions. For example, there is a handler used by RTEMS to manage all objects.

**hard real-time system**

A real-time system in which a missed deadline causes the work performed to have no value or to result in a catastrophic effect on the integrity of the system.

**heap**

A data structure used to dynamically allocate and deallocate variable sized blocks of memory.

**heir task**

A task is an heir if it is registered as an heir in a processor of the system. A task can be the heir on at most one processor in the system. In case the executing and heir tasks differ on a processor and a thread dispatch is marked as necessary, then the next thread dispatch will make the heir task the executing task.

**heterogeneous**

A multiprocessor computer system composed of dissimilar processors.

**homogeneous**

A multiprocessor computer system composed of a single type of processor.

**I/O**

This term is an acronym for Input/Output.

**ID**

An RTEMS assigned identification tag used to access an active object.

**IDLE task**

A special low priority task which assumes control of the CPU when no other task is able to execute.

**interface**

A specification of the methodology used to connect multiple independent subsystems.

**internal address**

The address used to access dual-ported memory by the node which owns the memory.

**interrupt**

A hardware facility that causes the CPU to suspend execution, save its status, and transfer control to a specific location.

**interrupt level**

A mask used to by the CPU to determine which pending interrupts should be serviced. If a pending interrupt is below the current interrupt level, then the CPU does not recognize that interrupt.

**interrupt service**

An *interrupt service* consists of an *Interrupt Service Routine* which is called with a user provided argument upon reception of an interrupt service request. The routine is invoked in interrupt context. Interrupt service requests may have a priority and an affinity to a set of processors. An *interrupt service* is a *software component*.

**Interrupt Service Routine**

An ISR is invoked by the CPU to process a pending interrupt.

**ISR**

This term is an acronym for *Interrupt Service Routine*.

**ISVV**

This term is an acronym for Independent Software Verification and Validation.

**kernel**

In this document, this term is used as a synonym for executive.

**list**

A data structure which allows for dynamic addition and removal of entries. It is not statically limited to a particular size.

**little endian**

A data representation scheme in which the bytes composing a numeric value are arranged such that the least significant byte is at the lowest address.

**local**

An object which was created with the LOCAL attribute and is accessible only on the node it was created and resides upon. In a single processor configuration, all objects are local.

**local operation**

The manipulation of an object which resides on the same node as the calling task.

**logical address**

An address used by an application. In a system without memory management, logical addresses will equal physical addresses.

**loosely-coupled**

A multiprocessor configuration where shared memory is not used for communication.

**major number**

The index of a device driver in the Device Driver Table.

**manager**

A group of related RTEMS' directives which provide access and control over resources.

**MCS**

This term is an acronym for Mellor-Crummey Scott.

**memory pool**

Used interchangeably with heap.

**message**

A sixteen byte entity used to communicate between tasks. Messages are sent to message queues and stored in message buffers.

**message buffer**

A block of memory used to store messages.



**message queue**

An RTEMS object used to synchronize and communicate between tasks by transporting messages between sending and receiving tasks.

**Message Queue Control Block**

A data structure associated with each message queue used by RTEMS to manage that message queue.

**minor number**

A numeric value passed to a device driver, the exact usage of which is driver dependent.

**mode**

An entry in a task's control block that is used to determine if the task allows preemption, timeslicing, processing of signals, and the interrupt disable level used by the task.

**MPCI**

This term is an acronym for *Multiprocessor Communications Interface Layer*.

**multiprocessing**

The simultaneous execution of two or more processes by a multiple processor computer system.

**multiprocessor**

A computer with multiple CPUs available for executing applications.

**Multiprocessor Communications Interface Layer**

A set of user-provided routines which enable the nodes in a multiprocessor system to communicate with one another.

**Multiprocessor Configuration Table**

The data structure defining the characteristics of the multiprocessor target system with which RTEMS will communicate.

**multitasking**

The alternation of execution amongst a group of processes on a single CPU. A scheduling algorithm is used to determine which process executes at which time.

**mutual exclusion**

A term used to describe the act of preventing other tasks from accessing a resource simultaneously.

**nested**

A term used to describe an ASR that occurs during another ASR or an ISR that occurs during another ISR.

**node**

A term used to reference a processor running RTEMS in a multiprocessor system.

**non-existent**

The state occupied by an uncreated or deleted task.

**NUMA**

This term is an acronym for Non-Uniform Memory Access.

**numeric coprocessor**

A component used in computer systems to enhance performance in mathematically intensive situations. It is typically viewed as a logical extension of the primary processor.

**object**

In this document, this term is used to refer collectively to tasks, timers, message queues, partitions, regions, semaphores, ports, and rate monotonic periods. All RTEMS objects have IDs and user-assigned names.

**object-oriented**

A term used to describe systems with common mechanisms for utilizing a variety of entities. Object-oriented systems shield the application from implementation details.

**operating system**

The software which controls all the computer's resources and provides the base upon which application programs can be written.

**overhead**

The portion of the CPUs processing power consumed by the operating system.

**packet**

A buffer which contains the messages passed between nodes in a multiprocessor system. A packet is the contents of an envelope.

**partition**

This term has two definitions:

1. A partition is an RTEMS object which is used to allocate and deallocate fixed size blocks of memory from an dynamically specified area of memory.
2. A *cluster* with a cardinality of one is a partition.

**Partition Control Block**

A data structure associated with each partition used by RTEMS to manage that partition.

**pending**

A term used to describe a task blocked waiting for an event, message, semaphore, or signal.

**periodic task**

A task which must execute at regular intervals and comply with a hard deadline.

**physical address**

The actual hardware address of a resource.

**poll**

A mechanism used to determine if an event has occurred by periodically checking for a particular status. Typical events include arrival of data, completion of an action, and errors.

**pool**

A collection from which resources are allocated.

**portability**

A term used to describe the ease with which software can be rehosted on another computer.

**posting**

The act of sending an event, message, semaphore, or signal to a task.

**preempt**

The act of forcing a task to relinquish the processor and dispatching to another task.

**priority**

A mechanism used to represent the relative importance of an element in a set of items. RTEMS uses priority to determine which task should execute.

**priority boosting**

A simple approach to extend the priority inheritance protocol for clustered scheduling is priority boosting. In case a mutex is owned by a task of another cluster, then the priority of the owner task is raised to an artificially high priority, the pseudo-interrupt priority.

**priority inheritance**

An algorithm that calls for the lower priority task holding a resource to have its priority increased to that of the highest priority task blocked waiting for that resource. This avoids the problem of priority inversion.

**priority inversion**

A form of indefinite postponement which occurs when a high priority task requests access to shared resource currently allocated to low priority task. The high priority task must block until the low priority task releases the resource.

**processor utilization**

The percentage of processor time used by a task or a set of tasks.

**proxy**

An RTEMS control structure used to represent, on a remote node, a task which must block as part of a remote operation.

**Proxy Control Block**

A data structure associated with each proxy used by RTEMS to manage that proxy.

**PTCB**

This term is an acronym for *Partition Control Block*.

**PXCB**

This term is an acronym for *Proxy Control Block*.

**QCB**

This term is an acronym for *Message Queue Control Block*.

**quantum**

The application defined unit of time in which the processor is allocated.

**queue**

Alternate term for message queue.

**ready task**

A task occupies this state when it is available to be given control of a processor. A ready task has no processor assigned. The scheduler decided that other tasks are currently more important. A task that is ready to execute and has a processor assigned is called scheduled.

**real-time**

A term used to describe systems which are characterized by requiring deterministic response times to external stimuli. The external stimuli require that the response occur at a precise time or the response is incorrect.

**reentrant**

A term used to describe routines which do not modify themselves or global variables.

**region**

An RTEMS object which is used to allocate and deallocate variable size blocks of memory from a dynamically specified area of memory.

**Region Control Block**

A data structure associated with each region used by RTEMS to manage that region.

**registers**

Registers are locations physically located within a component, typically used for device control or general purpose storage.

**remote**

Any object that does not reside on the local node.

**remote operation**

The manipulation of an object which does not reside on the same node as the calling task.

**ReqIF**

This term is an acronym for [Requirements Interchange Format](#).

**resource**

A hardware or software entity to which access must be controlled.

**resume**

Removing a task from the suspend state. If the task's state is ready following a call to the `rtems_task_resume` directive, then the task is available for scheduling.

**return code**

This term has the same meaning as *status code*.

**return value**

The value returned by a function. A return value may be a *status code*.

**RNCB**

This term is an acronym for *Region Control Block*.

**round-robin**

A task scheduling discipline in which tasks of equal priority are executed in the order in which they are made ready.

**RS-232**

A standard for serial communications.

**RTEMS**

This term is an acronym for Real-Time Executive for Multiprocessor Systems.

**running**

The state of a rate monotonic timer while it is being used to delineate a period. The timer exits this state by either expiring or being canceled.

**schedulable**

A set of tasks which can be guaranteed to meet their deadlines based upon a specific scheduling algorithm.

**schedule**

The process of choosing which task should next enter the executing state.

**scheduled task**

A task is scheduled if it is allowed to execute and has a processor assigned. Such a task executes currently on a processor or is about to start execution. A task about to start execution it is an heir task on exactly one processor in the system.

**scheduler**

A scheduler or scheduling algorithm allocates processors to a subset of its set of ready tasks. So it manages access to the processor resource. Various algorithms exist to choose the tasks allowed to use a processor out of the set of ready tasks. One method is to assign each task a

priority number and assign the tasks with the lowest priority number to one processor of the set of processors owned by a scheduler instance.

**scheduler instance**

A scheduler instance is a scheduling algorithm with a corresponding context to store its internal state. Each processor in the system is owned by at most one scheduler instance. The processor to scheduler instance assignment is determined at application configuration time. See *Configuring a System* (page 369).

**segments**

Variable sized memory blocks allocated from a region.

**semaphore**

An RTEMS object which is used to synchronize tasks and provide mutually exclusive access to resources.

**Semaphore Control Block**

A data structure associated with each semaphore used by RTEMS to manage that semaphore.

**shared memory**

Memory which is accessible by multiple nodes in a multiprocessor system.

**signal**

An RTEMS provided mechanism to communicate asynchronously with a task. Upon reception of a signal, the ASR of the receiving task will be invoked.

**signal set**

A thirty-two bit entity which is used to represent a task's collection of pending signals and the signals sent to a task.

**SMCB**

This term is an acronym for *Semaphore Control Block*.

**SMP**

This term is an acronym for Symmetric Multiprocessing.

**SMP barriers**

The SMP barriers ensure that a defined set of independent threads of execution on a set of processors reaches a common synchronization point in time. They are implemented using atomic operations. Currently a sense barrier is used in RTEMS.

**SMP locks**

The SMP locks ensure mutual exclusion on the lowest level and are a replacement for the sections of disabled interrupts. Interrupts are usually disabled while holding an SMP lock. They are implemented using atomic operations. Currently a ticket lock is used in RTEMS.

**soft real-time system**

A real-time system in which a missed deadline does not compromise the integrity of the system.

**software component**

This term is defined by ECSS-E-ST-40C 3.2.28 as a “part of a software system”. For this project a *software component* shall be any of the following items and nothing else:

- *software unit*
- explicitly defined *ELF* symbol in a *source code* file
- *assembler language* data in a *source code* file

- *C language* object with static storage duration
- C language object with thread-local storage duration
- *thread*
- *interrupt service*
- collection of *software components* (this is a software architecture element)

Please note that explicitly defined ELF symbols and assembler language data are considered a software component only if they are defined in a *source code* file. For example, this rules out symbols and data generated as side-effects by the toolchain (compiler, assembler, linker) such as jump tables, linker trampolines, exception frame information, etc.

**software item**

This term has the same meaning as *software product*.

**software product**

The *software product* is the *RTEMS* real-time operating system.

**software unit**

This term is defined by ECSS-E-ST-40C 3.2.24 as a “separately compilable piece of source code”. For this project a *software unit* shall be any of the following items and nothing else:

- *assembler language* function in a *source code* file
- *C language* function (external and internal linkage)

A *software unit* is a *software component*.

**source code**

This project uses the *source code* definition of the [Linux Information Project](#): “Source code (also referred to as source or code) is the version of software as it is originally written (i.e., typed into a computer) by a human in plain text (i.e., human readable alphanumeric characters).”

**sporadic task**

A task which executes at irregular intervals and must comply with a hard deadline. A minimum period of time between successive iterations of the task can be guaranteed.

**stack**

A data structure that is managed using a Last In First Out (LIFO) discipline. Each task has a stack associated with it which is used to store return information and local variables.

**status code**

A status code indicates the completion status of an operation. For example most RTEMS directives return a status code through the *return value* to indicate a successful operation or error conditions.

**suspend**

A term used to describe a task that is not competing for the CPU because it has had a `rtems_task_suspend` directive.

**synchronous**

Related in order or timing to other occurrences in the system.

**system call**

In this document, this is used as an alternate term for directive.

**target**

The system on which the application will ultimately execute.

**TAS**

This term is an acronym for Test-And-Set.

**task**

This project uses the [thread definition of Wikipedia](#): “a thread of execution is the smallest sequence of programmed instructions that can be managed independently by a scheduler, which is typically a part of the operating system.”

It consists normally of a set of registers and a stack. The scheduler assigns processors to a subset of the ready tasks. The terms task and *thread* are synonym in RTEMS. The term task is used throughout the Classic API, however, internally in the operating system implementation and the POSIX API the term thread is used.

*A task is a software component.*

**Task Control Block**

A data structure associated with each task used by RTEMS to manage that task.

**task migration**

Task migration happens in case a task stops execution on one processor and resumes execution on another processor.

**task processor affinity**

The set of processors on which a task is allowed to execute.

**task switch**

Alternate terminology for context switch. Taking control of the processor from one task and given to another.

**TCB**

This term is an acronym for *Task Control Block*.

**thread**

This term has the same meaning as *task*.

**thread dispatch**

The thread dispatch transfers control of the processor from the currently executing thread to the heir thread of the processor.

**tick**

The basic unit of time used by RTEMS. It is a user-configurable number of microseconds. The current tick expires when a clock tick directive is invoked.

**tightly-coupled**

A multiprocessor configuration system which communicates via shared memory.

**timeout**

An argument provided to a number of directives which determines the maximum length of time an application task is willing to wait to acquire the resource if it is not immediately available.

**timer**

An RTEMS object used to invoke subprograms at a later time.

**Timer Control Block**

A data structure associated with each timer used by RTEMS to manage that timer.

**timeslice**

The application defined unit of time in which the processor is allocated.

**timeslicing**

A task scheduling discipline in which tasks of equal priority are executed for a specific period of time before being preempted by another task.

**TLS**

This term is an acronym for Thread-Local Storage [Dre13]. TLS is available in *C11* and *C++11*. The support for TLS depends on the CPU port [RTE].

**TMCB**

This term is an acronym for *Timer Control Block*.

**transient overload**

A temporary rise in system activity which may cause deadlines to be missed. Rate Monotonic Scheduling can be used to determine if all deadlines will be met under transient overload.

**TTAS**

This term is an acronym for Test and Test-And-Set.

**User Extension Table**

A table which contains the entry points for each user extensions.

**user extensions**

Software routines provided by the application to enhance the functionality of RTEMS.

**User Initialization Tasks Table**

A table which contains the information needed to create and start each of the user initialization tasks.

**user-provided**

These terms are used to designate any software routines which must be written by the application designer.

**user-supplied**

This term has the same meaning as *user-provided*.

**vector**

Memory pointers used by the processor to fetch the address of routines which will handle various exceptions and interrupts.

**wait queue**

The list of tasks blocked pending the release of a particular resource. Message queues, regions, and semaphores have a wait queue associated with them.

**YAML**

This term is an acronym for [YAML Ain't Markup Language](#).

**yield**

When a task voluntarily releases control of the processor.



# BIBLIOGRAPHY

- [RTE] RTEMS CPU Architecture Supplement. URL: <https://docs.rtems.org/branches/master/cpu-supplement.pdf>.
- [BBB+13] Dave Banham, Andrew Banks, Mark Bradbury, Paul Burden, Mark Dawson-Butterworth, Mike Hennell, Chris Hills, Steve Montgomery, Chris Tapp, and Liz Whiting. *MISRA C:2012 Guidelines for the Use of the C Language in Critical Systems*. MISRA Limited, March 2013. ISBN 978-1906400101.
- [Boe12] Hans-J. Boehm. Can Seqlocks Get Along With Programming Language Memory Models? Technical Report, HP Laboratories, June 2012. HPL-2012-68. URL: <http://www.hpl.hp.com/techreports/2012/HPL-2012-68.pdf>.
- [Bra11] Björn B. Brandenburg. *Scheduling and Locking in Multiprocessor Real-Time Operating Systems*. PhD thesis, The University of North Carolina at Chapel Hill, 2011. URL: <http://www.cs.unc.edu/~bbb/diss/brandenburg-diss.pdf>.
- [Bra13] Björn B. Brandenburg. A Fully Preemptive Multiprocessor Semaphore Protocol for Latency-Sensitive Real-Time Applications. In *Proceedings of the 25th Euromicro Conference on Real-Time Systems (ECRTS 2013)*, 292–302. 2013. URL: <http://www.mpi-sws.org/~bbb/papers/pdf/ecrts13b.pdf>.
- [Bur91] A. Burns. Scheduling hard real-time systems: a review. *Software Engineering Journal*, 6:116–128, 1991.
- [BW01] A. Burns and A. J. Wellings. *Real-Time Systems and Programming Languages: Ada, Real-Time Java and C/Real-Time POSIX*. Addison-Wesley, November 2001. ISBN 978-0321417459.
- [BW13] A. Burns and A. J. Wellings. A Schedulability Compatible Multiprocessor Resource Sharing Protocol - MrsP. In *Proceedings of the 25th Euromicro Conference on Real-Time Systems (ECRTS 2013)*. 2013. URL: <http://www-users.cs.york.ac.uk/~burns/MRSPpaper.pdf>.
- [CBHM15] Sebastiano Catellani, Luca Bonato, Sebastian Huber, and Enrico Mezzetti. Challenges in the Implementation of MrsP. In *Reliable Software Technologies - Ada-Europe 2015*, 179–195. 2015.
- [CvdBruggenC16] Kuan-Hsun Chen, Georg von der Brüggen, and Jian-Jia Chen. Overrun Handling for Mixed-Criticality Support in RTEMS. In *Mixed Criticality Systems - WMC 2016*, 13–14. 2016. URL: <http://ls12-www.cs.tu-dortmund.de/daes/media/documents/publications/downloads/2016-wmc.pdf>.

- [CMV14] Davide Compagnin, Enrico Mezzetti, and Tullio Vardanega. Putting RUN into practice: implementation and evaluation. In *Proceedings of the 26th Euromicro Conference on Real-Time Systems (ECRTS 2014)*. 2014.
- [Dre07] Ulrich Drepper. *What Every Programmer Should Know About Memory*. 2007. URL: <http://www.akkadia.org/drepper/cpumemory.pdf>.
- [Dre13] Ulrich Drepper. *ELF Handling For Thread-Local Storage*. 2013. URL: <http://www.akkadia.org/drepper/tls.pdf>.
- [FRK02] Hubertus Franke, Rusty Russel, and Matthew Kirkwood. Fuss, Futexes and Furwocks: Fast Userlevel Locking in Linux. In *Proceedings of the Ottawa Linux Symposium 2002*, 479–495. 2002. URL: <https://www.kernel.org/doc/ols/2002/ols2002-pages-479-495.pdf>.
- [GN06] Thomas Gleixner and Douglas Niehaus. Hrtimers and Beyond: Transforming the Linux Time Subsystems. In *Proceedings of the Linux Symposium*, 333–346. 2006. URL: <https://www.kernel.org/doc/ols/2006/ols2006v1-pages-333-346.pdf>.
- [GCB13] Arpan Gujarati, Felipe Cerqueira, and Björn B. Brandenburg. Schedulability Analysis of the Linux Push and Pull Scheduler with Arbitrary Processor Affinities. In *Proceedings of the 25th Euromicro Conference on Real-Time Systems (ECRTS 2013)*. 2013. URL: <https://people.mpi-sws.org/~bbb/papers/pdf/ecrts13a-rev1.pdf>.
- [LSD89] J. Lehoczky, L. Sha, and Y. Ding. The rate monotonic scheduling algorithm: exact characterization and average case behavior. In *Real-Time Systems Symposium*, 166–171. 1989.
- [LL73] C. L. Liu and James W. Layland. Scheduling Algorithms for Multiprogramming in a Hard-Real-Time Environment. *Journal of the ACM*, 20:46–61, 1973.
- [LLF+16] Jean-Pierre Lozi, Baptiste Lepers, Justin Funston, Fabien Gaud, Vivien Quéma, and Alexandra Fedorova. The Linux Scheduler: a Decade of Wasted Cores. In *Proceedings of the Eleventh European Conference on Computer Systems (EuroSys '16)*. 2016. URL: <https://hal.archives-ouvertes.fr/hal-01295194/document>.
- [Mot88] Motorola. *Real Time Executive Interface Definition*. Motorola Inc., Microcomputer Division and Software Components Group, Inc., January 1988. DRAFT 2.1. URL: [https://ftp.rtems.org/pub/rtems/publications/RTEID-ORKID/RTEID-2.1/RTEID-2\\_1.pdf](https://ftp.rtems.org/pub/rtems/publications/RTEID-ORKID/RTEID-2.1/RTEID-2_1.pdf).
- [SG90] Lui Sha and J. B. Goodenough. Real-time scheduling theory and Ada. *Computer*, 23:53–62, 1990.
- [SRL90] Lui Sha, Rangunathan Rajkumar, and John P. Lehoczky. Priority Inheritance Protocols: An Approach to Real-Time Synchronization. *IEEE Transactions on Computers*, 39:1175–1185, 1990.
- [VC95] G. Varghese and A. Costello. Redesigning the BSD callout and timer facilities. Technical Report, Washington University in St. Louis, November 1995. WUCS-95-23. URL: <http://web.mit.edu/afs.new/sipb/user/daveg/ATHENA/Info/wucs-95-23.ps>.
- [VL87] G. Varghese and T. Lauck. Hashed and Hierarchical Timing Wheels: Data Structures for the Efficient Implementation of a Timer Facility. In *Proceedings of the 11th ACM Symposium on Operating Systems Principles*. 1987. URL: <http://www.cs.columbia.edu/~nahum/w6998/papers/sosp87-timing-wheels.pdf>.

- [VIT90] VITA. *Open Real-Time Kernel Interface Definition*. VITA, the VMEbus International Trade Association, August 1990. Draft 2.1. URL: [https://ftp.rtems.org/pub/rtems/publications/RTEID-ORKID/ORKID-2.1/ORKID-2\\_1.pdf](https://ftp.rtems.org/pub/rtems/publications/RTEID-ORKID/ORKID-2.1/ORKID-2_1.pdf).
- [Wil12] Anthony Williams. *C++ Concurrency in Action - Practical Multithreading*. Manning Publications Co, 2012. ISBN 978-1933988771.



# INDEX

## Symbols

/dev/null, 393  
/dev/zero, 396  
\_Terminate, 339  
<rtcms/confdefs.h>, 370

## A

ABI, **697**  
active, **697**  
Ada, 659  
add memory, 294  
add memory to a region, 294  
announce, 341, 347  
announce arrival of package, 518  
announce fatal error, 341, 347  
aperiodic task, **697**  
API, **697**  
application, **697**  
Application architecture, 10  
ASR, **697**  
ASR, 263  
ASR mode, 263  
ASR vs. ISR, 263  
assembler language, **697**  
asynchronous, **697**  
Asynchronous Signal Routine, **697**  
asynchronous signal routine, 263  
atomic operations, **697**  
attach a thread to server, 651  
awakened, **697**

## B

barrier, 224  
big endian, **697**  
binary semaphores, 203  
bit-mapped, **697**  
block, **698**  
blocked task, **698**  
Board Support Package, **698**  
Board Support Packages, 347  
broadcast, **698**

broadcast message to a queue, 248  
BSP, **698**  
BSP, 347  
BSP\_IDLE\_TASK\_BODY, 455  
BSP\_IDLE\_TASK\_STACK\_SIZE, 455  
BSP\_INITIAL\_EXTENSION, 456  
BSP\_INTERRUPT\_STACK\_SIZE, 456  
BSPs, 347  
buffer, **698**  
buffers, 273  
build object id from components, 573  
build object name, 565  
building, 83, 255, 263, 273, 285

## C

C language, **698**  
C Program Heap, 386  
C++11, **698**  
C11, **698**  
calling convention, **698**  
cancel a period, 196  
cancel a timer, 172  
cbs, 639  
CBS limitations, 644  
CBS parameters, 642  
CCB, **698**  
Central Processing Unit, **698**  
chain, **698**  
chain append a node, 610  
chain append a node unprotected, 611  
chain extract a node, 604  
chain extract a node unprotected, 605  
chain get first node, 606, 607  
chain get head, 594  
chain get tail, 595  
chain initialize, 591  
chain initialize empty, 592  
chain insert a node, 608  
chain insert a node unprotected, 609  
chain is chain empty, 597  
chain is node null, 593

chain is node the first, 598  
 chain is node the head, 602  
 chain is node the last, 599  
 chain is node the tail, 603  
 chain iterate, 588  
 chain only one node, 600, 601  
 chains, 583  
 chare are nodes equal, 596  
 cleanup the CBS library, 649  
 clear C Program Heap, 388  
 clear RTEMS Workspace, 388  
 clock, 139  
 clock get nanoseconds uptime, 160  
 clock get uptime, 157  
 clock get uptime interval, 158  
 clock get uptime seconds, 159  
 clock tick quantum, 384  
 close a device, 326  
 cluster, **698**  
 coalesce, **698**  
 communication and synchronization, 27  
 conclude current period, 198  
 confdefs.h, 370  
 Configuration Table, **698**  
 configure message queue buffer memory, 383  
 CONFIGURE\_APPLICATION\_DISABLE\_FILESYSTEM, 420  
 CONFIGURE\_APPLICATION\_DOES\_NOT\_NEED\_CLOCK\_DRIVER, 390  
 CONFIGURE\_APPLICATION\_EXTRA\_DRIVERS, 390  
 CONFIGURE\_APPLICATION\_NEEDS\_ATA\_DRIVER, 391  
 CONFIGURE\_APPLICATION\_NEEDS\_CLOCK\_DRIVER, 391  
 CONFIGURE\_APPLICATION\_NEEDS\_CONSOLE\_DRIVER, 391  
 CONFIGURE\_APPLICATION\_NEEDS\_FRAME\_BUFFER\_DRIVER, 392  
 CONFIGURE\_APPLICATION\_NEEDS\_IDE\_DRIVER, 392  
 CONFIGURE\_APPLICATION\_NEEDS\_LIBBLOCK, 432  
 CONFIGURE\_APPLICATION\_NEEDS\_NULL\_DRIVER, 393  
 CONFIGURE\_APPLICATION\_NEEDS\_RTC\_DRIVER, 393  
 CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_CONSOLE\_DRIVER, 394  
 CONFIGURE\_APPLICATION\_NEEDS\_SIMPLE\_TASK\_CONSOLE\_DRIVER, 394  
 CONFIGURE\_APPLICATION\_NEEDS\_STUB\_DRIVER, 395  
 CONFIGURE\_APPLICATION\_NEEDS\_TIMER\_DRIVER, 395  
 CONFIGURE\_APPLICATION\_NEEDS\_WATCHDOG\_DRIVER, 396  
 CONFIGURE\_APPLICATION\_NEEDS\_ZERO\_DRIVER, 396  
 CONFIGURE\_APPLICATION\_PREREQUISITE\_DRIVERS, 396  
 CONFIGURE\_ATA\_DRIVER\_TASK\_PRIORITY, 397  
 CONFIGURE\_BDBUF\_BUFFER\_COUNT, 465  
 CONFIGURE\_BDBUF\_BUFFER\_MAX\_SIZE, 432  
 CONFIGURE\_BDBUF\_BUFFER\_MIN\_SIZE, 432  
 CONFIGURE\_BDBUF\_BUFFER\_SIZE, 465  
 CONFIGURE\_BDBUF\_CACHE\_MEMORY\_SIZE, 433  
 CONFIGURE\_BDBUF\_MAX\_READ\_AHEAD\_BLOCKS, 433  
 CONFIGURE\_BDBUF\_MAX\_WRITE\_BLOCKS, 434  
 CONFIGURE\_BDBUF\_READ\_AHEAD\_TASK\_PRIORITY, 434  
 CONFIGURE\_BDBUF\_TASK\_STACK\_SIZE, 434  
 CONFIGURE\_BSP\_PREREQUISITE\_DRIVERS, 457  
 CONFIGURE\_CBS\_MAXIMUM\_SERVERS, 443  
 CONFIGURE\_DIRTY\_MEMORY, 378  
 CONFIGURE\_DISABLE\_BSP\_SETTINGS, 457  
 CONFIGURE\_DISABLE\_CLASSIC\_API\_NOTEPADS, 465  
 CONFIGURE\_DISABLE\_NEWLIB\_REENTRANCY, 378  
 CONFIGURE\_ENABLE\_GO, 465  
 CONFIGURE\_EXECUTIVE\_RAM\_SIZE, 378  
 CONFIGURE\_EXTRA\_MPCI\_RECEIVE\_SERVER\_STACK, 459  
 CONFIGURE\_EXTRA\_TASK\_STACKS, 379  
 CONFIGURE\_FILESYSTEM\_ALL, 421  
 CONFIGURE\_FILESYSTEM\_DOSFS, 421  
 CONFIGURE\_FILESYSTEM\_FTPFS, 421  
 CONFIGURE\_FILESYSTEM\_IMFS, 422  
 CONFIGURE\_FILESYSTEM\_JFFS2, 422  
 CONFIGURE\_FILESYSTEM\_NFS, 422  
 CONFIGURE\_FILESYSTEM\_RFS, 423  
 CONFIGURE\_FILESYSTEM\_TFTPFS, 423  
 CONFIGURE\_GNAT\_RTEMS, 465  
 CONFIGURE\_HAS\_OWN\_BDBUF\_TABLE, 465  
 CONFIGURE\_HAS\_OWN\_CONFIGURATION\_TABLE, 465  
 CONFIGURE\_HAS\_OWN\_DEVICE\_DRIVER\_TABLE, 465  
 CONFIGURE\_HAS\_OWN\_INIT\_TASK\_TABLE, 465  
 CONFIGURE\_HAS\_OWN\_MOUNT\_TABLE, 465  
 CONFIGURE\_HAS\_OWN\_MULTIPROCESSING\_TABLE, 466

CONFIGURE\_IDLE\_TASK\_BODY, 441  
 CONFIGURE\_IDLE\_TASK\_INITIALIZES\_APPLICATION, 441  
 CONFIGURE\_IDLE\_TASK\_STACK\_SIZE, 442  
 CONFIGURE\_IMFS\_DISABLE\_CHMOD, 423  
 CONFIGURE\_IMFS\_DISABLE\_CHOWN, 424  
 CONFIGURE\_IMFS\_DISABLE\_LINK, 424  
 CONFIGURE\_IMFS\_DISABLE\_MKNOD, 424  
 CONFIGURE\_IMFS\_DISABLE\_MKNOD\_DEVICE, 425  
 CONFIGURE\_IMFS\_DISABLE\_MKNOD\_FILE, 425  
 CONFIGURE\_IMFS\_DISABLE\_MOUNT, 425  
 CONFIGURE\_IMFS\_DISABLE\_READDIR, 426  
 CONFIGURE\_IMFS\_DISABLE\_READLINK, 426  
 CONFIGURE\_IMFS\_DISABLE\_RENAME, 426  
 CONFIGURE\_IMFS\_DISABLE\_RMNOD, 427  
 CONFIGURE\_IMFS\_DISABLE\_SYMLINK, 427  
 CONFIGURE\_IMFS\_DISABLE\_UNMOUNT, 427  
 CONFIGURE\_IMFS\_DISABLE\_UTIME, 428  
 CONFIGURE\_IMFS\_ENABLE\_MKFIFO, 428  
 CONFIGURE\_IMFS\_MEMFILE\_BYTES\_PER\_BLOCK, 428  
 CONFIGURE\_INIT\_TASK\_ARGUMENTS, 406  
 CONFIGURE\_INIT\_TASK\_ATTRIBUTES, 406  
 CONFIGURE\_INIT\_TASK\_ENTRY\_POINT, 406  
 CONFIGURE\_INIT\_TASK\_INITIAL\_MODES, 407  
 CONFIGURE\_INIT\_TASK\_NAME, 407  
 CONFIGURE\_INIT\_TASK\_PRIORITY, 408  
 CONFIGURE\_INIT\_TASK\_STACK\_SIZE, 408  
 CONFIGURE\_INITIAL\_EXTENSIONS, 379  
 CONFIGURE\_INTERRUPT\_STACK\_SIZE, 380  
 CONFIGURE\_LIBIO\_MAXIMUM\_FILE\_DESCRIPTOR, 466  
 CONFIGURE\_MALLOC\_BSP\_SUPPORTS\_SBRK, 458  
 CONFIGURE\_MALLOC\_DIRTY, 381  
 CONFIGURE\_MAXIMUM\_ADA\_TASKS, 466  
 CONFIGURE\_MAXIMUM\_BARRIERS, 399  
 CONFIGURE\_MAXIMUM\_DEVICES, 466  
 CONFIGURE\_MAXIMUM\_DRIVERS, 397  
 CONFIGURE\_MAXIMUM\_FAKE\_ADA\_TASKS, 466  
 CONFIGURE\_MAXIMUM\_FILE\_DESCRIPTOR, 381  
 CONFIGURE\_MAXIMUM\_GO\_CHANNELS, 466  
 CONFIGURE\_MAXIMUM\_GOROUTINES, 466  
 CONFIGURE\_MAXIMUM\_MESSAGE\_QUEUES, 399  
 CONFIGURE\_MAXIMUM\_MRSP\_SEMAPHORES, 466  
 CONFIGURE\_MAXIMUM\_PARTITIONS, 400  
 CONFIGURE\_MAXIMUM\_PERIODS, 400  
 CONFIGURE\_MAXIMUM\_PORTS, 401  
 CONFIGURE\_MAXIMUM\_POSIX\_BARRIERS, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_CONDITION\_VARIABLES, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_KEY\_VALUE\_PAIRS, 410  
 CONFIGURE\_MAXIMUM\_POSIX\_KEYS, 410  
 CONFIGURE\_MAXIMUM\_POSIX\_MESSAGE\_QUEUE\_DESCRIPTOR, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_MESSAGE\_QUEUES, 411  
 CONFIGURE\_MAXIMUM\_POSIX\_MUTEXES, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_QUEUED\_SIGNALS, 411  
 CONFIGURE\_MAXIMUM\_POSIX\_RWLOCKS, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_SEMAPHORES, 412  
 CONFIGURE\_MAXIMUM\_POSIX\_SHMS, 413  
 CONFIGURE\_MAXIMUM\_POSIX\_SPINLOCKS, 467  
 CONFIGURE\_MAXIMUM\_POSIX\_THREADS, 413  
 CONFIGURE\_MAXIMUM\_POSIX\_TIMERS, 414  
 CONFIGURE\_MAXIMUM\_PRIORITY, 443  
 CONFIGURE\_MAXIMUM\_PROCESSORS, 381  
 CONFIGURE\_MAXIMUM\_REGIONS, 401  
 CONFIGURE\_MAXIMUM\_SEMAPHORES, 402  
 CONFIGURE\_MAXIMUM\_TASKS, 403  
 CONFIGURE\_MAXIMUM\_THREAD\_NAME\_SIZE, 382  
 CONFIGURE\_MAXIMUM\_TIMERS, 404  
 CONFIGURE\_MAXIMUM\_USER\_EXTENSIONS, 404  
 CONFIGURE\_MEMORY\_OVERHEAD, 383  
 CONFIGURE\_MESSAGE\_BUFFER\_MEMORY, 383  
 CONFIGURE\_MESSAGE\_BUFFERS\_FOR\_QUEUE, 383  
 CONFIGURE\_MICROSECONDS\_PER\_TICK, 384  
 CONFIGURE\_MINIMUM\_POSIX\_THREAD\_STACK\_SIZE, 415  
 CONFIGURE\_MINIMUM\_TASK\_STACK\_SIZE, 385  
 CONFIGURE\_MP\_APPLICATION, 459  
 CONFIGURE\_MP\_MAXIMUM\_GLOBAL\_OBJECTS, 459  
 CONFIGURE\_MP\_MAXIMUM\_NODES, 460  
 CONFIGURE\_MP\_MAXIMUM\_PROXIES, 460  
 CONFIGURE\_MP\_MPCI\_TABLE\_POINTER, 461  
 CONFIGURE\_MP\_NODE\_NUMBER, 461  
 CONFIGURE\_NUMBER\_OF\_TERMIOS\_PORTS, 466  
 CONFIGURE\_POSIX\_HAS\_OWN\_INIT\_THREAD\_TABLE, 467  
 CONFIGURE\_POSIX\_INIT\_THREAD\_ENTRY\_POINT, 416  
 CONFIGURE\_POSIX\_INIT\_THREAD\_STACK\_SIZE, 416  
 CONFIGURE\_POSIX\_INIT\_THREAD\_TABLE, 416  
 CONFIGURE\_RECORD\_EXTENSIONS\_ENABLED, 418  
 CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64, 418  
 CONFIGURE\_RECORD\_FATAL\_DUMP\_BASE64\_ZLIB, 418  
 CONFIGURE\_RECORD\_PER\_PROCESSOR\_ITEMS, 419  
 CONFIGURE\_RTEMS\_INIT\_TASKS\_TABLE, 408  
 CONFIGURE\_SCHEDULER\_ASSIGNMENTS, 444

- CONFIGURE\_SCHEDULER\_CBS, 445
  - CONFIGURE\_SCHEDULER\_EDF, 445
  - CONFIGURE\_SCHEDULER\_EDF\_SMP, 446
  - CONFIGURE\_SCHEDULER\_NAME, 446
  - CONFIGURE\_SCHEDULER\_PRIORITY, 447
  - CONFIGURE\_SCHEDULER\_PRIORITY\_AFFINITY\_SMP, 447
  - CONFIGURE\_SCHEDULER\_PRIORITY\_SMP, 448
  - CONFIGURE\_SCHEDULER\_SIMPLE, 448
  - CONFIGURE\_SCHEDULER\_SIMPLE\_SMP, 449
  - CONFIGURE\_SCHEDULER\_STRONG\_APA, 449
  - CONFIGURE\_SCHEDULER\_USER, 449
  - CONFIGURE\_SMP\_APPLICATION, 467
  - CONFIGURE\_SMP\_MAXIMUM\_PROCESSORS, 467
  - CONFIGURE\_STACK\_CHECKER\_ENABLED, 386
  - CONFIGURE\_SWAPOUT\_BLOCK\_HOLD, 435
  - CONFIGURE\_SWAPOUT\_SWAP\_PERIOD, 435
  - CONFIGURE\_SWAPOUT\_TASK\_PRIORITY, 436
  - CONFIGURE\_SWAPOUT\_WORKER\_TASK\_PRIORITY, 436
  - CONFIGURE\_SWAPOUT\_WORKER\_TASKS, 437
  - CONFIGURE\_TASK\_STACK\_ALLOCATOR, 438
  - CONFIGURE\_TASK\_STACK\_ALLOCATOR\_AVOIDS\_WORK\_SPACE, 439
  - CONFIGURE\_TASK\_STACK\_ALLOCATOR\_INIT, 438
  - CONFIGURE\_TASK\_STACK\_DEALLOCATOR, 439
  - CONFIGURE\_TASK\_STACK\_FROM\_ALLOCATOR, 439
  - CONFIGURE\_TERMIOS\_DISABLED, 468
  - CONFIGURE\_TICKS\_PER\_TIMESLICE, 386
  - CONFIGURE\_UNIFIED\_WORK\_AREAS, 386
  - CONFIGURE\_UNLIMITED\_ALLOCATION\_SIZE, 387
  - CONFIGURE\_UNLIMITED\_OBJECTS, 387
  - CONFIGURE\_USE\_DEVFS\_AS\_BASE\_FILESYSTEM, 429
  - CONFIGURE\_USE\_MINIIMFS\_AS\_BASE\_FILESYSTEM, 430
  - CONFIGURE\_VERBOSE\_SYSTEM\_INITIALIZATION, 388
  - CONFIGURE\_ZERO\_WORKSPACE\_AUTOMATICALLY, 388
  - configuring a system, 368
  - constant bandwidth server scheduling, 45
  - context, **698**
  - context switch, **699**
  - control block, **699**
  - convert external to internal address, 311
  - convert internal to external address, 312
  - core, **699**
  - counting semaphores, 203
  - CPU, **699**
  - CPU Usage, 550
  - create a barrier, 230
  - create a message queue, 242
  - create a new bandwidth server, 650
  - create a partition, 276
  - create a period, 194
  - create a port, 308
  - create a region, 290
  - create a semaphore, 213
  - create a task, 89
  - create a timer, 170
  - create an extension set, 366
  - critical section, **699**
  - CRT, **699**
  - current task mode, 102
  - current task priority, 100, 101
- ## D
- data types, 34
  - deadline, **699**
  - definition, 79, 184, 255, 273, 285, 304, 347, 509, 511, 512
  - delay a task for an interval, 103
  - delay a task until a wall time, 104
  - delays, 143
  - delete a barrier, 232
  - delete a message queue, 245
  - delete a partition, 279
  - delete a period, 197
  - delete a port, 310
  - delete a region, 293
  - delete a semaphore, 216
  - delete a timer, 173
  - delete an extension set, 368
  - deleting a task, 95, 96
  - destroy a bandwidth server, 653
  - detach a thread from server, 652
  - device, **699**
  - device driver, **699**
  - device driver interface, 316
  - Device Driver Table, **699**
  - Device Driver Table, 315
  - device drivers, 312
  - device names, 315
  - directives, **699**
  - disable interrupts, 128, 131
  - disabling interrupts, 122
  - dispatch, **699**
  - dispatching, 48
  - Doorstop, **699**
  - dormant, **699**
  - dual ported memory, 301, 304



dual-ported, **699**

## E

earliest deadline first scheduling, 44

EARS, **699**

ELF, **699**

embedded, **700**

enable interrupts, 129, 133

entry point, **700**

envelope, **700**

error code, **700**

establish an ASR, 268

establish an ISR, 127

event condition, 255

event flag, 255

event set, 255

events, **700**

events, 252

exception, **700**

exception frame, 344

executing task, **700**

executive, **700**

exported, **700**

external address, **700**

external addresses, 304

## F

fatal error, 341, 345–347

fatal error detection, 333

fatal error processing, 333

fatal error user extension, 333

fatal errors, 329

FIFO, **700**

fire a task-based timer at wall time, 178

fire a timer after an interval, 174

fire a timer at wall time, 175

fire task-based a timer after an interval,  
177

First In First Out, **700**

flash interrupts, 130

floating point, 82

floating point coprocessor, **700**

flush a semaphore, 220

flush messages on a queue, 252

freed, **700**

## G

GCC, **700**

get an ID of a server, 654

get buffer from partition, 280

get class from object ID, 26

get current ticks counter value, 153

get elapsed execution time, 657

get ID of a barrier, 231

get ID of a message queue, 244

get ID of a partition, 278

get ID of a period, 195

get ID of a port, 309

get ID of a region, 292

get ID of a semaphore, 215

get ID of a task, 91

get ID of an extension set, 367

get index from object ID, 26

get name from id, 566

get node from object ID, 26

get number of pending messages, 251

get object name as string, 567

get per-task variable, 117

get remaining execution time, 658

get scheduler approved execution time,  
659

get scheduling parameters of a server, 655

get segment from region, 295

get size of segment, 298

get statistics of period, 200

get status of period, 199

get task mode, 102

get task notepad entry, 114

get task preemption mode, 102

get task priority, 100, 101

global, **701**

global objects, 509

global objects table, 509

GNAT, **701**

GNU, **701**

## H

handler, **701**

hard real-time system, **701**

heap, **701**

heir task, **701**

heterogeneous, **701**

heterogeneous multiprocessing, 514

homogeneous, **701**

## I

I/O, **701**

ID, **701**

IDLE task, **701**

immediate ceiling priority protocol, 29

initialization tasks, 67

initialize a device driver, 322

initialize RTEMS, 75

initialize the CBS library, 648

- initiate the Timer Server, 176
  - install an ASR, 268
  - install an ISR, 127
  - int16\_t, 39
  - int32\_t, 39
  - int64\_t, 39
  - int8\_t, 39
  - interface, **701**
  - internal address, **701**
  - internal addresses, 304
  - Internal Architecture, 11
  - interrupt, **701**
  - interrupt level, **701**
  - interrupt level, 81
  - interrupt levels, 121
  - interrupt processing, 121
  - interrupt service, **702**
  - Interrupt Service Routine, **702**
  - interrupt stack size, 380
  - interruptions, 118
  - IO Control, 329
  - IO Manager, 312
  - is interrupt in progress, 139
  - is task suspended, 99
  - ISR, **702**
  - ISR vs. ASR, 263
  - ISVV, **702**
  - iterate over all threads, 110
- ## K
- kernel, **702**
- ## L
- libpci, 534
  - linkersets, 664
  - list, **702**
  - little endian, **702**
  - local, **702**
  - local operation, **702**
  - lock a semaphore, 217
  - locking protocols, 28
  - logical address, **702**
  - lookup device major and minor number, 324
  - loosely-coupled, **702**
- ## M
- major device number, 315
  - major number, **702**
  - manager, **702**
  - manual round robin, 47
  - maximum file descriptors, 381
  - maximum priority, 443
  - maximum thread name size, 382
  - MCS, **702**
  - memory for a single message queue's buffers, 383
  - memory for task tasks, 379
  - memory management, 33
  - memory pool, **702**
  - message, **702**
  - message buffer, **702**
  - message queue, **703**
  - message queue attributes, 237
  - Message Queue Control Block, **703**
  - message queues, 234
  - messages, 234
  - minimum POSIX thread stack size, 415
  - minimum task stack size, 385
  - minor device number, 315
  - minor number, **703**
  - mode, **703**
  - MPCI, **703**
  - MPCI, 512
  - MPCI and remote operations, 510
  - MPCI entry points, 512
  - multiprocessing, **703**
  - multiprocessing, 505
  - multiprocessing topologies, 508
  - multiprocessor, **703**
  - Multiprocessor Communications Interface Layer, **703**
  - Multiprocessor Configuration Table, **703**
  - Multiprocessor Resource Sharing Protocol (*MrsP*), 30
  - multitasking, **703**
  - mutual exclusion, **703**
  - mutual exclusion, 203
- ## N
- nested, **703**
  - node, **703**
  - nodes, 509
  - non-existent, **703**
  - NUMA, **703**
  - number of priority levels, 443
  - numeric coprocessor, **703**
- ## O
- O(m) Independence-Preserving Protocol (*OMIP*), 30
  - object, **704**
  - object ID, 25
  - object ID composition, 25
  - object manipulation, 558

object name, 25  
object-oriented, **704**  
objects, 24  
obtain a semaphore, 217  
obtain API from id, 569  
obtain API name, 580  
obtain buffer from partition, 280  
obtain class from object id, 570  
obtain class information, 582  
obtain class name, 581  
obtain ID of a barrier, 231  
obtain ID of a partition, 278  
obtain ID of a period, 195  
obtain ID of a port, 309  
obtain ID of a region, 292  
obtain ID of a semaphore, 215  
obtain ID of an extension set, 367  
obtain ID of caller, 92  
obtain index from object id, 572  
obtain local node, 583  
obtain maximum API value, 575  
obtain maximum class value, 577  
obtain maximum class value for an API, 579  
obtain minimum API value, 574  
obtain minimum class value, 576  
obtain minimum class value for an API, 578  
obtain name from id, 566  
obtain node from object id, 571  
obtain object name as string, 567  
obtain per-task variable, 117  
obtain region information, 300  
obtain region information on free blocks, 301  
obtain seconds since epoch, 151, 152  
obtain statistics of period, 200  
obtain status of period, 199  
obtain task mode, 102  
obtain task priority, 100, 101  
obtain the ID of a timer, 171  
obtain the time of day, 149, 150, 162  
obtain ticks since boot, 153  
obtaining class from object ID, 26  
obtaining index from object ID, 26  
obtaining node from object ID, 26  
open a device, 325  
operating system, **704**  
overhead, **704**

**P**

packet, **704**  
panic, 342

partition, **704**  
partition, 273  
partition attribute set, 273  
Partition Control Block, **704**  
partitions, 269  
PCI, 534  
PCI address translation, 542  
PCI Interrupt, 542  
PCI\_LIB\_AUTO, 463  
PCI\_LIB\_PERIPHERAL, 463  
PCI\_LIB\_READ, 463  
PCI\_LIB\_STATIC, 463  
pending, **704**  
per-task variable, 116, 118  
period initiation, 198  
period statistics report, 203  
periodic task, **704**  
periodic task, 184  
periodic tasks, 179  
physical address, **704**  
poll, **704**  
pool, **704**  
portability, **704**  
ports, 301  
posting, **704**  
preempt, **704**  
preemption, 47, 81  
prepend node, 612  
prepend node unprotected, 613  
print period statistics report, 203  
priority, **704**  
priority, 80  
priority boosting, **705**  
priority ceiling protocol, 29  
priority inheritance, **705**  
priority inheritance protocol, 29  
priority inversion, **705**  
priority inversion, 29  
priority scheduling, 42  
processor utilization, **705**  
proxy, **705**  
proxy, 511  
Proxy Control Block, **705**  
PTCB, **705**  
put message at front of queue, 247  
PXCB, **705**

**Q**

QCB, **705**  
quantum, **705**  
queue, **705**

**R**

- rate mononitonic tasks, 179
- Rate Monotonic Scheduling Algorithm, 184
- rbtree doc, 619
- rbtrees, 613
- read from a device, 327
- ready task, **705**
- real-time, **705**
- Real-time applications, 8
- Real-time executive, 9
- receive event condition, 260
- receive message from a queue, 249
- Red-Black Trees, 613
- reentrant, **705**
- region, **705**
- region, 285, 294
- region attribute set, 285
- Region Control Block, **705**
- regions, 281
- register a device driver, 320
- register device, 323
- registers, **706**
- release a barrier, 234
- release a semaphore, 219
- remote, **706**
- remote operation, **706**
- ReqIF, **706**
- reset a timer, 179
- reset statistics of all periods, 202
- reset statistics of period, 201
- resize segment, 299
- resource, **706**
- restarting a task, 94
- restore interrupt level, 129, 133
- resume, **706**
- resuming a task, 98
- return buffer to partition, 281
- return code, **706**
- return segment to region, 297
- return value, **706**
- RMS Algorithm, 184
- RMS First Deadline Rule, 187
- RMS Processor Utilization Rule, 186
- RMS schedulability analysis, 185
- RNCB, **706**
- round robin scheduling, 47
- round-robin, **706**
- RS-232, **706**
- RTEMS, **706**
- RTEMS Data Types, 34
- rtems extensions table index, 360
- RTEMS Workspace, 386
- rtems\_address, 37
- rtems\_asr, 37, 265, 643
- rtems\_asr\_entry, 37
- rtems\_attribute, 37
- rtems\_barrier\_create, 230
- rtems\_barrier\_delete, 232
- rtems\_barrier\_ident, 231
- rtems\_barrier\_release, 234
- rtems\_barrier\_wait, 233
- rtems\_boolean, 37
- rtems\_build\_id, 573
- rtems\_build\_name, 25, 565
- rtems\_cbs\_attach\_thread, 651
- rtems\_cbs\_cleanup, 649
- rtems\_cbs\_create\_server, 650
- rtems\_cbs\_destroy\_server, 653
- rtems\_cbs\_detach\_thread, 652
- rtems\_cbs\_get\_approved\_budget, 659
- rtems\_cbs\_get\_execution\_time, 657
- rtems\_cbs\_get\_parameters, 655
- rtems\_cbs\_get\_remaining\_budget, 658
- rtems\_cbs\_get\_server\_id, 654
- rtems\_cbs\_initialize, 648
- rtems\_cbs\_parameters, 642
- rtems\_cbs\_set\_parameters, 656
- rtems\_chain\_append, 610
- rtems\_chain\_append\_unprotected, 611
- rtems\_chain\_are\_nodes\_equal, 596
- rtems\_chain\_extract, 604
- rtems\_chain\_extract\_unprotected, 605
- rtems\_chain\_get, 606
- rtems\_chain\_get\_unprotected, 607
- rtems\_chain\_has\_only\_one\_node, 600
- rtems\_chain\_head, 594
- rtems\_chain\_initialize, 591
- rtems\_chain\_initialize\_empty, 592
- rtems\_chain\_insert, 608
- rtems\_chain\_insert\_unprotected, 609
- rtems\_chain\_is\_empty, 597
- rtems\_chain\_is\_first, 598
- rtems\_chain\_is\_head, 602
- rtems\_chain\_is\_last, 599
- rtems\_chain\_is\_null\_node, 593
- rtems\_chain\_is\_tail, 603
- rtems\_chain\_node\_count\_unprotected, 601
- rtems\_chain\_prepend, 612
- rtems\_chain\_prepend\_unprotected, 613
- rtems\_chain\_tail, 595
- rtems\_clock\_get, 162
- rtems\_clock\_get\_options, 162

rtems\_clock\_get\_seconds\_since\_epoch, 151  
rtems\_clock\_get\_ticks\_per\_second, 152  
rtems\_clock\_get\_ticks\_since\_boot, 153  
rtems\_clock\_get\_tod, 149  
rtems\_clock\_get\_tod\_timeval, 150  
rtems\_clock\_get\_uptime, 157  
rtems\_clock\_get\_uptime\_nanoseconds, 160  
rtems\_clock\_get\_uptime\_seconds, 159  
rtems\_clock\_get\_uptime\_timeval, 158  
rtems\_clock\_set, 148  
rtems\_clock\_tick\_before, 156  
rtems\_clock\_tick\_later, 154  
rtems\_clock\_tick\_later\_usec, 155  
rtems\_context, 37  
rtems\_context\_fp, 37  
rtems\_cpu\_usage\_report, 557  
rtems\_cpu\_usage\_reset, 558  
rtems\_device\_driver, 37  
rtems\_device\_driver\_entry, 37  
rtems\_device\_major\_number, 37, 315  
rtems\_device\_minor\_number, 37, 315  
rtems\_double, 37  
rtems\_event\_receive, 260  
rtems\_event\_send, 259  
rtems\_event\_set, 37, 255  
rtems\_exception\_frame\_print, 344  
rtems\_extension, 37  
rtems\_extension\_create, 366  
rtems\_extension\_delete, 368  
rtems\_extension\_ident, 367  
rtems\_extensions\_table, 359  
rtems\_fatal, 341  
rtems\_fatal\_error\_occurred, 347  
rtems\_fatal\_extension, 37, 364  
rtems\_fatal\_source\_text, 345  
rtems\_id, 25, 37  
rtems\_initialize\_executive, 75  
rtems\_internal\_error\_text, 346  
rtems\_interrupt\_catch, 127  
rtems\_interrupt\_disable, 128  
rtems\_interrupt\_enable, 129  
rtems\_interrupt\_flash, 130  
rtems\_interrupt\_frame, 37  
rtems\_interrupt\_is\_in\_progress, 139  
rtems\_interrupt\_level, 37  
rtems\_interrupt\_local\_disable, 131  
rtems\_interrupt\_local\_enable, 133  
rtems\_interrupt\_lock\_acquire, 135  
rtems\_interrupt\_lock\_acquire\_isr, 137  
rtems\_interrupt\_lock\_initialize, 134  
rtems\_interrupt\_lock\_release, 136  
rtems\_interrupt\_lock\_release\_isr, 138  
rtems\_interval, 32, 38  
rtems\_io\_close, 326  
rtems\_io\_control, 329  
rtems\_io\_initialize, 322  
rtems\_io\_lookup\_name, 324  
rtems\_io\_open, 325  
rtems\_io\_read, 327  
rtems\_io\_register\_driver, 320  
rtems\_io\_register\_name, 323  
rtems\_io\_unregister\_driver, 321  
rtems\_io\_write, 328  
rtems\_isr, 38, 121  
rtems\_isr\_entry, 38  
rtems\_iterate\_over\_all\_threads, 112  
RTEMS\_LINKER\_ROSET, 676  
RTEMS\_LINKER\_ROSET\_CONTENT, 682  
RTEMS\_LINKER\_ROSET\_DECLARE, 675  
RTEMS\_LINKER\_ROSET\_ITEM, 680  
RTEMS\_LINKER\_ROSET\_ITEM\_DECLARE, 677  
RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED, 681  
RTEMS\_LINKER\_ROSET\_ITEM\_ORDERED\_DECLARE,  
678  
RTEMS\_LINKER\_ROSET\_ITEM\_REFERENCE, 679  
RTEMS\_LINKER\_RWSET, 684  
RTEMS\_LINKER\_RWSET\_CONTENT, 690  
RTEMS\_LINKER\_RWSET\_DECLARE, 683  
RTEMS\_LINKER\_RWSET\_ITEM, 688  
RTEMS\_LINKER\_RWSET\_ITEM\_DECLARE, 685  
RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED, 689  
RTEMS\_LINKER\_RWSET\_ITEM\_ORDERED\_DECLARE,  
686  
RTEMS\_LINKER\_RWSET\_ITEM\_REFERENCE, 687  
RTEMS\_LINKER\_SET\_BEGIN, 669  
RTEMS\_LINKER\_SET\_END, 670  
RTEMS\_LINKER\_SET\_FOREACH, 674  
RTEMS\_LINKER\_SET\_IS\_EMPTY, 673  
RTEMS\_LINKER\_SET\_ITEM\_COUNT, 672  
RTEMS\_LINKER\_SET\_SIZE, 671  
rtems\_message\_queue\_broadcast, 248  
rtems\_message\_queue\_create, 242  
rtems\_message\_queue\_delete, 245  
rtems\_message\_queue\_flush, 252  
rtems\_message\_queue\_get\_number\_pending,  
251  
rtems\_message\_queue\_ident, 244  
rtems\_message\_queue\_receive, 249  
rtems\_message\_queue\_send, 246  
rtems\_message\_queue\_urgent, 247  
rtems\_mode, 38  
rtems\_mp\_packet\_classes, 38

rtems\_mpci\_entry, 38, 513  
rtems\_mpci\_get\_packet\_entry, 38  
rtems\_mpci\_initialization\_entry, 38  
rtems\_mpci\_receive\_packet\_entry, 38  
rtems\_mpci\_return\_packet\_entry, 38  
rtems\_mpci\_send\_packet\_entry, 38  
rtems\_mpci\_table, 38  
rtems\_multiprocessing\_announce, 518  
rtems\_name, 25, 38  
rtems\_object\_api\_maximum\_class, 577  
rtems\_object\_api\_minimum\_class, 576  
rtems\_object\_get\_api\_class\_name, 581  
rtems\_object\_get\_api\_name, 580  
rtems\_object\_get\_class\_information, 582  
rtems\_object\_get\_classic\_name, 566  
rtems\_object\_get\_local\_node, 583  
rtems\_object\_get\_name, 25, 567  
rtems\_object\_id\_api\_maximum, 575  
rtems\_object\_id\_api\_maximum\_class, 579  
rtems\_object\_id\_api\_minimum, 574  
rtems\_object\_id\_api\_minimum\_class, 578  
rtems\_object\_id\_get\_api, 26, 569  
rtems\_object\_id\_get\_class, 26, 570  
rtems\_object\_id\_get\_index, 26, 572  
rtems\_object\_id\_get\_node, 26, 571  
rtems\_object\_set\_name, 568  
rtems\_option, 38  
rtems\_packet\_prefix, 38  
rtems\_panic, 342  
rtems\_partition\_create, 276  
rtems\_partition\_delete, 279  
rtems\_partition\_get\_buffer, 280  
rtems\_partition\_ident, 278  
rtems\_partition\_return\_buffer, 281  
rtems\_port\_create, 308  
rtems\_port\_delete, 310  
rtems\_port\_external\_to\_internal, 311  
rtems\_port\_ident, 309  
rtems\_port\_internal\_to\_external, 312  
rtems\_rate\_monotonic\_cancel, 196  
rtems\_rate\_monotonic\_create, 194  
rtems\_rate\_monotonic\_delete, 197  
rtems\_rate\_monotonic\_get\_statistics, 200  
rtems\_rate\_monotonic\_get\_status, 199  
rtems\_rate\_monotonic\_ident, 195  
rtems\_rate\_monotonic\_period, 198  
rtems\_rate\_monotonic\_period\_statistics, 200, 203  
rtems\_rate\_monotonic\_period\_status, 199  
rtems\_rate\_monotonic\_report\_statistics, 203  
rtems\_rate\_monotonic\_reset\_all\_statistics, 202  
rtems\_rate\_monotonic\_reset\_statistics, 201  
rtems\_region\_delete, 293  
rtems\_region\_extend, 294  
rtems\_region\_get\_free\_information, 301  
rtems\_region\_get\_information, 300  
rtems\_region\_get\_segment, 295  
rtems\_region\_get\_segment\_size, 298  
rtems\_region\_ident, 292  
rtems\_region\_resize\_segment, 299  
rtems\_region\_return\_segment, 297  
rtems\_resource\_is\_unlimited, 377  
rtems\_resource\_maximum\_per\_allocation, 377  
rtems\_resource\_unlimited, 377  
rtems\_semaphore\_create, 213  
rtems\_semaphore\_delete, 216  
rtems\_semaphore\_flush, 220  
rtems\_semaphore\_ident, 215  
rtems\_semaphore\_obtain, 217  
rtems\_semaphore\_release, 219  
rtems\_semaphore\_set\_priority, 222  
rtems\_shutdown\_executive, 343  
rtems\_signal\_catch, 268  
rtems\_signal\_send, 269  
rtems\_signal\_set, 38, 263  
rtems\_single, 39  
rtems\_status\_code, 39, 693  
rtems\_status\_text, 694  
rtems\_task, 39, 82  
rtems\_task\_argument, 39  
rtems\_task\_begin\_extension, 39, 362  
rtems\_task\_create, 89  
rtems\_task\_create\_extension, 39, 361  
rtems\_task\_delete, 95  
rtems\_task\_delete\_extension, 39, 363  
rtems\_task\_entry, 39  
rtems\_task\_exit, 96  
rtems\_task\_exitted\_extension, 39, 363  
rtems\_task\_get\_note, 87, 114  
rtems\_task\_get\_priority, 101  
rtems\_task\_ident, 91  
rtems\_task\_is\_suspended, 99  
rtems\_task\_iterate, 110  
rtems\_task\_mode, 80, 102  
rtems\_task\_priority, 39, 80  
rtems\_task\_restart, 94  
rtems\_task\_restart\_extension, 39, 361  
rtems\_task\_resume, 98

rtems\_task\_self, 92  
 rtems\_task\_set\_note, 87, 115  
 rtems\_task\_set\_priority, 100  
 rtems\_task\_start, 93  
 rtems\_task\_start\_extension, 39, 361  
 rtems\_task\_suspend, 97  
 rtems\_task\_switch\_extension, 40, 362  
 rtems\_task\_terminate\_extension, 363  
 rtems\_task\_variable\_add, 87, 116  
 rtems\_task\_variable\_delete, 87, 118  
 rtems\_task\_variable\_get, 87, 117  
 rtems\_task\_wake\_after, 103  
 rtems\_task\_wake\_when, 104  
 rtems\_tcb, 40  
 rtems\_time\_of\_day, 32, 40, 143  
 rtems\_timer\_cancel, 172  
 rtems\_timer\_create, 170  
 rtems\_timer\_delete, 173  
 rtems\_timer\_fire\_after, 174  
 rtems\_timer\_fire\_when, 175  
 rtems\_timer\_ident, 171  
 rtems\_timer\_initiate\_server, 176  
 rtems\_timer\_reset, 179  
 rtems\_timer\_server\_fire\_after, 177  
 rtems\_timer\_server\_fire\_when, 178  
 rtems\_timer\_service\_routine, 40, 165  
 rtems\_timer\_service\_routine\_entry, 40  
 rtems\_timespec\_add\_to, 629  
 rtems\_timespec\_divide, 631  
 rtems\_timespec\_divide\_by\_integer, 632  
 rtems\_timespec\_equal\_to, 635  
 rtems\_timespec\_from\_ticks, 639  
 rtems\_timespec\_get\_nanoseconds, 637  
 rtems\_timespec\_get\_seconds, 636  
 rtems\_timespec\_greater\_than, 634  
 rtems\_timespec\_is\_valid, 628  
 rtems\_timespec\_less\_than, 633  
 rtems\_timespec\_set, 626  
 rtems\_timespec\_subtract, 630  
 rtems\_timespec\_to\_ticks, 638  
 rtems\_timespec\_zero, 627  
 rtems\_vector\_number, 40, 121  
 running, **706**  
 runtime driver registration, 316

**S**

schedulable, **706**  
 schedule, **706**  
 scheduled task, **706**  
 scheduler, **706**  
 scheduler instance, **707**  
 scheduling, 40  
 scheduling algorithms, 42  
 scheduling mechanisms, 46  
 segment, 285  
 segments, **707**  
 semaphore, **707**  
 Semaphore Control Block, **707**  
 semaphores, 203  
 send event set to a task, 259  
 send message to a queue, 246  
 send signal set, 269  
 separate work areas, 386  
 set object name, 568  
 set priority by scheduler for a semaphore,  
     222  
 set scheduling parameters, 656  
 set struct timespec instance, 626  
 set task mode, 102  
 set task notepad entry, 115  
 set task preemption mode, 102  
 set task priority, 100  
 set the time of day, 148  
 shared memory, **707**  
 shutdown RTEMS, 343  
 signal, **707**  
 signal set, **707**  
 signal set, 263  
 signals, 260  
 SMCB, **707**  
 SMP, **707**  
 SMP, 518  
 SMP barriers, **707**  
 SMP locks, **707**  
 soft real-time system, **707**  
 software component, **707**  
 software item, **708**  
 software product, **708**  
 software unit, **708**  
 source code, **708**  
 special device services, 329  
 sporadic task, **708**  
 sporadic task, 184  
 stack, **708**  
 stack, 543  
 Stack Bounds Checker, 543  
 start current period, 198  
 start multitasking, 75  
 starting a task, 93  
 status code, **708**  
 Status Codes, 690  
 suspend, **708**

suspending a task, 97  
 Symmetric Multiprocessing, 518  
 synchronous, **708**  
 system call, **708**

## T

target, **709**  
 TAS, **709**  
 task, **709**  
 task, 79–81  
 task affinity, 522  
 task arguments, 81  
 task attributes, 83  
 Task Control Block, **709**  
 task memory, 79  
 task migration, **709**  
 task migration, 522  
 task mode, 80, 83  
 task name, 80  
 task priority, 47, 80  
 task private data, 116, 118  
 task private variable, 116, 118  
 task processor affinity, **709**  
 task prototype, 81  
 task scheduling, 40  
 task stack allocator, 438, 439  
 task stack deallocator, 439  
 task state transitions, 49  
 task states, 80  
 task switch, **709**  
 tasks, 75  
 TCB, **709**  
 TCB extension area, 359  
 thread, **709**  
 thread affinity, 522  
 thread dispatch, **709**  
 thread migration, 522  
 thread queues, 30  
 tick, **709**  
 tick quantum, 384  
 ticks per timeslice, 386  
 tightly-coupled, **709**  
 time, 31  
 timeout, **709**  
 timeouts, 144  
 timer, **709**  
 Timer Control Block, **709**  
 timers, 162  
 timeslice, **710**  
 timeslicing, **710**  
 timeslicing, 47, 81, 143

Timespec Helpers, 619  
 TLS, **710**  
 TMCB, **710**  
 transient overload, **710**  
 TTAS, **710**

## U

uint16\_t, 40  
 uint32\_t, 40  
 uint64\_t, 40  
 uint8\_t, 40  
 uintptr\_t, 40  
 unblock all tasks waiting on a semaphore,  
     220  
 unified work areas, 386  
 unlock a semaphore, 219  
 unregister a device driver, 321  
 uptime, 157–160  
 user extension set, 359  
 User Extension Table, **710**  
 user extensions, **710**  
 user extensions, 356  
 User Initialization Tasks Table, **710**  
 user-provided, **710**  
 user-supplied, **710**

## V

vector, **710**

## W

wait at a barrier, 233  
 wait queue, **710**  
 wake up after an interval, 103  
 wake up at a wall time, 104  
 write to a device, 328

## Y

YAML, **710**  
 yield, **710**

## Z

zero C Program Heap, 388  
 zero RTEMS Workspace, 388